

OWNER'S GUIDE

10 CENTS

**Model Nos. 111-300
111-310 111-730 111-750**

ROTARY MOWER

WARRANTY

For one year from date of purchase, MTD Products, Inc., will replace for the original purchaser, free of charge, F.O.B. factory or authorized service firm, any part or parts found to be defective in material or workmanship. All transportation charges on parts submitted for replacement under this warranty must be paid by the purchaser. This warranty does not include replacement of parts which become inoperative through misuse, excessive use, accident, neglect, improper maintenance or alterations by unauthorized persons. This warranty does not include the engine, motor, battery, battery charger or any component parts thereof. For service on these units refer to the applicable manufacturer's warranty.

The above warranty will apply only to the original owner and will be effective only if the warranty card has been properly processed. It will not apply where the unit has been used commercially.

Warranty service is available through your local authorized service dealer or distributor. UNDER NO CIRCUMSTANCES WILL THE RETURN OF A COMPLETE UNIT BE ACCEPTED BY THE FACTORY UNLESS PRIOR WRITTEN PERMISSION HAS BEEN EXTENDED.

SAFETY RULES

Your rotary mower is a precision piece of power equipment, not a plaything. Therefore exercise extreme caution at all times.

1. Remove all sticks, stones, wire and other hazardous items from lawn before mowing. Such items are dangerous to both the mower and individuals in the vicinity of the mower.
2. Always disconnect spark plug cable during repairs or refueling operations.
3. Always start engine from side opposite discharge chute.
4. NEVER place hands or feet under mower or near discharge chute while engine is running.
5. Do not tilt mower at extreme angle while engine is running. Cut grass on hills and banks sideways, not up and down.
6. Always stop engine when not cutting grass.
7. Do not fill gas tank while engine is running. Do not spill gasoline on hot engine.
8. Keep children and pets away from area at all times during mowing operation. Never allow mower to discharge grass toward any person.
9. Do not attempt to start engine while mower is resting in high grass.
10. Check all nuts and bolts, particularly the blade bolts, for tightness. This is especially important during the initial operation period. Make this same check periodically thereafter.
11. While operating the mower, if any foreign object is struck, stop the mower and inspect for damage. Do not restart or operate the mower until all damage has been repaired.

WARNING: Should excessive vibration develop, check your blade and crankshaft immediately. Do not operate mower with an unbalanced blade, a damaged blade or a damaged crankshaft.

UPPER HANDLES ORDER:
 CHROME 310-9364
 WHITE 312-9363

NOTE: Easy Height Adjuster MAY or MAY NOT be used on your unit.

Illus. No.	Part No.	DESCRIPTION
31	310-7492	Wheel Pivot Bar
32	310-8313	Spring Lever Assembly
33	305-7520	Red Knobs
34	712-214	GRIPCO Locknut 3/8" - 24 Thread
35	710-209	Sems Hex Head Cap Screw 3/8" - 16 x 5/8 Long
36	710-362	Hex Bolt Special
37	738-102	Axle Bolt
37	310-9682	Index Plate R. H.
37	310-9683	Index Plate L. H.


111-300
111-310
111-730
111-750

WHERE LOOP HANDLES ARE USED
ORDER: CHROME 310-7585
WHITE 312-7584

LOWER HANDLES ORDER:
 CHROME 310-7016 19"
 WHITE 312-7039 19"
 CHROME 310-7036 22"
 WHITE 312-7040 22"

When ordering parts give the following information.

1. Model number
2. Part number
3. Part name
4. Color of part

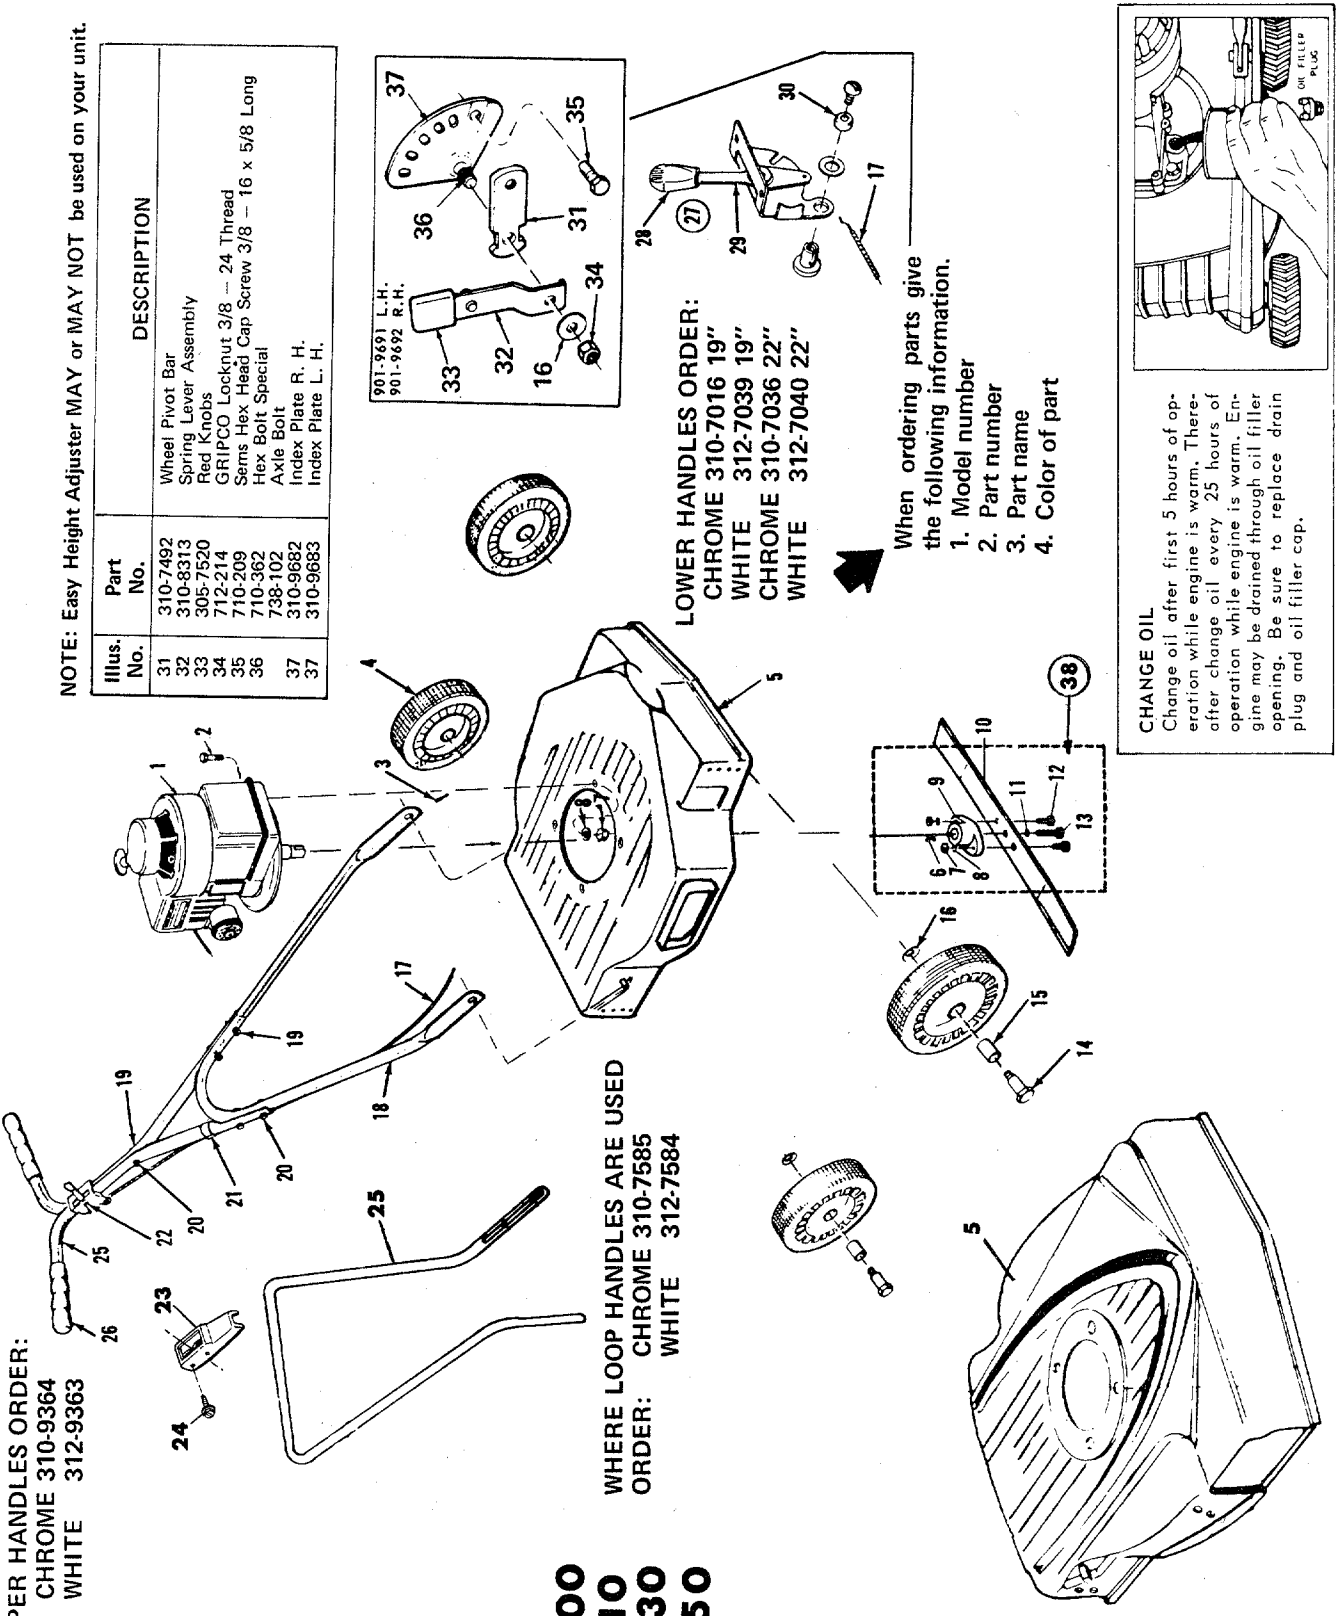

CHANGE OIL
 Change oil after first 5 hours of operation while engine is warm. Thereafter change oil every 25 hours of operation while engine is warm. Engine may be drained through oil filler opening. Be sure to replace drain plug and oil filler cap.

PARTS LIST FOR MODELS 111-300, 310, 730 AND 750

Ref. No.	111-300 Part No.	111-310 Part No.	111-730 Part No.	111-750 Part No.	DESCRIPTION
1	----	----	----	----	Engine
2	710-158	710-158	710-158	710-158	Hex Hd. Cap Scw. 5/16-24 x 1-1/4" Lg. *
3	714-105	714-105	714-105	714-105	Cotter Pin 3/32" Dia. x 3/4" Lg. *
4	504-9392	505-9392	506-9392	511-9392	Wheel Assembly
5	414-10128	414-10129	437-8757	437-8758	Deck Assembly
6	714-365	714-365	714-365	714-365	Key - Hi Pro #505 *†
7	712-123	712-123	712-123	712-123	Hex Nut 5/16-24 Thd. *†
8	736-119	736-119	736-119	736-119	Lockwasher 5/16" Screw *†
9	748-189	748-189	748-189	748-189	Balde Adapter †
10	312-7582	312-7581	312-7714	312-7581	Blade
11	736-169	736-169	736-169	736-169	Lockwasher 3/8" Screw *†
12	710-117	710-117	710-117	710-117	Hex Hd. Cap Scw. 5/16-24 x 1" Lg. (Heat Treated) †
13	710-489	710-489	710-489	710-489	Hex Hd. Cap Scw. 3/8-24 x 1-1/2" Lg. (Heat Treated) †
14	738-213	738-213	738-213	738-213	Axle Bolt - Use 738-102 w/weight Adj.
15	305-7006	305-7006	305-7006	305-7006	Fortiflex Bearing
16	736-105	736-105	736-105	736-105	Belleville Washer
17	732-141	732-141	732-141	732-141	Conduit and Wire
18	310-7016	310-7036	312-7039	312-7040	Lower Handle
19	712-107	712-107	712-107	712-107	Hex Centerlock Nut 1/4-20 Thd. *
20	710-106	710-106	710-106	710-106	Hex Hd. Cap Scw. 1/4-20 x 1-1/4" Lg. *
21	746-145	746-145	746-145	746-145	Cable Clip
22	710-606	710-606	710-606	710-606	Hex Hd. Cap Scw. 1/4-20 x 1-1/2" Lg. *
23	394-9973	394-9973	None	None	Cover Control
24	710-148	710-148	None	None	Self Tap Screw #8-32 x 5/16" Lg. *
25	310-9364	310-9364	312-7584	312-7584	Upper Handle (2 Req'd. on 111-300 and 310)
26	305-7071	305-7071	None	None	Grips (2 Req'd.) Black
27	310-10029	310-10029	310-8842	310-8842	Throttle Control (Complete) Use w/Plastic Cover
	310-8511	310-8511	310-8511	310-8511	Throttle Control (Complete) Use w/Steel Cover
28	305-7470	305-7470	305-7470	305-7470	Knob Control **
29	310-10006	310-10006	310-8841	310-8841	Throttle Control Bracket **
30	901-7627	901-7627	901-7969	901-7969	Ferrule Assembly (Complete) **
38	901-10769	901-10769	901-10769	901-10769	Blade Adapter Kit (Less Blade)

* For faster service obtain standard nuts, bolts and washers locally. If these items cannot be obtained locally, order by part number and size as shown on parts list.

** Included in part number 310-10029 Control Throttle (Complete) (For Models 111-300 and 310).

** Included in part number 310-8842 Control Throttle (Complete) (For Models 111-730 and 750).

† Included in part number 901-10769 Blade Adapter Kit (Complete).

NOTE: This instruction manual covers various models, and all accessories shown do not necessarily apply to your model mower. . . If repairs or service is needed on the engine, please contact your nearest authorized engine service outlet. Check the "Yellow Pages" on your telephone book under "Engines - Gasoline."



ASSEMBLY

Your new mower is shipped completely assembled with the exception of the handle and throttle control assembly.

1. Remove lawn mower and all parts from carton. Make certain that all loose parts and literature are removed from carton before carton is discarded.
2. Extend throttle control assembly, which is attached to engine, to rear of mower and place on floor. CAUTION: Do not bend or kink control wire.
3. Assemble upper handle to lower handle using four each screws and lock nuts provided in parts bag.
4. Assemble complete handle assembly to mower so that throttle control mounting hole in upper handle will be on right side. Holes at bottom of lower handle are to be fitted over studs located in front of each rear wheel mounting position.
5. Position throttle control assembly on right hand side of upper handle so that holes in control assembly and handle are in line. Secure in place with screw and lock nut found in parts bag. Secure throttle wire to lower right handle tube with clips in parts bag.
6. Place the plastic control cover over the throttle control and secure with two self-tapping screws.

OPERATION

1. Service engine with gas and oil. See engine manual packed with lawn mower for complete instructions for the care and maintenance of engine. READ DIRECTIONS CAREFULLY.
2. When ready to start engine, place throttle control lever, on handle, in "START" position and start engine in accordance with instructions in engine manual. After engine starts, move throttle control lever, on handle, to desired engine speed. The engine is stopped by placing control lever on handle in "STOP" position.
3. Be sure that lawn is clear of stones, sticks, wire or other objects which could damage lawn mower or engine. For best results and to insure more even grass distribution, do not mow when lawn is excessively wet.

ADJUSTMENTS

CAUTION: Do not at any time make any adjustment to lawn mower without first stopping engine and disconnecting spark plug wire.

EASY CUTTING HEIGHT – An adjusting plate and thumb lever at each wheel position provides cutting height adjustment. Each adjusting plate has five holes. Height of cut will be changed when the thumb lever is moved from one hole to another. Simply depress thumb lever towards wheel and move wheel and lever assembly to desired position. Cutting height will be raised as lever is moved toward front and lowered as lever is moved toward rear. All wheels must be positioned in relative height of cut positions.

CUTTING HEIGHT – Adjustment may be made by removing and moving wheel studs to desired position. Cutting heights will be raised as wheel studs are moved to a lower hole and lowered as wheel studs are moved to a higher hole in the deck. All wheel studs must be mounted in a relative position to the deck.

THROTTLE – If adjustment becomes necessary, the throttle control wire assembly can be reset as follows:

1. Loosen, but do not remove, screw securing throttle control wire assembly at engine.
2. Move throttle control lever on handle to "FAST" position.
3. Move lever, to which control wire is fastened at engine, to full open position and retighten screw to secure throttle control wire assembly.

LUBRICATION

IMPORTANT: Always stop engine and disconnect spark plug wire before cleaning, lubricating or doing any kind of work on lawn mower.

WHEELS – Wheel bearings are fortiflex. They require no lubrication.

THROTTLE – Periodically lubricate throttle control lever and throttle wire assembly with a few drops of light oil (S.A.E. No. 10 or 20) for ease of operation.

ENGINE – Follow Engine Manual for lubrication instructions.

MAINTENANCE

CUTTING BLADE – The blade may easily be removed for grinding or replacement as follows:

1. Remove bolt and lockwasher holding blade and hub assembly to engine crankshaft.
2. Remove blade and hub assembly from engine crankshaft.
3. Remove two bolts, lockwashers and nuts holding blade to blade hub.

When sharpening blade, follow the original angle of grind as a guide. It is extremely important that each cutting edge receives an equal amount of grinding to prevent an unbalanced blade. An unbalanced blade will cause excessive vibration when rotating at high speeds and may cause damage to the mower.

Upon reassembly, make certain all parts are assembled properly and tightened securely.

DECK – The underside of mower deck should be cleaned after each period of use as grass clippings, leaves, dirt and other matter will accumulate. This accumulation of grass clippings, etc., is undesirable as it will invite rust and corrosion and may cause an uneven discharge of grass clippings at the next cutting.

The deck may be cleaned by tilting the mower forward or on its left side and scraping clean with a suitable tool or by washing with a stream of water from a garden hose.

CAUTION: Do not direct the stream of water at a hot engine as damage to the engine may result.

STORAGE – The following steps should be taken to prepare lawn mower for storage.

1. Clean and lubricate mower thoroughly as described in the preceding instructions.
2. Refer to Engine Manual for correct engine storage instructions.
3. Coat mower's cutting blade with chassis grease to prevent rusting.
4. Place blocks under deck to raise tires clear of floor.
5. Store mower in a dry, clean area.

USING YOUR ROTARY MOWER

For best results do not cut wet grass because it tends to stick to underside of the mower thus preventing proper discharge of grass clippings. If wet grass must be cut reduce engine speed and walking speed to help distribute the clippings more effectively.

New grass should be treated as wet grass, otherwise a normal walking speed is about the right pace for efficient mowing.

The best mowing pattern is one that allows the clippings to discharge towards the uncut part of the lawn. This permits recutting of the clippings to further pulverize them. When cutting high weeds, discharge towards cut portion then recut at right angles to first direction.

Lawn should be cut in the fall as long as there is growth.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>