


User Manual

MR. COFFEE®

Coffeemaker
Models UR12, UR13,
URX20, URX23,
URX30 and URX33

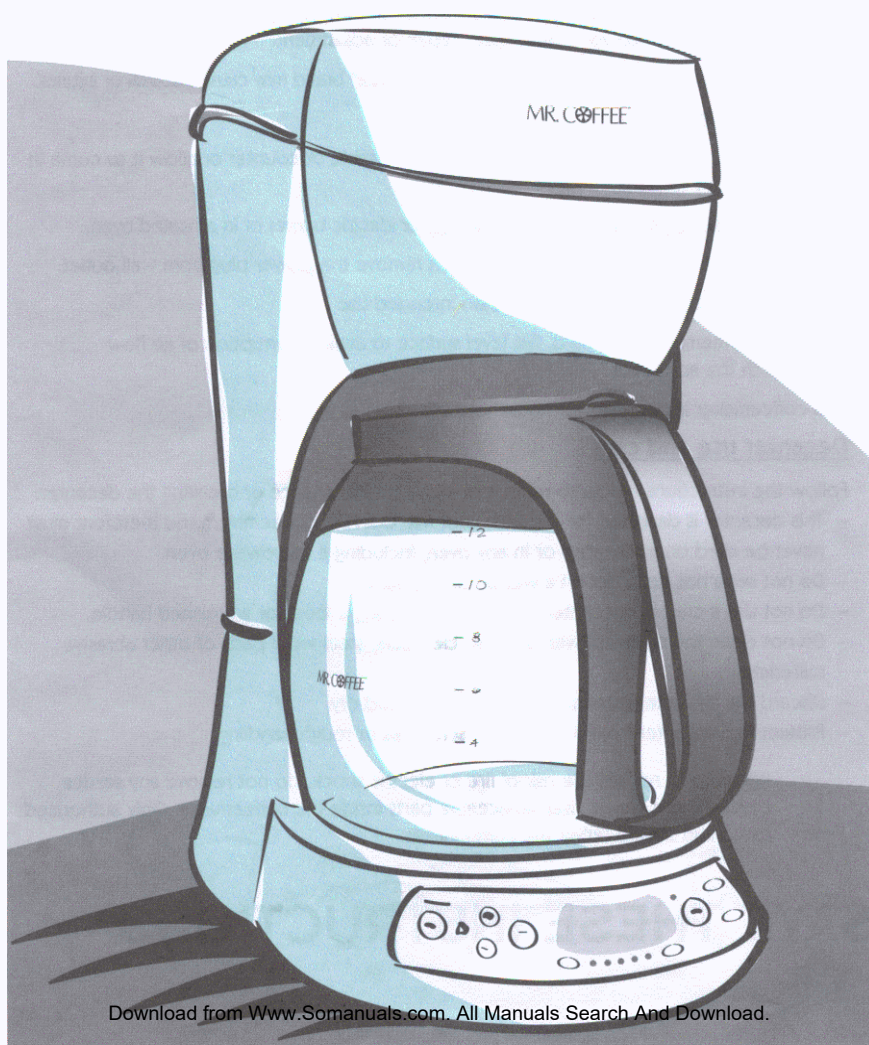

IMPORTANT SAFEGUARDS.

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and/or injury to persons, including the following:

- Read all instructions before using the coffeemaker.
- Do not touch the coffeemaker's hot surfaces.
- To protect against electric shock, do not immerse the power cord, power plug, or coffeemaker in water or other liquid.
- Close adult supervision is necessary when this appliance is used by or near children.
- Turn the coffeemaker off and unplug the power cord from the power source when the coffeemaker or clock are not in use and before cleaning. Allow the coffeemaker parts to cool before putting on or taking off parts and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or operate it after the appliance malfunctions or has been damaged in any manner. Return this appliance only to the nearest authorized service center for examination, repair or adjustment.
- The use of accessory attachments other than MR. COFFEE® brand may cause hazards or injuries
- Do not use outdoors.
- Do not let the power cord hang over the edge of a table or counter or allow it to come in contact with hot surfaces.
- Do not place this appliance on or near a hot gas or electric burner or in a heated oven
- To disconnect, turn the coffeemaker OFF, then remove the power plug from wall outlet
- Do not use the coffeemaker for other than intended use.
- Place the coffeemaker on a hard, flat level surface to avoid interruption of air flow underneath the appliance.
- This coffeemaker is designed for household use only.

Decanter use and care

Follow the instructions below to reduce or eliminate the chance of breaking the decanter:

- This decanter is designed for use with your MR. COFFEE® coffeemaker and therefore must never be used on a rangetop or in any oven, including a microwave oven.
- Do not set a hot decanter on a wet or cold surface.
- Do not use a cracked decanter or a decanter having a loose or weakened handle.
- Do not clean the decanter with abrasive cleansers, steel wool pads or other abrasive materials.
- Discard the decanter immediately if it is ever boiled dry.
- Protect the decanter from sharp blows, scratches or rough handling.



Warning: To reduce the risk of fire or electric shock, do not remove any service covers. There are no user serviceable parts inside the coffeemaker. Only authorized personnel should repair the coffeemaker.

SAVE THESE INSTRUCTIONS

Download from www.Somanuals.com. All Manuals Search And Download.

Special cord set instructions

1. A short power supply cord is provided to reduce the hazards resulting from becoming entangled in or tripping over a longer cord.
2. An extension cord may be purchased and used if care is exercised in its use.
3. If an extension cord is used, the marked electrical rating of the extension cord must be at least 10 amps and 120 volts. The resulting extended cord must be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over accidentally.

***This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.**



Table of Contents

Setting up your coffeemaker
Coffeemaker features 1
Adjusting the power cord length 3
Setting the clock (models URXPO, URX23, URX30 and URX33 only) 3
Brewing coffee
Cleaning the coffeemaker before first use 4
Selecting and measuring ground coffee 4
Adding water and ground coffee 4
Brewing coffee now
Brewing coffee later (models URXPO, URX23, URX30 and URX33 only) 6
Adjusting the warming plate temperature (models URX30 and URX33 only) 7
Cleaning the coffeemaker between brew cycles 7
Maintaining your coffeemaker
Cleaning the coffeemaker 8
Cleaning the decanter 10
Service and maintenance 11
Replacementparts 11
Repairs 11
Questions, comments and suggestions 11
One-year limited warranty 12



Setting up your coffeemaker

Congratulations on your new MR. COFFEE® coffeemaker! Please read these instructions carefully before using your new coffeemaker. Proper use, care and maintenance will ensure trouble-free operation and the long life of this appliance. Save these instructions for cleaning and, if necessary, replacement parts information.

Coffeemaker features

Your new MR. COFFEE® coffeemaker has the following features:

- **12-cup brewing capacity**
- **Pause N' Serve** -Can't wait for the coffee to finish brewing? The Pause N' Serve feature allows you up to 30 seconds to pour a cup of coffee while the coffee is still brewing.
- **Removable water reservoir** - Conveniently detaches for easy filling and cleaning. The reservoir is dishwasher safe.
- **Water window** - The water window on the water reservoir allows you to quickly and accurately see exactly how much water you have added to the reservoir.
- **Removable filter basket** - The removable filter basket allows you to easily lift the filter basket from the brew basket to add or remove a filter and ground coffee.
- **Non-stick warming plate** - This feature prevents the decanter from sticking to the surface of the warming plate.
- **Cord storage** - Allows you to store extra cord length for a tidy countertop.
- **Comfort Fit handle** - Provides comfort, control and confidence when pouring.
- **Drip-free decanter** - Designed to eliminate drips during and after pouring.

Models UR12 and UR13

- **lighted ON/OFF switch** -This safety feature reminds you that your coffeemaker is on.


Models URX20 and URX23

- **ON/OFF indicator** - This safety feature reminds you that your coffeemaker is on.
- **Programmable controls**
 - **Clock:** The LED clock serves as a handy kitchen clock, as well as allows you to set the timer.
Timer: Would you like to wake up to a fresh pot of coffee? The timer allows you to preset when you would like the coffeemaker to brew your coffee automatically, up to 24 hours in advance.
 - **Two-hour auto shut off:** This safety feature keeps your coffee warm for 2 hours after you brew, then automatically turns off.

Models URX30 and URX33

- **ON/OFF indicator** - This safety feature reminds you that your coffeemaker is on.
- **1-4 cup small quantity setting** Adjusts the brewing cycle so that you can enjoy full-flavor coffee even when you are brewing small quantities.
- **Programmable controls**
 - **Clock:** The LED clock serves as a handy kitchen clock, as well as allows you to set the timer.
 - **Timer:** Would you like to wake up to a fresh pot of coffee? The timer allows you to preset when you would like the coffeemaker to brew your coffee automatically, up to 24 hours in advance.
 - **Two-hour auto shut off:** This safety feature keeps your coffee warm for 2 hours after you brew, then automatically turns off
- **Audible beep signals** - Tells you when brew cycle and clean cycle is completed.




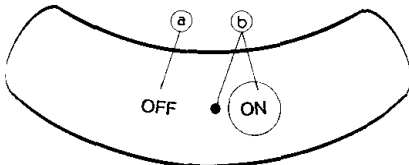

1 models URI2 and UR13



2A models URX20 and URX23

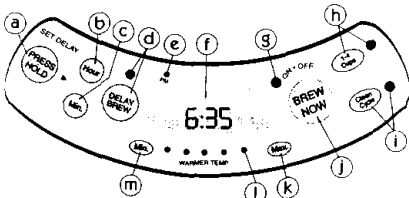

2B models URX30 and URX33

Models URI2 and UR13

1. Control panel

- a. OFF switch
- b. ON switch and indicator

Models URX20 and URX23

2A. Control panel

- a. PRESS HOLD button
- b. MIN. (minute) button
- c. Delay Brew indicator
- d. PM indicator
- e. On-Off indicator
- f. BREW NOW button


2. Clock display

- h. DELAY BREW button
- i. HOUR button

Models URX30 and URX33

28. Control panel

- a. PRESS HOLD button
- b. Hour button
- c. Min. (minute) button
- d. DELAY BREW button and indicator
- e. PM indicator
- f. Clock display
- 2. ON•OFF indicator
- h. 1-4 Cups button and indicator
- i. Clean Cycle button and indicator
- j. BREW NOW button
- k. Max. warming plate adjustment button
- l. Warming plate temperature indicators
- m. warming plate adjustment button

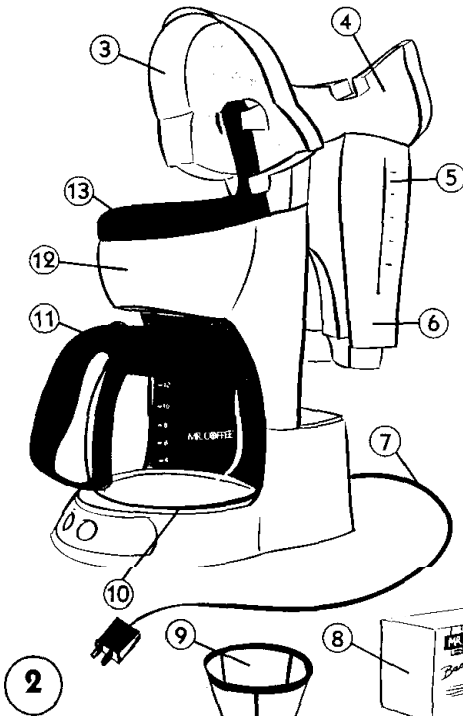


- 3. brew basket lid
- 4. hinged water reservoir lid
- 5. water window
- 6. removable water reservoir
- 7. power cord
- 8. MR. COFFEE® brand BI 2 cup basket style coffee filters(not Included)
- 9. MR. COFFEE® brand permanent filter (not Included)
- 10. warming plate
- 11. decanter
- 12. brew basket
- 13. removable filter insert

Adjusting the power cord length

You can customize the length of the power cord up to 3 feet so that it is the exact length you desire.


To increase the length of the power cord:

Grasp the power cord (not the power plug) and gently pull it away from the coffeemaker.

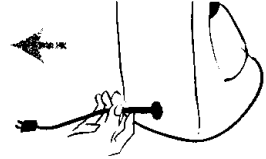

To decrease the length of the power cord:


Grasp the power cord a few inches away from where it attaches to the coffeemaker. Slowly feed it into the coffeemaker.

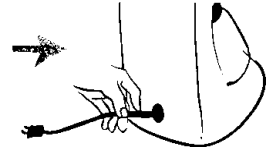

Setting the clock

(models URX20 URX23, URX30 and URX33 only)


The clock flashes on the control panel to indicate that it has not been set.

 **You must set the clock if you want to use the timer feature.**

To set the clock:


- 1.) Press and hold the HOUR button until the clock displays the correct hour. See fig. A.

The PM indicator will light to indicate a PM time; if the PM indicator is not lit, the time is AM.

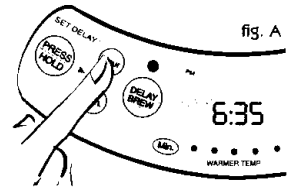

- 2.) Press and hold the MIN. button until the clock displays the correct minute. See fig. B.

The clock is now set.

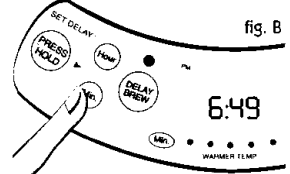

Brewing coffee

Cleaning the coffeemaker before first use

Follow the steps under "Adding water and ground coffee" and "Brewing coffee now," (pages 5-6) but do not add coffee grounds.

Selecting and measuring ground coffee

For best results, use coffee ground for use with automatic drip coffee makers, The amounts shown below are suggested amounts.



To brew...	Use this amount of ground coffee
12 cups	11 tablespoons or 5+ ¹ / ₂ scoops
10 cups	9 tablespoons or 4+ ¹ / ₂ scoops
8 cups	7 tablespoons or 3+ ¹ / ₂ scoops
6 cups	6 tablespoons or 3 scoops
4 cups	5 tablespoons or 2+ ¹ / ₂ scoops
2 cups	3 tablespoons or 1+ ¹ / ₂ scoops

- two level tablespoons = one level scoop
- one cup = five ounces brewed coffee





Adding water and ground coffee

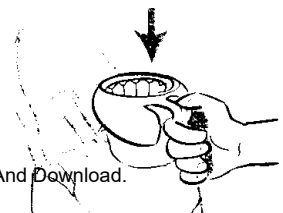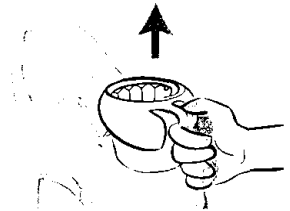- 1.) Open the brew basket lid and lift out the removable filter basket.
- 2.) Place a MR. COFFEE® brand 8-1 2 cup paper filter or a MR. COFFEE® permanent gold-tone filter in the removable filter basket.
- 3.) Add the desired amount of ground coffee to the filter. Gently shake the filter basket to level the ground coffee.
- 4.) Return the filter basket to the brew basket. Be certain that the filter is centered in the filter basket and then close the lid to the brew basket.




- 51 Remove the water reservoir by grasping the hand holds in the back of the reservoir, and pulling up. Fill it with the desired amount of tap water. Replace the reservoir on the coffeemaker, making sure that it is firmly attached to the coffeemaker body

 Make sure the reservoir is squarely centered on the coffeemaker or the water may overflow. An overflow may cause personal injury or damage to property.

 Use the water window marks to measure the water, not the decanter marks. The decanter marks measure brewed coffee only.



- 6.) Place the decanter on the warming plate.

 Make sure the decanter is squarely centered on the warming plate or the water and grounds will overflow from the brew basket. An overflow may cause personal injury or damage to property.

To reduce the risk of damaging the decanter and/or the risk of personal injury, do not add cold water to the decanter if the decanter is already hot. Allow the decanter to cool before using.


Do not brew coffee while the brew basket lid is open.

Brewing coffee now


For models URI 2 and URI 3:


Press the ON button.

The ON indicator will light, indicating that the coffeemaker is on and the brew cycle will begin. When the coffee stops flowing, the brew cycle is complete.

 While the coffee is brewing, the Pause N' Serve feature allows you to sneak a cup of coffee from the decanter. REPLACE THE DECANTER ON THE WARMING PLATE WITHIN 30 SECONDS TO PREVENT OVERFLOW AND POSSIBLE INJURY


To turn off the coffeemaker, press the OFF button.

 If the brew basket overflows or fails to empty into the decanter, do not open the brew basket. Unplug the coffeemaker and wait for the contents to cool before handling.

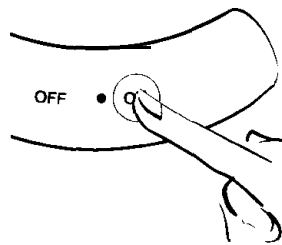


For models URX20, URX23, URX30 and URX33:

- 1.) If you are making four cups of coffee or fewer, press the 1-4 Cups button (models URX30 and URX33 only).

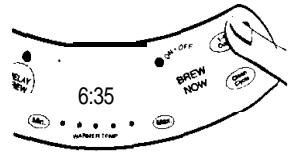


- 2.) Press the BREW NOW button

The **ON•OFF** indicator will light, indicating that the coffeemaker is on and the brew cycle will begin. When the coffee stops flowing, the brew cycle is complete. You will hear 5 beep tones (models URX30 and URX33 only).

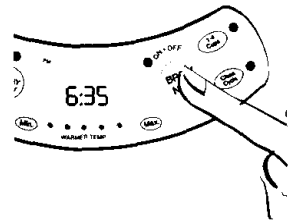

To turn off the coffeemaker, press the BREW NOW button.

⚠ If the brew basket overflows or fails to empty into the decanter, do not open the brew basket. Unplug the coffeemaker and wait for the contents to cool before handling.


 After two hours, the coffeemaker will automatically shut off and you will hear 3 beep tones (models URX30 and URX33 only).

Brewing coffee later


(using the delay timer, models URX20 URX23 URX30 and URX33 only)

You must set the time that you would like the coffeemaker to begin brewing your coffee.


If you are making four cups of coffee or fewer, press the 1-4 Cups button (models URX30 and URX33 only).

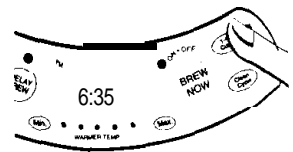


- 1.) Press and hold the PRESS HOLD button.

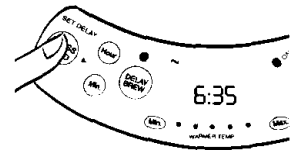

- 2.) While still pressing and holding the PRESS HOLD button, press and hold the Hour button until the clock displays the hour you desire. The PM indicator will light to indicate a PM time; if the PM indicator is not lit, the time is AM.

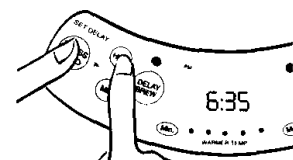


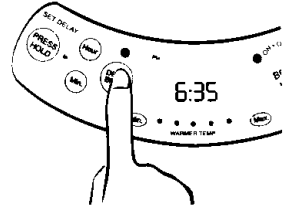
- 3.) While still pressing and holding the PRESS HOLD button, press and hold the Min. button until the clock displays the correct minute.

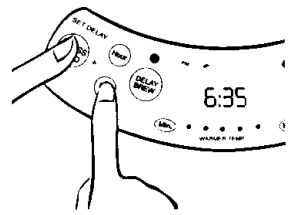

- 4.) Release the PRESS HOLD button.
5.) Press the DELAY BREW button.

The Delay Brew indicator will light. The delay timer is set and the coffeemaker will begin brewing the coffee at the time you selected.

 If You want Your coffee to brew at the same time the following day, simply add the desired amount of ground coffee, fill the water reservoir and press the DELAY BREW button




Adjusting the warming plate temperature

(models URX30 and URX33 only)

You can adjust the warming plate temperature to five different settings, from warm to very hot.

To adjust the warming plate temperature:

Press the Min. button to lower the temperature of the warming plate. Press the Max. button to raise the temperature of the warming plate.

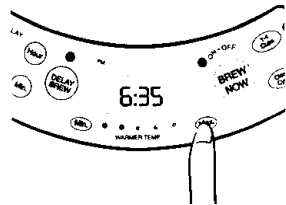

Cleaning the coffeemaker between brew cycles

To clean up the used coffee grounds and filter:

- 1.) Discard the grounds and paper filter and rinse the filter basket. You may also wash the filter basket in the dishwasher (top rack dishwasher safe only).
- 2.) Rinse the decanter with warm water. You may also wash the decanter in the dishwasher (top rack dishwasher safe only).



Make sure the coffeemaker is turned off when the decanter is empty.

Brewed coffee and grounds are both very hot. Handle them with care to avoid scalding injuries.

Unplug the coffeemaker's power cord if you are not using the coffeemaker or clock.

Maintaining your coffeemaker

Maintaining your coffeemaker and its parts will help extend the life of the appliance.

MR. COFFEE®
COFFEEMAKER CLEANER

Cleaning the coffeemaker

Your coffeemaker must be cleaned when You notice any of the follow conditions:

- excessive steaming
- increased brew cycle times
- the pumping action stops before all of the water has been pumped from the water reservoir

These conditions are caused by lime or other mineral deposits.

How frequently you clean your coffeemaker depends upon the hardness of your tap water. The following table gives suggested cleaning intervals.

Type of water	Cleaning frequency
Soft water	Every 80 brew cycles
Hard water	Every 40 brew cycles

To clean mineral deposits from your coffeemaker:



- 1.) Pour four cups of undiluted white household vinegar into the water reservoir.
- 2.) Place a paper filter into the removable filter basket and close the brew basket lid.
- 3.) Place the empty decanter on the warming plate.




Maker sure to center the decanter squarely on the warming plate to avoid the possibility of overflow.

- 4.) Start the cleaning cycle for models:


- UR12 and UR13
 - a. Press the ON button.
- URX20 and URX23
 - a. Press the BREW button to turn on the coffeemaker.

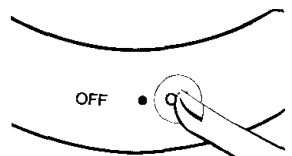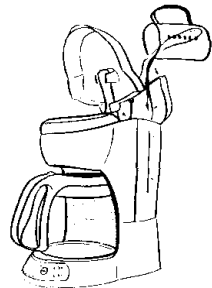

- b. When three cups of vinegar have flowed into the decanter, turn the coffeemaker off and let the vinegar stand for 30 minutes.

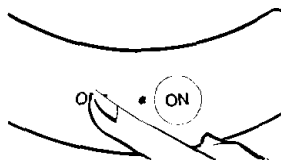

- c. Turn the coffeemaker back on and let all the vinegar flow through.

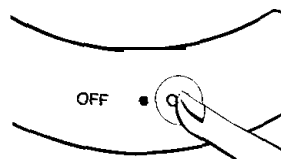

- d. When the brew cycle is complete, turn the coffeemaker off and discard both the vinegar and the paper filter.



For Models:


- URX30 and URX33
 - a. Press the Clean Cycle button.

The Clean Cycle indicator will light. Half of the vinegar will flow into the decanter, then the cleaning cycle will pause for 30 minutes before the remaining vinegar flows through into the decanter.




- b. When the cleaning cycle is complete, discard both the vinegar and the paper filter.

- 5) Fill the water reservoir with tap water. Replace the reservoir on the coffeemaker, making sure that it is firmly attached to the coffeemaker body

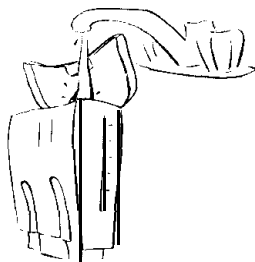

- 6.) Place the decanter on the warming plate and turn the coffeemaker on and allow it to complete a brew cycle.

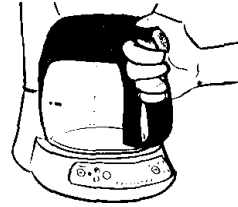

- 7.) Discard the water in the decanter and turn the coffeemaker off. Repeat steps 5 through 7 to flush all traces of vinegar from the coffeemaker.

Cleaning the decanter


Hard water can leave a whitish stain on the decanter. Coffee and tea may then turn the stain brown.

To remove decanter stains:

- 1.) Fill the decanter with a solution of equal parts tap water and vinegar and let the solution stand in the decanter for approximately 20 minutes.
- 2.) Discard the solution and wash and rinse the decanter.



Do not use harsh abrasive cleansers that may scratch the decanter; scratches may cause the decanter to break.

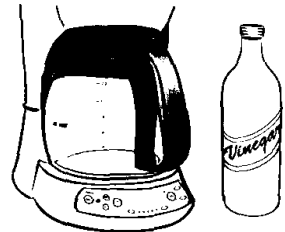

Service and maintenance

Replacement parts

- Filters

For better tasting coffee and tea, we recommend that you use MR. COFFEE® brand 8-12 cup paper filters or MR. COFFEE® brand permanent filters. These filters are available at most grocery stores.

- Decanters

You can usually purchase a replacement decanter from the store where you purchased your coffeemaker. If you are unable to find a replacement, please call 1-800 MR COFFEE (1-800-672-6333) in the U.S. and Canada for information on where you can find a store that carries replacement decanters.

Repairs

If your coffeemaker requires service, do not return it to the store where you purchased it. All repairs must be made by Sunbeam or by an authorized MR. COFFEE® Service Center. If you live in the U.S. or Canada, please call us at the following toll-free telephone number to find the location of the nearest authorized service center:

I-800 MR COFFEE (1-800-672-6333)

Monday through Friday, 9 a.m. - 6 p.m., Saturday 9 a.m. - 3 p.m. EST

To assist us in serving you, please have the model number (UR12, UR13, URX20, URX23, URX30 or URX33) and date of purchase information when you call.

Questions, comments and suggestions

We welcome your thoughts; please include your complete name, address and telephone number when you write or e-mail us at:

consumeraffairs@consumer.Sunbeam.com

Visit our Web site at www.mrcoffee.com to discover the secret to brewing coffee. You'll also find a rich blend of gourmet recipes, entertaining tips, and the latest information on MR. COFFEE® products.

Consumer Affairs Department
MR. COFFEE®

A Product of Sunbeam Corporation
P.O. BOX 948389
Maitland, FL 32794-8389



One-year limited warranty

Sunbeam Products, Inc. ("Sunbeam") warrants that for a period of one year from the date of purchase, this product will be free from defects in material and workmanship. Sunbeam, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. Sunbeam dealers, service centers, or retail stores selling Sunbeam products do not have the right to alter modify or in any way change the terms or conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than Sunbeam or an authorized service center. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes and tornadoes.

Sunbeam shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty. Except to the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty. Some states, provinces or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitation on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or province to province.

How to Obtain Warranty Service

Take the product to an authorized Sunbeam service center. You may obtain a list of service centers and other repair/replacement instructions by calling (1-800-672-6333) or send an e-mail to Consumeraffairs@consumer.sunbeam.com. Please include name, address, telephone number, product model number and description of the problem.

DO NOT RETURN THIS PRODUCT TO THE PLACE OF PURCHASE

For product questions:

Sunbeam Consumer Service

PO BOX 94838

Maitland, FL 32794.8389

Do not send product to the above address

Made in China,

©2001 Sunbeam Products, Inc. All rights reserved.

"Sunbeam" and Mr. Coffee® are registered trademarks of Sunbeam Products, Inc.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>