



nextar™ 

N1-504 | LCD TRAVEL ALARM
CLOCK AND DIGITAL FRAME

Instruction Manual



www.nextar.com

Download from Www.Somanuals.com. All Manuals Search And Download.

Table of Contents


Overview of your Digital Photo Display.....	1
Feature.....	2
Accessory.....	3
Key Function.....	3
Operation.....	4
Set the Clock.....	8
Set the Alarm.....	8
Background light.....	8
Select the Temperature Format.....	8
Specifications.....	9
Replace Battery for Thermometer.....	10
Software installation.....	10
Picture Download.....	11-16


LCD Travel Alarm Clock And Digital Photo Display

Please read carefully before using this equipment.


Thank you for purchasing this portable digital photo display. It can be used to store 60 photos. It is quick and easy to download pictures into your photo display. You may view your favorite pictures stored in this photo display anytime, anywhere.

Overview of your Digital Photo Display

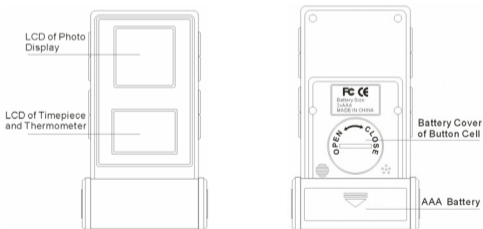 

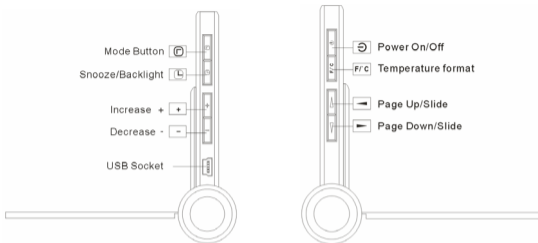 

LCD Display

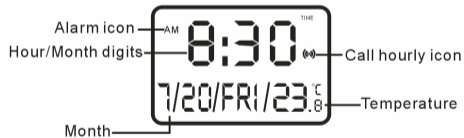 




Feature





1. Photo display: JPG,BMP
2. Manual or Auto play mode
3. Time & Date Display
4. Clock & Hourly Call
5. Temperature Display
6. Background light

Accessory




1. Photo Viewer *1
2. 5Pin Mini USB Cable *1
3. Driver CD *1
4. User Manual *1
5. AAA Battery *2
6. 3V (CR2032) battery *1
7. Protective Pouch *1


Key Function











-  Previous
-  Next
-  Increase


-  Decrease/Background light
-  Power ON/OFF
-  Time Setup
-  Temp Setup

Operation:




1. Install 2 AAA batteries into the unit. The unit will then start automatically and switch to slide-show mode. Then you can press  or  to select your favorite picture. Press  to go to the main menu, shown below:

 POWER OFF
 Delete Image
 Display Mode
 Clock Set
 Clock Disp
 Auto ON/OFF
 Exit

- 1) To turn off, press  or  to **POWER OFF** and press  to confirm. Press and hold  for 3 seconds to turn on the unit.
 Remark: To prevent the waste of battery power, the unit is off automatically at 120 seconds by default. If you need to change off time, please go to "Auto On/Off" menu.
- 2) To delete a photo, press  or  to **Delete Image** and press  to confirm.
- 3) To select Automatic or Manual slideshow, press  or  to **Display Mode** and press  to confirm:











► Auto Slide
Manual Slide

- Press  or  to **Auto Slide** and press  to set up the slideshow interval (the default interval time is 10 seconds, but you can select from 0~120 seconds):



Auto Slide
Time
Seconds

- Press  or  to **Manual Slide** and press  to confirm. The device will switch into manual slide mode. Then you can press  or  to view the pictures.
- 4) To set the clock, press  or  to **Clock Set** and press  to confirm.






2007-07-20



 



00:01:40



Friday


Press  or  to set up the date and time. Press  to confirm at each step.

 5) Press  or  to select **Clock Disp**, then press  to confirm. The device will enter into clock setup shown below:







2007-07-20
00:00:00
Friday

  • Press  or  to select **Disp Clock Normal**, then press  to confirm:






2007-07-20
00:03:05
Friday

 

 
6) Press  or  to **Auto ON/OFF**, then press , it enters into the Auto ON/OFF setup as shown below:







Auto ON/OFF
ON
Auto ON/OFF
OFF

 
- Press  or  to select **Auto ON**, and the device will enter into the time setup shown below:






- Press  or  to select **Auto OFF**, then press . The device will deactivate the auto off function.

7) Press  or  to select **Exit**, then press  to confirm. The device will exit the setup mode. (Note: if you stop pressing buttons for more than 60 seconds while in the setup mode, the photo viewer will switch into photo viewing mode automatically.)



 

 











2. When in photo display mode, press  to enter into delete mode, shown below:



- Press  or  to select **Del Current**, then press  again to delete the current photo. Select **Del All** to delete all photos, and select **Exit** to quit delete mode








 

3. Set the Clock

Set the Time:


1. Press and hold  for 3 seconds until the hour digits flash.
2. Press  /  to set the hour.
3. Press  to confirm. The minute digits flash.
4. Press  /  to set the minute.
5. Press  to confirm. The year digits flash.
6. Press  /  to set the year.
7. Press  to confirm, The month digits flash.
8. Press  /  to set the month.
9. Press  to confirm. The date digits flash.
10. Press  /  to set the date.
11. Press  to confirm.

Note: You can Press  to view the date and month at standby mode.

4. Set the Alarm

1. Press .
2. Press and hold  for 3 seconds until the alarm icon  appears, and the minute digits flash.
3. Press  /  to set the minute.
4. Press  to confirm. The hour digits flash.
5. Press  /  to set the hour.
6. Press  to confirm.

5. Background light

1. Press  to show Background light
2. Background light off within 5 seconds. automatically

6. Select the Temperature Format

1. Press **F/C** to display the temperature in ° C or ° F.
2. Press **G** to confirm.

Specifications

Picture Formats	BMP,JPG,PNG,GIF,TIF
Picture resolution	128*128 dots
LCD	1.5"TFT
Memory Device	Built-in 8Mbit flash
Memory Capacity	60 photo
Slide Mode	Yes
Automatic Energy Saving	120s
Transmission Interface	USB Interface Ver.1.1
Power Supply	2*AAA(3V)Batteries USB 5V(optional)
Working Temperature	0°C-40°C
Operation System	Win 98 SE/ME/2000/XP/Vista

Clock and Thermometer


Time Format	12/24
Temperature	-5°C-50°C
Temperature Accuracy	±2°C

Test Period (Temperature)	10 seconds
Back Light	5 seconds
Power Supply	3V(CR2032)

Replace Battery for Thermometer

Your clock and thermometer comes with one CR2032 battery. If it does not work, please take the following steps to replace the battery.

 1. Open the battery cover with a coin.
2. Remove old battery and install the new battery correctly into the compartment.
3. Replace the battery cover.

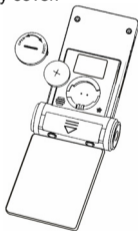


4. Software installation

Please copy the software to your PC. (Note: this software does not need to install.)


5. Picture Download

 
After you copy the software to your PC, connect the photo viewer to your PC, and the following dialogue appears:





Press or to select **USB Charge** and press to confirm, or don't press any buttons for 60 seconds. The device will enter into USB charge mode. During this time, you cannot download photos into the photo viewer, but you can operate the unit.

  
Press or to select **USB update** and press to confirm. The computer will search the hardware automatically, then run the software "PhotoViewer.exe". (Note: If you have selected **USB charge**, then please disconnect the USB cable and reconnect it.) The following dialogue will appear:

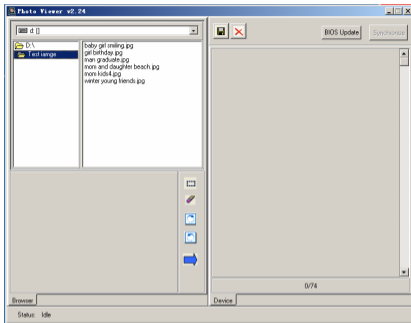

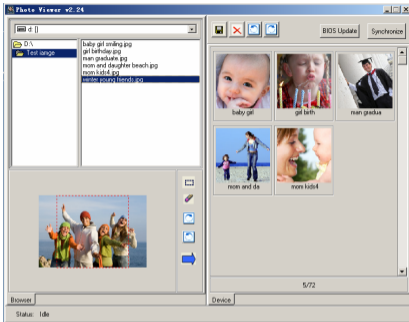

 
Select photos from your PC and click  to add the selected photo into the right panel:

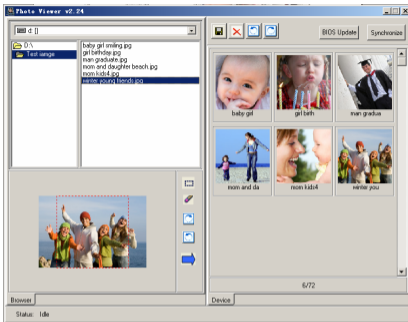




You can edit the selected photo by clicking  or  to rotate, and  or  to crop the photo.

  Click  to delete the selected photos from the right panel. Then press  to download the selected photos into your photo viewer:

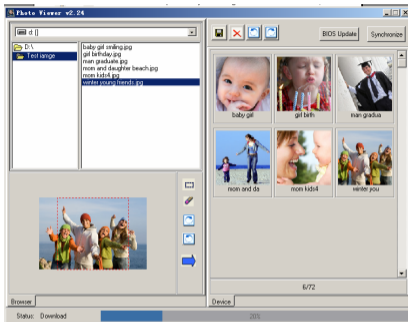

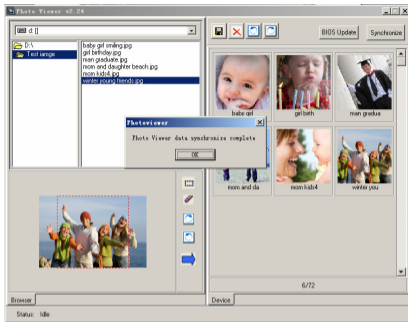

When the download is finished the following message will appear: "Photo Viewer data synchronize complete". Click OK to finish.
(Please connect the PC when you download pictures. If you have open windows, close them before connecting your PC.)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>