

nextar 

# 10.4 INCH DIGITAL PHOTO FRAME

*See Things Differently™*



USER'S MANUAL

-----Let memories shine on the table!



(Reference photo)

Catalogue	
Foreword.....	1
Safety & Maintenance.....	1
Summary.....	1
Operational instructions .....	2
Setup.....	6
Questions & Answers .....	7
Product Specifications.....	7
Accessories.....	8
Card reader operation menu (Selectable).....	8

**NOTICE:** pictures in this manual are only for reference

## Foreword

Thank you for choosing our digital photo frame. We provide this service manual for your reference as a guide to operation of the device.

## Safety & Maintenance


To ensure the long lifetime of the digital photo frame, please pay attention to following factors:

1. Before using this device, please read the manual carefully.
2. Please pay attention to the warnings and follow the instructions in the manual
3. Please use the AC adapter for the device, do not use any other adapter, or your digital frame may be damaged.
4. Please avoid getting the device wet. Do not use it near water.
5. Do not apply heavy pressure to the frame or the product may be damaged. Also, please place the digital frame on a flat and steady surface to avoid damage.
6. Openings and slots are used for ventilation. Do not obstruct these holes. Also, do not store the product in hot or dusty areas, or the digital frame may become very hot and may be dangerous.
7. Please pay attention and follow the power criteria on the bottom or back of the digital frame. If you are not sure of the local voltage, please consult a local dealer or your power supply company.
8. Do not tread on or squash the cable.
9. If you use an extension cable to supply power to the digital frame, please make sure that the total power consumption for all the electric equipment attached to one extension is not more than the maximum allowed for the extension or the plug on the wall.
10. Do not put any memory card other than that stipulated for use into the slot of the machine. It may be dangerous to insert anything into the machine and touch the inverter inside the machine. Please ensure that children do not do this.
11. LCD panel is fragile please do not press it or bump it.
12. To avoid burns, do not touch the bottom of the digital frame for an extended amount of time, as it may get very hot.
13. Do not put the AC adapter on a non-ovenproof surface when it is in operation. The AC adapter disperses heat when in operation.
14. Before cleaning the product, please disconnect the power and remove the plug first. Then use soft and clear fabric to clean it. Please be careful not to use any kind of spray solvent or other cleanser.
15. Before you move the device, please ensure that you have disconnected the power.

## Summary

This section will introduce the various parts of the digital photo frame.

Front side view

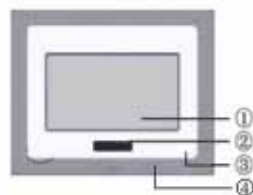


- 1.LCD Screen
- 2.Remote Receiver
- 3.Inner Border
- 4.Wooden Frame

Left side view



- 1.AV output slot

Back side view

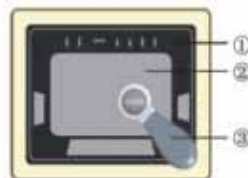

- ① The plastic crust
- ② Speaker inside
- ③ Stand

Right side view



- ① USB host slot
- ② DC power input slot



- 1.SD,MS,MMC,SM,card slot
- 2.USB host slot
- 3.CF card slot

Top Side View

- ① POWER SWITCH
- ② ENTER
- ③ SETUP/STOP
- ④ ▲▼◀▶ UP, DOWN, LEFT, RIGHT



Attention:

- 1.LEFT : choose the front one when playing the picture, music, video;
- 2.RIGHT : choose the next one when playing the picture, frequency, video;
- 3.UP : choose the next one in the menu or files, reduce volume when play the picture, video if you press this button;
- 4.DOWN : choose the front one in the menu or files, increase volume when playing the picture, frequency, video if you press this button

Attention:

AV OUT, use this port to output the program to a TV or other displayer. ( You can press " PC/AV " key to shift.)

AC Adapter:

We will provide one appropriate AC adapter with the digital photo frame. The range of input voltage is from 100V to 240V. This can be used all over the world. Connect the AC adapter to the power input port of the machine, DC+12V. Then connect to the power plug.

ATTENTION: Please use the appropriate AC adapter provided. If you use an extension cable, please use a good quality extension cable to supply power to the digital frame.

LCD Maintenance


An LCD panel is fragile please be careful with it.

1. Please use soft gauze to wipe the surface of the LCD.
2. Do not touch the surface of the LCD, and do not spray cleaning products on the surface of the LCD panel.
3. Do not place any articles on the surface of the LCD, as it may be broken.

# Remote Instructions :

## Remote control and operation instructions

### Key function instructions

POWER	Power on/off.
MUTE	Mute, but it does not work in the system setup state.
VIEW	View the data of the file
PC/AV	Switch the video output to TV or VGA output to monitor or PC.. It will stop playing when you press it in the file display state.
SETUP	Enter the basic setup function of player.
MENU	Return to the main menu, but it does not work in the system setup state.
ZOOM	In the photo view state, press this key to zoom in
ROTATE	In the photo view state, press this key to rotate
	Repeat the current displaying content.
SLIDESHOW	In the photo view or the music playing state, press FILE then SLIDE SHOW key to display the photo with background music
PHOTO	Enter the photo play mode directly, but it does



MUSIC

Not work in the system setup state.  
Enter the music mode directly, but it does not work in the system setup state.

VIDEO

Enter the video directly, but it does not work in the system setup state.

FILE

Enter the file play mode directly, but it does not work in the system setup state.

▲▼▶◀

Move the cursor up/down/left/right.

ENTER

Confirm and enter.

VOL+

VOL-

Adjust the volume.

PLAY

Controls play

AUDIO

Switch tracks between the original song and accompanying song or different languages in the movie.

⏸

Pause.

⏪

⏩

Stop or resume current play.

In the movie playing state, choose to speed or fade back.

⏮

⏭

Play the previous or next program.

### Play:

After turning on the machine, the file catalogue will be shown as the following:

- Mode 1 (Default): When you insert two or more memory cards, you can press the MENU key to choose one memory card and press the "enter" key to play.
- Mode 2: When you insert only one memory card, the machine will play the file directly.
- Mode 3: When you insert only one memory card, with only one kind of file in the memory card, then there is no need to select it, as the machine will play the Photo, Music, Movie or File directly.

### Photo View;

When not in the system setup state, press the " photo " key or choose " photo " in the main menu to enter the photo view interface. After that, you can preview the photo in 2×2, or 3×3 mode (please refer to the following setup item). In the current interface, to choose the photo display or enter the slide show mode, press the " ▲▼◀▶ " key to choose one and press " enter " to show the whole photo. Or you can press the " slide show " key to display the photo with background music. To use the " slide show " function, you need to load photos and music in thememory card.

In the photo mode, you can press the " menu " key to return to the main menu, and press " setup " to enter the system setup interface.



### Music View:

When not in the system setup state, press the " music " key or select " music " in the main menu to enter the music view interface. Then it will play the first song and all the music in turn. Press the " ▲▼ " key to play any song you want to hear. It will play automatically when you select it. After selecting a song, press the " enter " key to show the music player, and press " enter " again to exit the music player display. In the music state, you can press "FILE"then " SLIDE SHOW " key to display the photo with background music. To use the " slide show " function, you should load photos and music in the memory card. In the music mode, you can press the " menu " key to return to the main menu, and press " setup " to enter the system setup interface.



### Movie view

When not in the system setup state, press the " video " key or select " movie " in the main menu to enter the movie view interface.

In the current interface, you can select a movie by pressing ▲▼ to choose it and press the " enter " key to play selected segments.

While playing the video, you can press the " pause " key to enter the step playing mode and press " pause " to resume playing.

In the movie mode, press the " menu " key to return to the main menu, and press " setup " to enter the system setup interface.



### File Browsing

When not in the system setup state, press the " File " key to enter the File browsing interface.

This will display all the files on the memory card.

Press ▲ ▼ to choose and play the file automatically in a small window, such as the music, photo, movies display, etc.

Press the " enter " key to play in full screen mode.

A fault message will be shown on the screen if you choose a non-supported file. In file mode, press the " menu " key to return to the main menu, and press " setup " to enter the system setup interface.



## SETUP

In any state, press the " Setup " key to enter the system setup main menu, and press " Setup " again to exit the setup menu and return to the previous interface.

To select which one you want to setup press ▲▼ button, then press the " enter " button. Press ◀▶ button to choose the main menu or subdirectory.



function:  
DOWNMIX: speaker setup  
operation:

press ▲▼ button to choose the one you want to setup, then press ▶ to setup. Press the " enter " button to select one.

If you want to go back, press the ◀ button.

To go back to the main page select " main page " and press " enter " :



## VIDEO SETUP

Function:

COLOR: Color setup

BRIGHTNESS: Brightness setup

CONTRAST: Contrast setup

DISPLAY TYPE: Display type setup

RESOLUTION:

VIDEO SETUP: Video setup

Operation:

In playing state, press " STOP " then

" SETUP " button on the remote,

to enter into " SETUP MENU MAIN

PAGE " . Press ▼ button to select

" VIDEO SETUP " , then press

" ENTER " to enter "VIDEO PAGE".

Press ▲▼ button to choose

the one you want to setup, then press

Play ▶ to setup and press " ENTER " to confirm. If you want t go

back, press the ◀ button. To go back to the main page, choose

" MAIN PAGE " and press " ENTER " .



## PREFERENCES

Function:

OSD LANG: Language setup

TRANSITION: Picture transition mode, there are 14 transition modes

DEFAULTS: Initial parameter

SMARTNAVI: Menu display mode setup



#### Operation:

In playing state, press " STOP " then " SETUP " button on the remote, to enter into " SETUP MENU MAIN PAGE ". Press **▼** button to select " PREFERENCES ", then press " ENTER " to enter " PREFERENCES PAGE ". Press **▲▼** button to choose the one you want to setup, then press **▶** to setup and press " ENTER " to confirm. If you want to go back, press the **◀** button. To go back to the main page, choose " MAIN PAGE " and press " ENTER " .



#### \*Language setup:

##### OSD LANG INTERFACE:

In "MAIN PAGE" interface, select "PREFERNCES"to enter,then use" **▲▼** " key to select "OSD LANG", press" **▶** " key to set up the initial language "ENGLISH/CHINESE /FRENCH /GERMAN /IT ALIAN / SPANISH " when select one that you want, PLS press "ENTER" key.rebound PLS press **◀** key, then select "MAIN PAGE" to enter.



#### Question & Answer

This provides solutions to deal with familiar problems. If your device experiences problems please read this section first to deal with the issue yourself. If you can not solve the problem, please contact your local dealer to ask for help. Please do not try to take apart the machine by yourself at any time.

- 1 Q: It is connected to the power supply, but the product will not start.  
A: Make sure the AC rectifier has been correctly connected to the production and the power plug.
- 2 Q: There is no display on the screen  
A: Maybe the display equipment is set in the TV output modepress the " TV/PC " key to switch.
- 3 Q: The image is not on full screen display.  
A: Make sure the display resolution matches the resolution of the digital photo frame.
- 4 Q: There is no sound.  
A: Check if the " mute " key is on or if the volume is too low.

#### Product Specifications

Video format supported: MPEG1(VCD), AVI(not all the AVI format movie are supported)

Audio format supported: MP3

Support USB1.1

Display: 10 inch TFT LCD

Speaker: Internal speaker

Output port: A/V output port

Video system: Support NTSC/PAL.

Controls: Remote control, key-press control

Power supply: DC12V input

Language: Chinese/English

Other function: Playback automatically after boot-up

Power consumption: 8W

Working environment:

Operation temperature: -5℃- 40℃

Operation humidity: 20%- 80% relative humidity  
Storage temperature: -15°C-50°C  
Dimension: 250mm\*184mm\*32mm

Accessories:



Accessories (required)  
AC adapter 1 PC



AV output cable 1 PC



Remote control 1 PC

Stand 1 PC  
User's Manual 1 PC

Complementary:

Manual for the card reader (selectable)

You can use the card reader to update the program in the memory card.

Install the driver program for the card reader

For windows 98/se:

- 1: Startup the PC
- 2: Put the driver disk into the disk drive of the computer
- 3: Find the " autorun.exe" in the CD driver, and run it.
- 4: Choose the applicable operation system, and install the driver

For windows me/2000:

- 1: Startup the PC
- 2: Connect the portable driver to the USB port of the computer.
- 3: The system will find the portable driver and install the driver automatically.

ATTENTION:

1. If when you connect the flash drive with the USB of the host computer, the system cannot find the new hard disk, open the USB control in the Bios.
2. When the portable drive is reading or writing, do not remove the flash drive or flash drive card, otherwise the data in the flash or card will be lost or destroyed, or the system may even fail.

The following memory cards are supported by our product for your reference.



SD Card



MS Card



MMC Card



CF Card

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>