

nextar 

10.4 inch Digital Photo Frame

See Things Differently™



USER'S MANUAL
N10W-400

Safety Precautions and Maintenance

- For indoor use only
- To reduce the risk of fire or electric shock, do not expose this device to rain or moisture
- To prevent overheating, do not block the vents on the back of the digital photo frame
- Keep your Digital Photo Frame out of direct sunlight
- To avoid electric shock and maintain your warranty, do not disassemble the Digital Photo Frame

How to clean LCD Screen

- Wipe the screen gently to avoid scratches or breakage of glass.
- To clean fingerprints and dust from the LCD screen, use a soft, non-abrasive cloth such as camera lens cleaning cloth
- Do not apply cleaning liquid directly to the LCD screen if you use readily available LCD Screen Cleaning Kits. Moisten the cleaning cloth with the cleaning solution, then wipe the LCD screen with the damp cloth

Table of Contents

Overview	2
Features	3
Getting Started	3
Package Contents	3
Connecting the frame to the Power Supply	4
Connecting the frame to a computer	4
Back Panel.....	5
Remote Control.....	6
Main Menu	7
Photo	9
Music	10
Combo	11
Movie	12
Text	13
Edit	14
Setup	15

Overview

- Your new Digital Photo Frame lets you view your digital pictures and listen to your MP3 music from **memory cards**
- You can enjoy your photos any time and anywhere
- The frame is ideal to display your digital photographs
- The **Slide Show mode** displays all of your pictures one after the other sequentially – it has many pre-programmed slide transitions
- The **Remote Control** provided can be used to control most of the functions of your digital photo frame
- The Digital Photo Frame doesn't require a direct connection to a computer – the **built-in card reader** reads memory cards
- Pictures can be transferred from a memory card to another memory or USB without the use of a computer
- The Digital Photo Frame supports SD/MMC/MS/CF memory cards as well as most of the popular file formats
- The Digital Photo Frame is a **digital photo album** that lets you display hundreds of pictures anywhere in your home or office
- You can play **Music** in MP3 format using the Digital Photo Frame
- You can connect the photo frame to TV to view all content on the TV screen

Features

- Your frame supports JPEG photo files, MP3 music files, and MPEG-1, and -4 and AVI Motion JPEG video files.
- The screen resolution is 800x600 pixels.
- Your frame is compatible with Compact Flash (CF), Secure Digital (SD), Multimedia Card (MMC), Memory Stick (MS) memory cards.
- USB 2.0 connection
- The frame allows users to delete, rotate and/or pan pictures, play music (MP3 format), play movie clips, create slide shows, and move pictures between the memory cards.

Getting Started

Package Contents

The box should include:

- Digital photo frame
- AC Power Adapter
- USB Extended Cable
- Remote control
- Stand for display
- User manual

Connecting Your Frame

 
- Plug one end of the AC Adapter into the digital photo frame and the other end into a standard 110-240 volt 50-60 Hz AC electrical outlet.
- Insert a memory card into the appropriate card slot.
- Press the Power Switch to ON position.
- The main menu will be displayed on the screen automatically.
- To select between different storage medium when more than one storage medium is present (an SD card and an MMC card for example):
 - Press the Stop button until you see the icons of the various memory types.
 - Use the arrows to highlight the desired memory type.
 - Press Enter to select.
 - Press Enter again to start a slide show using the selected memory type.

Note: If not selected already, highlight the appropriate memory card type on the first menu screen by using the arrow buttons on the remote control. Press the Enter button to confirm the selection. In the next menu, select Photo using arrow keys. Then, press Slideshow from the remote control to display images.

Connecting to USB flash drive

The frame has a USB port to connect to other devices such as a USB flash drive, USB card reader, or a camera.

Back Panel

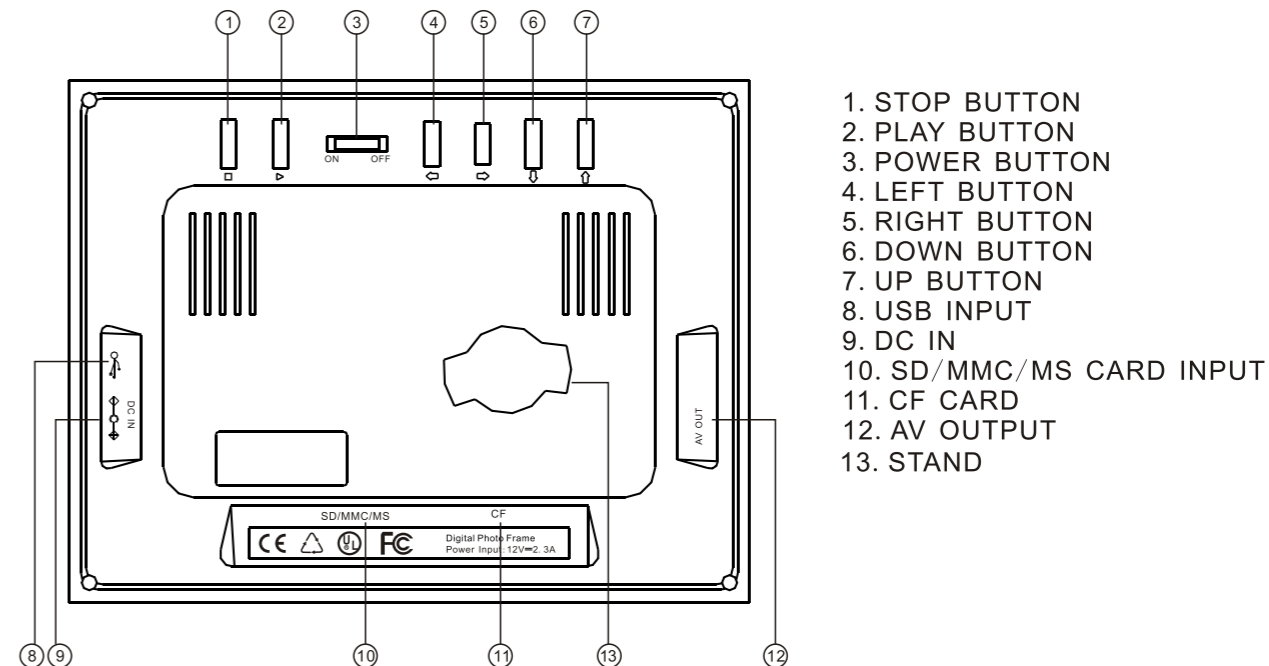

Remote Control


The remote control is used to conveniently manage the media to be played. The layout is designed for maximum ease of use, and because the menu functions all operate in a similar manner navigation is quick and easy to learn.



Button	Function
POWER	Turn screen On and Off
MENU	Show the menu
TV MODE	Connect to TV
MUTE	No sound
OSD	Show OSD
ROTATE	Rotate image
SLIDE SHOW	Slideshow photo with music
PHOTO	Select the photo files
MUSIC	Select the music files
MOVE	Select the move files
FILE	List all files on the screen
PLAY	Start to play
STOP	Stop to play files
PAUSE	Pause the files
SETUP	Setup menu
ESC	Return to previous menu
Enter	Enter / Select
Zoom	Zoom by 25%
Up Arrow	Up select
Down Arrow	Down select
Left Arrow	Left select/return to Menu
Right Arrow	Right select
Vol +	Increase Volume
Vol -	Decrease Volume
NEXT	Next
PREVIOUS	Previous
FAST	Fast play
SLOW	Slow play

Main Menu

 The Main Menu contains icons for the major functions. Use the navigation buttons on the remote control to highlight the desired function. Use the Enter button to select. A second screen is presented for media control. A third screen may be presented to view and select the media content.

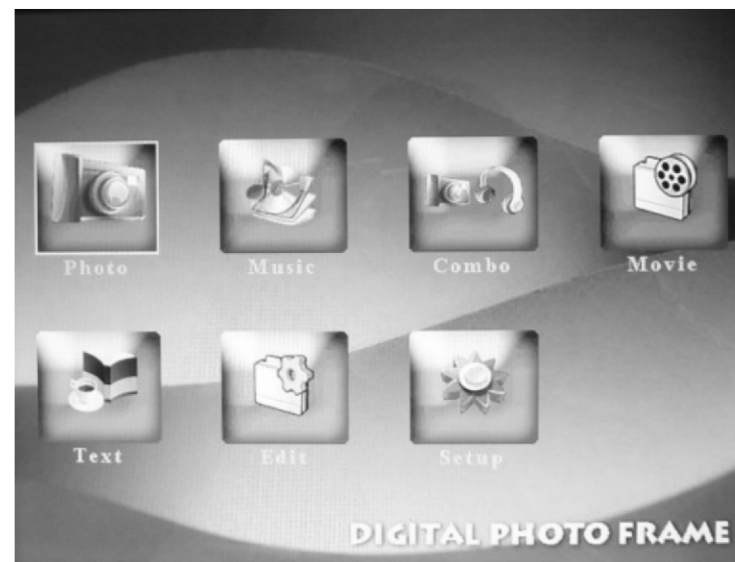


Function	Description
Photo	Play photos in slideshow
Music	Play MP3 audio
Combo	Play slideshow with audio
Movie	Play movies
Text	Play text data on the display
Edit	Copy/Delete
Setup	Set System Menu

Menu Screen Navigation

Use the arrow buttons to navigate to the desired function. The selected function is highlighted with the characters of the function changing color from the rest of the functions. Press Enter to select. A second screen will appear to select the media. Use the arrow buttons to choose the desired media. Press the Enter button to activate. A third screen will appear with the name of each image or clip. Press the Enter button to Play/Pause. The Zoom button allows you to enlarge the picture. Rotate allows you to rotate the picture.

 Photo

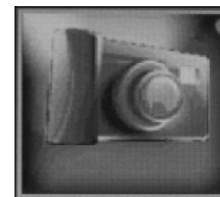


This function is used to play a slideshow. Select Photo from the Main Menu and click Enter. This will take you to the screen where you can choose your media. Only memory cards that are inserted in the frame can be selected. Press Enter to access the media. The screen showing the names of the images on the selected media appears. Press Enter to Play. The slideshow will begin to play starting with the selected image. Press Pause to pause and resume the slide

show. Press Zoom to enlarge the photo or Rotate to rotate it.


Press Stop to end and return to the Main Menu.

On Screen Controls While Playing a Slideshow

 While a slideshow is playing, press Enter. A control screen appears as shown. Use the arrows to navigate to the desired function. Press Enter to activate.

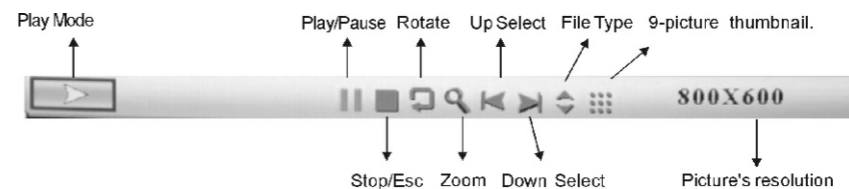



Music

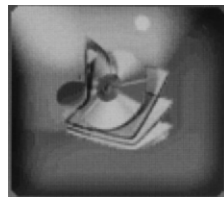 


This is the function used to play MP3 audio files. On the Main Menu select Music and Enter. On the second interface select the media. Press the Enter button to access the media. The third screen shows the name of the MP3 files on the selected media. Press the Enter button to Play. The MP3 file will begin to play. Press the Pause button to pause the clip. Press "VOL+/-" to turn up and down; Press the STOP button to end and return to the Main Menu.

On Screen Controls While Playing Music

  Once an audio clip is playing press the Enter button*. A control screen appears. Use the direction buttons to navigate to the desired function. Press Enter to activate.

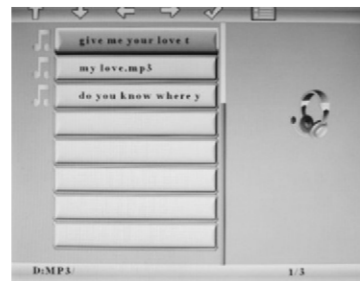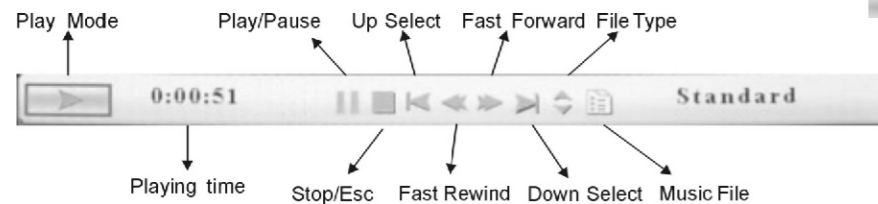


Combo

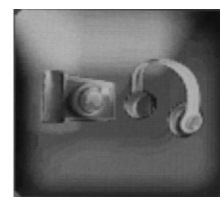 

This is the function used to play an audio slideshow. There must be an MP3 file on the media with the images. In this mode MP3 audio will be played in the background while a slideshow is playing.


Operation steps:

 1. Select Combo
2. Select memory card, choose the file which you want to see, press Enter, then the pictures are shown in a slideshow with background music. Press Pause to stop
3. Press the STOP button to end and return to the main menu

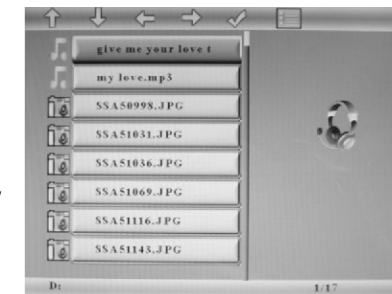


On Screen Controls While Playing an Audio Slideshow

 Once an audio slideshow is playing press the Enter button*. A control screen appears as follows. Use the direction buttons to navigate to the desired function. Press Enter to activate.

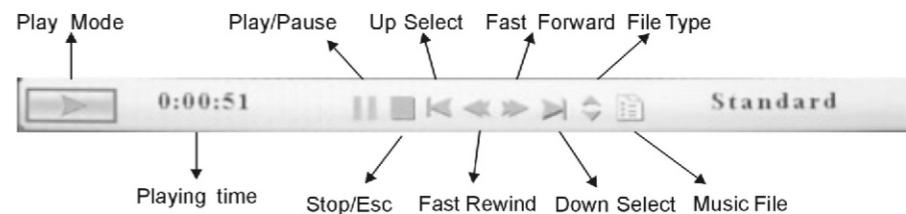


Movie

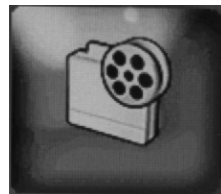 


This is the function used to play a movie clip. On the Main Menu select Movie and Enter. On the second interface select the media. Press the Enter button to access the media. The third screen shows the name of the clips on the selected media. Press the Enter button to Play.

 The clip will begin to play. Press the Pause button to pause the clip. Press the STOP button to end and return to the Main Menu.

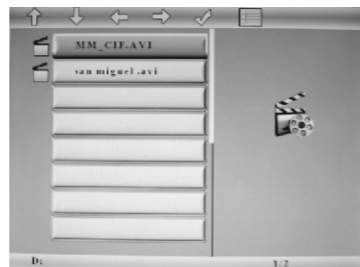


On Screen Controls While Playing a Movie

 While a movie is playing, press the Enter button*. A control screen appears. Use the direction buttons to navigate to the desired function. Press Enter to activate.

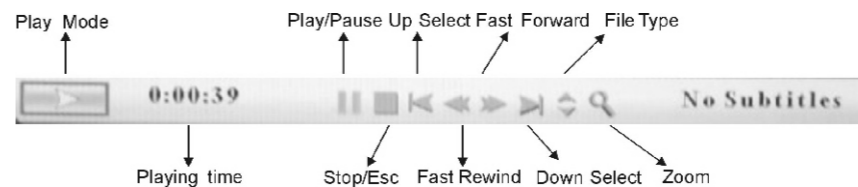


Use the direction buttons to navigate to the desired function. Press Enter to activate

 Text

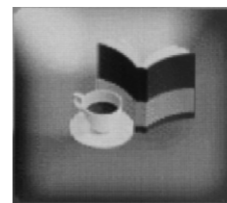

This function is used to display text files. Use the arrow buttons on the remote control to scroll up and down.

 Edit

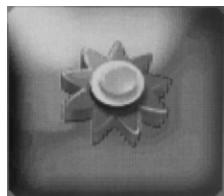

The Edit menu is used to copy and delete files.

The Copy/Delete function is used to copy or delete files from one medium to another. In this manner files that are on the external can be copied to another memory type. Files can also be deleted in the same manner.

 
Operation steps:

1. Select the Edit icon.
2. The next screen is to select the media where the "From" files are located. Use the Up and Down arrow buttons to locate the desired files.
3. Press the right button to tag the files.
4. Now use the Left arrow button to get back to the media screen. Highlight the "To" media and press Enter.
5. Press the OSD button to access the control screen. To Paste the file, highlight the second icon and press Enter. While copying, the screen will display a busy message followed by a complete message when the copy / paste function is complete. When the message appears choose OK by pressing the Enter key.

To delete an item that you have tagged, select the third icon (trash can).




Setup

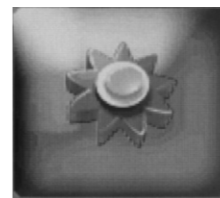

The Setup menu allows you to make the following types of adjustments to the way the frame functions:

Language Set

 
This menu allows you to select the language that is displayed on the screen. Press Enter to access the menu, highlight the language you want, then press Enter again. Press the left arrow to exit.

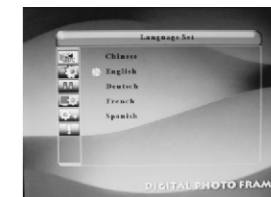

Picture Set

Press Enter to access the settings.

 Slideshow Mode – Press the right arrow button to access a drop-down menu. Use the up or down arrow buttons to highlight Fast, Middle or Slow (the highlight is a yellow border around the word). Press Enter to select the slide show speed.

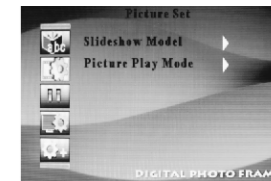

Picture Play Mode – Press the right arrow button to enter the menu. Use the up or down arrow buttons to select the style of transitions you prefer for the slide show. Press Enter to select. Press the left arrow button to exit this menu.

Press the left arrow button to leave the Picture Set menu.

 


StartUp Set

The StartUp Set menu determines which screen appears when the unit is first turned on. Press Enter to access the menu, then use the up or down arrow buttons to highlight your choice. Press Enter to move the asterisk, and then press the left arrow button to exit the menu.


Video Set

Options in the Video Set menu include Brightness, Contrast and Color Saturation. Press Enter to access the menu, and then use the left or right arrow buttons to adjust the settings. Press Enter again to exit the menu.

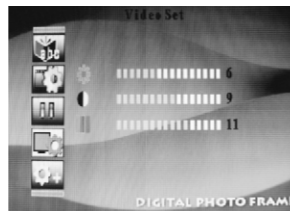

Default Set

 In this menu, the player's default settings can be restored. Press Enter to access the menu, and then press Enter again to restore the frame to its factory default settings.

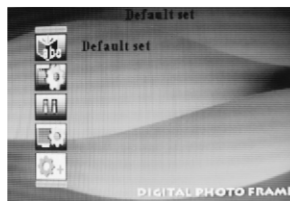

Nextar may find it necessary to modify, amend or otherwise change or update this manual.

We may reserve the right to do this at any time, without any prior notice. All specifications and features are subject to change without notice.

For other information, be sure to visit our website at:

[Www.Nextar.com](http://www.Nextar.com)
Or write us at:
Nextar Inc.
1661 Fairplex Dr.
La Verne, CA 91750
USA

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>