

2008 **350Z**

QUICK REFERENCE GUIDE





- | | | | | | | | |
|-----------|------------------------------------|-----------|--|-----------|--|-----------|-----------------------|
| 01 | INSTRUMENT BRIGHTNESS CONTROL | 05 | STEERING WHEEL SWITCHES FOR AUDIO CONTROL/BLUETOOTH® | 08 | TRACTION CONTROL SYSTEM (TCS) OFF SWITCH | 12 | CONTROL PANEL DISPLAY |
| 02 | TRIP COMPUTER/MODE SETTING BUTTONS | 06 | CRUISE CONTROL | 09 | FUEL FILLER DOOR RELEASE | 13 | AUDIO SYSTEM |
| 03 | HEADLIGHT AND TURN SIGNAL CONTROL | 07 | SOFT TOP OPERATING SWITCH (ROADSTER MODELS ONLY) | 10 | STEERING WHEEL TILT ADJUSTMENT* | 14 | CLIMATE CONTROLS |
| 04 | WINDSHIELD WIPER/WASHER SWITCH | | | 11 | HOOD RELEASE* | | |

*See your Owner's Manual for more information. Download from www.somanuals.com. All Manuals Search And Download.

TABLE OF CONTENTS

Remote Keyless Entry System	2
Windshield Wiper/Washer Switch	2
Headlight and Turn Signal Control	3
RPM Shift Indicator (manual transmission only)	4
Steering Wheel Switches for Audio Control/Bluetooth® (if so equipped)	4
Cruise Control (if so equipped)	5
Screw-in Recovery Hook	5
Auto Climate Control	6
Rear Floor Box	7
FM/AM/XM®* Radio with CD Changer (if so equipped)	8
Clock Set/Adjustment.	9
Trip Computer	10
Automatic Transmission (if so equipped)	10
6-Speed Manual Transmission (if so equipped)	11
Control Panel Display with Navigation System (if so equipped)	11
Traction Control System (TCS) Off Switch (if so equipped)	12
Front-Passenger Air Bag Status Light	12
Tire Pressure Monitoring System (TPMS)	12
Seat Belt Warning Light and Chime.	13
Front Seat Adjustments	13
Seatback Tilt Cancel Switch (Roadster only)	13
Power Windows	14
Secondary Rear Hatch Release	14
Mirror Adjustment	14
Soft Top Operation	15
Homelink® Universal Transceiver (if so equipped)	16
Bluetooth® Hands-Free Phone System (if so equipped)	17
Navigation System (if so equipped)	19

This easy-to-use Quick Reference Guide is intended to help you more fully appreciate some of the unique features and functions of your new vehicle. However, it is not intended to replace your Owner's Manual. The Owner's Manual contains more detailed information to help you better understand the important safety warnings, features, operation, and maintenance of your vehicle.

REMOTE KEYLESS ENTRY SYSTEM



LOCK DOORS

Press the button to lock all doors.



UNLOCK DOORS

Press the button once to unlock the driver's door only. Press the button again within 5 seconds to unlock all doors.



RELEASING TRUNK LID

Press and hold the trunk release button for longer than 0.5 seconds to open the trunk lid.



USING THE PANIC ALARM

Press and hold the button for longer than 0.5 seconds. The panic alarm will sound and the headlights will stay on for 30 seconds. The panic alarm stops when it has run for 30 seconds or when any button is pressed on the keyfob.



OPENING THE WINDOWS

Windows can be lowered using the keyfob while approaching the vehicle.

- Press and hold the button. The driver's and passenger's windows will be lowered.
- To stop lowering windows at any time, release the .
- Continue to press and hold the button until windows are fully open.

SILENCING THE HORN BEEP FEATURE

- To deactivate: Press and hold the and buttons for at least 2 seconds.
- To activate: Press and hold the and buttons for at least 2 seconds.

 
WINDSHIELD WIPER/WASHER SWITCH

- The ignition switch must be in the ON position to activate the windshield wipers.
- Move the lever to the following positions to operate the windshield wipers:

1A Intermittent (**INT**) – Front wipers operate intermittently and can be further adjusted by twisting the time control ring **1B**.

02 Low Speed (**LO**) – Continuous low-speed operation of front wipers.

03 High Speed (**HI**) – Continuous high-speed operation of front wipers.

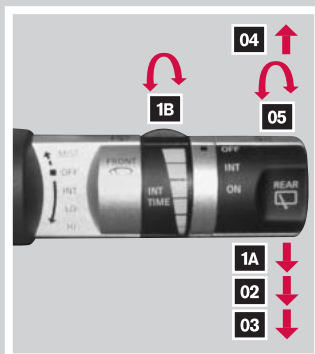



04 Mist (**MIST**) – Lift the lever up for one sweep of the front wipers.

 
05 Rear Wipers (**REAR**) – Twist the end section to operate the first (**INT**) or second (**ON**) speed settings for the rear wipers.

- The washer function activates the washer fluid and several sweeps of the wipers:
 - For FRONT WASHER, pull lever toward you.
 - For REAR WIPER, push lever away from you.

HEADLIGHT AND TURN SIGNAL CONTROL


HEADLIGHT CONTROL SWITCH

- Turn the headlight control switch **01** to the  position to turn on the front parking, tail, license plate and instrument panel lights.
- Turn the headlight control switch **01** to the  position to turn on the headlights. All other lights remain on.

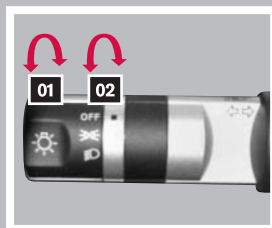


FOG LIGHT OPERATION

NOTE: The headlights must be on and the low beams selected for the fog lights to operate.



- Turn the switch (inside collar) **02** to the  position to turn on the fog lights.
- Turn the switch (inside collar) **02** to the **OFF** position to turn off the fog lights.

 
TURN SIGNAL SWITCH

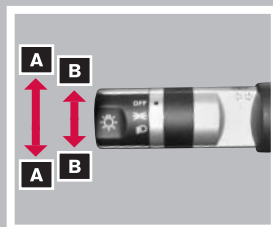- Move the headlight control switch up or down **A** to signal a turning direction. When the turn is completed, the turn signals cancel automatically.
- To signal a lane change, move the headlight control switch up or down **B** to the point where the indicator light begins to flash, but the headlight control switch does not latch.



HIGH BEAM

 - Push the headlight control switch forward **C** to select the high beam function. The blue  indicator light illuminates. Pull the headlight switch back to the original position to select the low beam. The blue  indicator light goes off.
- Pull and release the headlight control switch **D** to flash the headlight high beams on and off.

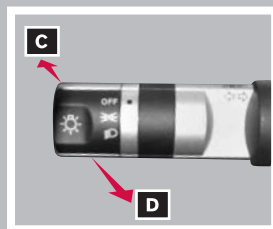

RPM SHIFT INDICATOR (manual transmission only)

The engine RPM shift indicator light (REV) is located in the tachometer **01** . When driving, it indicates 'shift point', or time to up-shift.

- Set or deactivate the engine RPM shift point using the trip computer display.
- REV indicator will flash when the engine speed is within 500 RPM of the set shift point.
- REV light will illuminate when the engine speed matches the set shift point RPM.



STEERING WHEEL SWITCHES FOR AUDIO CONTROL/BLUETOOTH® (if so equipped)

- Press the **MODE** button to turn the radio system on.
- Press **MODE** repeatedly to change to the following mode:
 - Without XM® radio: AM, FM1, FM2, and CD or CD changer.
 - With XM® radio: AM, FM1, FM2, SAT1, SAT2 and CD changer.
- The **SEEK** up or down $\begin{matrix} \wedge \\ \vee \end{matrix}$ switch can be used to perform the following:
 - Push the SEEK $\begin{matrix} \wedge \\ \vee \end{matrix}$ switch for less than 1.5 seconds to change the radio frequency.
 - Push and hold the SEEK $\begin{matrix} \wedge \\ \vee \end{matrix}$ switch for more than 1.5 seconds to seek the next or previous broadcasting radio station.
 - Push the SEEK $\begin{matrix} \wedge \\ \vee \end{matrix}$ switch while playing a CD for less than 1.5 seconds to change tracks on the CD.
 - If the vehicle is equipped with a CD changer, push and hold the SEEK $\begin{matrix} \wedge \\ \vee \end{matrix}$ switch for more than 1.5 seconds to change between CDs.
 - Push and hold the SEEK $\begin{matrix} \wedge \\ \vee \end{matrix}$ switch for more than 1.5 seconds while playing an MP3 CD to change folders (if multiple folders exist).
- Push the **VOL** control switch $\begin{matrix} \wedge \\ \vee \end{matrix}$ up or down to increase or decrease the volume.



CRUISE CONTROL (if so equipped)

- To activate the cruise control, push the **ON-OFF** switch. The indicator light in the instrument panel will illuminate.
- To set cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch and release it. The SET indicator light in the instrument panel will illuminate.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch. When the vehicle attains the speed you desire, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch. Release the switch when the vehicle slows to the desired speed.
- To cancel cruise control, push the **CANCEL** switch or tap the brake pedal. The SET indicator light in the instrument panel will go out.
- To resume a preset speed, push and release the **ACCEL/RES** switch. The vehicle returns to the last set cruising speed when the vehicle speed is over 25 MPH (40 km/h).
- To turn off cruise control, push the **ON-OFF** switch. Both the CRUISE indicator light and the SET indicator light in the instrument panel will go out.



SCREW-IN RECOVERY HOOK

- Your vehicle is supplied with a screw-in recovery hook for pulling the vehicle forward. For example: Pulling the vehicle onto a flat bed for towing.
- The screw-in recovery hook tool is located in the right rear luggage compartment area under the cover along with the vehicle jack.

To install the recovery hook:

- Remove the recovery hook cover from the front grill.
- Install the recovery hook as shown in the photo. Turn it clockwise until securely tightened.





AUTO CLIMATE CONTROL

01 AUTO MODE






Turn both the fan speed control dial **04** and the air flow control dial **03** to the **AUTO** positions **01**. Then turn the temperature control dial **02** to the desired temperature. This will allow the fan speed, air flow distribution and temperature to be automatically maintained.

02 TEMPERATURE CONTROL DIAL

Turn the temperature control dial left for cold air or right for hot air.

03 AIR FLOW CONTROL DIAL

Turn the dial to select the following air flow outlets:


-  Air flows from the center and side vents.
-  Air flows from the center, side, and foot vents.
-  Air flows mainly from the foot vent.
-  Air flows from the defroster and foot vents.
-  Air flows mainly from the defroster vents.

AUTO The air flow distribution of the passenger compartment will be maintained automatically when the control dial is turned to the **AUTO** position.


04 FAN SPEED CONTROL DIAL

Turn the fan speed control dial to the left (slower) or right (faster) to manually control fan speed. Turn the dial to the **AUTO** position to automatically control fan speed.

05 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Turn the air flow control dial to the front window defroster mode . The A/C automatically turns on when the defroster mode is selected.
- Turn the temperature control dial left or right to set the desired temperature.
- To set the defroster on high, turn the fan speed dial all the way to the right.




06 DEFROSTING/DEFOGGING REAR WINDOW AND OUTSIDE HEATED MIRROR

Push the rear window defroster switch  on. Push the switch again to manually turn the defroster off. This function automatically turns off in approximately 15 minutes.

07 A/C ON/OFF BUTTON

Press the **A/C** button to manually turn the A/C on or off.

08 AIR RECIRCULATION/FRESH AIR BUTTON

- Press the air intake button to alternate between  (air recirculation) and  (fresh air).
- The air recirculation mode cannot be selected if the air flow control dial is in the defrost position .

NOTE: When the center button is pressed to recirculate the interior air, the A/C will automatically turn on (if not already on). This is done to help reduce window fogging.

REAR FLOOR BOX

- Rear floor storage is located behind the passenger's seat.
- Fold the passenger's seatback forward to access the rear floor box.
- Coupe – Pull up on the lever **01**.
- Roadster – Push the upper portion of the passenger power seat switch **02**.
- Pull up on the lever **03** to open the rear floor box.

NOTE: The rear floor storage box has additional space under the bottom plate.



- Using the master key, lock the storage box (turn key to the right) or unlock the storage box (turn key to the left).
- Return the passenger's seatback to a locked position after using the rear floor box.
- Coupe – Pull up on the lever **01** to return seatback to original position.
- Roadster – Push lower portion of the passenger power seat switch **04** to return seatback to original position.





FM/AM/XM®* RADIO WITH CD CHANGER (if so equipped)

01 LOAD BUTTON

- **LOAD A SINGLE DISC** - Press the  button for less than 1.5 seconds. Select the loading slot by pressing one of the CD insert select button (1 - 6), then insert the CD.
- **LOAD UP TO 6 DISCS** - Press and hold the  button for more than 1.5 seconds. The slot numbers (1-6) will illuminate on the display when CDs are loaded into the changer.

02 SCAN BUTTON



Press the **SCAN** button to stop at each broadcasting station (FM, AM or XM®) for 5 seconds. Pressing the button again during this 5-second period will stop scan tuning and the radio will remain tuned to that station. If the **SCAN** button is not pressed within 5 seconds, scan tuning moves to the next station.

03 RADIO BUTTON

Press the **RADIO** band select button to change the band as follows:

- Without satellite radio: AM → FM1 → FM2 → AM
- With satellite radio: AM → FM1 → FM2 → SAT1 → SAT2 → AM

04 EJECT BUTTON

- **EJECT A SINGLE DISC** - Press the  button for less than 1.5 seconds. Select the eject slot by pressing the CD insert select button (1 - 6). The CD will then eject.
- **EJECT ALL DISCS** - Press and hold the  button for more than 1.5 seconds. The CDs will be ejected one after another.

05 TUNE/REW/FF BUTTON

- To manually tune the radio, press the **TUNE/REW/FF** button.
- When the **TUNE/REW/FF** button is pressed while a CD is playing, it will fast forward or rewind. When the button is released, the CD will play at normal speed.

06 RPT BUTTON

To change the play pattern of the CD, press the **RPT** button.

07 AUDIO BUTTON

To adjust the Bass, Treble, Fade, Balance, and Audio Pilot, press the **AUDIO** button until the desired mode appears in the display. Then press the **TUNE/REW/FF** button to adjust to the desired level.

08 STATION AND CD SELECT BUTTONS

- To store a station in a preset you must first select AM, FM1, FM2, SAT1 or SAT2 radio band by pressing the **RADIO** button and tune to the desired FM, AM or XM® station. Then press and hold the desired station select button for at least 2 seconds. When the preset indicator illuminates, a beep will sound, indicating memorization is complete. To retrieve a previously set station, select the radio band where the preset was set, then press the corresponding station select button.
- While playing a CD, to select a different CD loaded into the CD changer press one of the CD select buttons (1 - 6).

09 DISP BUTTON

Pressing the **DISP** button will display additional information (for example: Title, Artist name).

■ MP3 PLAYBACK (if so equipped)

In addition to playing audio CDs, the audio system can play MP3 files recorded on CD-ROM, CD-R, and CD-RW discs. Each disc can have a maximum of 8 folder levels and 255 folders. A total of 512 MP3 files can be played back. During MP3 playback, some recorded ID3 tag information can be displayed by pressing the **DISP** button. Use the **TUNE/REW/FF** button to navigate the MP3 folders.

10 SEEK/TRACK BUTTON

- To scan quickly through each broadcasting station, press the **SEEK/TRACK** button.
- To skip from one track to another on a CD, press the **SEEK/TRACK** button. Each time the button is pressed, the CD will advance or skip back one track.

 
*XM® Satellite Radio is only available on vehicles equipped with optional XM® satellite subscription service.

CLOCK SET/ADJUSTMENT

NAVIGATION SYSTEM ONLY (if so equipped)

Press the **SETTING** button, then select the "Clock" key using the joystick and press the **ENTER** button to access the following clock settings:

- On-screen Clock – When this item is turned to ON, a clock is always displayed in the upper right corner of the screen. The clock is automatically adjusted by the GPS system.
- Clock Format – Choose either the 12-hour clock display or the 24-hour clock display.
- Offset Adjust – Adjust the time by increasing or decreasing per minute.
- Daylight Saving Time – Turn this item to ON for daylight savings time application.
- Time Zone – Choose the time zone.

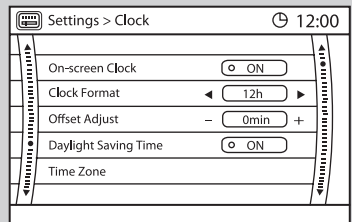

FM/AM/XM® RADIO WITH CD CHANGER (if so equipped)

- Press and hold the **RPT** button for approximately 2 seconds until the clock display starts to flash.
- Press the **SEEK/TRACK** button to adjust the hours.
- Press the **TUNE/REW/FF** button to adjust the minutes.
- Press the **RPT** button again to exit the clock set mode.

TRIP COMPUTER

 
The trip computer may be used to check items such as speed, outside air temperature, distance to empty (fuel), average mileage and speed, elapsed time and distance traveled. Additionally, it can function as a stopwatch or be used to operate the RPM shift feature (REV) (Manual transmission only).

- The twin trip odometer records the distance of individual trips.
- Press the button **01** to change the display as follows: Trip A → Trip B → Trip A.
- Press and hold the button for more than 1 second to reset the trip odometer to zero.

TO OPERATE THE TRIP COMPUTER

Turn the ignition switch ON. Then press the side of the buttons.

- Press the button **01** toward the left to scroll through each mode.
- Press the button **02** toward the left to reset or adjust the various mode selections.

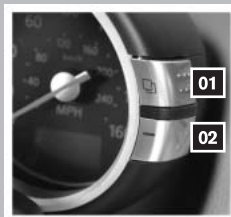

AUTOMATIC TRANSMISSION (if so equipped)

MANUAL SHIFT MODE

- When the shift selector lever is shifted from D (Drive) to the manual shift gate, the transmission enters the manual shift mode.
- In the manual shift mode, shift range is displayed on the position indicator in the meter.



WHEN SHIFTING UP

Move the shift selector lever to the + (up) side. (Shifts to higher range.)

WHEN SHIFTING DOWN

Move the shift selector lever to the – (down) side. (Shifts to lower range.)

- In manual shift mode, the transmission automatically shifts down to M1 (first) before the vehicle comes to a stop. When accelerating again, it is necessary to shift to the desired range.
- Moving the shift selector lever rapidly to the same side twice will shift the ranges in succession.
- When canceling the manual shift mode, return the shift selector lever to the D (Drive) position. The transmission returns to the normal driving mode.

6-SPEED MANUAL TRANSMISSION (if so equipped)

REVERSE GEAR

LOCK OUT

- In 6-speed manual transmission equipped vehicles, the shift lever is equipped with a Reverse lock-out feature that prevents accidental selection of Reverse (instead of 1st gear).

SHIFTING TO REVERSE

- Depress the shift lever down, then move it to the right and back into Reverse.

NOTE: When shifting, always depress the clutch pedal fully to avoid noise and gear grind.

CONTROL PANEL DISPLAY WITH NAVIGATION SYSTEM (if so equipped)

INFO BUTTON

When the **INFO** button is pressed, the Maintenance screen will be displayed.

MAINTENANCE ITEMS

You can set the engine oil and the oil filter maintenance interval. To display the setting of the maintenance interval, select the **ENGINE OIL** or **OIL FILTER** key using the joystick and press the **ENTER** button. To set the maintenance interval, select the **INTERVAL** key using the joystick and push the joystick to the right or left. To reset the maintenance interval, select the **RESET DISTANCE** key using the joystick and press the **ENTER** button.

DISPLAY SCREEN SETTINGS

The **SETTINGS** screen will appear when the **SETTING** button is pressed. Select the **DISPLAY** key with the joystick and press the **ENTER** button to choose from various display screen options. The **DISPLAY** key will allow you to personalize the information shown on the display screen, such as climate control or audio system display.



TRACTION CONTROL SYSTEM (TCS) OFF SWITCH (if so equipped)



The vehicle should be driven with the Traction Control System (TCS) on for most driving conditions. TCS reduces the engine output to reduce wheel spin. The engine speed will be reduced even if the accelerator is depressed to the floor. If maximum engine power is needed to free a stuck vehicle, such as from mud or snow, turn the TCS off.

- To turn off the TCS, push the TCS OFF switch. The indicator light will illuminate.
- Push the switch again or restart the engine and the system will operate normally.



FRONT-PASSENGER AIR BAG STATUS LIGHT

This vehicle is equipped with the Nissan Advanced Air Bag System. Under some conditions, depending on the type of occupant or object detected in the front passenger seat by the occupant classification sensor, the front-passenger air bag is designed to automatically turn **OFF**. When the front-passenger air bag is **OFF**, the front-passenger air bag status light will illuminate*. For example:

- When the system detects that the front-passenger's seat is occupied by a small adult, child or child restraint as outlined in the Owner's Manual, the  **will illuminate** to indicate that the front-passenger **air bag is OFF and will not inflate in a crash**.
- When the front-passenger's seat is occupied and the passenger meets the conditions outlined in the Owner's Manual, the  **will not illuminate** to indicate that the front-passenger **air bag is operational**.

***When the system detects that the front-passenger's seat is unoccupied, the passenger air bag status light will not illuminate even though the front-passenger air bag is OFF.**



TIRE PRESSURE MONITORING SYSTEM (TPMS)

This system monitors tire pressure. If the low tire pressure warning light illuminates, check the tire pressure in all four tires.

Adjust the low tire pressure to the recommended COLD tire pressure shown on the Tire and Loading Information label located in the driver's door opening. After tire pressures are adjusted, the vehicle will need to be driven at speeds above 16 MPH (25 km/h) to activate the TPMS and turn off the low tire pressure warning light.



SEAT BELT WARNING LIGHT AND CHIME

- The light and chime remind you to fasten your seat belts. The light illuminates whenever the ignition key is turned to the ON or START position and remains illuminated until the driver's seat belt is fastened. At the same time, the chime sounds for approximately 6 seconds unless the driver's seat belt is securely fastened.
- The seat belt warning light may also illuminate if the front passenger's seat belt is not fastened when the front passenger's seat is occupied. For 7 seconds after the ignition switch is in the ON position, the system does not activate the warning light for the front passenger.



FRONT SEAT ADJUSTMENTS

 
With manual seats:

- Pull up on the lever under the front of the seat and slide backward or forward to the desired position. Release the lever to lock the seat in position.
- Lift the lever on the side of the seat to adjust your seatback forward or backward; release when you have found a comfortable angle and the seat belt fits properly.
- Turn either dial to adjust the angle and height of the seat cushion to the desired position.



With power seats (if so equipped):

- Move the sliding switch **01** forward or backward to adjust the seat cushion to the desired position.
- Move the reclining switch **02** forward or backward to adjust the seatback to the desired angle.
- Turn either dial to adjust the angle and height of the seat cushion to the desired position.

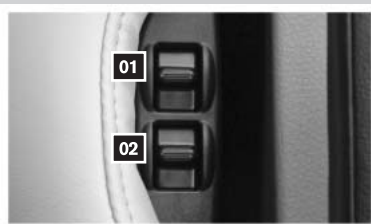

SEATBACK TILT CANCEL SWITCH (Roadster only)

The passenger seat of the 350Z Roadster automatically tilts forward when operating the soft top. This function can be cancelled by pushing the seatback tilt cancel switch to the **CANCEL** position. Push the seatback tilt cancel switch to the **AUTO** position to reactivate the power seatback tilt switch.

If the seatback tilt cancel switch is in the **CANCEL** position, the seatback tilt paddle switch (located on the back of the passenger seat) will not work. In this situation, tilt the passenger seatback forward using the power seat position switch.



POWER WINDOWS

 
 
The power windows operate when the ignition key is in the ON position, and for about 45 seconds after the ignition key is turned to the OFF position.

AUTOMATIC ADJUSTING FUNCTION:

The front door power windows have an automatic adjusting function. This ensures the windows close completely to help seal against wind noise and weather leaks.

When the front doors are being opened, the windows automatically lower slightly to avoid contact between the windows and the side roof panels.

When the doors are closed, the windows automatically raise slightly.



SECONDARY REAR HATCH RELEASE

 
 
Your vehicle is equipped with a secondary rear hatch release mechanism. This allows opening of the rear hatch in the event of a discharged battery or in an emergency.

- The secondary rear hatch release is located under the strut tower bar (Coupe), or inside the storage bin compartment (Roadster - upper right side).
- To open the rear hatch from the inside, firmly pull the release handle to the left towards the passenger side until the lock releases.



MIRROR ADJUSTMENT

The rear view mirror has two pivot points for adjustments. Adjust the rear view mirror height at the rear pivot and tilt the mirror at the front pivot. Position the mirror to provide the best visibility through the rear window.

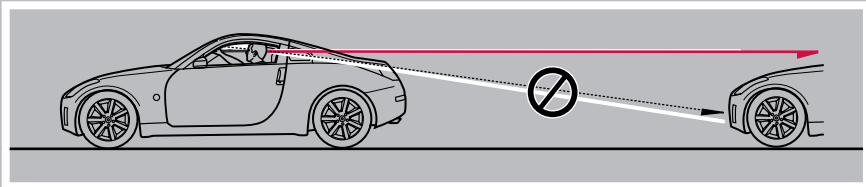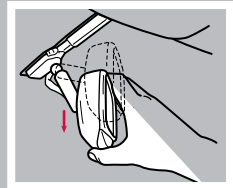

SOFT TOP OPERATION

Before opening or closing your soft top, refer to the Owner's Manual for detailed Warnings and Cautions regarding soft top operation.

Open the top:

1. Make sure the area is clear of obstructions and that there is at least 6 feet of clearance above the vehicle.
2. Apply the parking brake and make sure the transmission is in the P (Park) position (automatic transmission) or the N (Neutral) position (manual transmission).
3. Step on the brake pedal.
4. Start the engine.
5. Push the safety switch (black) located in the center of the top latch lever. Push the top latch lever (silver) forward to unlatch the top.
6. Press and hold the **OPEN** side of the soft top operating switch until the top is fully open and stowed and the indicator light turns off.



Close the top:

1. Make sure the area is clear of obstructions and that there is at least 6 feet of clearance above the vehicle.
2. Apply the parking brake and make sure the transmission is in the P (Park) position (automatic transmission) or the N (Neutral) position (manual transmission).
3. Step on the brake pedal.
4. Start the engine.
5. Press and hold the **CLOSE** side of the soft top operating switch until the top is fully closed and the indicator light begins to flash.
6. Securely latch the top with the top latch lever. The indicator light turns off.

If the top does not close when using the operating switch, refer to the Owner's Manual for the procedure to manually close the top.



HOMELINK® UNIVERSAL TRANSCEIVER (if so equipped)

SYSTEM OPERATING TIPS

- Garage doors, electrical gates, entry doors, etc. will be activated during programming. To avoid injury, make sure that people and objects are clear of all doors or gates during programming. Your vehicle's engine should be turned off while programming the HomeLink® Transceiver.
- To program your HomeLink® Transceiver to operate a garage door, gate, or entry door opener, home or office lighting, you need to be at the same location as the device.

NOTE: Garage door openers (manufactured after 1996) have “rolling code protection”. To program a garage door opener equipped with “rolling code protection”, you will need to use a ladder to get up to the garage door opener motor to be able to access the “smart or learn” program button.

PROGRAMMING YOUR HOMELINK® UNIVERSAL TRANSCEIVER (Mirror, Sun Visor or Overhead Console)

1. To begin, press and hold the two outer HomeLink® buttons (to clear the memory) until the indicator light blinks slowly (after 20 seconds). Release both buttons.
2. Position the end of the hand-held transmitter 1-3 inches (26-76 mm) away from the HomeLink® surface
3. Using both hands, simultaneously press and hold both the HomeLink® button you want to program and the hand-held transmitter button. **DO NOT release the buttons until step 4 has been completed.**
4. Hold down both buttons until the indicator light on the HomeLink® flashes, changing from a “slow blink” to a “rapidly flashing blink”. This could take up to 90 seconds. When the indicator light flashes rapidly, both buttons may be released. The rapidly flashing light indicates successful programming. To activate the garage door or other programmed device, press and hold the programmed HomeLink® button - releasing when the device begins to activate.
5. If the indicator light on the HomeLink® blinks rapidly for two seconds and then turns solid, HomeLink® has picked up a “rolling code” garage door opener signal. You will need to proceed with the next steps to train the HomeLink® to complete the programming which may require a ladder and another person for convenience.
6. Press and release the “smart” or “learn” program button located on the garage door opener's motor to activate the “training mode”. This button is usually located near the antenna wire that hangs down from the motor. If the wire originates from under a light lens, you will need to remove the lens to access the program button.



NOTE: Once you have pressed and released the program button on the garage door opener's motor and the “training light” is lit, you have 30 seconds in which to perform step 7. Use the help of a second person for convenience to assist when performing this step.

7. Quickly within 30 seconds of pressing and releasing the garage door opener program button, firmly press and release the HomeLink® button you've just programmed. Press and release the HomeLink® button up to three times to complete the training.
8. Your HomeLink® button should now be programmed. (To program the remaining HomeLink® buttons for additional door or gate openers, follow steps 2-8 only).



BLUETOOTH® HANDS-FREE PHONE SYSTEM (if so equipped)

With an overhead microphone and sound transmitted through the audio system speaker, the Bluetooth® Hands-Free Phone System utilizes Bluetooth® wireless technology and voice recognition to provide hands-free cellular phone communication.

Bluetooth® controls location



SYSTEM OPERATING TIPS


- Close all windows. Surrounding noises may interfere with system operation and performance.
- Press the  button on the steering wheel to activate voice recognition.
- Wait for the tone before speaking.
- Begin speaking a command within 5 seconds of the tone.
- To go back to the previous command, say "Go back" or "Correction."
- To cancel a voice recognition session, simply wait 5 seconds, say "Cancel" or "Quit," or press the  button.
- To increase or decrease the volume of the voice prompts, push the VOL (volume) control switch up or down on the steering wheel or turn the **VOL** knob on the audio system while the system is responding.
- Speak in a clear and natural voice without pausing between words.
- If the Voice Recognition system does not recognize your voice commands, train the system using the Speaker Adaptation Mode.
- Some commands are not available while the vehicle is in motion.
- The "Help" command can be used in any menu to hear a list of available commands.
- **For recommended phones and detailed instructions, please visit www.nissanus.com/bluetooth.**

PAIRING YOUR PHONE

To use the hands-free feature, you need to set-up, or pair, the system to recognize your compatible cellular phone(s). 5 Bluetooth®-enabled phones can be paired. After set-up, the system automatically connects with a paired phone when the ignition is in the ACC or ON position, as long as the phone is on and in the vehicle.

PAIRING PROCEDURE


NOTE: The vehicle must be stationary when pairing the phone.

1. Press the  button on the steering wheel and wait for the tone.
2. Say "Setup."
3. Wait for the tone, then say "Pair phone."
4. Wait for the tone, then say "New phone."
5. Initiate pairing from the phone.
 - The pairing procedure varies according to each cellular phone model. For detailed pairing instructions and a list of compatible phones, please visit www.nissanusa.com/bluetooth.
 - When prompted for a PASSKEY code, enter "1234" from the handset. (The PASSKEY code is assigned by NISSAN and cannot be changed.)
6. Say a name for the phone when the system asks you to provide one. You can give the phone a name of your choice.
7. Say a number between 1 and 5 when the system asks you for a priority level. The priority level determines which phone interacts with the system when two or more paired phones are active in the vehicle at the same time. Choose 1 if this is the only phone or the primary phone.
8. Say "Yes" or "No" when the system asks if you would like to select a custom ring tone. Follow the instructions provided by the system to choose a ring tone.

SETTING UP YOUR PHONEBOOK – ADDING NEW ENTRIES


Each paired phone has its own dedicated phone book. Each phone book can store up to 40 names. Each name can have up to 4 locations/numbers: Home, Office, Mobile, and Other.

NOTE: The vehicle must be stationary when adding new entries.

1. Press the  button and wait for the tone.
2. Say "Phone book."
3. Wait for the tone, then say "New entry."
4. When prompted, say the name for the new entry. For example, say "Michelle." If the name is too short or too long, or if it sounds too much like a name that is already stored in the phone book, the system tells you and prompts you to say a name again. Choose a new name.
5. Say "Yes" or "No" when the system asks you to confirm the name is correct.
6. Say a location ("Home," "Office," "Mobile" or "Other") when the system asks you to provide one. The system acknowledges the location.
 - By Voice command - When prompted, say a phone number for the location. For example, say "five five five one two one two." The system repeats the number and prompts you for the next command.
 - By Bluetooth® transfer - Say "Transfer entry." The system acknowledges the command and asks you to initiate the transfer from the phone handset. The new contact phone number will be transferred from the cellular phone via the Bluetooth® communication link. The transfer procedure varies according to each cellular phone. See the cellular phone owner's manual for details.




7. Say "Store" when you are finished entering numbers. The system confirms the name, location, and number.
8. Say "Yes" or "No" when the system asks if you would like to store another location for the same name. If you do not respond to the system prompt, the system ends the New Entry session.

MAKING A PHONE CALL

1. Press the  button.
2. After the tone, do one of the following:
 - Say "Call [name] [location]." For example, say "Call Michelle Home."
 - Say "Call [number]." For example, say "Call 123-456-7891."
 - Say "Redial" to redial the previous phone number called by the system.

RECEIVING/ENDING A PHONE CALL

When you receive a phone call, a ring tone sounds through the audio system.

- To accept the call, press the  button. To reject the call, press the  button.
- To hang up the phone at the end of a call or to disconnect during call placement, press the  button.

HOW TO SAY NUMBER

NISSAN voice recognition permits numbers to be spoken in a variety of ways.

- Say "zero" or "oh" for "0." Example: 1-800-662-6200 – Say "one eight zero zero six six two six two oh oh."
- Say "pound" for "#". Say "star" for "*". Example: 1-555-1212*123 – Say "one five five five one two one two star one two three."

NAVIGATION SYSTEM (if so equipped)

 
GETTING STARTED

The Navigation System begins when the ignition switch is in the ACC or ON position. To help ensure safe driving, some functions are grayed out, or muted, while driving. Park the vehicle in a safe location and then operate the Navigation System.




BASIC FUNCTIONS START-UP SCREEN

- Read the precautions carefully, highlight the "OK" key using the joystick and press the **ENTER** button.

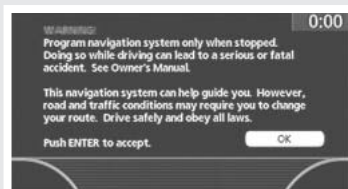


NAVIGATION DISPLAY SCREEN

 - Displays navigation features and map.

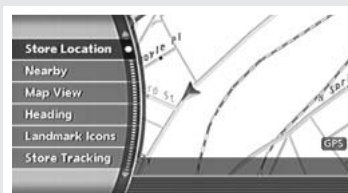


DISABLED WHILE DRIVING

 - Not all features can be manually operated while the vehicle is in motion. The text for these restricted features turns from white to gray and cannot be selected.

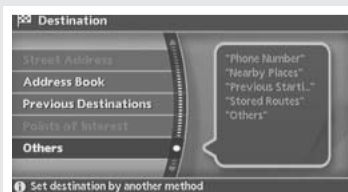

DAY/NIGHT BUTTON

 - Press the ☀/🌙 button **01** to switch between the day screen (bright) and the night screen (dark). Within 10 seconds of pressing the ☀/🌙 button **01**, you can adjust the brightness of the map display screen by moving the joystick right or left.

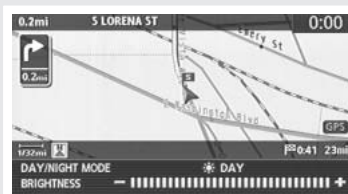


MOVING AROUND WITHIN A MAP

- To maneuver around the navigation display screen, tilt the joystick corresponding to the direction that you want to move across the map. Keep tilting the joystick to continuously move across the map in that direction. Once you start moving on the map, the cross pointer appears.




SETTING BUTTON

 - Press the **SETTING** button **02** to change or set navigation preferences.

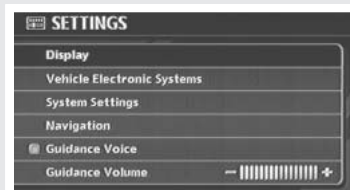

DEST (DESTINATION) BUTTON

 - Press the **DEST** button **03** to display the address book and alternative ways of programming a destination.

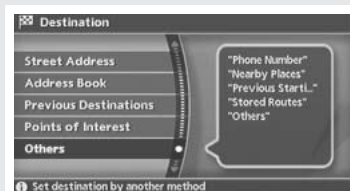

MAP BUTTON

- Press the **MAP** button **04** to display the current location map screen.





ROUTE BUTTON

- Press the **ROUTE** button **07** to display various ways to modify the route to a destination.



ZOOM OUT/IN BUTTONS

- Press the  button **05** or the  button **05** to increase or decrease the scale of the map display.



BACK BUTTON

- Press the **BACK** button **08** to return to the previous function shown on the navigation display.

VOICE BUTTON

 
- Press the **VOICE** button **06** to hear the current navigation situation.

CANCEL BUTTON

- Press the **CANCEL** button **09** to return to the map screen or cancel the route that has already been set.

SWITCHING THE MAP VIEW

- Press the **MAP** button **04**. The current location map screen is displayed.
- Press the **ENTER** button.
- Highlight the “Map View” key and press the **ENTER** button.
- Highlight either one of the “Plan View” keys or one of the “Birdview” keys and press the **ENTER** button to select the map view. Press the **MAP** button **04** or the “Back” key to accept the changes.

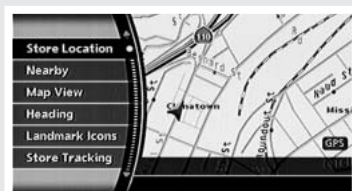


PLAN VIEW

- Displays the map in a 2-dimensional environment similar to a road map.



BIRDVIEW™

 - Displays the map in an elevated perspective.

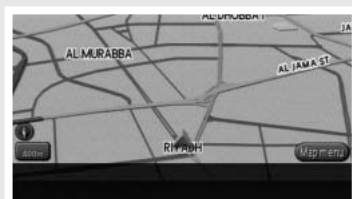


SELECTING A MENU SCREEN

1. To select a preferred menu key, use the joystick to highlight the corresponding key on the screen and press the **ENTER** button.
2. Depending on the key you selected, a detailed menu screen, a character input screen, or a setting screen, etc. is displayed. On the screen displayed, make adjustments, input information, etc. accordingly.
3. Press the **BACK** button **08** to return to the previous screen without applying any changes; in some cases pressing the **BACK** button **08** will accept the changes you made.
4. Press the **MAP** button **04** to return to the current location map screen without applying any changes.


NOTE: Depending on the menu selected, pressing the **MAP** button **04** may not return you to the current location map screen.

STORING YOUR HOME IN YOUR ADDRESS BOOK

 - Press the **DEST** button **03**.
- Highlight the "Address Book" key and press the **ENTER** button.
- Highlight the "Home (Add New)" key and press the **ENTER** button, a confirmation message is displayed. Highlight the "YES" key and press the **ENTER** button.
- Highlight the "Street Address" key and press the **ENTER** button. A character input screen is displayed.
- Enter the address of your home, highlight the "OK" key and press the **ENTER** button. The map screen is displayed.

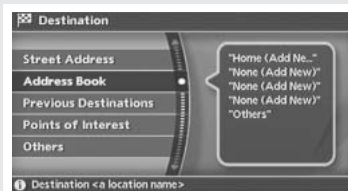

 - Moving the joystick right or left, adjust your home location if necessary. After adjusting the location, press the **ENTER** button.
- Your home is displayed at the center of the map. A confirmation message is displayed, and the system sets your home as the destination.
- Press the **MAP** button **04** to return to the current location map screen. The home icon is displayed on the screen.

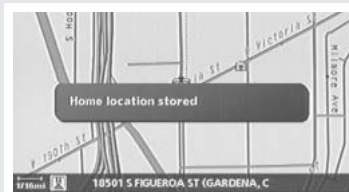

SETTING A STREET ADDRESS AS A DESTINATION

 
- Press the **DEST** button **03**.
- Highlight the "Street Address" key and press the **ENTER** button. A character input screen is displayed.
- Make sure that the correct region is selected before inputting the name of the location.
- Enter the house number; when finished highlight the "OK" key and press the **ENTER** button. If you do not know the house number, highlight the "Skip" key and press the **ENTER** button.
- Enter the name of the street. After finishing the entry, highlight the "OK" key and press the **ENTER** button. A list of cities is displayed.



- Highlight the correct city of the destination from the list and press the **ENTER** button.




- The selected destination is displayed at the center of the map. Highlight the “OK” key and press the **ENTER** button after confirming the location of the displayed destination. The system sets the destination to the selected location and starts calculating a route.

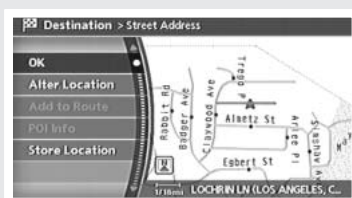


SETTING A PLACE AS A DESTINATION

 - Press the **DEST** button **03**.
- A nearby airport is set as a destination in this example.
- Highlight the “Points of Interest” key and press the **ENTER** button.
- Highlight the “Travel” key and press the **ENTER** button.

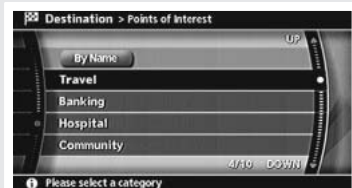

 - From the category list, highlight the “AIRPORT” key and press the **ENTER** button. A character input screen appears.
- Make sure that the correct region is selected before inputting the name of the location.

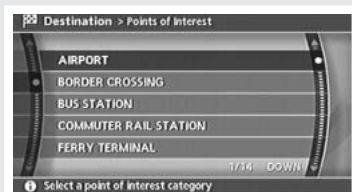


- After inputting the name of the location, highlight the “OK” key and press the **ENTER** button. A list screen appears.



- Highlight the preferred airport key from the list and press the **ENTER** button.



 
- The selected destination is displayed at the center of the map. Highlight the “OK” key after confirming the location of the displayed destination, and press the **ENTER** button. The system sets the destination to the selected location and starts calculating a route.

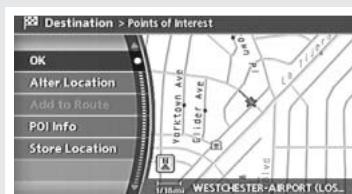

BEGINNING ROUTE GUIDANCE

After setting a destination and performing route calculation, the suggested route is displayed.

 - Highlight the “OK” key and press the **ENTER** button. The system will navigate you through the guide points using visual and voice guidance.
- When approaching a guide point, the system automatically changes to the split screen and shows an enlarged view of the intersection in the left screen.
- When arriving at the destination, the route guidance automatically ends.

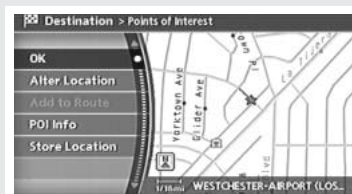

MEMO

MEMO

MEMO



Nissan, the Nissan Brand Symbol, "SHIFT_" tagline, Z and Nissan model names are Nissan trademarks.

© 2007 Nissan North America, Inc.

QR8E-0Z33U0

Printing: August 2007 (13)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>