

RETRO SNOW CONE MACHINE™

Model # RSM-602



- **For Household Use Only**
Read These Instructions Before Using
This Unit!
Save These Instructions!

IMPORTANT SAFE GUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

Read all instructions before operating this appliance.

1. To protect against electrical shock do not immerse cord, plug or the motor base unit in water or other liquids.
2. Close supervision is necessary when any appliance is used by or near children.
3. Unplug from outlet when not in use and before cleaning.
4. DO NOT operate any appliance with a damaged cord or plug or if the appliance has been damaged in any manner. Return the appliance to the place of purchase or send back to company for repair or replacement as stated in this booklet in the warranty.
5. The appliance manufacturer does not recommend the use of accessory attachments. This may cause injuries.
6. DO NOT use outdoors.
7. DO NOT let the cord hang over the edge of table or counter tops or touch hot surfaces.
8. DO NOT place on or near a hot gas or electric burner, or in a heated oven.
9. Extreme caution must be used when moving this appliance.
10. DO NOT use the appliance for other than its intended use.
11. A unit that is plugged into an outlet should not be left unattended.
12. Check ice feed insert and ice shaving canister for presence of foreign objects prior to use.
13. Blades are extremely sharp. **Use extreme caution** when cleaning the ice shaving canister.
14. A short power supply cord is provided to reduce the risk resulting from becoming entangled or tripping over a long cord.
15. Longer detachable power supply cords can be used if care is exercised in their use.
16. The marked electrical rating of an extension cord should be at least as great as the electrical rating of the appliance.
17. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way.

SAVE THESE INSTRUCTIONS!

IMPORTANT PRECAUTIONS

Appliance Specifications:

120 Volts
60HZ
9 Amps
35 Watts
ETL Approved

Important Precautions to Remember:

- A. NEVER immerse in water.
- B. NEVER use near water.
- C. NEVER use an abrasive sponge, cloth or scouring pad on the unit.
- D. NEVER leave unit unattended while in use.
- E. Unplug unit from outlet when not in use and when cleaning.
- F. DO NOT operate this appliance with a damaged cord or plug or in the event the appliance ever malfunctions.
- G. This unit is NOT A TOY.
- H. This appliance is not intended for use by young children or infirm persons without supervision.

INTRODUCTION

Thank you for purchasing The RETRO SNOW CONE MACHINE™. This nostalgic looking snow cone maker resembles the popular Retro designs of the 1950's. This snow cone maker is only designed in appearance to look like the nostalgic design style; however, it is a technologically advanced snow cone maker.

The RETRO SNOW CONE MACHINE™ uses ice cubes from your freezer to create:

- **Snow Cones**
- **Slush's**
- **Smoothies, Low Fat Snacks**

The RETRO SNOW CONE MACHINE™ is designed for kitchen use but can be used anywhere such as;

- **Family Room**
- **Dorm Rooms**
- **Office**
- **Club House**

And more...

Now you can enjoy icy cool snow cones and more to snack on...

- **Watching TV or a movie at home**
- **Parties**
- **Listening to music**
- **As a low fat treat**

And more...


INTRODUCTION

The RETRO SNOW CONE MACHINE™ is easy to use, just follow these simple instructions.

After Taking the Unit Out Of the Box

1. Your RETRO SNOW CONE MACHINE™ is already fully assembled, but has three separate bonus pieces.
 - 1 side cone shelf
 - 2 plastic cone holders (Paper cones not provided)
 - 1 plastic shaved ice scoop
2. Before first use, lift off the clear safety power control lid, and remove the ice shaving canister. Remove the top housing lid off of the body and wipe clean the inside of the shaved ice collection chamber with a non-abrasive moist sponge, towel or cloth and then dry with a non-abrasive soft towel or cloth.

BREAKDOWN of parts ILLUSTRATION A

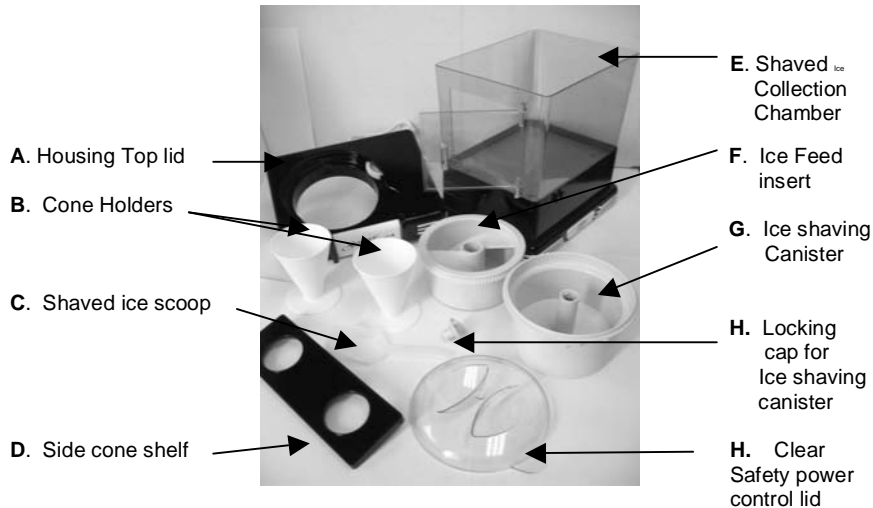

3. After cleaning the inside of the shaved ice collection chamber, put the housing top lid back on the ice collection chamber and base unit.
4. Locate the Ice Shaving canister. Unscrew and remove the center locking cap (This cap has "LOCK and UNLOCK" with directional arrows, clearly marked on the top) Separate the Ice Feed Insert from the Ice Shaving Canister. Carefully wash these parts in warm soapy water. Use **extreme caution** when cleaning and handling the Ice Shaving Canister. **Blades are very sharp!** Rinse and dry with a soft clean cloth. Reassemble the Ice Shaving Canister and lock the center locking cap securely. Return the Ice Shaving Canister to the receptacle hole in the top housing lid. Wash and dry the Clear Safety power control lid, and reposition over the Ice Shaving Canister.
5. Attach the Side Cone Shelf. *NOW, you are ready to enjoy cool, refreshing icy snacks from your RETRO SNOW CONE MACHINE™.*

USING YOUR RETRO SNOW CONE MACHINE™

First, find a stable surface near an electrical outlet to place your snow cone machine. (Make sure your cord is away from any water source. If needed, it is acceptable to use an extension cord.)

- A. Before plugging in your unit, to add ice cubes, remove clear power control lid from your RETRO SNOW CONE MACHINE™, by turning **clockwise**, lift and remove.

- B. Place ice cubes in the ice feed canister allowing enough room for the clear power control lid to be placed back on easily.



ILLUSTRATION B
Ice Feed Canister with ice

- C. Plug in unit with lid in the OFF position.
- D. Turn the clear power control lid **counter clockwise**, to the ON position. This will activate the unit to begin shaving (To turn "OFF" shaving unit, simply turn the lid **clockwise**.)

NOTE: "ON" / "OFF" is clearly marked on the clear power control lid with directional arrows. See illustration C below.

ILLUSTRATION C



- E. Turn the clear power control lid **clockwise** to turn off the unit and refill the ice feed unit with ice. Repeat STEPS D and E until you have shaved the amount of ice desired.
- F. Use the shaved ice scoop to shovel shaved ice from the collection chamber (accessible through the side door) to your cone to create your favorite treats. We have included a few recipes on page 5 of this manual to enhance the enjoyment of your snow cone machine or use your imagination and create your own recipes.



ILLUSTRATION D
Showing designed use of cone shelf and Plastic cone holders. (Paper cones not Included)

Whatever you create, we are sure the RETRO SNOW CONE MACHINE™ will make it fun for the whole family!

CLEANING

1. Make sure unit is unplugged before cleaning.

NOTE: The top of the unit (housing the motor and electrical cord) is easily removed making the inside of the shaved ice collection chamber accessible.

2. Lift off and remove the top housing lid and clean and dry inside shaved ice collection chamber of the unit.
3. The Ice Feed Insert, Ice Shaving Canister, Locking Cap and Clear Power Control Lid are dishwasher safe.

IMPORTANT *The Ice Shaving Canister Blade is very sharp! When cleaning and handling, use **EXTREME CAUTION!***

4. Use slightly damp, non-abrasive sponge, cloth or towel to wipe clean outside of unit, dry with a non-abrasive cloth.

The shelf on the outside of the unit is also removable for washing.

Display your RETRO SNOW CONE MACHINE™ with pride and have a cool day!

RECIPES

Your RETRO SNOW CONE MACHINE™ makes light and fluffy mounds of shaved ice that can be used to make;

SNOW CONES – Just add your choice of your favorite flavored syrup. Add more than one flavor to increase the fun and vary the flavor by creating *Rainbow Snow Cones*.

ILLUSTRATION E

Adding flavored syrup to your snow cone



SLUSH DRINKS – Fill a glass with freshly shaved ice and add your favorite soft drink, flavored tea or fruit juices.

FRUITY SLUSH – Fill a mug with freshly shaved ice, add flavored syrup and top with chopped fruit of your choice.

YOGURT SNOW – Pre - freeze your favorite flavored yogurt in ice cube trays. When frozen, you can use your RETRO SNOW CONE MACHINE™ to shave the yogurt cubes and make a refreshing, healthy treat. Add flavored syrup for even more flavor.

SNOW SMOOTHIES – Freeze 6 ounces of milk in ice cube trays. Once the milk cubes are frozen, use your RETRO SNOW CONE MACHINE™ to shave the milk cubes. Place the shaved milk cubes and a handful of fresh strawberries (or your choice of fruit) in a blender. Add 1 Tbs. of sugar for sweetness, blend until smooth to your desired consistency.

JUICY TREATS – Freeze your favorite juice in ice cube trays, once they are frozen, use your RETRO SNOW CONE MACHINE™ to shave the cubes and create a healthy, juicy treat.

Use your imagination with different fruits, syrups, sodas, teas and juices to create any number of refreshing, icy, healthy, low fat treats, drinks, and desserts that will delight kids of any age

RETURNS & WARRANTY

SHOULD YOUR UNIT NOT WORK OR IS DAMAGED WHEN YOU FIRST TAKE IT OUT OF THE BOX, PLEASE RETURN IT TO THE PLACE OF PURCHASE IMMEDIATELY.

Should you have any questions, please contact us via email or at the customer service number listed below between the hours of 8:00 AM and 5:00 PM, Monday through Friday, Central Standard Time.

Distributed by:

Nostalgia Products Group LLC
1471 Partnership Dr.
Green Bay, WI 54304-5685

Customer Service

Phone: (920) 347-9122
Web: www.nostalgielectrics.com

Customer Service Inquiry

To submit a Customer Service inquiry, go to www.nostalgielectrics.com and fill out the **Customer Service Inquiry** form and click the Submit button. A representative will contact you as soon as possible.

RETRO SNOW CONE MACHINE™

RSM-602

Limited Warranty

This appliance is designed and built to provide many years of satisfactory performance under normal household use. The distributor pledges to the original owner that should there be any defects in material or workmanship during the first 90 days of purchase, we will repair or replace the unit at our option. Our pledge does not apply to damages caused by shipping, mishandling or unit being dropped. A product deemed defective either from manufacturing or being mishandled is up to the distributor's discretion. To obtain service under this warranty, return this unit to Nostalgia Products Group, LLC at the address above, shipping prepaid. You must also include a copy of the original receipt along with your name, address and phone number. Include a description of the defect along with the date you purchased the product.

This warranty does not apply to re-manufactured merchandise.

Please read these instructions carefully. Failure to comply with these instructions, damages caused by improper replacement parts, abuse or misuse will void this pledge to you and is being made in place of all other expressed warranties.



Nostalgia Products Group LLC
1471 Partnership Dr.
Green Bay, WI 54304-5685

Visit Us Online at
www.nostalgiaelectrics.com

©2009 Nostalgia Products Group LLC

Rev. 6/16//09

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>