



1621 Beacon Place
Oxnard, CA 93033


(805) 487-7772 phone
(805) 487.9975 fax

Visit Us Online at
www.helmandgroup.com

©2006 The Helman Group, Ltd.

Rev 05/21/07


THE OLD FASHIONED HOT DOG ROLLER™ HDR-535

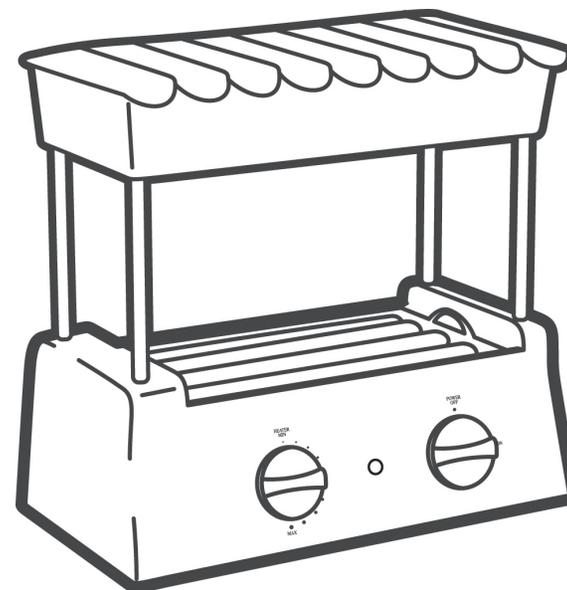

FOR HOUSEHOLD USE ONLY
Read these instructions before using this unit!
Save These Instructions!

SOLO PARA USO DOMÉSTICO
Lea estas instrucciones antes de usar la unidad.
Conservez ces instructions!

POUR UNE UTILISATION
DOMESTIQUE UNIQUEMENT
Lisez ces instructions avant d'utiliser cet appareil!
Conservez ces instructions

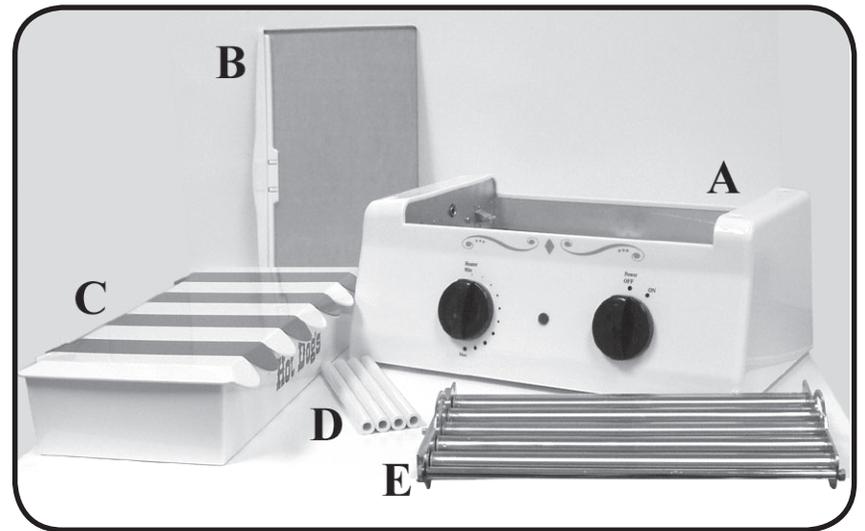

The OLD FASHIONED HOT DOG ROLLER breaks down to:

- A. Motor Base
- B. Drip Tray
- C. Canopy Top
- D. Canopy Poles
- E. Roller Assembly

The OLD FASHIONED HOT DOG ROLLER

Read These Instructions Before Using This Unit!
Save These Instructions

IMPORTANT PRECAUTIONS:

Appliance Specifications:

Important Precautions to Remember:

- A. NEVER immerse motor base in water.
- B. NEVER use near water.
- C. NEVER use an abrasive sponge or cloth on unit.
- D. NEVER use a scouring pad on the unit.
- E. NEVER leave unit unattended while in use.
- F. NEVER place anything other than what is intended to be cooked on the unit.
- G. Unplug unit from outlet when not in use and when cleaning.
- H. DO NOT operate this appliance with a damaged cord or plug or in the event the appliance ever malfunctions.
- I. DO NOT place motor base in dishwasher.
- J. Keep out of reach of children.
- K. This appliance is NOT A TOY.
- L. This appliance is not intended for use by young children or infirm persons without supervision.
- M. Young children should be supervised to ensure that they do not play with the appliance.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

Read all instructions before operating this appliance.

1. Avoid contacting moving parts.
2. Any appliance with a damaged cord or plug or damaged in any manner should not be operated. The appliance should be returned or taken to the nearest repair shop for examination or repair or send back to company as stated in this booklet in the warranty.
3. The appliance manufacturer does not recommend the use of accessory attachments other than what is supplied with the unit. This may cause injuries.
4. When any appliance is used by or near children, adult supervision is strongly recommended.
5. Not recommended for outdoor use.
6. Keep appliance and cord away from any hot surfaces.
7. To prevent electrical shock, DO NOT immerse cord, plug or any part of the motor base in water or other liquids.
8. This appliance should not be used for purposes other than stated in the instructions accompanying this appliance.
9. DO NOT leave unit unattended while in use or when plugged in to an outlet.
10. DO NOT HANDLE THE ROLLERS WHEN IN MOTION.
11. The plug has one blade that is wider than the other, to reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way.

12. DO NOT insert roller assembly while motor is running. Turn unit OFF first. It is preferable to be unplugged while inserting roller assembly.
13. Unplug from outlet when not in use and before removing parts for cleaning.
14. To reduce the risk resulting from becoming entangled or tripping over a long cord a short power supply cord is provided.
15. ROLLER ASSEMBLY MUST BE INSERTED CORRECTLY IN ORDER TO ROTATE ROLLERS.
16. The marked electrical rating of an extension cord should be at least as great as the electrical rating of the appliance. Electrical extension cords can be used if care is exercised in their use.
17. Keep hands and foreign objects out of roller assembly while operating. Check to insure proper rotation of rollers for even cooking.
18. The appliance is NOT A TOY.
19. The appliance is not intended for use by young children or infirm persons without supervision;
20. Young children should be supervised to ensure that they do not play with the appliance.

INTRODUCTION

Thank you for purchasing The OLD FASHIONED HOT DOG ROLLER. The OLD FASHIONED HOT DOG ROLLER is a fun way to cook your hot dogs with old fashioned carnival style. Your family and friends will enjoy the fun of The OLD FASHIONED HOT DOG ROLLER. Please take care of your machine by following these simple instructions and precautions. You can use a variety of hot dogs, wieners, and sausages, with your OLD FASHIONED HOT DOG ROLLER to enjoy a fun, easy to serve meal. Depending on what you choose, you can use;

- A Variety of Regular Length Hot Dogs and Wieners
- Beef, Turkey, Kosher, or Chicken
- Extra Length Hot Dogs such as the foot long Farmer John® Dodger Dogs'
- Sausages

The canopy top opens and you can store hot dog buns, different breads, or store hot dogs.

The OLD FASHIONED HOT DOG ROLLER creates a fun display while cooking up your favorite dogs for any occasion, such as:

- Birthdays
 - Graduation Parties
 - Business Gatherings
 - Holidays
 - Special Events
 - Casual get-togethers with friends and family
- And more . . .

The OLD FASHIONED HOT DOG ROLLER is great for the den while watching sporting events with friends and family, or in a dorm room studying with friends. You can set it up at the office for 'eat in' lunches or meetings. Kids love it for parties, where they feel they can serve themselves. Just open a package of hot dogs and place them on the rotating roller assembly and the machine does the rest. What could be easier?

INSTRUCTIONS

The OLD FASHIONED HOT DOG ROLLER is easy to use, just follow these simple instructions. Your OLD FASHIONED HOT DOG ROLLER requires little assembly.

Place roller assembly in unit, making sure the pin on the roller assembly fits correctly into the fitting on the left hand side of the base interior. DO NOT force the pin, this will strip the receptacle and the rollers will NOT rotate. (See illustration)

Fit the four canopy poles into the holes in each corner of the unit. Attach the canopy top to the poles by joining with the canopy poles.

Do not attempt to place roller assembly on base or remove from base while motor is on.

USING YOUR OLD FASHIONED HOT DOG ROLLER

First, find a stable surface near an electrical outlet before starting. Roller Assembly must be engaged correctly to operate properly. (Make sure your cord is away from any water source. If needed, it is acceptable to use an extension cord.)

INSTRUCTIONS:

The switch on the right of The OLD FASHIONED HOT DOG ROLLER turns on the power. Turn to the ON position. The red power indicator light should come on. The switch on the left regulates the heating temperature, from LOW to HIGH, turn on HIGH. Let the unit warm up for 3 minutes or so, then place the hot dogs on the rollers, evenly spaced. Up to 8 regular sized hot dogs can be cooked at one time.

You will see the hot dogs begin to turn. They will continue to turn at approximately two cycles per minute.

You will notice the color begin to change as they are cooking, they will darken. The hot dogs should be cooked between 8 to 10 minutes. After they have cooked for 10 minutes, turn the heater knob down to a medium heat to keep the hot dogs warm and still rotating.

As hot dogs are taken off, they can be replaced with new hot dogs to cook (adjust temperature) if you have the need for more hot dogs.

TROUBLESHOOTING

Power Light does not Come On	Check electrical plug to insure it is fully plugged in
Rollers are not turning	Make sure Power Light is On and the unit is properly plugged in. Turn unit off and on again. Make sure the end roller pin is correctly engaged in the motor base receptacle.

By following these simple instructions, your OLD FASHIONED HOT DOG ROLLER will be fun for friends, family, and kids of all ages...by creating a fun display while cooking America's Favorite – Hot Dogs!

NOTE: To prolong the life of your OLD FASHIONED HOT DOG ROLLER be sure to follow the cleaning instructions after every use and make sure the roller assembly is fitted properly in the base unit – DO NOT force it or it will strip the fitting and the rollers will not be able to be controlled for proper rotating. Never use anything abrasive on the base to maintain the original finish.

IMPORTANT

Notice the shape of the receptacle in the base and the end pin on the roller assembly. They are fitted to work together. DO NOT force the pin into the receptacle or it will strip and then cannot control the roller turning action.

CLEANING

Make sure unit is unplugged before cleaning. Allow parts to COOL to the touch. Roller assembly, drip tray.

Before first use and continuing after each use, be sure to wipe off the roller assembly with a damp cloth and dry thoroughly. When necessary for more concentrated cleaning, wash in warm soapy water, rinse, and dry thoroughly. To prolong the life of your HOT DOG ROLLER we suggest hand-washing parts to be cleaned. Dishwasher use is discretionary.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>