


**RETRO FERRIS WHEEL HOT DOG COOKER™**  
RFH-SERIES

---

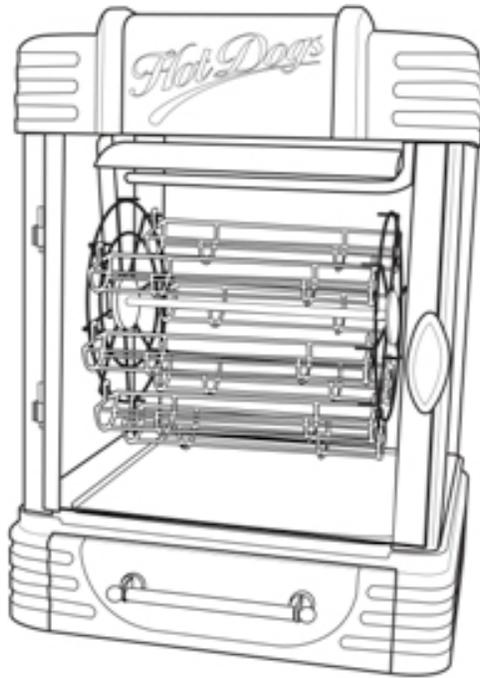

---

**FOR HOUSEHOLD USE ONLY!  
READ THESE INSTRUCTIONS BEFORE USING THIS UNIT!  
SAVE THESE INSTRUCTIONS.**

## IMPORTANT PRECAUTIONS

---

### Appliance Specifications:

120 Volts  
60 Hz  
2.5 Amps  
400 Watts

### ***Important Precautions to Remember:***

- A. NEVER immerse unit in water.
- B. NEVER use near water.
- C. NEVER use an abrasive sponge or cloth on unit.
- D. NEVER use a scouring pad on unit.
- E. NEVER leave unit unattended while in use.
- F. NEVER place anything other than what is intended to be cooked on the unit.
- G. Unplug unit from outlet when not in use and when cleaning.
- H. DO NOT operate this appliance with a damaged cord or plug, or in the event the appliance ever malfunctions.
- I. DO NOT place entire unit in dishwasher.
- J. Keep out of reach of children.
- K. Be sure to have the drip tray in place when using the unit
- L. This appliance is NOT A TOY.
- M. This appliance is not intended for use by young children or infirm persons without supervision.
- N. Young children should be supervised to ensure that they do not play with the appliance.

## IMPORTANT SAFEGUARDS

---

When using electrical appliances, basic safety precautions should always be followed, including the following:

### ***Read all instructions before operating this appliance.***

1. Avoid contact with moving parts.
2. Any appliance with a damaged cord or plug, or damaged in any manner, should not be operated. The appliance should be returned or taken to the nearest repair shop for examination or repair, or sent back to the company as stated in this booklet in the warranty.
3. The appliance manufacturer does not recommend the use of accessory attachments other than what is supplied with the unit. These may cause injuries.
4. When any appliance is used by or near children, adult supervision is strongly recommended.
5. Do not use outdoors. FOR HOUSEHOLD USE ONLY.
6. Do not place on or near a hot gas or electric burner, or in a heated oven.

## IMPORTANT SAFEGUARDS (Continued)

---

7. To protect against electrical shock, DO NOT immerse cord, plugs or any part of the unit in water or other liquids.
8. This appliance should not be used for any purpose other than stated in the instructions accompanying this appliance.
9. DO NOT leave unit unattended while in use or when plugged into an outlet.
10. DO NOT HANDLE THE FERRIS WHEEL CAGE WHEN IN MOTION.
11. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way.
12. DO NOT insert FERRIS WHEEL CAGE assembly while motor is running. Turn unit OFF first. It is preferable to be unplugged while inserting FERRIS WHEEL CAGE assembly.
13. Unplug from outlet when not in use and before removing parts for cleaning.
14. To reduce the risk resulting from becoming entangled or tripping over a long cord, a short power supply cord is provided.
15. FERRIS WHEEL ASSEMBLY MUST BE INSERTED CORRECTLY IN ORDER FOR UNIT TO WORK PROPERLY.
16. The marked electrical rating of an extension cord should be at least as great as the electrical rating of the appliance. Electrical extension cords can be used if care is exercised in their use.
17. Keep hands and foreign objects out of the Ferris wheel while operating. Check to ensure proper assembly of Ferris wheel for even cooking.
18. Make sure to switch the power button after use to ensure the power is OFF.

## INTRODUCTION AND FEATURES

---

The RETRO FERRIS WHEEL HOT DOG COOKER™ brings back memories of movie theater concessions, classic diners, ball games, family gatherings and more. Please take care of your machine by following these simple instructions and precautions.

You can use a variety food items with your RETRO FERRIS WHEEL HOT DOG COOKER™. To enjoy a fun, easy to serve meal, we suggest you try cooking or warming the following:

- A variety of regular length Hot Dogs and Wieners (Beef, Turkey, Kosher, or Chicken).
- Extra length Hot Dogs such as the foot long Hot Dogs
- Sausage Links
- Beef, fish and poultry kebabs
- Warm taquitos, flautas, churros, and more.....

The bottom drawer opens and can store buns, different breads, or cooked or un-cooked hot dogs until ready for use.

The RETRO FERRIS WHEEL HOT DOG COOKER™ creates a fun display while cooking up some of your favorite foods. It is great for the den while watching sporting events, or in a dorm room studying with friends. You can even set it up at the office for lunches or meetings. Kids love it because they can serve themselves! Just open a package of hot dogs, place on the rotating Ferris wheel assembly, and the machine does the rest! What could be easier?

## INTRODUCTION AND FEATURES (Continued)


---

Suitable occasions for use include:

- Business gatherings
- Sleep Over Nights and Special Events
- Holidays, Birthdays, Graduation Parties
- Casual get-togethers with friends and family .... and more!
- Home Theater

## ASSEMBLY OF FERRIS WHEEL

---

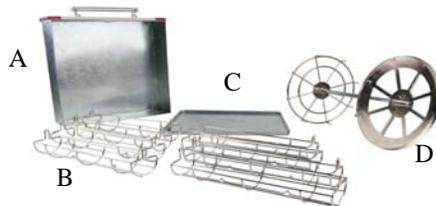

Breakdown Exhibit

- A. Warming Drawer
- B. 8 Food Cages
- C. Drip Tray
- D. Ferris Wheel Frame

Your RETRO FERRIS WHEEL HOT DOG COOKER™ requires easy assembly. After making sure the power is OFF and the unit is unplugged, take the Ferris Wheel Frame and attach it to the unit using the following steps:

A) With the Hot Dog Cooker facing towards you, open the door and place the Ferris Wheel Frame into the Hot Dog Cooker. Make sure that the side of the Ferris Wheel Frame with the solid metal wheel is on the right and the wire wheel side is on the left.



Wire on Left – Solid on Right



Wire Wheel Side



Solid Wheel Side

## ASSEMBLY OF FERRIS WHEEL (Continued)

---

B) Attach the solid wheel side by inserting the male piece into the right side of the Hot Dog Cooker.



C) Attached the wire wheel side to the left side of the Hot Dog Roller by simply placing the bar into the hook.



D) Attach the 8 food cages by simply sliding them onto the allotted hooks using the small gaps on the cages.



E) Insert the drip tray to the bottom of the cooker and you are ready to begin using the RETRO FERRIS WHEEL HOT DOG COOKER™!




## USING YOUR RETRO FERRIS WHEEL HOT DOG COOKER™

---

First, find a stable surface near an electrical outlet before starting. **Ferris wheel assembly must be engaged correctly to operate properly.** Confirm that the drip tray is in place when using the unit. Always make sure your cord is away from any water source. If needed, it is acceptable to use an extension cord.

### INSTRUCTIONS:

1. The button on the top of the unit turns the power on. When the button light is on, this indicates that the power is on and the Ferris wheel will begin to turn. The arrow dial on the top right of The RETRO FERRIS WHEEL™ allows you to adjust the temperature (see image below). To cook or warm foods, make sure the power is off and put the hot dogs or food into the cages. You can double up as well. Turn power button on and the arrow on to HIGH. Watch the food ride on the Ferris wheel as it cooks or keeps warm.

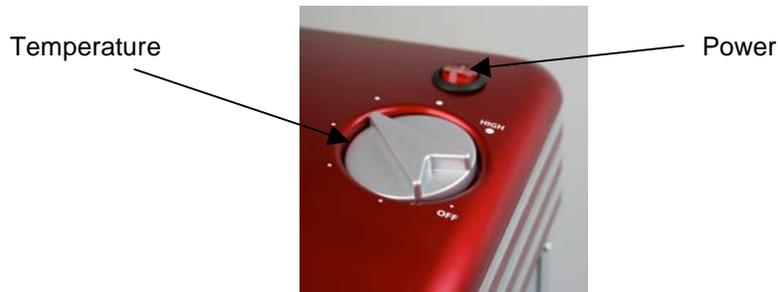

2. You will notice the color begin to darken as the hot dogs are cooking. The hot dogs should be cooked for about 20 minutes on high (depending on the type and size of the hot dogs). The thicker the hot dog, the longer it will take to cook through. Once they are cooked to your desired taste, lower the temperature to go into warm mode and keep the hot dogs toasty.
3. If you want to warm up your hot dog buns, simply open the bottom drawer (as shown below), and place your buns into the drawer.



By following these simple instructions, your RETRO FERRIS WHEEL HOT DOG COOKER™ will be fun for friends, family, and kids of all ages!

## CLEANING

---

- Make sure the unit is unplugged before cleaning. Allow all parts to COOL to the touch, especially the roller assembly and drip tray, before taking the unit apart.
- Before first use and continuing after each use, be sure to soak and wipe off the Ferris wheel cage with a damp cloth and dry thoroughly. When more concentrated cleaning is necessary, wash in warm soapy water, rinse, and dry thoroughly.
- To prolong the life of your RETRO FERRIS WHEEL™, hand-washing parts is advised. Dishwasher use is not recommended.

## TROUBLESHOOTING

---

Power Light does not turn ON.	Check electrical plug to ensure it is fully plugged in.
Ferris wheel not turning.	Make sure Power Light is On and the unit is properly plugged in. Turn unit off and on again. Make sure the Ferris wheel cage is correctly engaged in the motor receptacle and other side on the cage holder.

## RETURNS & WARRANTY

---

SHOULD YOUR UNIT NOT WORK OR IS DAMAGED WHEN YOU FIRST TAKE IT OUT OF THE BOX, PLEASE RETURN IT TO THE PLACE OF PURCHASE IMMEDIATELY.

Should you have any questions, please contact us via email or at the customer service number listed below between the hours of 8:00 AM and 5:00 PM, Monday through Friday, Central Standard Time.

Distributed by:

Nostalgia Products Group LLC  
1471 Partnership Dr.  
Green Bay, WI 54304-5685

### **Customer Service**

Phone: (920) 347-9122  
Web: [www.nostalgiaelectrics.com](http://www.nostalgiaelectrics.com)

### **Customer Service Inquiry**

To submit a Customer Service inquiry, go to [www.nostalgiaelectrics.com](http://www.nostalgiaelectrics.com) and fill out the **Customer Service Inquiry** form and click the Submit button. A representative will contact you as soon as possible.

## RETRO FERRIS WHEEL HOT DOG COOKER™

RFH-SERIES

### Limited Warranty

This appliance is designed and built to provide many years of satisfactory performance under normal household use. The distributor pledges to the original owner that should there be any defects in material or workmanship during the first 90 days of purchase, we will repair or replace the unit at our option. Our pledge does not apply to damages caused by shipping, mishandling or unit being dropped. A product deemed defective either from manufacturing or being mishandled is up to the distributor's discretion. In order to obtain service under this warranty, please contact Nostalgia Products Group, LLC at the telephone number listed above or by filling out the Customer Service Inquiry Form located at [www.nostalgiaelectrics.com](http://www.nostalgiaelectrics.com).

This warranty does not apply to re-manufactured merchandise.

Please read these instructions carefully. Failure to comply with these instructions, damages caused by improper replacement parts, abuse or misuse will void this pledge to you and is being made in place of all other expressed warranties.



Nostalgia Products Group LLC  
1471 Partnership Dr.  
Green Bay, WI 54304-5685

Visit Us Online at  
**[www.nostalgielectrics.com](http://www.nostalgielectrics.com)**

©2009 Nostalgia Products Group LLC

Rev. 7/28/09

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>