


**OLD FASHIONED CARNIVAL COTTON
CANDY CART™**
MODEL# CCM-527

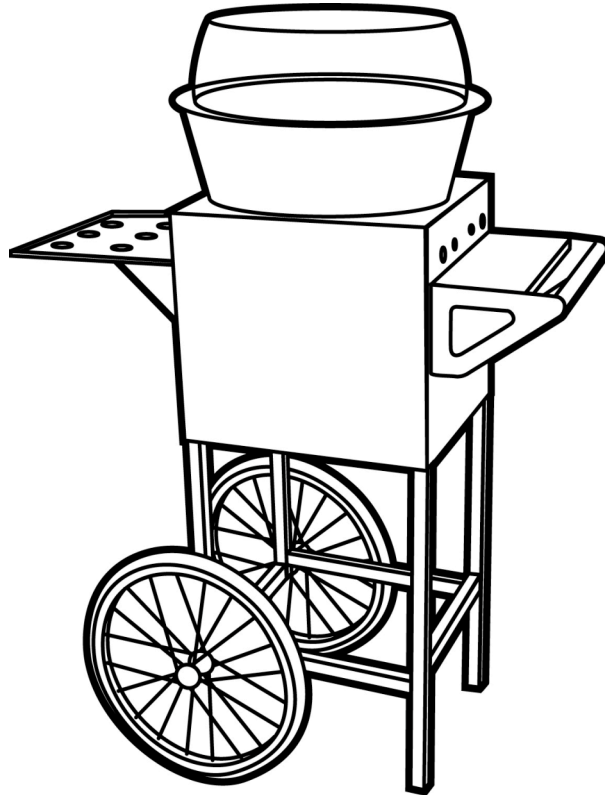

FOR HOUSEHOLD AND COMMERCIAL USE

Read These Instructions Before Using This Unit!

Save These Instructions!

IMPORTANT SAFE GUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before operating this appliance. Failure to do so could lead to property damage or personal injury.
2. DO NOT TOUCH the hot surfaces. Use handles or knobs.
3. To protect against electrical shock do not immerse cord, plug or any part of this unit in water or other liquids.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before removing parts for cleaning.
6. DO NOT operate any appliance with a damaged cord or plug, or if the appliance has been damaged in any manner. Return the appliance to the nearest repair shop for examination or repair, or send back to company as stated in the warranty included in this booklet.
7. The appliance manufacturer does not recommend the use of accessory attachments. This may cause injuries.
8. DO NOT use outdoors.
9. DO NOT let the cord hang over the edge of table or counter tops, or touch hot surfaces.
10. All spectators need to be kept at a reasonable distance to prevent injury.
11. Operator should wear protective eyewear unless clear dome is in place. For maximum protection, always have the clear dome in place while operating this unit.
12. Extreme caution must be used when moving this appliance.
13. DO NOT use the appliance for other than its intended use.
14. DO NOT leave unit unattended while in use or when plugged into an outlet.
15. Check inside heating element compartment for foreign objects before switching to ON position.
16. Heating element in center can get hot. **Avoid contact until cool.**
17. A short power supply cord is provided to reduce the risk resulting from becoming entangled or tripping over a long cord. Longer detachable power supply cords can be used if care is exercised in their use.
18. The marked electrical rating of an extension cord should be at least as great as the electrical rating of the appliance.
19. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way.
20. Keep hands away from the machine when it is in the ON position and is spinning.

SAVE THESE INSTRUCTIONS!

IMPORTANT PRECAUTIONS:

Appliance Specifications:

120 Volts
60 HZ
5 Amps
600 Watts

NOTE: UNIT IS APPROVED FOR COMMERCIAL USE

Important Precautions to Remember:

- A. NEVER immerse in water.
- B. NEVER use near water.
- C. NEVER use an abrasive sponge or cloth on the unit.
- D. NEVER use a scouring pad on the unit.
- E. NEVER leave unit unattended while in use.
- F. NEVER place anything other than the intended sugar in the extractor head.
- G. Unplug unit from outlet when not in use and when cleaning.
- H. DO NOT operate this appliance with a damaged cord or plug, or in the event the appliance ever malfunctions.
- I. Dishwasher use for cleaning parts is not recommended.
- J. This appliance is NOT A TOY.
- K. Young children should be supervised to ensure that they do not play with this appliance.
- L. This appliance is not intended for use by young children or infirm persons without supervision.

INTRODUCTION

Thank you for purchasing The OLD FASHIONED CARNIVAL COTTON CANDY CART™. This nostalgic looking cotton candy maker resembles the early 1900's carnival and circus style cotton candy carts. The designed appearance is like the nostalgic style cotton candy carts, however, it is a technologically advanced cotton candy maker.

The whole family will enjoy the OLD FASHIONED CARNIVAL COTTON CANDY CART™. Please take care of your machine by following these instructions and precautions.

NOTE: Cotton candy is made by heating sugar. This turns sugar into a liquid form. Then the sugar liquid is forced out of tiny holes in the extractor head by centrifugal force as the extractor head spins. As the liquid sugar hits the air, it returns to a solid fluffy material that adheres to a paper cone.

You can use a variety of flavored sugars with your OLD FASHIONED CARNIVAL COTTON CANDY CART™, which can be found on the Internet and at various stores in your local neighborhood.

HERE'S A TIP – You can use regular household granulated sugar in your OLD FASHIONED CARNIVAL COTTON CANDY CART™. To add a little flavor and color, mix a pinch of your favorite pre-sweetened Kool-Aid® to the sugar. Imagine the variety of flavors you can make and the fun you'll have!

INTRODUCTION AND SET UP

The OLD FASHIONED CARNIVAL COTTON CANDY CART™ is designed to be used almost anywhere such as:

- **Family Rooms**
- **Dorm Rooms**
- **Offices**
- **Club Houses**
- **Anywhere people gather to have fun** *And more...*

Now you can enjoy delicious cotton candy at...

- **Fundraisers**
- **Birthday Parties**
- **Carnivals**
- **Parties**
- **Barbecues** *Anytime...*

Your OLD FASHIONED CARNIVAL COTTON CANDY CART™ needs minimal assembly (see assembly insert).

The OLD FASHIONED CARNIVAL COTTON CANDY CART™ is easy to use, just follow these simple instructions:

- A. Follow the cleaning instructions on page 5, especially before first use.
- B. After cleaning and thoroughly drying the bowl, return the base - making sure it is LOCKED in to position.
- C. Return the extractor head, making sure that you tighten the bolt to secure it properly.
- D. Now you are ready to enjoy tasty, fluffy cotton candy from your OLD FASHIONED CARNIVAL COTTON CANDY CART™.
- E. Your OLD FASHIONED COTTON CANDY CART™ will spin the sugar into a flossy sweet treat that you collect on the paper cone by spinning the cone as it circles the bowl...just like at the carnival!

INSTRUCTIONS FOR USE

1. First, find a suitable area near an electrical outlet before starting. Make sure the ground is level. (Make sure your cord is away from any water source. If needed, it is acceptable to use an extension cord.) Make sure the unit is not in a high traffic area to prevent accidents.
2. Add sugar to the spinning head (See Illustration A, below). Manually turn the head to balance the sugar level to prevent excessive vibration, if necessary.



Illustration A

NOTE – NEVER add sugar while motor is running and head is spinning.

INSTRUCTIONS FOR USE (Continued)

2. There are two switches on the unit. (See Illustration B, below)
The HEAT SWITCH (left) turns on the heating element, the MAIN SWITCH (right) turns motor ON and OFF. **Make sure you have a flossing cone in hand**, switch to ON position.



Illustration B

Cotton candy floss should be made within a few seconds.

3. Close dome leaving just enough room to be able to reach inside and spin the flossing cone. When you can visually see the cotton candy 'web' begin, collect the cotton candy on the cone by holding the cone vertically. Rotate the cone with your fingers while you circle the bowl. Once cotton candy has collected on the cone, hold the cone in a horizontal position over the extractor head while still rotating the cone with your fingers. Continue turning the cone with your fingers while the cone is in the horizontal position, and move from side to side making sure you are collecting all the cotton candy.

TIP: If floss does not adhere easily to the cone, you can spray the cone lightly with water.

4. Turn the heat and motor OFF when all the sugar has been dispensed. Once the extractor head has come to a complete stop, you can pour another measure of sugar in the extractor head and begin again. The cotton candy should be flowing more quickly as the unit should be sufficiently warmed up.

NOTES

- Never use ingredients other than pure granulated sugar or flossing sugar. This will cause clogging.
- DO NOT overfill the sugar receptacle.
- ALWAYS use the protective dome (See Illustration C, below) when using this machine to protect spectators from hot, sugar particles that may fly out of the extractor head.

Illustration C



By following these simple instructions, using your OLD FASHIONED CARNIVAL COTTON CANDY CART™ will be fun for kids of all ages...young or old by bringing a carnival atmosphere to any occasion!

Display your OLD FASHIONED CARNIVAL COTTON CANDY CART™ with pride and enjoy some good old fashioned carnival style fun!

CLEANING INSTRUCTIONS

It is very important that the unit be cleaned properly after every use. If it is not, the holes will get clogged and sugar will not be able to sift through the tiny holes properly.

- Make sure unit is unplugged and has had time to cool down before cleaning.
- First warm up the flossing head for 30 seconds with the heat switch, then turn it off. Turn on motor only, to start flossing head. Pour 2 tablespoons of warm water into the top of the spinning head to blow all the sugar out. (DO NOT use heat while cleaning.) Let the extractor head spin until all of the water has spun out. Once there is no more water spinning out of the head, turn motor off. (You may need to do this several times to remove the sugar build up).
- Use a slightly damp, non-abrasive sponge or non-abrasive towel to wipe clean the outside of the unit. Wipe with a non-abrasive towel to dry. Do not use excessive water when cleaning this unit.

The OLD FASHIONED CARNIVAL COTTON CANDY CART™ breaks down to a cart body, bowl, dome, and extractor head for easy cleaning.

TROUBLESHOOTING

EXCESSIVE VIBRATION

1. If the equipment is new, verify that shipping bolts have been loosened and packing materials were removed from the machine.
2. Check for stretched or uneven suspension springs.
3. Run the sugar completely out, then check for foreign objects or sugar lumps in the extractor head.
4. Foreign objects in the extractor head may cause an out-of-balance condition.

LOW PRODUCTION

1. Make sure you are using only granulated sugar or cotton candy flossing sugar.
2. Check extractor head for foreign objects, materials or excessive sugar build up that may cause a blockage.


MOTOR DOES NOT TURN ON OR EXTRACTOR HEAD DOES NOT SPIN

1. Make sure that plug is connected correctly in to the outlet.
2. Check and replace fuses if necessary. (See below)

CHANGING THE FUSE

- Using a flathead screwdriver, push in, turning counter clockwise. (See Illustration)
- Fuse is now accessible and can be changed. Once changed, push in and turn clockwise to lock fuse into place.

D

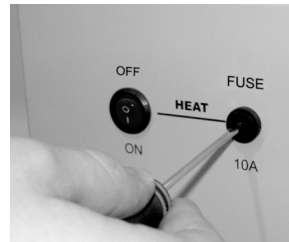

RETURNS & WARRANTY

SHOULD YOUR UNIT NOT WORK OR IS DAMAGED WHEN YOU FIRST TAKE IT OUT OF THE BOX, PLEASE RETURN IT TO THE PLACE OF PURCHASE IMMEDIATELY.

Should you have any questions, please contact us via email or at the customer service number listed below between the hours of 8:00 AM and 5:00 PM, Monday through Friday, Central Standard Time.

Distributed by:

Nostalgia Products Group LLC
1471 Partnership Dr.
Green Bay, WI 54304-5685

Customer Service

Phone: (920) 347-9122
Web: www.nostalgielectrics.com

Customer Service Inquiry

To submit a Customer Service inquiry, go to www.nostalgielectrics.com and fill out the **Customer Service Inquiry** form and click the Submit button. A representative will contact you as soon as possible.

OLD FASHIONED CARNIVAL COTTON CANDY CART™

MODEL# CCM-527

Limited Warranty

This appliance is designed and built to provide many years of satisfactory performance under normal household use. The distributor pledges to the original owner that should there be any defects in material or workmanship during the first 90 days of purchase, we will repair or replace the unit at our option. Our pledge does not apply to damages caused by shipping, mishandling or unit being dropped. A product deemed defective either from manufacturing or being mishandled is up to the distributor's discretion. To obtain service under this warranty, return this unit to Nostalgia Products Group, LLC at the address above, shipping prepaid. You must also include a copy of the original receipt along with your name, address and phone number. Include a description of the defect along with the date you purchased the product.

This warranty does not apply to re-manufactured merchandise.

Please read these instructions carefully. Failure to comply with these instructions, damages caused by improper replacement parts, abuse or misuse will void this pledge to you and is being made in place of all other expressed warranties.



Nostalgia Products Group LLC
1471 Partnership Dr.
Green Bay, WI 54304-5685

Visit Us Online at
www.nostalgielectrics.com

©2009 Nostalgia Products Group LLC

Rev. 6/16/09

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>