

OLYMPUS®

**DIGITAL VOICE
RECORDER**

DS-71

DS-61

**ONLINE
INSTRUCTIONS**

Thank you for purchasing an Olympus
Digital Voice Recorder.

Please read these instructions for information
about using the product correctly and safely.
Keep the instructions handy for future reference.

To ensure successful recordings, we
recommend that you test the record function
and volume before use.

EN

Introduction

- The contents of this document may be changed in the future without advanced notice. Contact our Customer Support Center for the latest information relating to product names and model numbers.
- The utmost care has been taken to ensure the integrity of the contents of this document. In the unlikely event that a questionable item, error, or omission is found, please contact our Customer Support Center.
- Any liability for passive damages or damage of any kind occurred due to data loss incurred by a defect of the product, repair performed by the third party other than Olympus or an Olympus authorized service station, or any other reasons is excluded from the Olympus's liability.

□ Trademarks

IBM and PC/AT are the trademarks or registered trademarks of International Business Machines Corporation.

Microsoft, Windows and Windows Media are registered trademarks of Microsoft Corporation.

MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson.

The product was developed based on noise-canceling technology under license from NEC Corporation.

IBM ViaVoice and Dragon NaturallySpeaking are the trademarks or registered trademarks of Nuance Communications Inc.

EUPHONY MOBILE™ is a trademark of DiMAGIC Corporation.

DVM™ is a trademark of DiMAGIC Corporation.

Other product and brand names mentioned herein may be the trademarks or registered trademarks of their respective owners.



INDEX

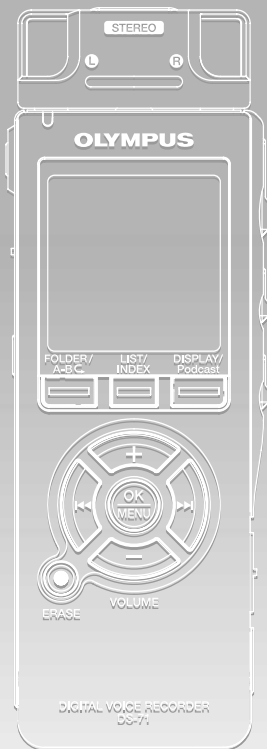


Table of Contents	P.4
Safe and Proper Usage	P.6
Getting Started	P.9
About Recording	P.23
About Playback	P.46
Erase and other functions	P.70
Display and Sound Functions	P.88
Menu Setting	P.97
Using the Recorder on Your PC	P.102
Managing Files on Your PC	P.114
DSS Player Expanded Functions	P.125
Importing content for listening on the recorder	P.140
Enjoy Audible Content	P.154
Other Practical Use Methods	P.163
Other Information	P.164

1
2
3
4
5
6
7
8
9
10
11
12
13

Table of Contents

Introduction	2
INDEX	3
Table of Contents	4
Safe and Proper Usage	6
General Precautions	6

1 Getting Started

Main Features	9
Identification of Parts	11
Inserting Batteries	13
Using the AC Adapter	14
Power Supply	15
HOLD	16
Setting Time/Date (Time&Date)	17
Notes on the Folders	19

2 About Recording

Before recording	23
Recording	25
Using the Variable Control Voice Actuator (VCVA)	28
Recording Modes (Rec Mode)	32
Set the method for adjusting the recording level (Rec Level)	33
Microphone Sensitivity	35
Zoom Mic (Zoom Mic)	36
Set the Low Cut Filter (LowCut Filter)	38
Recording from External Microphone or Other Devices	40
Timer Recording (Timer Rec)	42

3 About Playback

Playing	46
Set Skip Space (Skip Space)	50
Changing the Playback Speed (Play Speed)	52
Select Play Mode (Play Mode)	55
How to begin segment repeat playback ...	57
Noise Cancel Function (Noise Cancel) ...	59
Set the Voice Filter (Voice Filter)	61
Increase the realistic sensation (EUPHONY)	63
Alarm Playback Function (Alarm)	65
Set the Intro Play (Intro Play)	69

4 Erase and other functions

Erasing	70
Index Marks and Temp Marks	73
Locking Files (Lock)	75
Changing Folder Names (Folder Name)	77
Rearranging files (File Move)	79
Formatting the Recorder (Format)	81
Changing the USB Class (USB Class)	83
Changing Power Save (Power Save)	84
Changing External Input Setting (Ext. Input) ...	85
Viewing system information (System Info.)	87

5 Display and Sound Functions

LCD Display Information	88
Backlight (Backlight)	90
LED(LED)	91
LCD Contrast Adjustment (Contrast)	92
Guidance (Voice Guide)	93
System Sounds (Beep)	96

6 Menu Setting

Menu Setting Method	97
Menu List	99

7 Using the Recorder on Your PC

Saving Files in Your PC	102
Using DSS Player Software	104
Installing Software	105
Uninstalling Software	108
Using Online Help	109
Connecting to Your PC	110
Running DSS Player	112
Window Names (DSS Player)	113

8 Managing Files on Your PC

Download Voice Files from the Recorder ...	114
Play a Voice File	116
Upload Voice Files to the Recorder	117
Send Voice Files with E-mail	119
Changing User ID	119
Changing a Folder Name	120
Editing File Comments	120
Editing a Template	121
Copying Voice Guide Data	122
USB Microphone/USB Speaker	123

9 DSS Player Expanded Functions

Upgrade Function	125
Using Voice Recognition Software	127
Joining Files	135

Splitting Files	137
Menu Setting of this Recorder	139

10 Importing Content for Listening on the Recorder

Importing Content for Listening on the Recorder	140
Using Windows Media Player	141
Window Names (Windows Media Player)	142
Copying Music from CD	143
Transferring Music File to the Recorder	144
Importing Podcast Content	147
Bookmark mode	151

11 Enjoy Audible Content

Loading Audible Content	154
Transferring Audible Content	157
Enjoy Audible Content with the Recorder ...	159

12 Other Practical Use Methods

Using as External Memory of the Computer	163
---	-----

13 Other Information

Alarm Message List	164
Troubleshooting	165
Accessories (optional)	167
Specifications	168
Technical Assistance and Support	170

Safe and Proper Usage

Before using your new recorder, read this manual carefully to ensure that you know how to operate it safely and correctly. Keep this manual in an easily accessible location for future reference.

- The warning symbols indicate important safety related information. To protect yourself and others from personal injury or damage to property, it is essential that you always read the warnings and information provided.

General Precautions

- **Do not leave the recorder in hot, humid locations such as inside a closed automobile under direct sunlight or on the beach in the summer.**
- **Do not store the recorder in places exposed to excessive moisture or dust.**
- **Do not use organic solvents such as alcohol and lacquer thinner to clean the unit.**
- **Do not place the recorder on top of or near electric appliances such as TVs or refrigerators.**
- **Avoid recording or playing back near cellular phones or other wireless equipment, as they may cause interference and noise. If you experience noise, move to another place, or move the recorder further away from such equipment.**
- **Avoid sand or dirt. These can cause irreparable damage.**
- **Avoid strong vibrations or shocks.**
- **Do not disassemble, repair or modify the unit yourself.**

- Do not operate the unit while operating a vehicle (such as a bicycle, motorcycle, or go-cart).
- Keep the unit out of the reach of children.

<Warning regarding data loss>

Recorded content in memory may be destroyed or erased by operating mistakes, unit malfunction, or during repair work.

It is recommended to back up and save important content to other media such as a computer hard disk.

Any liability for passive damages or damage of any kind occurred due to data loss incurred by a defect of the product, repair performed by the third party other than Olympus or an Olympus authorized service station, or any other reasons is excluded from the Olympus's liability.

Batteries

Warning

- Batteries should never be exposed to flame, heated, short-circuited or disassembled.
- Do not attempt to recharge alkaline, lithium or any other non-rechargeable batteries.
- Never use any battery with a torn or cracked outer cover.
- Keep batteries out of the reach of children.
- If you notice anything unusual when using this product such as abnormal noise, heat, smoke, or a burning odor:
 - ① remove the batteries immediately while being careful not to burn yourself, and;
 - ② call your dealer or local Olympus representative for service.

AC Adapter

Warning

- Do not attempt to disassemble, repair or modify the AC adapter in any way.
- Keep foreign objects including water, metal, or flammable substances from getting inside the product.
- Do not moisten the AC adapter or touch it with a wet hand.
- Do not use the AC adapter in the vicinity of flammable gas (including gasoline, benzine and lacquer thinner).

In case

- ... the internal parts of the AC adapter are exposed because it has been dropped or otherwise damaged:
- ... the AC adapter is dropped in water, or if water, metal flammable substances or other foreign objects get inside it:
- ... you notice anything unusual when using the AC adapter such as abnormal noise, heat, smoke, or a burning odor:
 - ① do not touch any of the exposed parts;
 - ② immediately disconnect the power supply plug from the power outlet, and;
 - ③ call your dealer or local Olympus representative for servicing. Continued use of the AC adapter under these circumstances could result in electric shock, fire or injury.

Plus

The [DSS Player] can be upgraded to [DSS Player Plus], which is equipped with enhanced functionality (paid option). (P125)

Main Features

This product is equipped with the following features.

- This “IC recorder” is optimally suited for playing back audio recordings, such as conferences or business scenes, language studies, Podcasts, and other audible content.

The recorder stores highly compressed WMA (Windows Media Audio) format voice messages in integrated flash memory. (☞ P22)


It can also play back WMA and MP3 (MPEG-1/MPEG-2 Audio Layer-3) format files. (☞ P46, 140)

- Supports the linear PCM format, which is capable of recording sound quality equivalent to CD-level. Capable of realistically recording various different sound sources. (DS-71 only)
High resolution recording at a high sampling frequency and bit count equivalent to that of a music CD (Sampling frequency 44.1 kHz, Bit count 16bit) is possible.
- Several recording modes can be selected including stereo recording modes ST XQ (Stereo Extra High Quality Sound Recording), ST HQ (Stereo High Quality Recording) or ST SP (Stereo Standard Recording), and three types of monaural recording modes including HQ (High Quality), SP (Standard Recording), and LP (Long-term Recording). (☞ P32)

- The recording level can be adjusted automatically or manually. (DS-71 only)
- An exclusive remote control can be attached to the recorder to control recording and stop operations. (☞ P24)
- It uses a removable stereo microphone. (☞ P23)
 - The stereo microphone can be removed when it is not necessary during playback, offering excellent portability.
 - If the stereo microphone is removed and attached to the exclusive remote control, it can be used as a remotely controlled stereo microphone.
 - Even if the stereo microphone is removed, the unit uses a built-in monaural microphone for recording.
- This USB storage class support recorder can be utilized as external memory to read and save the data. (☞ P163)
 - By connecting the computer with the USB, pictures, text data, etc. can be saved, and utilized to carry data.
- The guidance feature (in English and other languages) gives audio notification of operating conditions. It ensures seamless operation of various complex functions. (☞ P93)

- You may assign your own names to folders. (☞ P77, 120)
- It has a built-in Variable Control Voice Actuator (VCVA) function. (☞ P28)
- Timer Rec and Alarm features enable automatic recording and playing at a set time. (☞ P42, 65)
- A directional microphone feature has been included that allows for switching between broad stereo recording and recording with a highly directional quality using a single special microphone. (☞ P36)
- The LowCut Filter minimizes air conditioner noise and other similar noises while recording. (☞ P38)
- Index mark and temp mark features allow you to quickly find desired locations. (☞ P73)
- The playback speed can be controlled as preferred. (☞ P52)
- A convenient intro play feature has been included for when searching for a file that you want to listen to. (☞ P69)
- A Noise Cancel Function (☞ P59) and a Voice Filter Function (☞ P61) cut noise and enable clear audio playback.
- EUPHONY MOBILE has been included to produce a natural, realistic experience without degrading sound quality. (☞ P63)
- Fast forward and rewind are possible at set intervals. (☞ P48)
- Comes with DSS Player software. (☞ P102)
 - If you transfer voice files recorded with the recorder to a PC, you can easily play back, organize, and edit the files.
 - If you connect the recorder to a computer, you can use it as a USB microphone or USB speaker. (☞ P123)
- The [DSS Player] can be upgraded to a [DSS Player Plus], which is equipped with an enhanced functionality (Option). (☞ P125)
 - If a commercial voice recognition software is utilized, the recorded voice file can be converted to characters automatically. (☞ P127)
 - In addition to the [DSS Player] functions, joining and splitting of the files and configuring the menu settings of this recorder, etc. can be performed.
- It is compatible with Podcasting. (☞ P147)
 - If favorite Internet radio-station URLs are registered in the DSS Player, the latest broadcasting content will be received automatically. Press the Podcast button on the recorder to quickly listen to the program (file) transferred from the DSS Player to the recorder.
- Compatible with Audible broadcasting. (☞ P154)

Identification of Parts

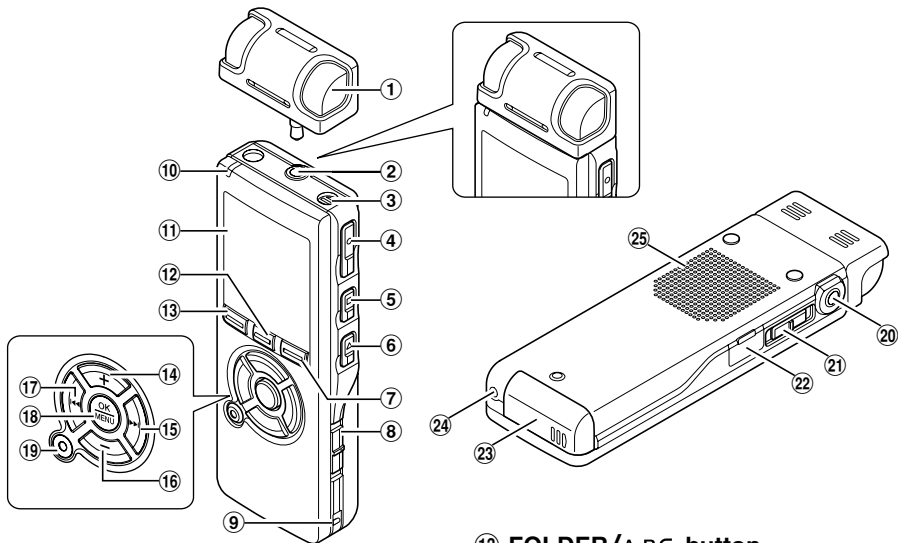


- ① Exclusive stereo microphone (ME55S)
- ② MIC (Microphone) / REMOTE jack
- ③ Built-in monaural microphone
- ④ REC (Record) button
- ⑤ STOP button
- ⑥ PLAY button
- ⑦ DISPLAY/Podcast button
- ⑧ POWER/HOLD switch
- ⑨ Strap hole
- ⑩ Record/Play indicator light (LED)
- ⑪ Display (LCD panel)
- ⑫ LIST/INDEX button

- ⑬ FOLDER/A-B-C button
- ⑭ VOLUME (+) button
- ⑮ ►► (Fast Forward) button
- ⑯ VOLUME (-) button
- ⑰ ◀◀ (Rewind) button
- ⑱ OK/MENU button
- ⑳ ERASE button
- ㉑ EAR (Earphone) jack
- ㉒ MIC SENSE (Microphone Sensitivity) switch
- ㉓ PC (USB) terminal
- ㉔ Battery cover
- ㉕ Power jack
- ㉖ Built-in speaker



Remote Controller -RS29-

Recording and stop operations can be performed by connecting the remote controller to the recorder. The remote controller can also be used as a remote controlled stereo microphone by connecting it to the exclusive stereo microphone (ME55S).

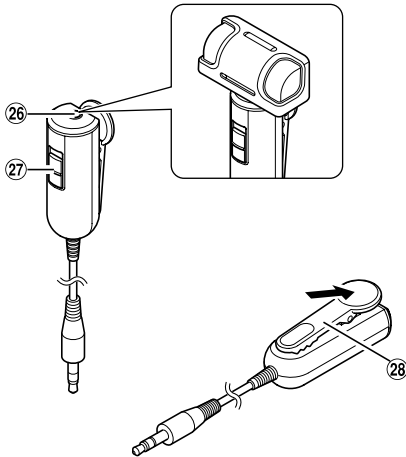


- 26 MIC (Microphone) jack
- 27 REC/STOP switch
- 28 Clip

Display (LCD Panel)

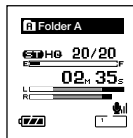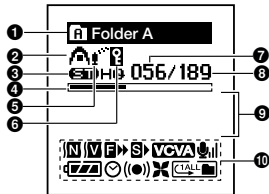





Display in the stereo recording mode

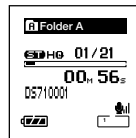

Display in the playback mode

- 1 Folder name indicator
- 2 EUPHONY indicator
- 3 Record mode indicator
- 4 Play position bar indicator
- 5 Zoom Mic indicator
- 6 Erase lock indicator
- 7 Current file number
- 8 Total number of recorded files in the folder
- 9 Character information display
- 10 Icon display
 - [N] Noise Cancel indicator
 - [V] Voice Filter indicator
 - [F] F. Play indicator
 - [S] S. Play indicator
 - [VCVA] VCVA (Variable Control Voice Actuator) indicator
 - [μ] Microphone sensitivity indicator
 - [BATT] Battery indicator
 - [T] Timer indicator
 - [AL] Alarm indicator
 - [LCF] Low Cut Filter indicator
 - [CALL] Play Mode indicator

Inserting Batteries

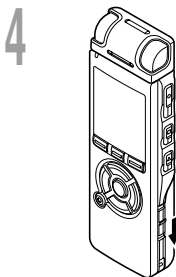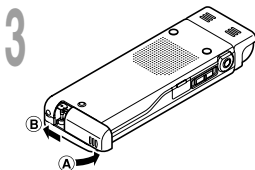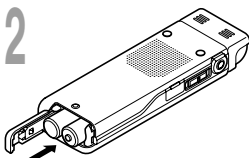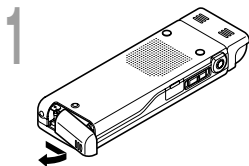

1 Lightly press down on the arrow and slide the battery cover open.

2 Insert two AAA alkaline batteries, observing the correct polarity.

 
3 Close the battery cover completely by pressing to the direction (A), then sliding to the direction (B).

 
4 Slide the **POWER/HOLD** switch in the direction indicated by the arrow, and turn the power on.


If the [hour] indicator flashes in the display, see [Setting Time/Date (Time&Date)]. (P17)

Replacing batteries

The battery indicator on the display changes as the batteries lose power.



 When  appears on the display, replace the batteries as soon as possible.

When the battery is too weak,  [Battery Low] appears on the display and the recorder shuts down. When changing batteries, AAA alkaline batteries or Olympus Ni-MH Rechargeable Batteries (P14) are recommended.

Ni-MH Rechargeable Battery


Optional Ni-MH rechargeable batteries from Olympus can be used in the recorder. (P167)

Notes

- **Be sure to stop the recorder before replacing the batteries.** Unloading the batteries while the recorder is in use may corrupt the file. If you are recording into a file and the batteries run out, you will lose your currently recorded file because the file header will not be able to close. It is crucial to change the batteries once you see only one Hash mark in the battery icon.
- If it takes longer than 1 minute to replace dead batteries, you may have to reset the time when you load fresh batteries. (P17)
- Remove the batteries if you are not going to use the recorder for an extended period of time.

Using the AC Adapter

Plug the optional AC adapter (Olympus Model A328) into a household power outlet and connect the power plug to the recorder's power connector (DC 3V). Always turn the recorder's power off or stop recording before connecting. If the AC adapter is plugged in while recording using batteries, it may not be possible to play back the voice data being recorded.

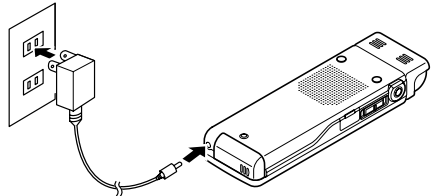


Warning

- **Always stop recording before connection or disconnection.**
- **When the AC adapter is not in use, disconnect the power supply plug from the power outlet.**
- **Use only the correct power supply voltage as indicated on the adapter.**
- **Do not use the AC adapter when connecting the recorder to the USB port.**

Power Supply

When the recorder is not being used, turn the power off to reduce battery consumption to a minimum. Even if the power is turned off, existing data, mode settings, and clock settings will be maintained.

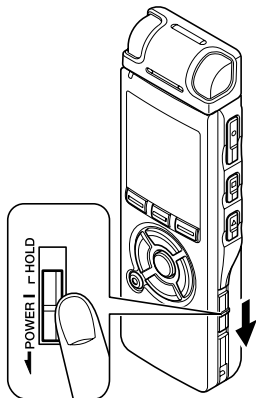

Turning On the Power

While the recorder's power is off, slide the **POWER/HOLD** switch in the direction indicated by the arrow.

The display will turn on, and, after [System Check] appears, the power will be turned on. The resume function will bring the recorder back to the stop position in memory before power was turned off.

System
Check

Turning Off the Power


Slide the **POWER/HOLD** switch in the direction indicated by the arrow for **0.5 seconds or longer**.

The display shuts off and the power will be turned off. The resume function remembers the stop position before the power is turned off.

Power save mode

If the recorder is on and stops for 10 minutes or longer (default), the display shuts off and it goes into power save mode. You can set the time to enter power save mode from among [5min.], [1 min.], [30min.], [1hour] and [Off] (P84) To exit power save, press any button.

HOLD

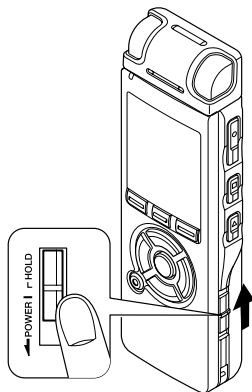


If you bring the POWER/HOLD switch to the HOLD position, the current conditions will be preserved, and all buttons and switches will be disabled. This feature is useful when the recorder has to be carried in a bag or pocket.

Set the recorder to HOLD mode


Slide the **POWER/HOLD** switch to the **HOLD** position.

After [Hold] appears on the display, the recorder is set to HOLD mode.

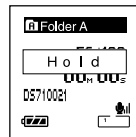

Exit HOLD mode

Slide the **POWER/HOLD** switch to the **(A)** position.

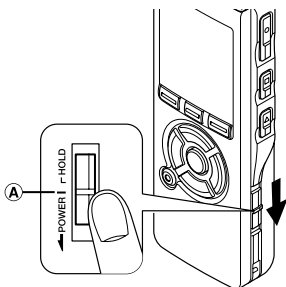



Notes

- If you press any button in HOLD mode, the clock display flashes for 2 seconds, but it will not operate the recorder.
- If HOLD is applied during playback (recording), operation is disabled with the playback (recording) state unchanged. (When playback has ended and the recording has ended due to the remaining memory being used up, it will stop.)
- Even if the recorder is in HOLD mode, operations using the remote control are still available.

Setting Time/Date (Time&Date)


If you set the date and time beforehand, the information when the file is recorded is automatically stored for each file. Setting the date and time beforehand enables easier file management.

 When you use the recorder for the first time after purchasing it, or turn the power on after having removed the batteries for one minute or longer to change them or for other purposes, the [Set Time&Date] message may appear. If the [Hour] indicator flashes, follow the steps below to set it.

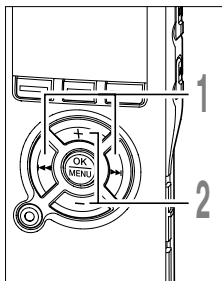



1 Press the ►► or ◀◀ button to select the item to set.

Select the item from [hour], [minute], [year] [month] and [day] with a flashing point.

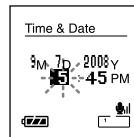

2 Press the + or - button to set.

Follow the same steps by pressing the ►► or ◀◀ button to select the next item, and press the + or - button to set.

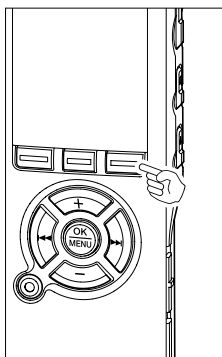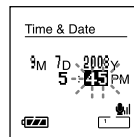

- You can choose between 12 and 24 hour display by pressing the DISPLAY button while setting the hour and minute.


Example: 5:45 P.M.

5:45 PM ↔ 17:45
(Initial setting)

- You can choose the order of the year, month, day by pressing the DISPLAY button while setting them.

Example: September 7, 2008

9M 7D 2008Y → 7D 9M 2008Y → 2008Y 9M 7D
(Initial setting)

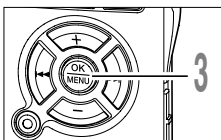


- 3 Press the OK button to complete the setup screen.**
The clock will start from the set date and time. Press the OK button according to the time signal.

Notes

- If you press the OK button during the setup operation, the recorder will save the items that were set to that point.
- After setup, a message will sound saying that If the guidance is not required, select [Off], and the screen goes into [Voice Guide] setup. (☞ P93)
If you don't want the guidance feature, select [Off].

Changing the Time/Date

Press the STOP button while the recorder has stopped recording to check [Time&Date] and [Remain]. If the [Time&Date] is not correct, set it using the procedure below.


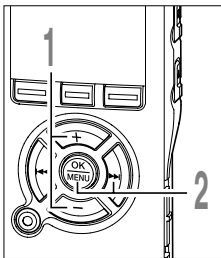


- 1 Press the + or - button in the menu screen, and select the [Time&Date].**

See P97, 99 regarding the menu.

- 2 Press the OK or >>> button.**

 The Time/Date screen appears. The hour indicator flashes, indicating the start of the Time/Date setup process. The following steps are the same as Step 1 through Step 3 of [Setting Time/Date (Time&Date)]. (☞ P17)

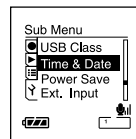

- 3 Press the STOP button to close the menu.**


Notes on the Folders

There are a total of eight folders in the recorder that are in a tree format. Under the [Root] folder are [Folder A] through [Folder E], [Audible] and [Music] folders, and recorded or transferred language and music data from a computer can be saved as [files]. [Folder A] through [Folder E] are voice-recording folders, so choose one of these five folders when recording on this recorder.

Up to 200 files can be saved in each folder, and up to two layers can be created within the [Music] folders.

[Audible] folder can be purchased from an Audible web site (☞ P155) by using the [Audible Manager], and files transferred to the recorder (☞ P156) are saved in this folder (in ACELP/MP3 format).

A [Podcast] folder, for saving files distributed (☞ P147) by Podcasting, is prepared in advance inside the [Music] folder.

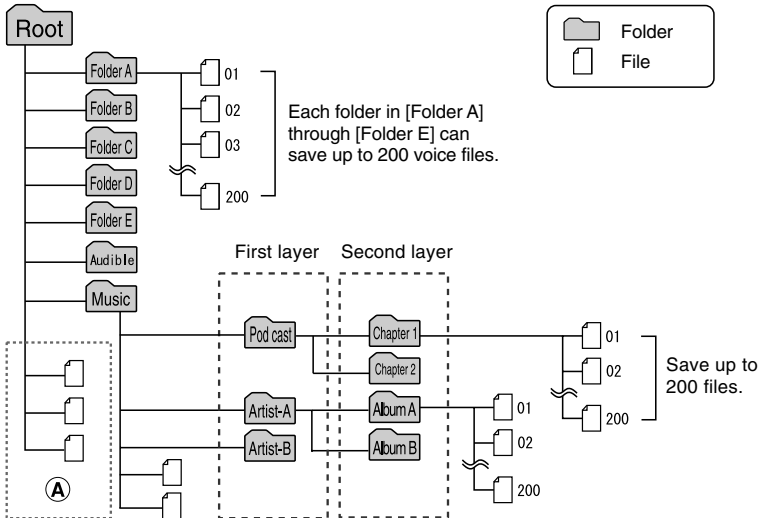

Notes

- Up to 128 folders can be created under the [Music] folder including [Music] and [Podcast].
 - When using Windows Media Player 10, click [Start Sync] instead of setting the synchronization options. All the files will be transferred to the part (A) above. (☞ P145)
 - It is not possible to create a folder in the [Audible] folder.
- Download from [Www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.


Selecting the Folders and Files

1

Notes on the Folders



List display

The folders and files recorded in this recorder are displayed.

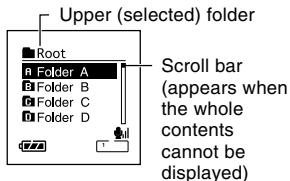

File display

Information of the selected file is displayed. Enters in playback standby mode.

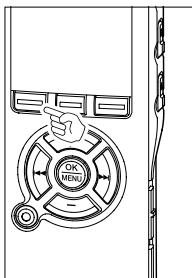
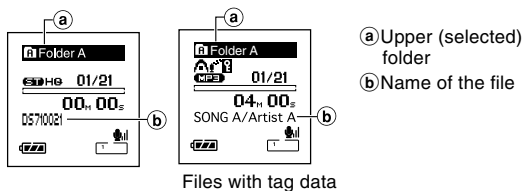


Press the FOLDER button to switch folders

Press the **FOLDER** button while the recorder is stopped.

- Every time the Folder button is pressed, it cycles through [Folder A] through [Folder E] and the [Audible] [Music] folder, and it shows a list of files and folders recorded within each folder.


When the [Audible] folder is opened, the recorder enters the Audible mode. (P159)

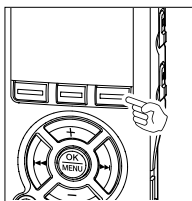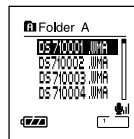

Open the [Podcast] folder


While the recorder is stopped, press the **Podcast** button for one second or longer.

- If the [Podcast] folder under the [Music] folder is opened, a list of files and folders within the folder will appear. For [Podcast] please see P147.

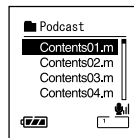

How to select a folder and file

 You can select a desired folder and file even without using the FOLDER button or the Podcast button.



Selecting [Folder A] folder

Selecting [DS710001] file

If a folder or file is selected with the OK button, playback will begin.


↑ or ↓ button: Moves the cursor up and down.

→ or OK button: Opens the selected folder/file.

← button: Returns to the upper folder.


◀ button: Returns to the upper folder while in the list display, and returns to the list display while in the file display.

* You can also start playing back a file by pressing the Play button while a list of files is on display.

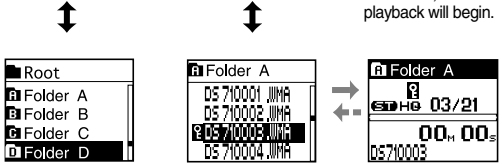

Selecting [DS710003] file

 
If a folder or file is selected with the OK button, playback will begin.



Selecting [Audible] folder

Selecting [Chapter 3] The recorder switches to the Audible mode.

 When the PLAY button is pressed, the recorder starts to play back a file from the Playback Position. (P160)



Selecting [Music] folder

Selecting [Contents] folder

Selecting [Chapter 1] folder

Selecting [Contents01] file

File names will be automatically created for files recorded by this recorder.

DS71 0001.WMA


Extension: Files recorded by this device are saved in WMA or linear PCM format with the file extensions .WMA or .WAV.

File number : A serial number automatically assigned by a Digital Voice Recorder.

User ID : The name that has been set on the Digital Voice Recorder. The default name on the Digital Voice Recorder is [DS71] or [DS61]. The user ID can be modified with DSS Player. (☎ P119)

Before recording


This recorder offers a wide range of recording options by using the exclusive stereo microphone, built-in monaural microphone, and exclusive remote control. Choose a recording method according to your need.

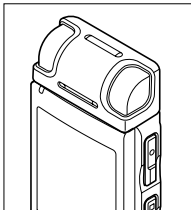

Stereo recording using the exclusive stereo microphone

Plug the exclusive stereo microphone into the recorder's MIC/REMOTE jack for stereo recording in ST XQ, ST HQ and ST SP modes and monaural recording in HQ, SP, and LP modes. The DS-71 can also record in linear PCM format.

Connect the exclusive stereo microphone to the recorder's MIC/REMOTE jack.

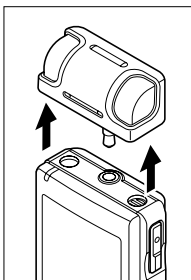


Monaural recording with the built-in microphone

Even if the exclusive stereo microphone is unplugged, recordings can be still made using the recorder's built-in microphone.

Unplug the exclusive stereo microphone from the recorder.

Notes

- The ME55S is the microphone for the DS-71 and DS-61.
- The ME53S external microphone for the DS-50/40/30 cannot be used.
- If a recording is made in PCM, ST XQ, ST HQ and ST SP modes while the exclusive stereo microphone is unplugged, it will be a monaural recording through the built-in microphone, and same audio will be recorded on both Left channel (Lch) and Right channel (Rch).
- Stop the recorder before plugging in or unplugging a microphone.

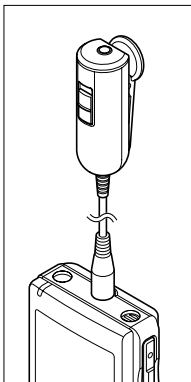

Use the remote control for operation

Plug the exclusive remote control into the recorder's MIC/REMOTE jack to use the remote control to operate the recorder.

Connect the exclusive remote control to the recorder's MIC/REMOTE jack.

- ➔ Use the REC/STOP switch on the exclusive remote control to start and stop recording with the recorder's built-in microphone. (☞ P25)

Notes

- Even when the exclusive remote control is plugged in, the recorder's buttons are still usable.
- Even when the recorder is in Hold mode (☞ P16), the exclusive remote control's REC/STOP switch is still usable.
- When the switch of the exclusive remote control is set to STOP and the REC button on the recorder is pressed, the recorder starts recording with the microphone that has been connected to the exclusive remote control. Recording will not be made if a microphone is not connected to the exclusive remote control.

Use it as a remotely controlled stereo microphone


If the exclusive stereo microphone is removed from the recorder and plugged into the exclusive remote control's Mic jack, it can be used as a remotely controlled stereo microphone.

Connect the exclusive stereo microphone to the exclusive remote control's Mic jack.

- ➔ Use the REC/STOP switch on the exclusive remote control to start and stop recording on the recorder. (☞ P25)

Notes


- Even when the exclusive remote control is plugged in, the recorder's buttons are still usable.
- Turn the exclusive remote control's switch to Stop and press the recorder's REC button to start and stop recording using the remote-control stereo microphone.

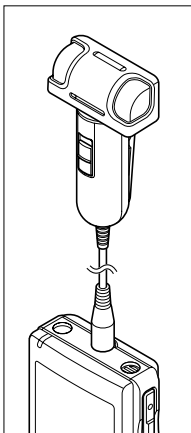

Recording


Before starting recording, select a folder between Folder **A** to Folder **E**. These five folders can be selectively used to distinguish the kind of recording; for example, Folder **A** might be used to store private information, while Folder **E** might be dedicated to holding business information.

Newly recorded audio will be saved as the last file in the selected folder.

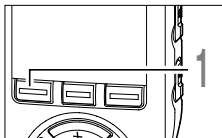

1 Press the **FOLDER** button to choose a folder in which to make a recording.

Every time the FOLDER button is pressed, folders will switch. (☞ P20)

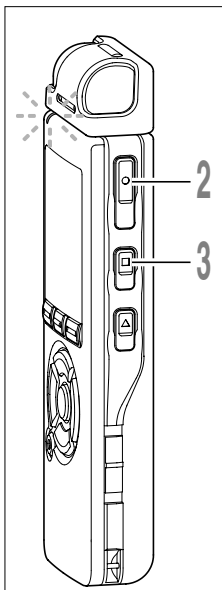



2 Press the **REC** button to start recording.

The record/play indicator light glows red. Turn the microphone in the direction of the source to be recorded. The display changes depending on the recording mode. (☞ P32) When the exclusive remote control is connected, the remote control's REC/STOP switch will work the same as the recorder's REC and STOP buttons.


- (a) **Current recording mode**
- (b) **Recording elapsed time**
- (c) **Memory remaining indicator (E/F bar)**
(The bar indicates remaining memory)
- (d) **Level meter** (varies according to the sound volume being recorded)

Every time the DISPLAY button is pressed while recording, [Recording elapsed time] and [Remaining recording time] cycles in the location indicated by (b).

3 Press the **STOP** button to stop recording.

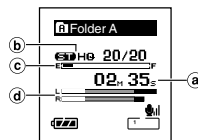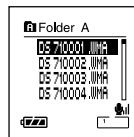



Display in the stereo recording mode

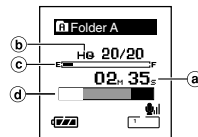

Display in the monoaural recording mode

Notes

- If you select a folder other than **A** through **E** and press the REC button, an [Illegal Folder] message will flash. Select a folder from **A** through **E** and start recording again.
- To ensure recording from the beginning, start speaking after you see the red record/play indicator light on.
- A beep will sound when remaining recording time reaches 60 seconds, 30 seconds, and 10 seconds while recording.
- When remaining recording time is less than 60 seconds, the record/play indicator light starts flashing in red. When the recording time is decreasing to 30 or 10 seconds, the light flashes faster.
- [Memory Full] or [Folder Full] will be displayed when the memory or folder capacity is full. Delete any unnecessary files before recording any further. (P.70)

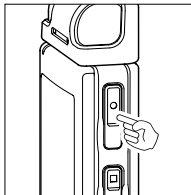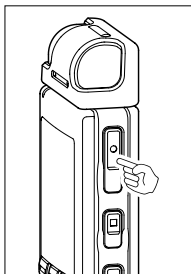


Pause

Press the **REC** button while recording.

➡ [Rec Pause] will flash on the display.


- When leaving the device idle while pausing recording for over 1 minute, the device will beep at a 5 second interval to notify the user that the device is paused.
- The recorder will time out after 2 hours when left in [Rec Pause].

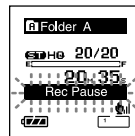


Resume Recording

Press the **REC** button again.

➡ Recording will resume at the point of interruption.

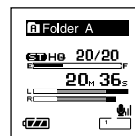

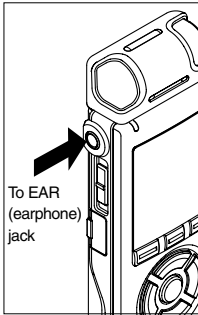

Listening While Audio is Recorded

If you start recording after inserting the earphone into the EAR jack on the recorder, you can hear the sound being recorded. The sound volume on the recording monitor can be adjusted by pressing the VOLUME (+) or VOLUME (-) button.

Connect the earphone to the EAR jack on the recorder.

- After recording has started, you can hear the sound being recorded through the earphone. If the earphone is connected, no sound will come from the speaker.

Notes


- Recording level cannot be controlled using the volume button.
- When using the earphones, do NOT set the volume too high. Listening at very high volume may lead to hearing loss.
- Do not place earphones near a microphone as this may cause feedback.

Using the Variable Control Voice Actuator (VCVA)

When the microphone senses that sounds have reached a preset threshold volume level, the built-in Variable Control Voice Actuator (VCVA) starts recording automatically, and stops when the volume drops below the threshold level.

The VCVA feature extends recording time and conserves memory by stopping recording during silent periods, which helps the playback to be more efficient.

2

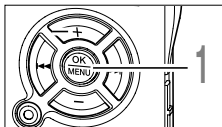

- 1 While the recorder is stopped or during recording, press the MENU button for 1 second or longer.**

The menu opens. (P97, 99)

- 2 Press the + or - button to choose [VCVA].**

- 3 Press the OK or >>> button.**

The [VCVA] setup process begins.

- 4 Press the + or - button to choose [ON/OFF].**

- 5 Press the OK or >>> button.**

- 6 Press the + or - button to choose between [On] and [Off].**

[On]: Will start recording in VCVA mode.






[Off]: Will resume recording in normal mode.


When [On] is selected, a VCVA indication will be displayed on the screen.

- a VCVA (Variable Control Voice Actuator) indicator**

- 7 Press the OK button to complete the setup screen.**

If the <<< button is pressed, the setting will be canceled and it will return to the menu.

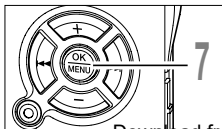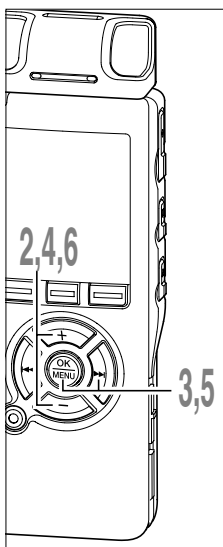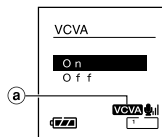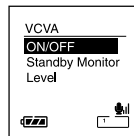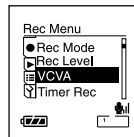


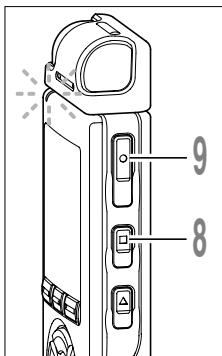


8 Press the **STOP** button to close the menu.


If it returns to the menu screen during recording, press the **◀** button to close the menu screen.

9 Press the **REC** button to start recording.

When the sound volume is lower than the preset threshold sound level, recording automatically stops after 1 sec approximately, and [Standby] flashes on the display. The record/play indicator light glows red when recording starts and flashes when recording pauses.

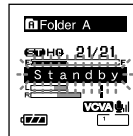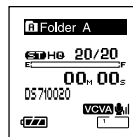

Adjust the initial VCVA level (DS-71)

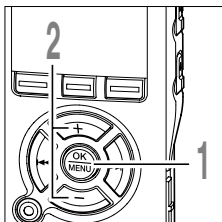



1 While the recorder is recording or paused, hold down the **MENU** button for 1 second or longer.

The menu opens. (☞ P97, 99)

2 Press the **+** or **-** button to choose [VCVA].

The [VCVA] setup process begins.


3 Press the **OK** or **▶▶▶** button.

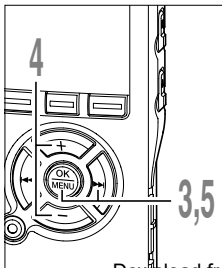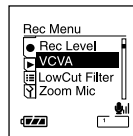


4 Press the **+** or **-** button to choose [Level].

The [Level] setup process begins.

5 Press the **OK** or **▶▶▶** button.

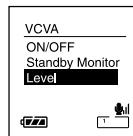

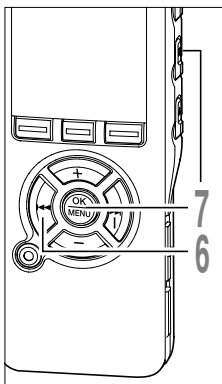


6 Press the ►► or ◄◄ button adjust the pause sound level.

The VCVA level can be set to any of 15 different values. The higher the value, the more sensitive the recorder to sounds. At the highest value, even the faintest sound will activate recording.

The VCVA pause sound level can be adjusted according to the ambient (background) noise.

- (b) **Level meter** (varies according to the sound volume being recorded)
- (c) **Start level** (moves to the right/left according to the set level)

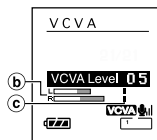

7 Press the OK button to finish settings, then press the ◄◄ button to close the Menu Screen.


Adjust the initial VCVA level (DS-61)

Press the ►► or ◄◄ button while the recorder is recording or paused to adjust the initial VCVA level.

The VCVA level can be set to any of 15 different values. The higher the value, the more sensitive the recorder to sounds. At the highest value, even the faintest sound will activate recording.

The VCVA pause sound level can be adjusted according to the ambient (background) noise.

- (b) **Level meter** (varies according to the sound volume being recorded)
- (c) **Start level** (moves to the right/left according to the set level)

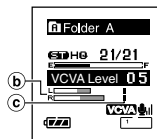




Notes

- The start/stop actuation level also varies depending on the selected microphone sensitivity mode. (P35)
- If the surrounding noise is loud, the starting sensitivity of the VCVA can be adjusted according to the recording situation.
- To ensure successful recordings, prior testing and adjustment of the start/stop actuation level is recommended.

VCVA standby monitor setting

When [Standby Monitor] is set to [On] with the menu setting, the recording will not be output from the earphone while in VCVA standby.

When you monitor your recording with the earphone connected, you can check whether VCVA is launched or not by checking if an audio is output.

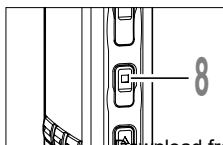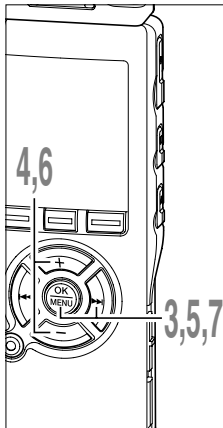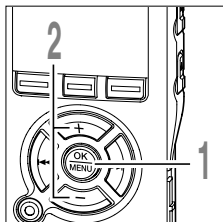

- 1 While the recorder is stopped or during recording, press the MENU button for 1 second or longer.**

The menu opens. (P97, 99)

- 2 Press the + or - button to choose [VCVA].**

- 3 Press the OK or >>> button.**

- 4 Press the + or - button to choose [Standby Monitor].**

- 5 Press the OK or >>> button.**

The [Standby Monitor] setup process begins.





- 6 Press the + or - button to choose between [On] and [Off].**

- 7 Press the OK button to complete the setup screen.**

If the <<< button is pressed, the setting will be canceled and it will return to the menu.

- 8 Press the STOP button to close the menu.**

If it returns to the menu screen during recording, press the <<< button to close the menu screen.

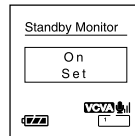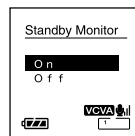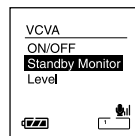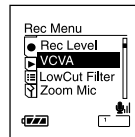


Recording Modes (Rec Mode)

The recording mode can be chosen from PCM (DS-71 only), ST XQ (stereo extra high quality sound recording), ST HQ (stereo high quality sound recording), ST SP (stereo standard recording), HQ (high quality sound recording), SP (standard recording), and LP (long-term recording).


2

Recording Modes

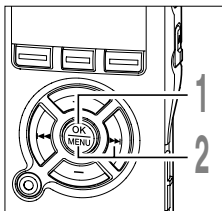


1 While the recorder is stopped, press the MENU button for 1 second or longer.

[Rec Mode] will be displayed on the screen.
(P97, 99)

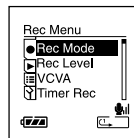


2 Press the OK or >>> button.

The [Rec Mode] setup process begins.

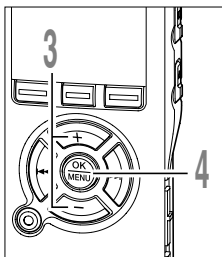


3 Press the + or - button to choose from [PCM], [ST XQ], [ST HQ], [ST SP], [HQ], [SP] and [LP].

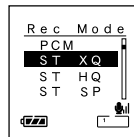


4 Press the OK button to complete the setup screen.

If the <<< button is pressed, the setting will be canceled and it will return to the menu.

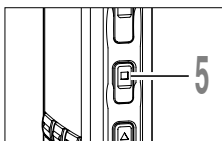

5 Press the STOP button to close the menu.


a Record mode indicator

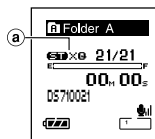

Press the STOP button while the recorder is stopped to check [Remaining Memory] and [Remaining Recording Time] in the selected recording mode.


Set the method for adjusting the recording level (Rec Level) (DS-71 only)

You can set the device to automatically or manually adjust the recording level.

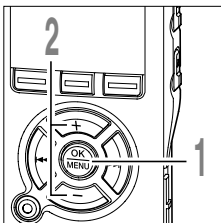


- 1 While the recorder is stopped, press the **MENU** button for 1 second or longer.

The menu opens. (P97, 99)

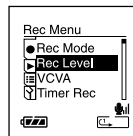

- 2 Press the **+** or **-** button to choose [Rec Level].

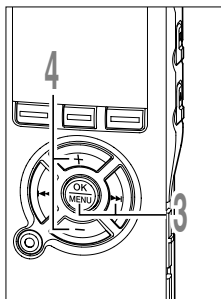



- 3 Press the **OK** or **▶▶** button.

The [Rec Level] setup process begins.

- 4 Press the **+** or **-** button to choose between [Manual] and [Auto].



[Manual]: Recording is performed by manually adjusting the recording level.

[Auto]: Recording is performed by automatically adjusting the recording level. This is useful for when you will be recording right away.

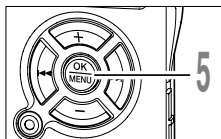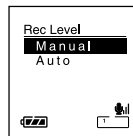


- 5 Press the **OK** button to complete the setup screen.

If the **◀◀** button is pressed, the setting will be canceled and it will return to the menu.

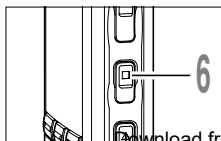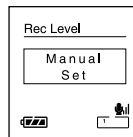


- 6 Press the **STOP** button to close the menu.

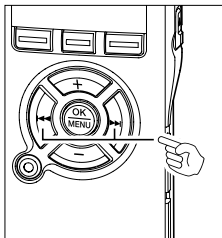

Adjust the recording level


Press the ►► or ◀◀ button while the recorder is recording or paused to adjust the recording level.

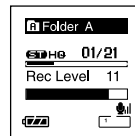

- The recording level will be automatically adjusted when the recording level is set to [Auto]. Set the recording level to [Manual] to use the recording level adjustment feature.
- When the unit is set to [Manual], the limiter function will be disabled. Distorted sound will be recorded during [OVER] is displayed. Adjust the recording level so that [OVER] is not displayed.
- [OVER] may be displayed even when the indicator of the recording level meter does not reach or is over to the right.
- Inputting a very loud sound may produce noise even when the recording level is set to [Auto].
- The level can be adjusted from [01] to [13]. The higher the number, the higher the level and the larger the indicator position on the level meter.

Microphone Sensitivity

Microphone sensitivity is adjustable to meet recording needs.

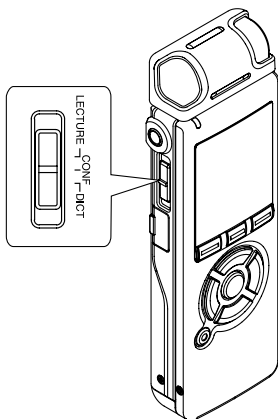

While the recorder is stopped or during recording, slide the Mic Sense switch and select a microphone sensitivity among [LECTURE], [CONF], and [DICT].


Every time the setting is switched, it cycles through the display's microphone sensitivities.

LECTURE (🗣️): Highest recording sensitivity suitable for conferences with large crowds and recording audio at a distance or low volume.

CONF (🗣️): Suitable for recording meetings and seminars with a small number of people.

DICT (🗣️): Lowest recording sensitivity suitable for dictation.

Ⓐ **Microphone sensitivity display**

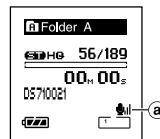

2

Microphone Sensitivity

Notes


- When the speaker's voice is to be recorded clearly, set it to [DICT] (dictation) mode. If breath directly hits the microphone it will be noisy, so keep the microphone a little lower than the speaker's mouth (5 to 10cm/2 to 4 inches) while recording.
- If background noise is affecting your recording even in [DICT] (dictation) mode, we recommend that you either set the directional microphone (P36) to [Zoom] or [Narrow] or use an ME12 dictation microphone (sold separately, P167).

Zoom Mic (Zoom Mic)

The directional microphone function utilizes DiMAGIC's (DiMAGIC Co., Ltd.) DiMAGIC Virtual Microphone (DVM) technology. DVM is an audio pickup system which allows you to record by focusing on sound from any direction. From expansive stereo recording to high directivity recording, DVM represents the latest in directional control methods that allow you to switch to a single exclusive microphone.


2

Zoom Mic

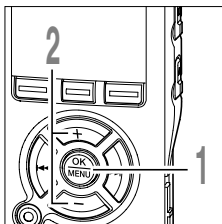


- 1 While the recorder is stopped, press the **MENU** button for 1 second or longer.

The menu opens. (P97, 99)

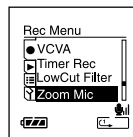

- 2 Press the **+** or **-** button to choose **[Zoom Mic]**.

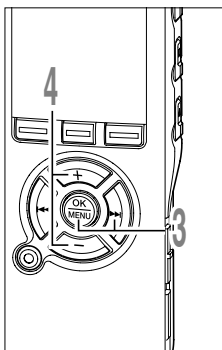

- 3 Press the **OK** or **▶▶** button.

The [Zoom Mic] setup process begins.



- 4 Press **+** or **-** to select the direction of the internal stereo microphone

[Zoom]: Recording with monaural, however you can record high directivity sound.

[Narrow]: Recording by a directivity stereo sound.


[Wide]: Recording by an expansive stereo sound.

[Off]: Disables this function.

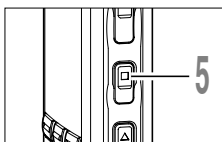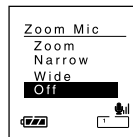

- 5 Press the **OK** button to complete the setup screen.

If the **◀◀** button is pressed, the setting will be canceled and it will return to the menu.

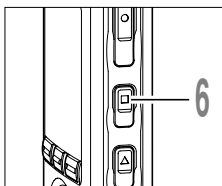


6 Press the **STOP** button to close the menu.

If it returns to the menu screen during recording, press the **◀◀** button to close the menu screen.


If it is set to [Zoom], [Narrow] or [Wide], **🔊** will appear on the display.

Ⓐ Zoom Mic indicator

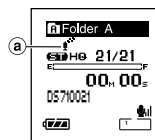

Directional Microphone Feature

Concept diagram

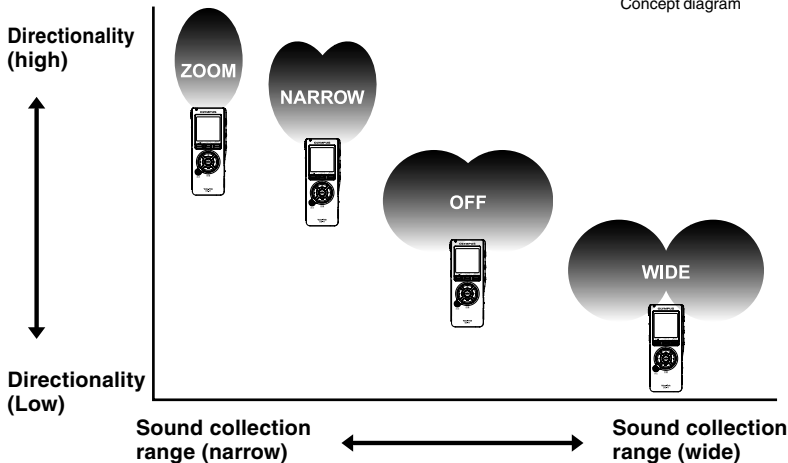

Notes


- When changing the directional microphone's level to [Zoom], [Narrow], or [Wide], the setting will remain active until it is switched to [Off].
- The directional microphone feature is designed to only function when used with the included microphone (ME55S). Please take note that you will not be able to record properly when using a commercially sold microphone.
- The directional microphone feature cannot be used with the internal monaural microphone.

Set the Low Cut Filter (LowCut Filter)

The recorder has a Low Cut Filter function to minimize low-frequency sounds and record voices more clearly. This function can reduce noise from air conditioners, projectors and other similar noises.

2



Set the Low Cut Filter

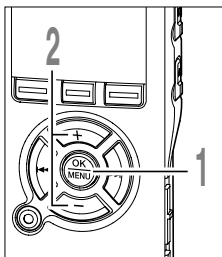

- 1 While the recorder is stopped or during recording, press the **MENU** button for 1 second or longer.

The menu opens. (☞ P97, 99)

- 2 Press the **+** or **-** button to choose [**LowCut Filter**].

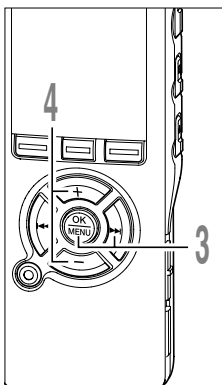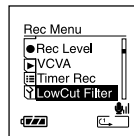

- 3 Press the **OK** or **▶▶I** button.

The [LowCut Filter] setup process begins.


- 4 Press the **+** or **-** button to choose between [**On**] and [**Off**].

[**On**]: Low Cut Filter will be turned on.


[**Off**]: Low Cut Filter will be cancelled.

If it goes to the menu screen during recording, move the cursor and the Low Cut Filter will be turned On/Off according to the movement so you can check the effect with the recording monitor. (☞ P27)

If it is set to [**On**], **✖** will appear on the display.

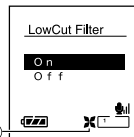


- a **Low Cut Filter indicator**

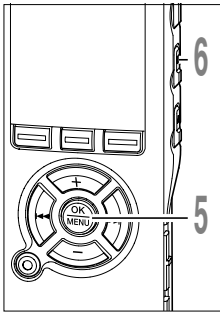

5 Press the **OK** button to complete the setup screen.

If the **◀◀** button is pressed, the setting will be canceled and it will return to the menu.

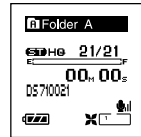

6 Press the **STOP** button to close the menu.

If it returns to the menu screen during recording, press the **◀◀** button to close the menu screen.

Recommended settings by recording condition


Recording condition	Recommended settings				
	Microphone	Recording Modes	Microphone Sensitivity	Low Cut Filter	Zoom Mic
Recording for conferences and other large groups.	Exclusive stereo microphone (ME55S)	The recording level can be adjusted to suit the volume of the original sound	CONF	ON	You can set the directionality of the exclusive stereo microphone depending on the sound source.
Recording for classroom lectures and other spacious venues.			LECTURE		
Meetings and business negotiations with a small number of people			DICT		
Dictation with a lot of background noise			Microphone Sensitivity ^{*1}	OFF	
Music playing, wild birds singing, and railway sounds			There is no particular recommendation. Choose a setting for recording.		
Dictation in a quiet environment					

*1: Set the microphone sensitivity according to the volume being recorded.
Download from www.Somanuals.com. All Manuals Search And Download.

Recording from External Microphone or Other Devices

The external microphone and other devices can be connected and the sound can be recorded. Connect as follows by the device to be used.

To MIC
(microphone) jack

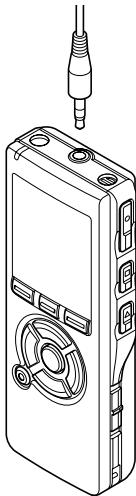

Recording with External Microphone

Connect an external microphone to the MIC jack of the recorder or the exclusive remote control connected to the recorder.


The internal microphone does not operate when an external microphone is connected to the microphone jack of the device.

Applicable External Microphones (optional)

- **Stereo microphone: ME51S**
The built-in large-diameter microphone enables sensitive stereo recording. Stereo recording is available only in PCM (DS-71 only), STXQ, STHQ or STSP modes.
- **Highly sensitive noise-cancellation monaural microphone: ME52**
This microphone is used to record sound at a distance while minimizing surrounding noise.
- **Noise-Cancellation monaural microphone: ME12 (Dictation microphone)**
Used to get clear recordings of your own voice by reducing the effects of ambient noise.
- **Tie clip microphone: ME15 (monaural)**
Small concealing microphone with a tie-clip.
- **Telephone pickup: TP7 (monaural)**
Earphone type microphone can be plugged into your ear while phoning. The voice or conversation over the phone can be clearly recorded.

If the menu's [Ext. Input] (P85) is set to [Auto], a connected external microphone will automatically detect whether it is stereo or monaural, and record according to the proper recording mode.

To MIC
(microphone) jack

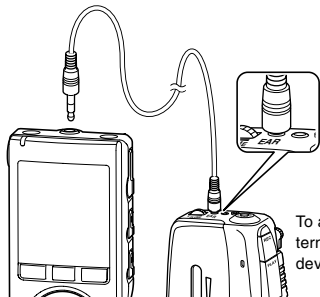

To audio output
terminal of other
devices

Recording the Sound of Other Devices with This Recorder

The sound can be recorded when connecting to the audio output terminal (earphone jack) of the other device, and the microphone jack of the recorder with the connecting cord (optional KA333) (P167) for dubbing.

To audio input
terminal of
other devices



To EAR
(earphone) jack

Recording the Sound of This Recorder with Other Devices

The sound of this recorder can be recorded to other devices when connected to the audio input terminal (microphone jack) of other devices and the earphone jack of this recorder, with the connecting cord (optional KA333) for dubbing.

Notes

- Use the connecting cord sold separately for dubbing (KA333) to connect the recorder with other devices.
- The detailed input levels cannot be adjusted with this recorder. When you connect the recorder to an external device, execute a test recording and adjust the output level of the external device.
- A microphone with plug-in power, which receives the power supply from this recorder, can be used.
- The directional microphone feature (P36) is designed to only function when used with the included microphone (ME55S). Please take note that you will not be able to record properly when using a commercially sold microphone.




Download from www.Somanuals.com. All Manuals Search And Download.

Timer Recording (Timer Rec)

Timer recording is the function to execute a recording at a set time. You can program up to three desired settings (Preset 1-3) ([On/Off], [Day], [Time], [Rec Mode], [Folder], and [Mic Sense]).

2

Timer Recording

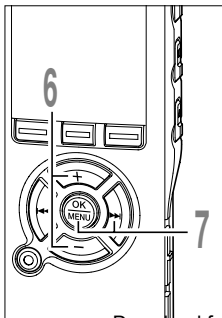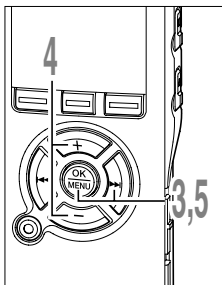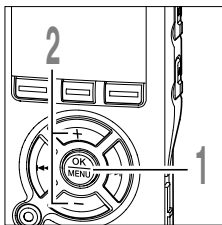

- 1 While the recorder is stopped, press the **MENU** button for 1 second or longer.**

The menu opens. (P97, 99)

- 2 Press the **+** or **-** button to choose [Timer Rec].**

- 3 Press the **OK** or **▶▶** button.**

The [Timer Rec] setup process begins.

- 4 Press the **+** or **-** button to select a preset number.**

Press the **DISPLAY** button to show the [Day] and the [Time] set for the preset number the cursor is pointing at.

- 5 Press the **OK** or **▶▶** button.**

 


- 6 Press the **+** or **-** button to select the item to set.**

Select items you want to set from among [On/Off], [Day], [Time], [Rec Mode], [Folder], and [Mic Sense].


Select [Finish] to complete the setting and return to the preset number selection display in Step 4.

- 7 Press the **OK** or **▶▶** button to move to the respective setting.**

For procedures for each setting, please see P43 and P44.

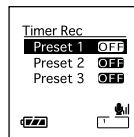
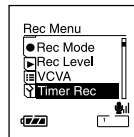


42

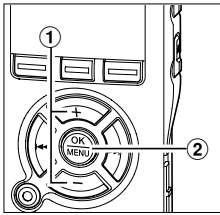



[On/Off] setting

- Press the + or - button to choose between [On] and [Off].
[On]: Setting will be applied.
[Off]: Setting will not be applied.
- Press the OK button to exit [On/Off] selection.

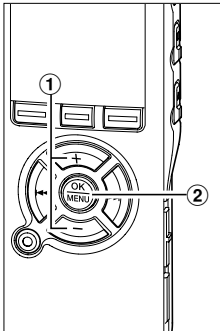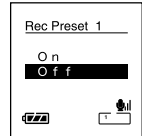


[Day] setting


- Press the + or - button to choose from [Only once], [Everyday], and [Every week].
[Only once]: Records only once at the specified time.
[Everyday]: Records every day at the specified time.
[Every week]: Make a recording at a set time on a specified day of the week.
 Select [Every week] and press the OK or ►► button to move to the selection of [Day]. Press the + or - button to select a day of the week.
- Press the OK button to exit [Day] selection.

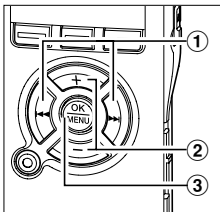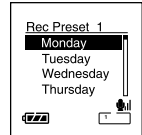

[Time] setting

- Press the ►► or ◀◀ button to select [Hour] and [Minute] to start recording and [Hour] and [Minute] to stop recording.
- Press the + or - button to set.
- Press the OK button to exit [Time] selection.


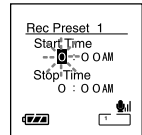


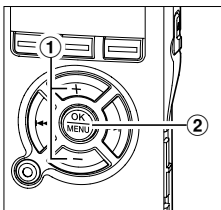

[Rec Mode] setting



Regardless of the regular Rec mode (P32), timer recording will start in a set recording mode.

- 1 Press the + or - button to select a recording mode.
- 2 Press the OK button to exit [Rec Mode] selection.

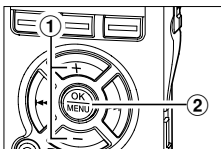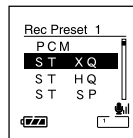

[Folder] setting


- 1 Press the + or - button to select the folder in which the recording will be saved.
- 2 Press the OK button to exit [Folder] selection.

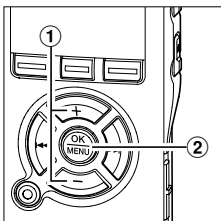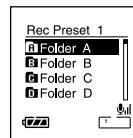


[Mic Sense] setting


Regardless of the recorder's microphone sensitivity setting (P35), timer recording will start at a set microphone sensitivity.


- 1 Press the + or - button to choose from [Lecture], [Conference], and [Dictation].
- 2 Press the OK button to exit [Mic Sense] selection.

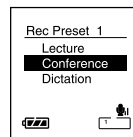

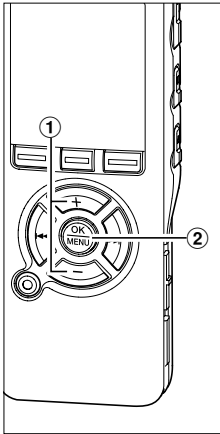



- 8** **Completing the setting.**
- ① Press the + or - button to choose [Finish].
 - ② Press the OK button to complete the setup screen.

 Programmed settings will be applied and the screen will return to the preset number selection menu. If the On/Off setting is set to On, **ON** and  (Timer indicator) will appear on the display.

If you press the  button without pressing the OK button, all settings will be canceled and it will return to the preset number selection menu.

a **Timer indicator**

When setting other preset numbers, repeat Steps 4 through 8.

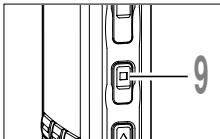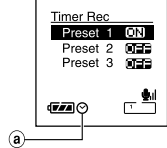


- 9** **Press the STOP button to close the menu.**

Notes

- If the recorder is in use at the preset start time, the timer recording will start directly after stopping the recorder.
- Even if the power is turned off or the recorder is put on Hold, timer recording will start at a specified time.
- If three timer recordings have the same starting times, [Preset 1] has the highest priority and [Preset 3] has the lowest.
- If the starting time for timer recording and alarm playback (P65) is set for the same time, timer recording will have priority.
- If the batteries run out while recording based on the timer setting, the recorder will stop recording. Check the battery power before starting the timer recording.
- The microphone sensitivity switch setting will be canceled during timer recording.
- If the [Time&Date] is not correct, timer recording cannot be set at the specified time, so make sure the [Time&Date] is correct before setting timer recording. If it is not correct, reset [Time&Date]. (P18)


Playing

The recorder can playback WAV(DS-71 only), MP3 and WMA format files. To playback a file recorded with other machines, you need to transfer (copy) it from a computer. (☞ P114)
Files saved in the Audible folder can play back in the Audible mode. For operation methods in the Audible mode, see P159.

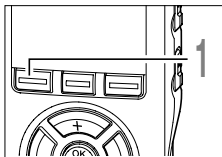


1 Press the **FOLDER** button to choose a folder.

Every time the FOLDER button is pressed, it cycles through folders and the List display will appear. (☞ P20)

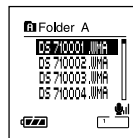

List display

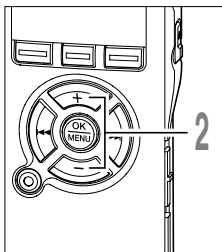


2 Press the **+** or **-** button to choose the file that you want to play.


If the ►► button is pressed, the File display will open.

In the File display, press the ►► or ◀◀ button to select a file.

If you want to return from the File display to the List display, or go back from the List display to a higher-level List display, press the LIST button.

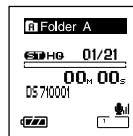

File display

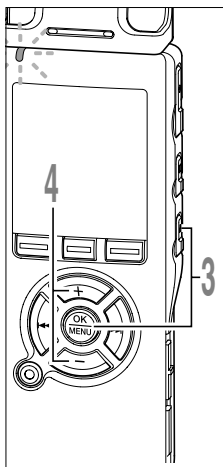


3 Press the **PLAY** or **OK** button to start playback.

The record/play indicator light glows green. For files created using machines other than this recorder, the file format will appear on the display.

MP3MP3 files

WMAWMA files



- a) Play position bar indicator
- b) Current playback time
- c) File name
- d) File format indicator

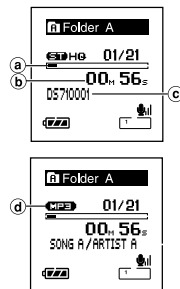

4 Press the **+** or **-** button to select the proper sound volume.

The display shows the volume level. You can choose between 0 and 30.

- e) Volume level meter

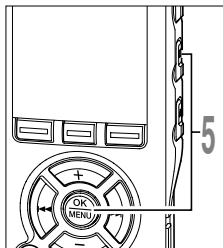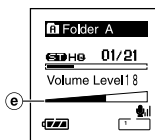

5 Press the **STOP** or **OK** button at any point you want to stop the playback.


Stop a file play back at any point.

Press the PLAY or OK button to start playing back from where it was stopped.

You can change the display patterns. (P88)
The displays indicated in this manual are default.

Notes

- Playable file bitrates are 5-256kbps in WMA format, and 8-256kbps in MP3 format.
- Variable bitrate MP3 files (in which conversion bitrates can vary) may not play properly.
- For WAV files, this recorder can only play back those in the linear PCM format. WAV files other than these cannot be played back. (DS-71 only)
- It is possible to playback the WMA files which are created by the Olympus Digital Voice Recorder.

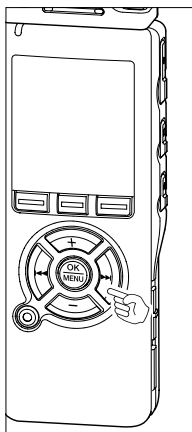


Forwarding

Press and hold the ►► button while the recorder is stopped.


➔ If you release the button, it will stop. Press the PLAY or OK button to start playing back from where it was stopped.

 Ⓐ File length




Press and hold the ►► button while playing a file.

 ➔ When you release the ►► button the recorder will resume normal playback.



- If there is an index mark or temp mark (Ⓢ P73) in the middle of the file, the recorder will stop at that location.
- The recorder stops when it reaches the end of the file. Continue pressing the ►► button to proceed with the cue from the beginning of the next file.

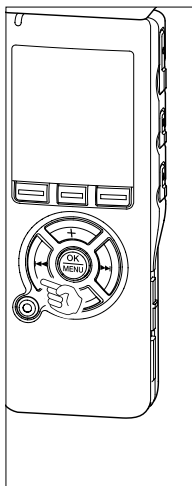


Rewinding

Press and hold the ◀◀ button while the recorder is stopped.


➔ If you release the button, it will stop. Press the PLAY or OK button to start playing back from where it was stopped.

Ⓐ File length

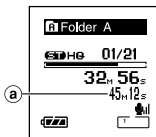

Press and hold the ◀◀ button while playing a file.

 ➔ When you release the ◀◀ button the recorder will resume normal playback.



- If there is an index mark or temp mark (Ⓢ P73) in the middle of the file, the recorder will stop at that location.
- The recorder stops when it reaches the beginning of the file. Continue pressing the ◀◀ button to proceed with the review from the end of the previous file.
- If the ◀◀ button is kept pressed while the recorder is stopped at the start of the top file, the recorder will fast rewind starting from the end of the last file.

Locating the Beginning of the File



Press the ►► button during playback, slow playback, or fast playback.

- ➔ The next file is cued and playback starts at the previously set speed.



Press the ◀◀ button during playback, slow playback, or fast playback.


- ➔ The file being played is cued and playback starts at the previously set speed.



Press the ◀◀ button 2 times during playback, slow playback or fast playback.

- ➔ The previous file is cued and playback starts at the previously set speed.

- If there is an index mark or temp mark (☞ P73) in the middle of the file, the recorder will stop at that location.
- If the skip space is set at other than file skip (☞ P50), the recorder will F. Skip (forward skip) or R. Skip (reverse skip) for a set time before playback.

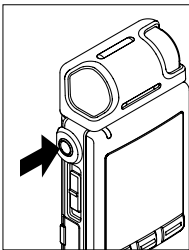

Playback Through Earphone

An earphone can be connected to the EAR jack of the recorder for listening.

- ➔ When the earphone is used, the recorder speaker will be switched-off.

Notes


- To avoid irritation to the ear, insert the earphone after turning down the volume level.
- When you listen with the earphone during playback, do not raise the volume too much. It may cause hearing impairment and decrease in hearing ability.

Set Skip Space (Skip Space)

This function enables you to skip (forward) or reverse skip (rewind) a file being played for a set period. This function is convenient for quickly skipping to another playback position or repeatedly playing back short phrases.

3



Set Skip Space

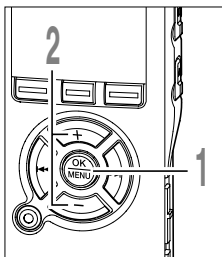

- 1 While the recorder is stopped or during playback, press the **MENU** button for 1 second or longer.

The menu opens. (P97, 99)

- 2 Press the **+** or **-** button to choose [Skip Space].

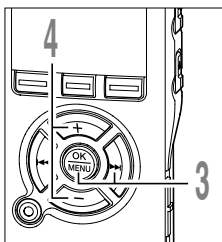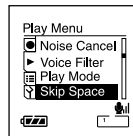



- 3 Press the **OK** or **▶▶** button.

The [Skip Space] setup process begins.

- 4 Press the **+** or **-** button to choose between [F. Skip] and [R. Skip].

[F. Skip] (forward skip): The recorder forwards a set space and starts playing back.


[R. Skip] (reverse skip): The recorder rewinds a set space and starts playing back.

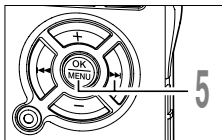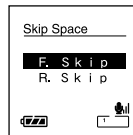

- 5 Press the **OK** or **▶▶** button.

Start setting the space.



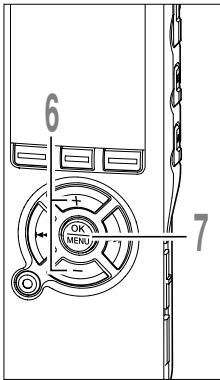



6 Press the **+** or **-** button to select space.

[F. Skip]: File Skip/10sec. Skip/30sec. Skip/1min. Skip/5min. Skip/10min. Skip

[R. Skip]: File Skip/1sec. Skip/2sec. Skip/3sec. Skip/4sec. Skip/5sec. Skip/10sec. Skip/30sec. Skip/1min. Skip/5min. Skip/10min. Skip

7 Press the **OK** button to complete the setup screen.

If the **◀◀** button is pressed, the setting will be canceled and it will return to the menu. Press the **OK** button 1 second or longer to go back to the menu screen in Step 1.

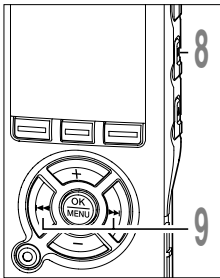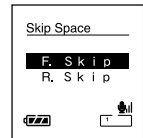

8 Press the **STOP** button to close the menu.

If the recorder goes to the menu screen during playback, press the **◀◀** button to close the menu screen.

9 Press the **▶▶** or **◀◀** button while the file is being replayed.

The recorder will skip (forward) or reverse skip (rewind) a set space and start playing back.

Note

- If there is an index mark/temp mark or a cue closer than the skip space, the recorder will forward skip/reverse skip to that position.


Changing the Playback Speed (Play Speed)

The playback speed of the file can be changed between 0.5 and 2.0 times speed in increments of 0.125. Change the speed according to need such as listening to meeting content at a fast speed or reviewing spots that you could not catch in a language lesson at a slow speed. The tone will be automatically adjusted digitally without changing the voice so it sounds natural.

Change playback speed

3

Changing the Playback Speed

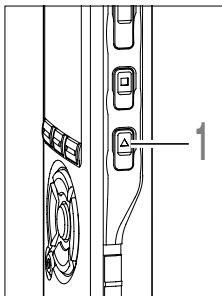


1 Press the **PLAY** button during playback.

Every time the PLAY button is pressed, the playback speed will switch.

Regular Play: Playback at normal speed.

S. Play (slow playback): Playback speed slows down, and **S** will turn on (default at 0.75 times as fast).


F. Play (fast playback): Playback speed becomes faster, and **F** will turn on (default at 1.5 times as fast).

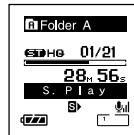

Even if playback is stopped, the changed playback speed will be retained. The next playback will be at that speed.


Change playback speed setting

You can change the playback speed setting for S. Play and F. Play.

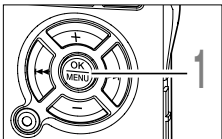


1 While the recorder is stopped or during playback, press the **MENU** button for 1 second or longer.


The menu opens. (P97, 99)

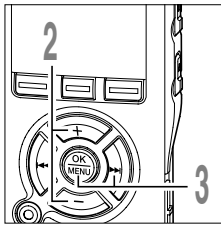

2 Press the **+** or **-** button to choose **[Play Speed]**.

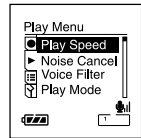


3 Press the **OK** or **▶▶▶** button.
The **[Play Speed]** setup process begins.

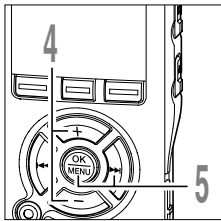

4 Press the **+** or **-** button to choose between **[S. Play]** and **[F. Play]**.



5 Press the **OK** or **▶▶▶** button.
Start setting each of **[S. Play]** and **[F. Play]**.

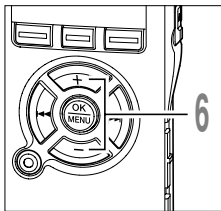


6 Press the **+** or **-** button to set the playback speed.

S. Play: x0.5, x0.625, x0.75, x0.875


F. Play: x1.125, x1.25, x1.375, x1.5, x2.0


If the recorder goes to the menu screen during playback, move the cursor to change the playback speed accordingly.

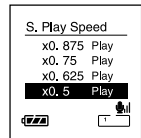

7 Press the **OK** button to complete the setup screen.

If the **◀◀** button is pressed, the setting will be canceled and it will return to the menu. Press the **OK** button 1 second or longer to go back to the menu screen in Step 1.

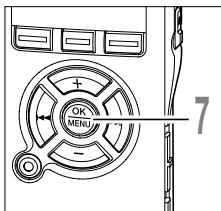

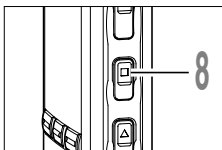

8 Press the **STOP** button to close the menu.

If the recorder goes to the menu screen during playback, press the **I◀** button to close the menu screen.

As in Regular Play mode, you can stop playback, cue a file, or insert an index mark (Ⓜ P73) in F. Play and S. Play modes as well.

3

Restrictions on double speed playback


Double speed fast playback may not be available depending on the sampling frequency and the bit rate of the file to be played back. In such a case, the device plays back in up to x1.5 speed.

Notes

- S. Play and F. Play are available while the Voice Filter (Ⓜ P61) is set.
- S. Play and F. Play are not available while Noise Cancel (Ⓜ P59) is set.
- S. Play and F. Play are not available while the EUPHONY feature (Ⓜ P63) is set.
- During fast playback/slow playback, even files recorded in stereo (PCM, ST XQ, ST HQ, ST SP) will be played back in monaural.


Select Play Mode (Play Mode)

There are six play modes. You can choose whether to play by file or folder, or all files stored in the recorder.


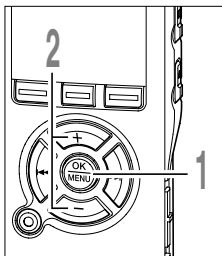


- 1 While the recorder is stopped or during playback, press the **MENU** button for 1 second or longer.**

The menu opens. (P97, 99)

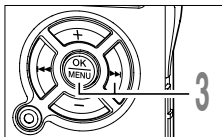


- 2 Press the **+** or **-** button to choose [Play Mode].**

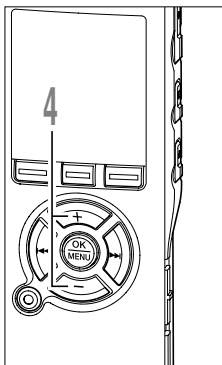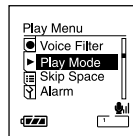

- 3 Press the **OK** or **▶▶▶** button.**

The [Play Mode] setup process begins.

- a Current play mode**

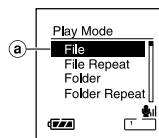

- 4 Press the **+** or **-** button to select a desired play mode.**

[File] (T): Stop after playing back the current file.


[File Repeat] (T): Play the current file repeatedly.


[Folder] (T): Play files continuously in the current folder until the last file and stop.

[Folder Repeat] (T): Play all files in the current folder continuously.

[All] (ALL): Play all files in the recorder continuously and stop.

[All Repeat] (ALL): Play all files in the recorder continuously and repeatedly.

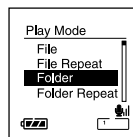

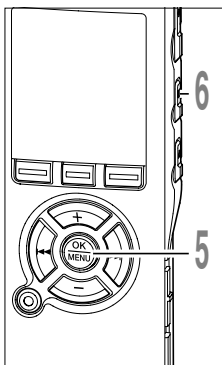

5 Press the **OK** button to complete the setup screen.


If the **◀◀** button is pressed, the setting will be canceled and it will return to the menu.

6 Press the **STOP** button to close the menu.

If the recorder goes to the menu screen during playback, press the **◀◀** button to close the menu screen.

An icon will appear on the display according to the setting.

b Selected play mode

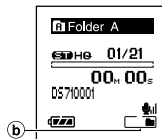


Notes



- In [File] mode, when the recorder comes to the end of the last file in the folder, [End] flashes for two seconds on the display and the recorder stops at the start of the last file.
- In [Folder] mode, when the recorder comes to the end of the last file in the folder, [End] flashes for two seconds on the display and the recorder stops at the start of the first file in the folder.
- In [All] mode, after playing the last file in the folder, the recorder will start playing from the first file in the next folder. When it comes to the end of the last file in the recorder, [End] flashes for two seconds on the display and the recorder stops at the start of the first file in the recorder.

How to begin segment repeat playback

This function enables repeated playback of part of the file being played.

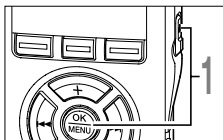



- 1 Choose a file that contains a segment you want to play back repeatedly, and press the **PLAY** or **OK** button.**
File playback begins.

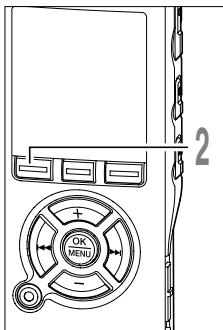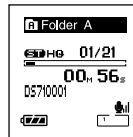

- 2 Press the **A-B-C** button at the point you want to start segment repeat playback.**


[↶End?] will flash on the display.

Even while [↶End?] is flashing, changing the playback speed (P52), fast forward and rewind (P48) can be executed the same as during normal playback, and it can be advanced quickly to the end position. When it reaches to the end of the file while [↶End?] is flashing, the point will become the end position, and repeat playback will start.

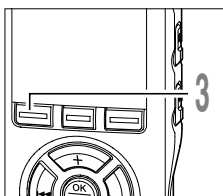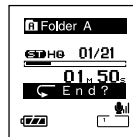

- 3 Press the **A-B-C** button again at the position where you want to end segment repeat playback.**

The [↶Play] message appears, and repeat playback will start. The recorder repeatedly plays back the segment until the segment repeat playback is canceled.

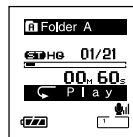

As in regular play mode, playback speed (P52) can be changed during segment repeat playback as well. If an index mark and temp mark (P73) are inserted or eliminated during segment repeat playback, segment repeat playback will be canceled and it will return to regular play mode.

Cancel the Segment Repeat Playback Function



Press the **OK** button.

- Pressing the OK button will release segment repeat playback and stop playback.




Press the **STOP** button.

- Pressing the STOP button will release segment repeat playback and stop playback.



Press the **▶▶|** button.

- Pressing the ▶▶| button will release segment repeat playback and fast forward and cue to the beginning of the next file.

 

Press the **|◀◀** button.

- Pressing the |◀◀ button will release segment repeat playback and rewind and reverse to the beginning of the current file.




Press the **A-B↻** button.

- The segment repeat playback is released and playback continues without repeating.

Noise Cancel Function (Noise Cancel)


If recorded audio is difficult to understand because of noisy surroundings, adjust the Noise Cancel setting level. Noise will be reduced in the file when it's played back for better sound quality.

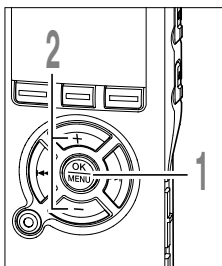

- 1 While the recorder is stopped or during playback, press the **MENU** button for 1 second or longer.**

The menu opens. (P97, 99)



- 2 Press the **+** or **-** button to choose [Noise Cancel].**

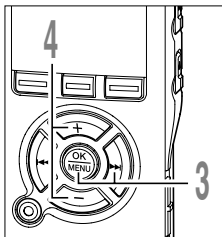

- 3 Press the **OK** or **▶▶** button.**
The [Noise Cancel] setup process begins.

- 4 Press the **+** or **-** button to choose between [High], [Low] and [Off].**

The levels switch in the following rotation, [High] [Low] [Off]. If the recorder goes to the menu screen during playback, move the cursor to change playback sound accordingly.

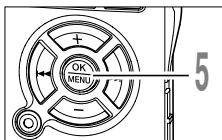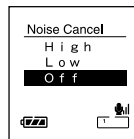


- 5 Press the **OK** button to complete the setup screen.**

If the **◀◀** button is pressed, the setting will

3

Noise Cancel Function

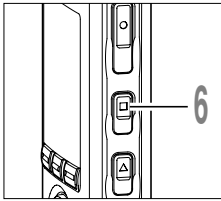


be canceled and it will return to the menu.

6 Press the **STOP** button to close the menu.

If the recorder goes to the menu screen during playback, press the **◀◀** button to close the menu screen.

The **NC** will appear on the display.

(a) **Noise Cancel indicator**

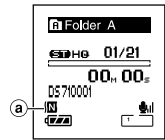


Notes

- If you set Noise Cancel to [Low] or [High], the setting remains valid until it's set to [Off].
- Noise cancel cannot be used during fast playback/slow playback. (☞ P52)
- Noise Cancel is not available while the Voice Filter (☞ P61) is set.
- Noise Cancel is not available while the EUPHONY feature (☞ P63) is set.

Set the Voice Filter (Voice Filter)



The recorder has a Voice Filter Function to cut low and high frequency tones during normal, fast, or slow playback, and enable clear audio playback.

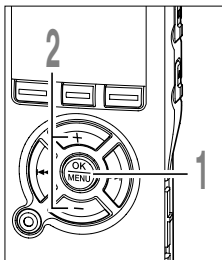

- 1 While the recorder is stopped or during playback, press the **MENU** button for 1 second or longer.**

The menu opens. (P97, 99)

- 2 Press the **+** or **-** button to choose [Voice Filter].**

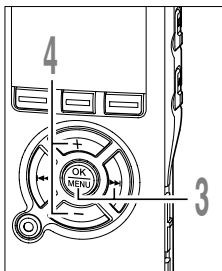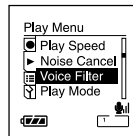

- 3 Press the **OK** or **▶▶|** button.**



The [Voice Filter] setup process begins.

- 4 Press the **+** or **-** button to choose between [On] and [Off].**

[On]: Voice Filter will be turned on.


[Off]: Voice Filter will be canceled.

If the recorder goes to the menu screen during playback, move the cursor to change playback sound accordingly.

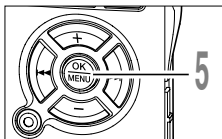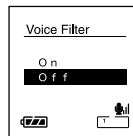

- 5 Press the **OK** button to complete the setup screen.**

If the **◀◀|** button is pressed, the setting will be canceled and it will return to the menu.

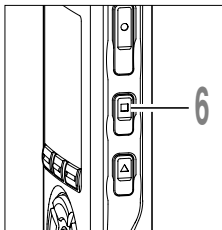


6 Press the **STOP** button to close the menu.

If the recorder goes to the menu screen during playback, press the **◀◀** button to close the menu screen.

If it is set to [On], **VF** will appear on the display.

a Voice Filter indicator

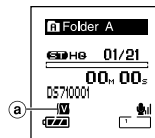


Notes

- Voice Filter is not available while Noise Cancel is set. (☞ P59)
- The Voice Filter feature is not available while the EUPHONY feature is set. (☞ P63)

Increase the realistic sensation (EUPHONY)


This recorder is equipped with [EUPHONY MOBILE], the latest in surround sound systems which combines bandwidth correction, expansion technology, and virtual acoustical source processing technology. In addition to its natural, expansive feel, the recorder is equipped with the exceptional feature wherein listeners are less prone to developing an compressed or closed-in feel, or to growing tired over extended listening. On top of this, listeners are less prone to developing an oppressed or closed-in feel, or to growing tired over extended listening. Level adjustments of the [EUPHONY] setting can be set to four stages according to preference.

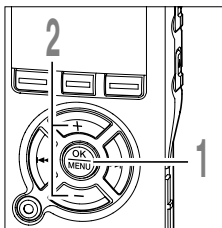

- 1 While the recorder is stopped or during playback, press the MENU button for 1 second or longer.**

The menu opens. (P97, 99)

- 2 Press the + or - button to choose [EUPHONY].**

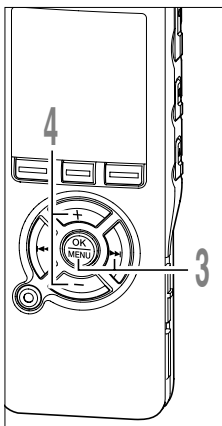

- 3 Press the OK or >>> button.**
The [EUPHONY] setup process begins.

- 4 Press the + or - button to choose between [Power], [Wide], [Natural] and [Off].**



[Power]: This mode focuses more on lower sound registers.

[Wide]: This mode has an even more expansive feel.

[Natural]: This mode achieves natural bandwidth correction and acoustical field expansion.


[Off]: Disables this function.

If the recorder goes to the menu screen during playback, move the cursor to change playback sound accordingly.

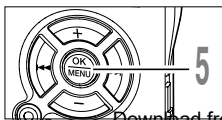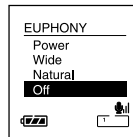


- 5 Press the OK button to complete the setup screen.**

If the <<< button is pressed, the setting will be canceled and it will return to the menu.

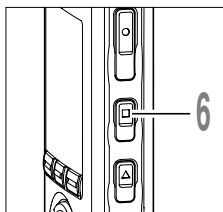


6 Press the **STOP** button to close the menu.

If the recorder goes to the menu screen during playback, press the ◀◀ button to close the menu screen.

If it is set to [On],  will appear on the display.

 **EUPHONY** indicator

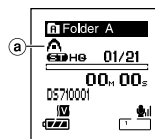


Notes

- The EUPHONY feature is not available while using fast playback/slow playback (☞ P52).
- The EUPHONY feature is not available while Noise Cancel (☞ P59) is set.
- The EUPHONY feature is not available while the Voice Filter feature (☞ P61) is set.

Alarm Playback Function (Alarm)



The alarm playback function can be set to play a selected file at a pre-set time. You can program up to three desired settings (Preset 1-3) ([On/Off], [Day], [Start Time], [Volume], [Alarm] and [Playback File]).

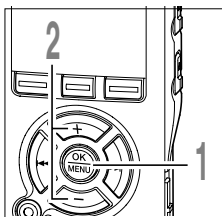

- 1 While the recorder is stopped, press the MENU button for 1 second or longer.**

The menu opens. (P97, 99)

- 2 Press the + or - button to choose [Alarm].**

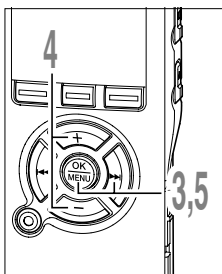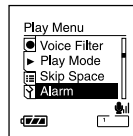



- 3 Press the OK or ►► button.**

The [Alarm] setup process begins.

- 4 Press the + or - button to select a preset number.**

Press the DISPLAY button to show the [Day] and the [Start Time] set for the preset number the cursor is pointing at.

- 5 Press the OK or ►► button.**

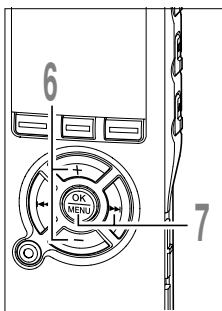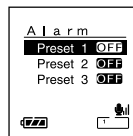



- 6 Press the + or - button to select the item to set.**

Select items you want to set from among [On/Off] [Day] [Start Time] [Volume] [Alarm] [Playback File]. Select [Finish] to complete the setting and return to the preset number selection display in Step 4.

- 7 Press the OK or ►► button to move to the respective setting.**



For procedures for each setting, please see P66 and P67.

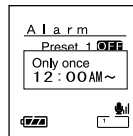

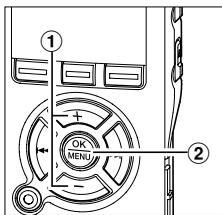



[On/Off] setting

- Press the + or – button to choose between [On] and [Off].
[On]: Setting will be applied.
[Off]: Setting will not be applied.
- Press the OK button to exit [On/Off] selection.

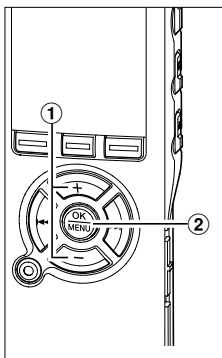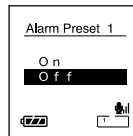


[Day] setting


- Press the + or – button to choose from [Only once], [Everyday], and [Every week].
[Only once]: Alarm Playback will be performed only once at the specified time.
[Everyday]: Alarm Playback will be performed at the specified time every day.
[Every week]: Make a Alarm Playback at a set time on a specified day of the week.
 Select [Every week] and press the OK or ►►► button to move to the selection of [Day of the Week]. Press the + or – button to select a day of the week.
- Press the OK button to exit [Day] selection.

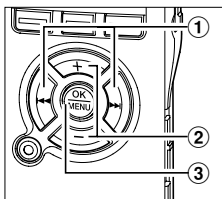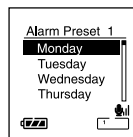

[Start Time] setting



- Press the ►►► or ◀◀◀ button to select [Hour] and [Minute] to start recording and [Hour] and [Minute] to start Alarm Playback.
- Press the + or – button to set.
- Press the OK button to exit [Start Time] selection.

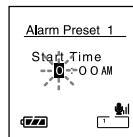

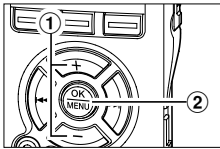



[Volume] setting

- Press the + or - button to adjust the volume.
- Press the OK button to exit [Volume] selection. Press the PLAY button to check the volume.

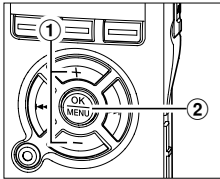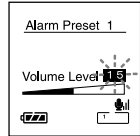

[Alarm] setting

- Press the + or - button to choose an alarm sound from among [Alarm1], [Alarm2] and [Alarm3].
- Press the OK button to exit [Alarm] selection. Press the PLAY button to check the alarm sound.

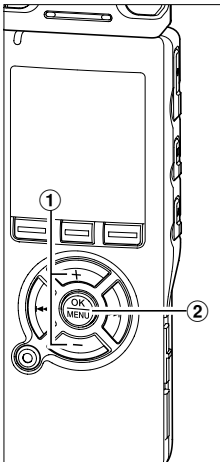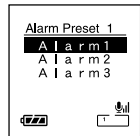

[Playback File] setting



- Press the + or - button to choose from [No File Play], [File Select].


[No File Play]: Sounds alarm only.

[File Select]: Plays back a selected file after the alarm. If [File Select] is chosen and the OK or ►►► button is pressed, the screen goes to the file setting for Alarm Playback.

Use the + or - button to select a file, and press the OK or ►►► button to go to file selection. Similarly, use the + or - button to select a file.

- Press the OK button to exit [Playback File] selection.

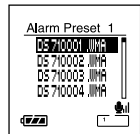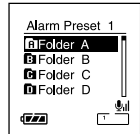

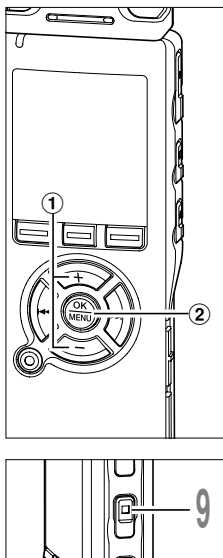

8 Completing the setting.


- 1 Press the + or - button to choose [Finish].
- 2 Press the OK button to complete the setup screen.

Programmed settings will be applied and the screen will return to the preset number selection menu. If the On/Off setting is set to On, **[ON]** and **(●)** (Alarm indicator) will appear on the display.

If you press the **◀◀** button without pressing the OK button, all settings will be canceled and it will return to the preset number selection menu.

a Alarm Playback indicator

When setting other preset numbers, repeat Steps 4 through 8.

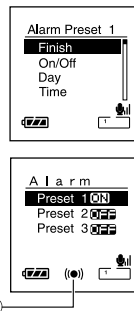


9 Press the STOP button to close the menu.

Notes

- If [Everyday] is selected, the alarm will sound at the scheduled time every day unless alarm playback is canceled.
- The alarm will sound for five minutes and then stop. Even if a file is selected for Alarm Playback, it will not be automatically played when the alarm sounds.
- If three alarm playback have the same starting times, [Preset 1] has the highest priority and [Preset 3] has the lowest.
- If the recorder is in use or if operations are being performed at the scheduled time, the Alarm Playback function will not be available.
- The alarm will sound at the scheduled time even if the power is turned off or the recorder is set to Hold mode. The recorder begins to play the selected file when you press any button, and stops playing when you press the STOP button.
- If the selected file is erased, file playback will not be performed and only the alarm will sound.
- If the starting times for timer recording and alarm playback are set for the same time, timer recording will have priority.
- If the recorder is formatted (P81), alarm data will also be erased, so you won't be able to set an alarm. If the alarm data has been deleted, connect the recorder to a computer and copy the alarm sound data to the recorder.


Set the Intro Play (Intro Play)

You can listen to the first few seconds of a file by touching the cursor to a file within a folder. This feature is convenient when looking for files.

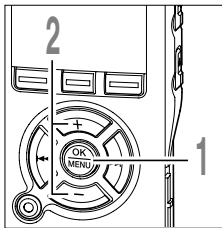

- 1 While the recorder is stopped, press the **MENU** button for 1 second or longer.**

The menu opens. (Ⓢ P97, 99)

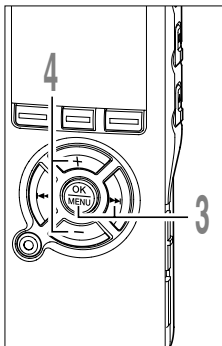

- 2 Press the **+** or **-** button to choose [Intro Play].**

- 3 Press the **OK** or **▶▶** button.**

The [Intro Play] setup process begins.

 
- 4 Press the **+** or **-** button to choose between [3sec], [5sec], [10sec] and [Off].**

[3sec]: The first 3 seconds of a file will be played.

[5sec]: The first 5 seconds of a file will be played.


[10sec]: The first 10 seconds of a file will be played.

[Off]: Disables this function.





- 5 Press the **OK** button to complete the setup screen.**

 If the **◀◀** button is pressed, the setting will be canceled and it will return to the menu.




- 6 Press the **STOP** button to close the menu.**

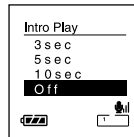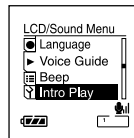

Erasing

Erasing One File at a Time

A selected file can be erased from a folder.

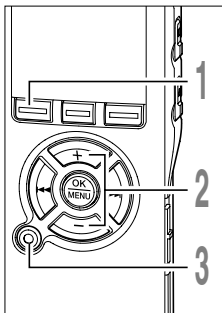

- 1 Press the FOLDER button to choose a folder.**

Every time the FOLDERS and the List display will appear. (P20)

- 2 Press the + or - button to choose the file you want to erase.**





- 3 Press the ERASE button.**

The [Cancel] indicator flashes.

- 4 Press the + button to choose [Erase].**

- 5 Press the OK button.**

The display changes to [File Erase!] and erasing will start.

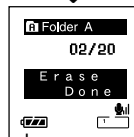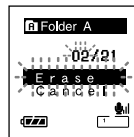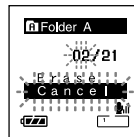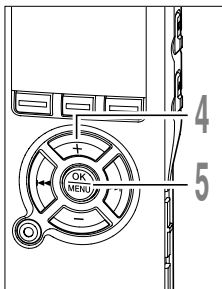


[Erase Done] is displayed when the file is erased. File numbers will be reassigned automatically.

Erase All Files from a Folder



All files in a folder can be erased simultaneously.

The locked files (P75) and the files set to read-only on the PC will not be erased.

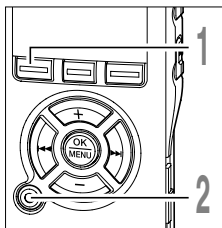



1 Press the **FOLDER** button to select the folder in which you want to erase all files.

2 Press the **ERASE** button twice.
The [Cancel] indicator flashes.

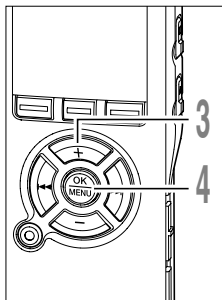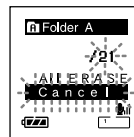

3 Press the **+** button to choose [All Erase].

4 Press the **OK** button.
The display changes to [All Erase!] and erasing will start.

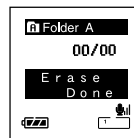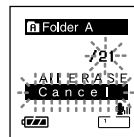

[Erase Done] is displayed when the files are erased. The locked files and read-only files are reassigned the file numbers in ascending order, starting from [1].


Notes

- An erased file cannot be restored.
- The locked files and the files that are set to read-only will not be erased. (☞ P75)
- If an action is not selected within eight seconds on the [Cancel], [Erase], or [All Erase] screens, the recorder will return to stop status.
- It may take over 10 seconds to complete erasing. Never turn the power off or remove batteries during this time because data may be corrupted.

Index Marks and Temp Marks


If index marks and temp marks are placed, you can quickly find a location you want to listen to in fast forward and fast rewind (⏮ P48) and when cuing a file (⏪ P49). Index marks cannot be placed on files created on machines other than Olympus IC recorders, but temp marks can be placed instead to temporarily remember desired locations.

Setting an Index Mark or a Temp Mark

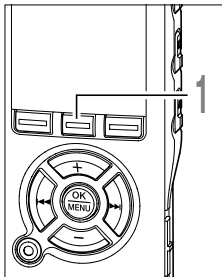

- 1 Press the **INDEX** button during recording or playing to set an index mark or temp mark.

A number appears on the display and an index mark or temp mark will be placed. Even after an index or temp mark is placed, recording or playback will continue so you can place index or temp marks in other locations in a similar manner.

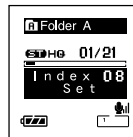


4

Index Marks and Temp Marks


Clearing an Index Mark or a Temp Mark


Follow the procedures below to erase index or temp marks.

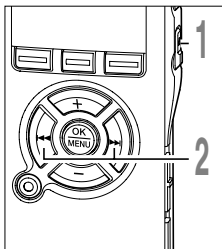

- 1 Locate the index or temp mark you want to clear.


- 2 Press the **▶▶** or **◀◀** button to select an index or temp mark to erase.

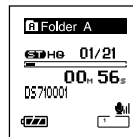

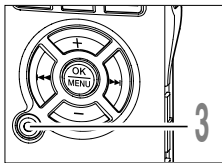

3 Press the **ERASE** button while the **index or temp number** appears for **approximately 2 seconds** on the **display**.

The index or temp mark is erased.

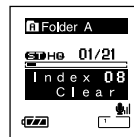

Index or temp numbers after the erased index or temp number will automatically move up.

Temp marks are temporary markings, so if you move to another file, switch to the list screen, or connect the recorder to a computer, they will be automatically erased.

4

Index Marks and Temp Marks


Notes

- Up to 16 index and temp marks can be set in a file. If you try to place more than 16 index or temp marks, the [Index Full] message will appear for index marks, and [Temp Full] for temp marks.
- Index or temp marks cannot be set or erased in a locked file. (☞ P75)


Locking Files (Lock)

Locking a file keeps important data from being accidentally erased.

Locked files are not erased when you choose to erase all files from a folder. (P71)

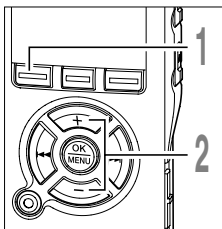


1 Press the **FOLDER** button to choose a folder.

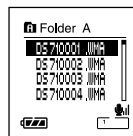

List display



2 Press the **+** or **-** button to choose the file you want to lock.

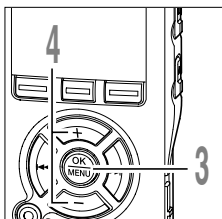

3 Press the hold the **MENU** button for 1 second or longer.

The menu opens. (P97, 99)

4 Press the **+** or **-** button to choose [Lock].

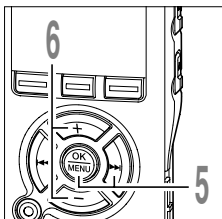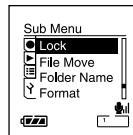


5 Press the **OK** or **>>>** button.


The [Lock] setup process begins.

6 Press the **+** or **-** button to choose between [On] and [Off].

[On]: Locks the file and prevents it from being erased.

[Off]: Unlocks the file and allows it to be erased.

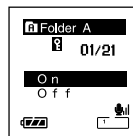


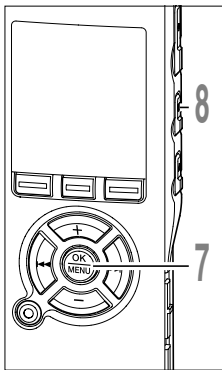


7 Press the **OK** button to complete the setup screen.

8 Press the **STOP** button to close the menu.


a Erase lock indicator

If a file is locked, a lock indicator appears in the file list screen to conveniently distinguish important files from others.

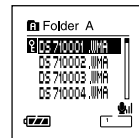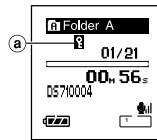

Changing Folder Names (Folder Name)



You can change the folder names of Folder **A** to Folder **E** for audio recording into names preset in the template (such as [Meeting], [To Do], and [Memo]). You can also change folder names registered in the template with DSS Player. (P121)

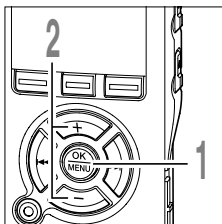

- 1 While the recorder is stopped, press the **MENU** button for 1 second or longer.**

The menu opens (P97, 99).



- 2 Press the **+** or **-** button to choose [Folder Name].**

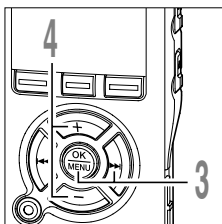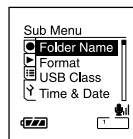

- 3 Press the **OK** or **▶▶|** button.**


The [Folder Name] setup process begins.

- 4 Press the **+** or **-** button to choose a folder for which you want to change the name.**

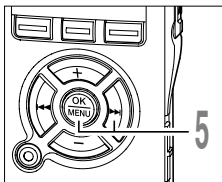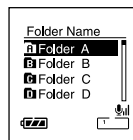


- 5 Press the **OK** or **▶▶|** button.**
- Display folder names registered in the template.



Ⓐ Current folder

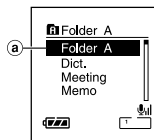

Changing Folder Names (Folder Name)

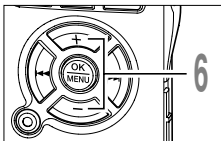


- 6** Press the **+** or **-** button to select the folder name in the template you want to change to.

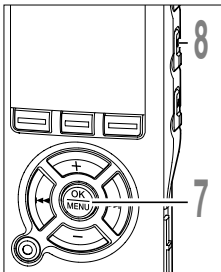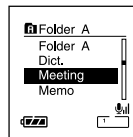

- 7** Press the **OK** button to change the folder name.


If the **◀◀** button is pressed, the screen goes back to Step 4 without changing the folder name.

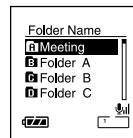



- 8** Press the **STOP** button to close the menu.

Rearranging files (File Move)



You can move a file in a folder to change the order of playback. First select the folder (file) for which you want to change the playback order.

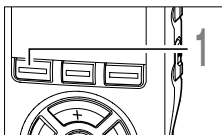



- 1** Press the **FOLDER** button to choose a folder.

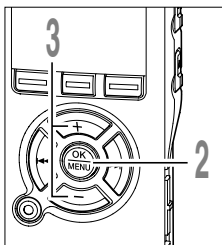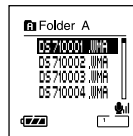


- 2** Press the hold the **MENU** button for **1 second or longer**.
The menu opens. (P97, 99)

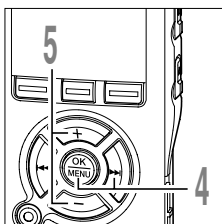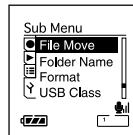


- 3** Press the **+** or **-** button to choose **[File Move]**.
- 4** Press the **OK** or **▶▶I** button.
Show files in the current folder in a list.
- 5** Press the **+** or **-** button to choose the file you want to move it.

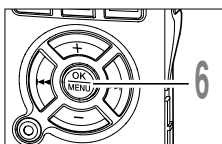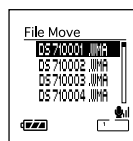


- 6** Press the **OK** button.
The cursor will flash to confirm that the file can be moved.

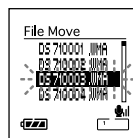

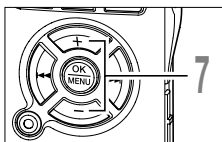

7 Press the **+** or **-** button to select the location to move it to.

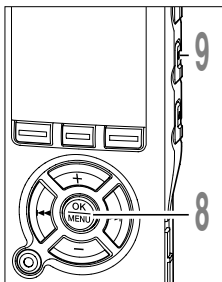


8 Press the **OK** button.

The file will be moved.

If there are more files to move, repeat Steps 5 through 8.

If the OK button is pressed for one second or longer, file order rearrangement will close and the recorder will return to the File Move screen.

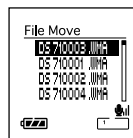


9 Press the **STOP** button to close the menu.

Formatting the Recorder (Format)

If you format the recorder, all files will be removed and all function settings will return to defaults except date and time settings. Transfer any important files to a computer before formatting the recorder.



If the recorder is formatted, data for guidance (☞ P93), alarm playback (☞ P65), and starting/closing tune when the power is turned On/Off (☞ P15) will also be erased and these features will not be available in the future. If you erase data by mistake, connect the recorder to a computer and use DSS Player to copy it to the recorder. (☞ P122)

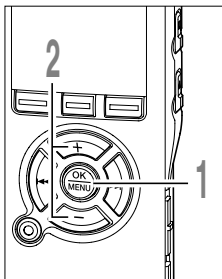

- 1 While the recorder is stopped, press the **MENU** button for 1 second or longer.


The menu opens. (☞ P97, 99)

- 2 Press the **+** or **-** button to choose **[Format]**.

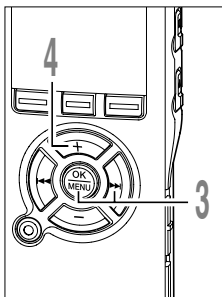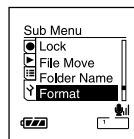



- 3 Press the **OK** or **▶▶** button.

The [Cancel] indicator flashes.


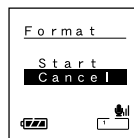


- 4 Press the **+** button to choose **[Start]**.

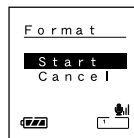


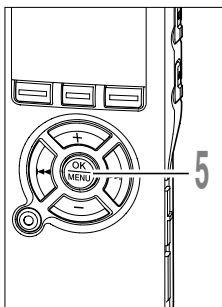



- 5 Press the OK button.**
After the [Data Will Be Cleared] message is on for two seconds, [Cancel] will turn on.

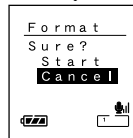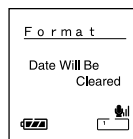

- 6 Press the + button again to choose [Start].**

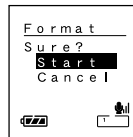

- 7 Press the OK button.**
Formatting begins and an indicator flashes on the display.

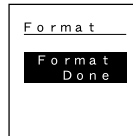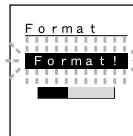


[Format Done] displays when formatting ends.

Notes

- Never turn the power off or remove batteries during formatting because data may be corrupted. It may take over 10 seconds to complete erasing.
- Never format the recorder from a PC.
- After formatting, recorded audio file names may start from 0001.
- Once the recorder is formatted, the music files with DRM may not be transferred to the recorder again.
- When the recorder is formatted, all the saved data, including locked files and read-only files, are erased.

Changing the USB Class (USB Class)



When using this recorder as a USB microphone or USB speaker in the voice recognition software or other applications, it is necessary to set the USB class of this recorder to [Audio Class]. By using the USB microphone function, it enables enroll (= voice learning) operations of the voice recognition software.

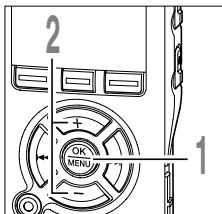

- 1 While the recorder is stopped, press the **MENU** button for 1 second or longer.**

The menu opens. (P97, 99)

- 2 Press the **+** or **-** button to choose [USB Class].**

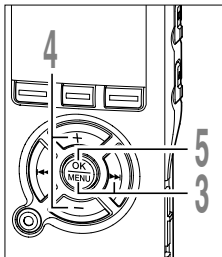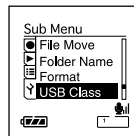



- 3 Press the **OK** or **▶▶** button.**

The [USB Class] setup process begins.

- 4 Press the **+** or **-** button to choose [Audio Class].**


- 5 Press the **OK** button to complete the setup screen.**

If the **◀◀** button is pressed, the setting will be canceled and it will return to the menu.

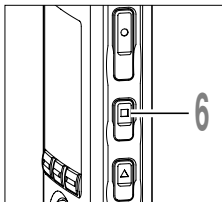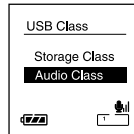

- 6 Press the **STOP** button to close the menu.**

When this recorder is connected to the computer for the first time after being changed to [Remote(Audio)], the driver will be installed automatically to the computer.

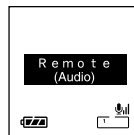

Note


- If you set it to Audio Class, it will not be recognized as a removable disk on a computer.
Download from www.Somanuals.com. All Manuals Search And Download.

Changing Power Save (Power Save)

If the recorder is on and stops for 10 minutes or longer (default), the display shuts off and it goes into power save mode. You can set the time to enter power save from among [5min.], [10min.], [30min.], [1hour], and [Off].

4



Changing Power Save

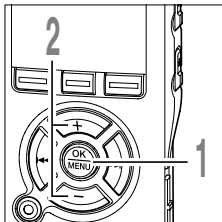

- 1 While the recorder is stopped, press the **MENU** button for 1 second or longer.**

The menu opens. (P97, 99)

- 2 Press the **+** or **-** button to choose **[Power Save]**.**

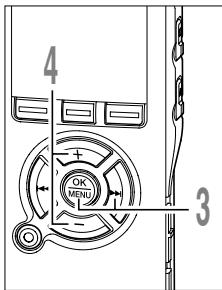
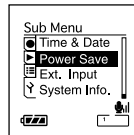


- 3 Press the **OK** or **▶▶** button.**

The [Power Save] setup process begins.

- 4 Press the **+** or **-** button to choose between **[5min.]**, **[10min.]**, **[30min.]**, **[1hour]** and **[Off]**.**

If the power save mode is set to [Off], the recorder will not switch over to the power save mode. Leaving the recorder in such a condition will result in the rapid consumption of batteries.

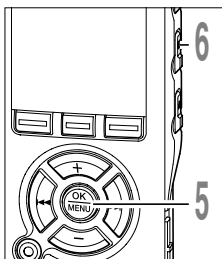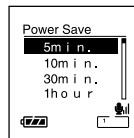

- 5 Press the **OK** button to complete the setup screen.**

If the **◀◀** button is pressed, the setting will be canceled and it will return to the menu.


- 6 Press the **STOP** button to close the menu.**

You can exit power save mode by pressing any button.

Changing External Input Setting (Ext. Input)

This recorder is designed to recognize microphone jack conditions (including if a exclusive stereo microphone or a exclusive remote-control stereo microphone is plugged in) for proper recording according to recording mode.



If another manufacturer's stereo external microphone is used, it may be incorrectly recognized as a monaural microphone. If that is the case, switch the external input setting to [Stereo] for recording.

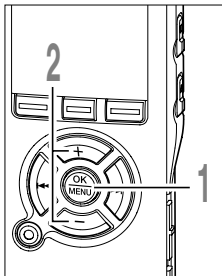

- 1 While the recorder is stopped, press the MENU button for 1 second or longer.**

The menu opens. (P97, 99)

- 2 Press the + or - button to choose [Ext. Input].**

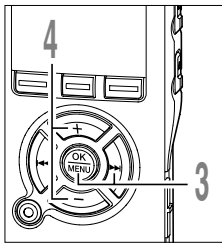
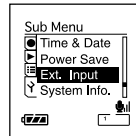


- 3 Press the OK or >>> button.**

The [Ext. Input] setup process begins.

- 4 Press the + or - button to choose between [Auto] and [Stereo].**

If another manufacturer's stereo external microphone is recognized as a monaural microphone and stereo recording becomes unavailable, choose [Stereo].

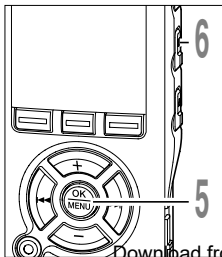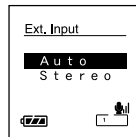

- 5 Press the OK button to complete the setup screen.**

If the <<< button is pressed, the setting will be canceled and it will return to the menu.

- 6 Press the STOP button to close the menu.**

Changing External Input Setting (Ext.Input)

When a stereo recording is made using the monaural microphone or a monaural recording is made using the stereo microphone, the recording will be changed by using the [Ext. Input] setting described below.

Recording data when [Auto] is selected

If something is plugged into the MIC jack or not	Recording Modes (P32)
<ul style="list-style-type: none">• Monaural external microphone	Stereo recording (PCM, ST XQ, ST HQ, ST SP) ➡ The same audio picked up with a monaural microphone will be recorded on both the left channel (Lch) and the right channel (Rch).
<ul style="list-style-type: none">• Stereo external microphone• Remote-control stereo microphone (P24)	Monaural recording (HQ, SP, LP) ➡ Audio picked up with two microphones on the left channel (Lch) and right channel (Rch) will be synthesized to create a monaural recording.

Recording data when [Stereo] is selected


If something is plugged into the MIC jack or not	Recording Modes (P32)
<ul style="list-style-type: none">• Monaural external microphone	Stereo recording (PCM, ST XQ, ST HQ, ST SP) ➡ Audio will be recorded only on the left channel (Lch). The right channel (Rch) will be silent.
<ul style="list-style-type: none">• Stereo external microphone• Remote-control stereo microphone (P24)	Monaural recording (HQ, SP, LP) ➡ Audio picked up only by the left channel (Lch) microphone will be recorded as a monaural recording.

Notes

- Stop the recorder before plugging in or unplugging a microphone.
- Whenever a stereo recording (PCM, ST XQ, ST HQ, ST SP) is made without a microphone inserted into the MIC jack, the sound picked up by the internal microphone will be recorded on the left (Lch) and the right (Rch) channels regardless of the [External Input] setting.



Viewing system information (System Info.)

You can check the recorder's information on the menu screen.


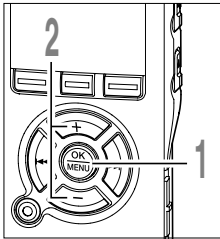


- 1 While the recorder is stopped, press the **MENU** button for 1 second or longer.
The menu opens. (P97, 99)


- 2 Press the **+** or **-** button to choose **[System Info.]**.

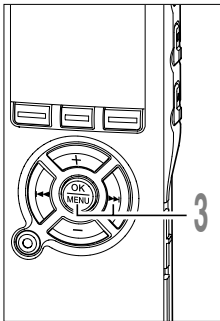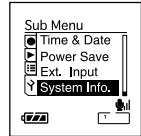

- 3 Press the **OK** or **▶▶|** button.
[Capacity] [Model Name] will appear. Every time the **+** or **-** button is pressed, [Version] [Serial] and [Capacity] [Model Name] will appear alternately.

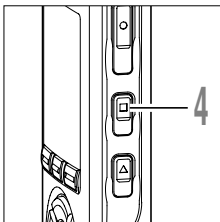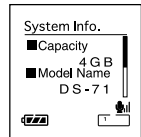


- 4 Press the **STOP** button to close the menu.

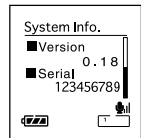

LCD Display Information

The LCD screen on the recorder can display 3 different format of information by pressing the DISPLAY button. This help review and confirm different recorder settings and file information.

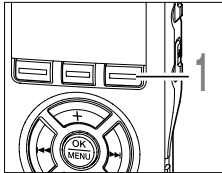

1 Press the **DISPLAY** button.

The LCD display views will switch every time the DISPLAY button is pressed in the File Display screen.


While in stop or playback mode

When pressing Display, the recorder will cycle through ① to ③.

① Playback elapsed time / File name*


The elapsed time for the file being played and its file name (artist name/song title for a music file) will appear.

Up to 64 characters can be displayed for each of artist name and song title.

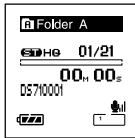

② Playback elapsed time / File length

The elapsed time for the file being played and its file length will appear.

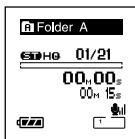

③ Time stamp


Shows the month, date, year, hour and minute that the file was recorded.




*If there is a long file name, scroll to the side to show all of it.

While in record mode


Displays ① and ② alternately.

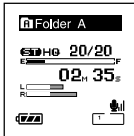


Display in the stereo recording mode

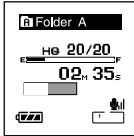

Display in the monaural recording

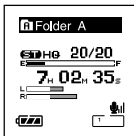

Display in the stereo recording mode

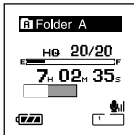

Display in the monaural recording

① Remaining memory bars/recording time/ Recording level meter

Current elapsed recording time is displayed in incremental figures, whereas the remaining memory and audio input levels are displayed with graphic images.


The audio input level display varies depending on a stereo recording or the monaural recording.

② Remaining memory bars/Remaining recording time/ Recording level meter


The remaining time is displayed in decremental figures, whereas the remaining memory bar and audio input levels are displayed with graphic images.

While recording in VCVA mode


Displays ① and ② alternately.

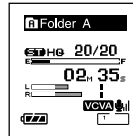


Display in the stereo recording mode

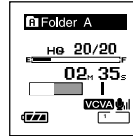

Display in the monaural recording

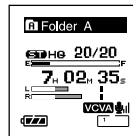

Display in the stereo recording mode

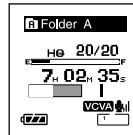

Display in the monaural recording

① Remaining memory bars/recording time/ VCVA recording level meter

The current elapsed recording time is displayed in incremental figures, whereas the remaining memory bar, audio input levels, and start levels are displayed with graphic images ([Waiting] is displayed when the VCVA trigger level has not been reached).

The audio input level display varies, depending on a stereo recording or a monaural recording.

② Remaining memory bars/ Remaining recording time/VCVA recording level meter


The remaining time is displayed in decremental figures, whereas the remaining memory bar, audio input levels, and start levels are displayed with graphic images ([Waiting] is displayed when the VCVA trigger level has not been reached).

Backlight (Backlight)

The recorder display backlight is On by default. The display will remain lit for about 10 seconds when a button on the recorder is pressed.

5



Backlight

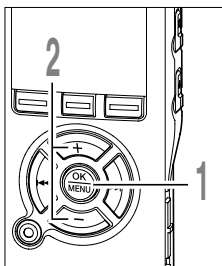

- 1 While the recorder is stopped, press the **MENU** button for 1 second or longer.

The menu opens. (P97, 99)

- 2 Press the **+** or **-** button to choose [Backlight].

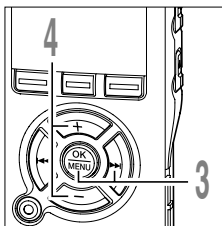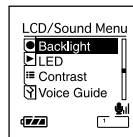



- 3 Press the **OK** or **▶▶** button.

The [Backlight] setup process begins.

- 4 Press the **+** or **-** button to choose between [On] and [Off].

[On]: Backlight is enabled.

[Off]: Backlight is disabled.

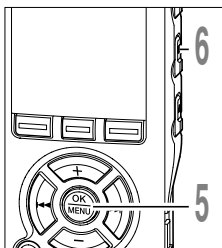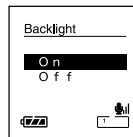


- 5 Press the **OK** button to complete the setup screen.

If the **◀◀** button is pressed, the setting will be canceled and it will return to the menu.

- 6 Press the **STOP** button to close the menu.

LED (LED)



You can set it so the Record/Play indicator light does not turn on.

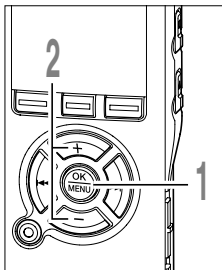

- 1 While the recorder is stopped, press the MENU button for 1 second or longer.**

The menu opens. (P97, 99)

- 2 Press the + or - button to choose [LED].**

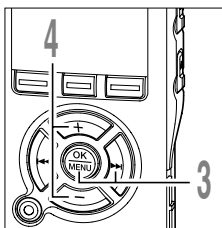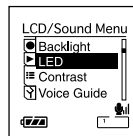



- 3 Press the OK or >>> button.**

The [LED] setup process begins.

- 4 Press the + or - button to choose between [On] and [Off].**

[On]: LED light will be set.

[Off]: LED light will be canceled.

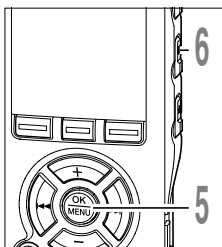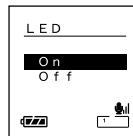

- 5 Press the OK button to complete the setup screen.**

If the <<< button is pressed, the setting will be canceled and it will return to the menu.


- 6 Press the STOP button to close the menu.**

5

LED

LCD Contrast Adjustment (Contrast)



Display contrast can be adjusted in 12 levels.

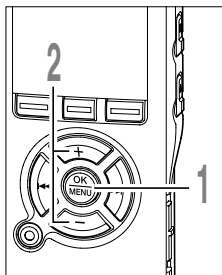

- 1** While the recorder is stopped, press the **MENU** button for 1 second or longer.

The menu opens. (P97, 99)

- 2** Press the **+** or **-** button to choose **[Contrast]**.

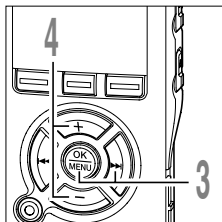
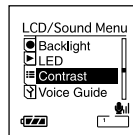


- 3** Press the **OK** or **▶▶|** button.

The [Contrast] setup process begins.

- 4** Press the **+** or **-** button to set the **contrast level**.

You can adjust the LCD display contrast level from 1 to 12.

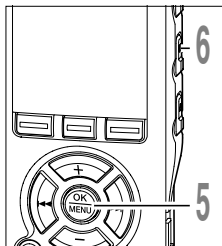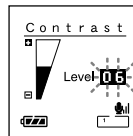

- 5** Press the **OK** button to complete the **setup screen**.

If the **◀◀** button is pressed, the setting will be canceled and it will return to the menu.


- 6** Press the **STOP** button to close the **menu**.

5

LCD Contrast Adjustment

Guidance (Voice Guide)



This feature gives audio announcements of recorder operating conditions. Adjust the speed and the volume of guidance announcements.

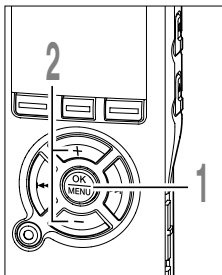

- 1 While the recorder is stopped, press the **MENU** button for 1 second or longer.**

The menu opens. (P97, 99)

- 2 Press the **+** or **-** button to choose [Voice Guide].**

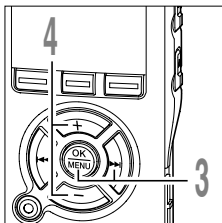
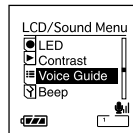


- 3 Press the **OK** or **▶▶** button.**

The [Voice Guide] setup process begins.


- 4 Press the **+** or **-** button to select the item to set.**

Select items you want to set from among [On/Off], [Speed] and [Volume].

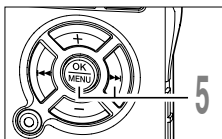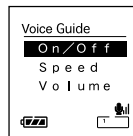



- 5 Press the **OK** or **▶▶** button to move to the respective setting.**

For procedures for each setting, please see P94.

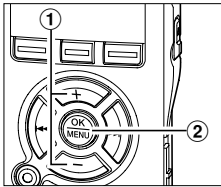



[On/Off] setting

- 1 Press the + or - button to choose between [On] and [Off].
[On]: Guidance will be provided.
[Off]: Guidance will be canceled.
- 2 Press the OK button to exit [On/Off] selection.

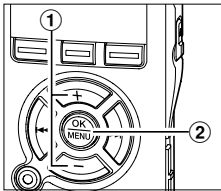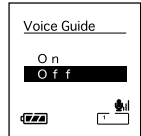


[Speed] setting


- 1 Press the + or - button to choose from [Speed5], [Speed4], [Speed3], [Speed2], and [Speed1].
- 2 Press the OK button to exit [Speed] selection.

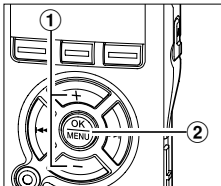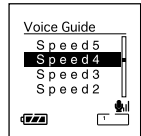

[Volume] setting

- 1 Press the + or - button to choose from [Volume5], [Volume4], [Volume3], [Volume2], and [Volume1].
- 2 Press the OK button to exit [Volume] selection.

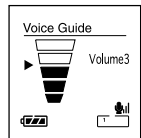

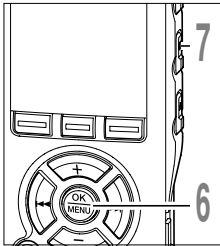


- 6 Press the **OK** button to complete the setup screen.**
If the **◀◀** button is pressed, the setting will be canceled and it will return to the menu.
- 7 Press the **STOP** button to close the menu.**

Notes

- The starting tune/closing tune when the power is turned On/Off (☞ P15) can be canceled if you set the guidance to [Off].
- If the recorder is formatted (☞ P81), guidance data will also be erased and the feature will not be available in the future. (☞ P122)
- Set the starting tune/closing tune at the guidance [Volume] setting.


System Sounds (Beep)

The recorder beeps to alert you to button operations or warn you of errors. System sounds may be turned off.

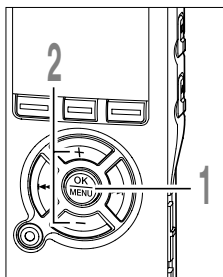

- 1 While the recorder is stopped, press the MENU button for 1 second or longer.**

The menu opens. (P97, 99)

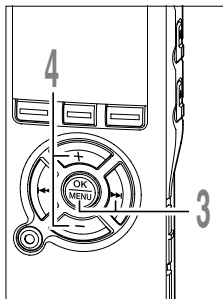

- 2 Press the + or - button to choose [Beep].**

- 3 Press the OK or ►► button.**

The [Beep] setup process begins.


- 4 Press the + or - button to choose from [Volume3], [Volume2], [Volume1], and [Off].**

[Volume3]: Increase the volume of beeps.

[Volume2]: Return the volume of beeps to normal.

[Volume1]: Decrease the volume of beeps.



[Off]: Deactivate beeps.

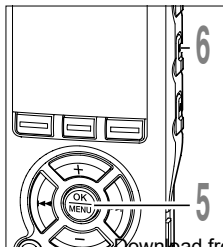

- 5 Press the OK button to complete the setup screen.**



If the ◀◀ button is pressed, the setting will be canceled and it will return to the menu.

- 6 Press the STOP button to close the menu.**

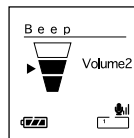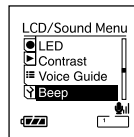

Menu Setting Method

Items in menus are categorized by tabs, so select a tab first and move to a desired item to quickly set it. You can set each menu item as follows.

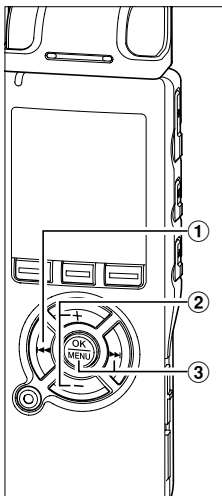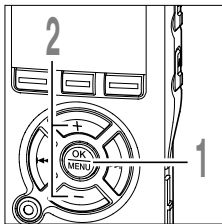

1 While the recorder is stopped, press the **MENU** button for 1 second or longer.






The menu opens. (P99)


Menu items can be set during a recording or playback. (P101)

2 Press the **+** or **-** button to move to the item to be set.


Setup using a tab

- ① Press the **◀** button for each item to move to a tab.
 - a Selected tab
- ② Press the **+** or **-** button to move to the tab that contains the item you want to set.
- ③ Press the **OK** or **▶▶** button to move to the item you want to set.

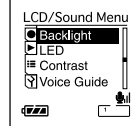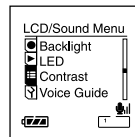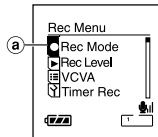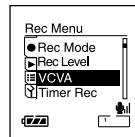
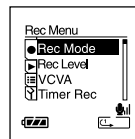


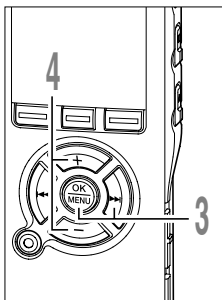

- 3 Press the **OK** or **▶▶** button.**
Moves to the setting of the selected item.

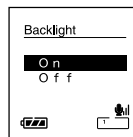

- 4 Press the **+** or **-** button to change the setting.**

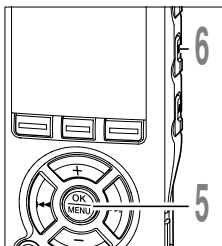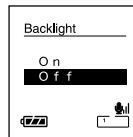



- 5 Press the **OK** button to complete the setup screen.**

If the **◀◀** button is pressed, the setting will be canceled and it will return to the menu.



- 6 Press the **STOP** button to close the menu.**

Menu List

● Menu Setting (While the recorder is stopped, press and the hold the MENU button for 1 second or longer)

Tab	Function	Setting	Ref. Page
Rec Menu 	Rec Mode	PCM*/ST XQ/ST HQ/ ST SP/HQ/SP/LP *PCM is available for the DS-71 only.	P32
	Rec Level*	Manual/Auto	P33
	VCVA	On/Off/Standby Monitor/Level* *Level is available for the DS-71 only	P28
	Timer Rec	You can program timer recording On/Off, Day, Time, Rec Mode, Folder and Mic Sense in preset 1 through 3.	P42
	LowCut Filter	On/Off	P38
	Zoom Mic	Zoom, Narrow, Wide, Off	P36
Play Menu 	Play Speed	Programs S.Play and F.Play speeds.	P52
	Noise Cancel	High, Low, Off	P59
	Voice Filter	On/Off	P61
	Play Mode	File, File Repeat, Folder, Folder Repeat, All File, All Files Repeat	P55
	Skip Space	Programs skip space for F.Skip and R.Skip.	P50
	Alarm	You can program Alarm Playback On/Off, Day, Start Time, Volume, Alarm and Playback File in Preset1 through 3.	P65
	EUPHONY	Power, Wide, Natural, Off	P63
LCD/Sound Menu (To the next page)	Backlight (To the next page)		


* is available for the DS-71 only.

Tab	Function	Setting	Ref. Page
LCD/Sound Menu 	Backlight	On/Off	P90
	LED	On/Off	P91
	Contrast	Programs contrast level (01-12).	P92
	Voice Guide	On/Off, Speed, Volume	P93
	Beep	Volume3, Volume2, Volume1, Off	P96
	Intro Play	3sec, 5sec, 10sec, Off	P69
Sub Menu 	Lock	On/Off	P75
	File Move	Programs the order in which to play files in the folder.	P79
	Folder Name	Sets a folder name from the preset template.	P77
	Format	Start, Cancel	P81
	USB Class (To the next page)		


(To the next page)

Tab	Function	Setting	Ref. Page
Sub Menu Y	USB Class	Storage Class, Audio Class	P83
	Time & Date	In order of hour, minute, year, month and day.	P17
	Power Save	5min., 10min., 30min., 1hour	P84
	Ext. Input	Auto, Stereo	P85
	System Info.	Capacity/Model Name, VersionSerial	P87
Rec Menu P99	Rec Mode (To the page 99)		

● **Setting menu during recording**

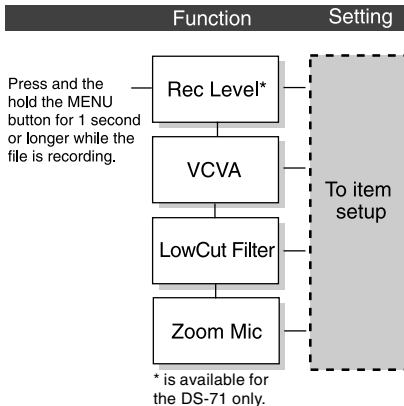

● **Setting menu during playback**

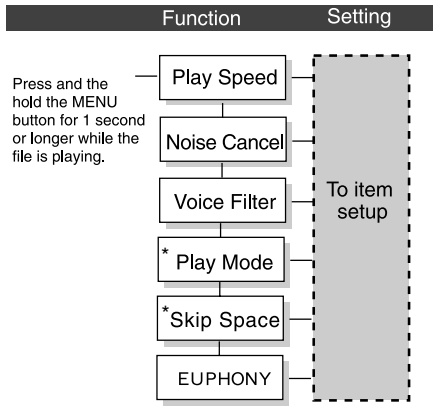

*[Play Mode] and [Skip Space] cannot be set in the Audible mode.

Saving Files in Your PC

By being connected to a PC, the recorder enables you to do the following:

- Playback voice files on your PC.
Audio files recorded using the recorder can be played using the DSS Player software included on the provided CD-ROM or Windows Media Player. (☞ P141)
- Playback voice files on your PC and on the recorder when connected via USB. Download files from the recorder to the PC or upload files from the PC to the recorder.
- Using the Windows Media Player, the stored WMA or MP3 files on your PC can be transferred and played back on this recorder.
- If an upgrade (Option) to DSS Player Plus is executed, various additional functions can be utilized. (☞ P125)

Precautions on using the recorder connected to a PC

- When you are downloading a file from the recorder or uploading a file to the recorder, do not remove the USB cable even if the screen is indicating you can. Data is still being transferred while the record/play indicator light is blinking. When removing the USB cable, be sure to follow the description in ☞ P111. If the USB cable is removed before the drive is stopped, data may not be successfully transferred.
- On a PC, do not format the drive of the recorder. Initialization is not successfully achieved on a PC. For initialization, follow the instructions in the main menu screen of the recorder. (☞ P97, 99)
- Folder (directory) names displayed by file management tools such as Explorer attached to Microsoft Windows is different from the folder names that can be set with the recorder or DSS player.
- If folders or files stored on the recorder are moved or renamed by using a file management tool such as Explorer, the order of files may be changed or files may become unrecognizable.

- Data can be written or uploaded to the recorder even though the attribute of the recorder drive is shown as Read-only by the operating system of the PC.
- As the noise may cause adverse effects on electronics devices nearby the recorder, unplug the earphone when you connect the recorder to a PC.

Using DSS Player Software

Basic Operating Environment of DSS Player

PC:	IBM PC/AT compatible PC
Operating System:	Microsoft Windows 2000 Professional/XP Professional, Home Edition/ Vista Ultimate, Enterprise, Business, Home Premium, Home Basic
CPU:	Windows 2000/XP: Intel Pentium II class 333 MHz processor or more (If recording to a hard disk directly with the WMA format, please use in the range of 500 MHz or more) Windows Vista: 800 MHz or more
RAM:	Windows 2000/XP: 128 MB or more (256 MB or more is recommended) Windows Vista: 500 MB or more (1 GB or more is recommended)
Hard drive space:	50 MB or more
Drive:	2x or faster CD-ROM, CD-R, CD-RW, DVD-ROM drive
Sound card:	Creative Labs Sound Blaster 16 or 100% compatible sound card
Browser:	Microsoft Internet Explorer 4.01 SP2 or later
Display:	800 x 600 pixels or more, 256 colors or more
USB port:	One free port
Audio I/O terminals:	Earphone output or speakers
Others:	<ul style="list-style-type: none">• The mouse or similar to a pointing device.• Environment where the Internet can be utilized.

Notes

- The support service will not cover if your PC has been updated from Windows 95/98/Me to Windows 2000/XP/Vista.
- Any failure on a self-modified PC will not be covered under the operational warranty. Download from www.Somanuals.com. All Manuals Search And Download.

Installing Software

Before you connect the recorder to your PC and use it, you must first install the DSS player software from the included Software CD.

Applications included with [DSS Player]

- DSS Player: Recorded voice files can be downloaded to the PC for complete file management and playback solution.

Be sure to confirm the following before installation:

- If you already have the DS-50/40/30 DSS Player installed on your computer, you must first uninstall the player (P108) and then install the newest version of the DSS Player that comes with the DS-71/61.
- Exit all running applications.
- Eject the floppy disk if you are using one.
- You need to log on as an Administrator.

1 Insert DSS Player into the CD-ROM drive.

The installation program will start automatically. Once the program starts, jump to step 4. If it does not, follow the procedures in steps 2 and 3.

2 Click the [start] button and select [Run].

3 Enter [D:\setup.exe] in the [Open] field and click [OK].

This is assuming the CD-ROM drive is D.

4 The installation Language Selection dialog box opens.

Click the desired language to select it.



Installing DSS Player

5 Register user information.
Enter your name, company name and serial number. For the serial number, see the label attached to the CD-ROM package provided with DSS Player. When entered, click [Next]. When the confirmation dialog appears, click [Yes].

6 Confirm your acceptance of the terms of the Licensing Agreement.

You must accept the terms of the Licensing Agreement to install DSS Player. If you accept them, click [Yes].

7 Select where to install DSS Player.

This lets you specify the folder in which to install DSS Player. Click [Browse] to find the desired installation folder. To accept the default folder, click [Next].

Note

If the installation folder does not exist, a confirmation dialog box opens to get your permission to create a folder for this purpose. Click [Yes].

8 Select a program menu folder.
You may change the program menu folder to another one, such as [Start Up]. To accept the default folder, click [Next].

9 Authorizing the start of file copying.
Confirm all [Current Settings]. To accept them, click [Next].

Note

To change the program menu folder or installation folder, click [Back].

 
10 Copy files.
Wait until DSS Player is installed on your PC, then click [Finish]. The screen returns to the opening screen automatically.

Installing the Device Driver

11 Connect the recorder to your PC, referring to [Connecting to Your PC]. (☞ P110)

When you connect the recorder to your PC for the first time after installing DSS Player, the recorder's driver will be installed automatically. If the driver is installed properly, DSS Player will start automatically.

(For details about operation for DSS Player see pages from P113.)



Uninstalling Software

To uninstall any of the software component of the DSS player software installed on your PC, follow the steps below.

1 Exit DSS Player.

2 Select [Control Panel] from [start] menu.

3 Click [Add/Remove programs] in the control panel window.

4 A list of applications that have been installed is displayed.

5 Click [Change/Remove].

6 Confirmation of Deleting the File.

Click the [OK] button to start uninstalling. An additional message may appear, if so, read it carefully and follow the instructions given.

7 When the [Maintenance Complete] screen is displayed, click [Finish] to complete uninstalling.

The voice files you made are stored in the [MESSAGE] folder. If you don't need them, delete them.

You can confirm the location of the [MESSAGE] folder by clicking [Options] in the [Tools] menu before uninstalling.

Using Online Help

To open Online Help, you have the following options.

- Click the [start] button, select [All Programs], then [Olympus DSS Player], then click [Help].
- While DSS Player is running, choose [Contents] from the [Olympus DSS Player Help] menu.
- While DSS Player is running, press [F1] on the keyboard.

Search by Contents


1 Once the Online Help screen appears, click the Contents tab.

2 Double-click the  icon of the desired topic heading.

The title of the topic is displayed.

3 Double-click the  icon of the desired topic.

An explanation of the topic is displayed.

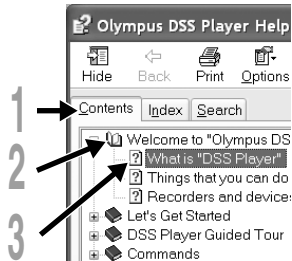

Search by Key word


1 Once the Online Help screen appears, click the Index tab.

2 Enter text.

Matching keywords are located automatically.

3 Choose a topic, then click [Display].

An explanation of the topic is displayed.

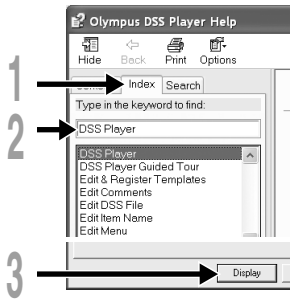

Note


- For more information on menus and operations, refer to Online Help. You will be able to use Online Help after DSS Player is installed.

Download from www.Somanuals.com. All Manuals Search And Download.

Connecting to Your PC

Be sure to finish installing DSS Player before connecting the recorder. (☞ P105)


Connecting to your PC using the USB cable

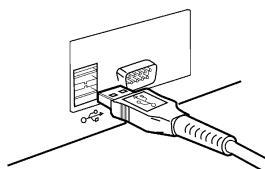


- 1 Turn the recorder's power ON.
- 2 Connect the USB connection cable to the USB port or the USB hub of the PC.

- 3 Confirm that the recorder has stopped and connect a USB cable to the connection port on the side of recorder.

[Remote (Storage)] is displayed on recorder if the USB cable is connected.

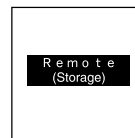


When the recorder is connected and "My Computer" is opened, a removable disk drive is displayed.

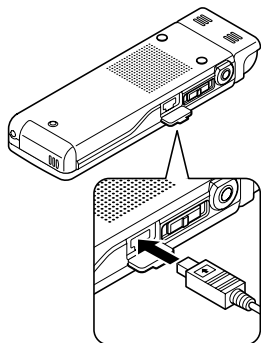


Notes

- When connecting this recorder with the PC and utilize DSS Player, in the menu setting of this recorder set the USB class (☞ P83) to the [Storage Class]. If connected by [Audio Class], this recorder will not be recognized as a removable disk drive.
- Be sure to use the attached dedicated cable for the USB connecting cable. If any other company's cable is used, it will be the cause trouble. Also, please do not connect this dedicated cable to any other company's product.

Disconnecting from Your PC

- 1 Click the  on the task bar located at the lower-right corner of the screen. Click [Safely Remove Hardware].

 The drive letter will differ depending on the PC being used.



- 2 Disconnect the USB cable.

Notes

- NEVER disconnect the USB while the record/play indicator light is flashing. If you do, the data will be destroyed.
- When the recorder is connected to a PC, the power will be supplied from the USB cable.
- Refer to the user's manual for your PC regarding the USB port or USB hub on your PC.
- Be sure that you connect the USB cable either directly to the USB port on your PC or the self-power (AC adapter connection) USB hub.
- Be sure to push the cable connector all the way in. Otherwise, the recorder may not operate properly.
- Cancel Hold mode.


Running DSS Player

By connecting the recorder to your PC, you can automatically start the application.

Disabling automatic start

1 Right click on the  of the taskbar on the lower right of the screen, and select [Setting].

The application which enables setting will be displayed by dialog.

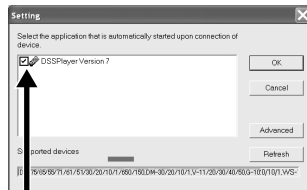

2 Click the of the [DSS Player Version 7].

The check mark on [DSS Player Version 7] disappears. For automatic start, select and click DSS Player to reinstate again.

2

2


3

Manual start

1 Start Windows.

2 Click the [start] button, select [All Programs], then [Olympus DSS Player].


3 Click [Olympus DSS Player].

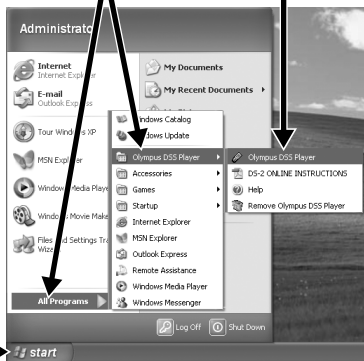

Note

- You cannot run more than one DSS Player program or multiple copies of the same program simultaneously. Download from www.Somanuals.com. All Manuals Search And Download.

Window Names (DSS Player)

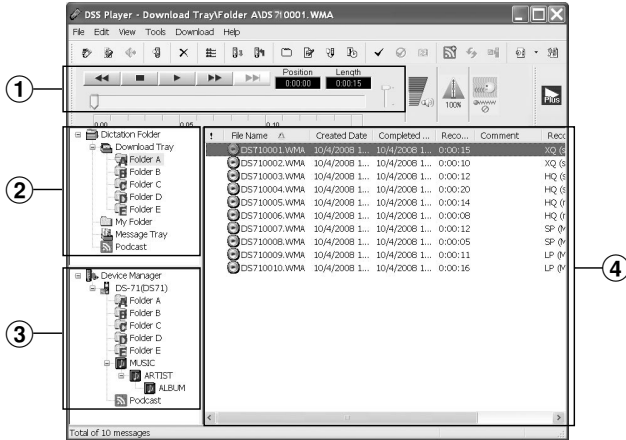

*Main screen displayed when DSS Player is started

① Play Control Bar

Control buttons to play and stop voice files.

② Dictation Folder Window

Will display the directory structure of the DSS, WMA, MP3, WAV-format files stored on your PC's hard disk.

③ Device Manager Window


Will display the directory structure of the folders in the recorder.

④ Voice File List Box

Will display the voice files in the folder selected in ② and ③.

Download Voice Files from the Recorder

There are 3 download options to transfer voice files from the recorder to the PC:


- Download Selected Files
Download one or more voice files to your PC.
- Download Folders
Download all voice files to one folder.
- Download All
Click the  icon and download all the voice files stored in the recorder to your PC.

The following is an explanation of [Download Selected Files]. For explanations of [Download Folders] and [Download All], refer to Online Help.

Download Selected Files


1 Select the folder.

From the Device Manager window, select the folder that contains the voice file you would like to download. The illustration shows that Folder A has been selected.

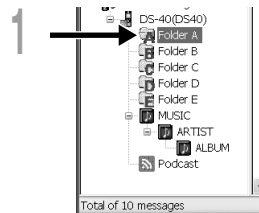


2 Select the voice file.

Select the voice file you would like to download from the Voice File List Box. To select more than one file, hold either the [Ctrl] or [Shift] key and select files. The illustration shows that one voice file is selected.

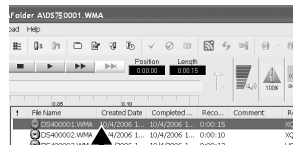

3 Download the voice file.


From the [Download] menu, click [Download Selected Files].

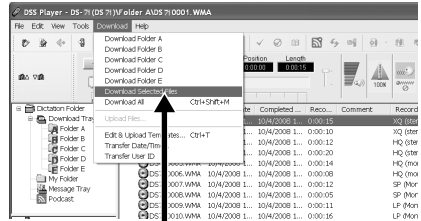

3

4 Download complete.

Do not disconnect the USB cable while the record/play indicator light on the recorder is flashing. Disconnecting the USB cable when the recorder lamp is flashing will result in data loss or corruption. (P111)

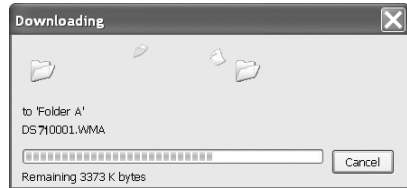


Notes


- NEVER disconnect the USB while the record/play indicator light is flashing. If you do, the data will be destroyed.
- Depending on the size of the voice file and your PC, it may take some time to download the files.
- The downloaded files will be stored in the download tray folder that corresponds to the folder in the recorder.
(Example: A voice file downloaded from Folder A will be stored in download tray A on your PC.)
- When the same file name already exists, the new file is saved with another file name only when the contents are different. When the contents are the same, it will not be downloaded.

Play a Voice File

- 1 Select the folder.**
Select the folder that contains the voice file you would like to play.
- 2 Select the voice file.**
Select the voice file to play from the Voice File List Box.

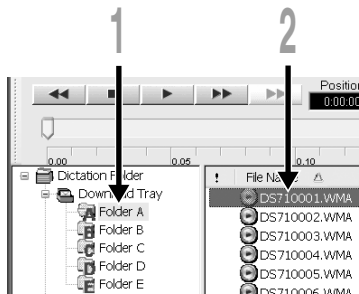

- 3 Play the voice file.**
Click the  (play) button of the Play Control Bar.

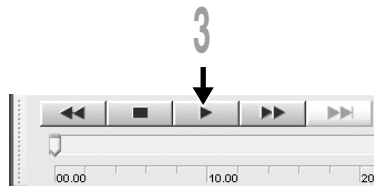

Other playback control such as Rewind, Fast Forward, Stop, Speed Control, Volume Control, Time Axis and Index Skip are available from the Play Control Bar.

File name

File names are assigned in the following manner:

DS71 0001.WMA

Extension: Files recorded by this device are saved in WMA or linear PCM format with the file extensions .WMA or .WAV.

File number: A serial number automatically assigned by a Digital Voice Recorder.


User ID: The name that has been set on the Digital Voice Recorder. The default name on the Digital Voice Recorder is [DS71] or [DS61]. The user ID can be modified with DSS Player. (P119)

Download from [Www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.

Upload Voice Files to the Recorder

DSS Player has a feature to enable you to upload files from your PC to the recorder.

- 1 Select the folder.**
Select the folder that contains the voice file to upload from the Dictation Folder window.
- 2 Select the voice file.**
Select the voice file to upload from the Voice File List Box.
- 3 Select the folder to upload.**
From the [Download] menu select [Upload Files] or click the Upload icon. Once the folder list box where the file is to be uploaded is displayed, select the folder from which the file is to be uploaded.
- 4 Upload the voice file.**
The voice file is uploaded to the recorder.

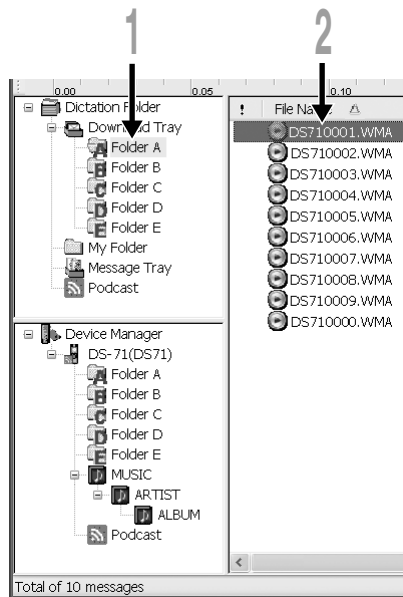

5 Upload complete.

Once the transmission screen closes and the record/play indicator light on the recorder is OFF, upload is completed.

You can also drag and drop files from the Voice File List Box to the Device Manager window.

.....

Notes

- NEVER disconnect the USB while the record/play indicator light is flashing. If you do, the data will be destroyed.
- When the same file name already exists in the folder on the recorder, the new file is saved with another file name only when the contents are different. If contents are the same, it will not be uploaded.

Send Voice Files with E-mail

Audio files are stored in the Message folder on the hard disk. If you want to send a voice file by attaching it to E-mail, select the file from the Message folder.

The Message folder location can be found from the [Tools] menu, [Options], and then [Download folder] tab.

The file can be replayed with DSS Player-Lite even though the recipient does not have DSS Player. Free DSS Player-Lite can be downloaded from Olympus homepage.

http://www.olympusamerica.com/cpg_section/cpg_downloads.asp

http://olympus-europa.com/consumer/2590_software.cfm

Changing User ID


The user ID will be automatically given in file names of WMA files that are recorded with the recorder.

1 Enter the user ID in the [Transfer User ID] window.

From the [Download] menu.

2 Click [Transfer].

The new user ID will be transferred to the Digital Voice Recorder.

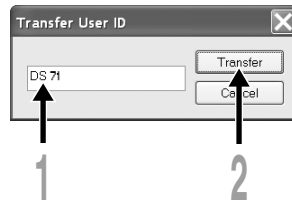

Note

- NEVER disconnect the USB while the record/play indicator light is flashing. If you do, the data will be destroyed.

Changing a Folder Name

Changing a folder name in the Voice Folder window

You can change a folder name using the [Rename Folder] command from the [Edit] menu. A folder name can be up to 20 characters long and cannot use \/:*?"<>|.

Changing a folder name in the Device window

Right-click the folder name to change, select the [Rename Folder] and input the new folder name.

Device Window folder names consist of a string of 12 or fewer single-byte alphanumeric characters.

.....

Note

- NEVER disconnect the USB while the record/play indicator light is flashing. If you do, the data will be destroyed.

Editing File Comments

It is possible to add comments to the files downloaded from the recorder by using the DSS Player.

Choose the [Edit Comments] command from the [Tools] menu.

Files comments can use up to 100 alphanumeric characters and symbols.

.....

Note

- NEVER disconnect the USB while the record/play indicator light is flashing. If you do, the data will be destroyed.

Editing a Template

Templates of folder name that have been registered on the recorder can be changed on the [Edit & Upload Templates] screen.

Select [Edit & Upload Templates] from [Download] to open the [Edit and Upload Template] window.

The maximum number of characters that can be entered is 8 characters for a folder name.

The screenshot shows a dialog box titled "Edit and Upload Template" with a close button (X) in the top right corner. It is divided into two main sections: "Comment" and "Folder name".

Comment Section: Contains two columns of text boxes labeled "No.1" through "No.10". To the right of these boxes are three buttons: "Upload to recorder" (top right), "Save" (middle right), and "Open" (bottom right). A "Clear" button is located below the "No.10" box.

Folder name Section: Contains two columns of text boxes labeled "No.1" through "No.10". To the right of these boxes are three buttons: "Upload to recorder" (top right), "Save" (middle right), and "Open" (bottom right). A "Clear" button is located below the "No.10" box.

Below the "Folder name" section, there is a message: "The gray fields are not supported by the connected recorder." Below this message are four buttons: "Load from recorder", "Upload All", "Clear All", and "Cancel".

Callouts with arrows point to the following elements:

- Transfer edited content to the recorder:** Points to the "Upload to recorder" button in the "Folder name" section.
- Save edited content:** Points to the "Save" button in the "Folder name" section.
- Read saved content:** Points to the "Open" button in the "Folder name" section.
- Delete edited content:** Points to the "Clear" button in the "Folder name" section.
- Load templates from the recorder:** Points to the "Load from recorder" button.
- Transfer all comment and folder information to the recorder:** Points to the "Upload All" button.
- Delete all changed content:** Points to the "Clear All" button.
- Close the dialog box:** Points to the "Cancel" button.

Note

- NEVER disconnect the USB while the record/play indicator light is flashing. If you do, the data will be destroyed.

Copying Voice Guide Data

If you format the recorder and erase data by mistake, you can copy the voice guide data from DSS Player to the recorder.

1 Make sure that the recorder's voice guide is set to [On].

If the recorder's voice guide is set to [Off] the voice guide data cannot be copied.

2 Connect the recorder to a PC.

For how to connect to a computer, see [Connecting to your PC using the USB cable]. (☞ P110)


3 Start DSS Player.

If the recorder does not have voice guide data, the [File Transfer] dialog will appear.

4 Copy voice guide data.

If you click the [Yes] button in the [File Transfer] dialog, it will start copying voice guide data, and a window indicating copying progress will appear.

5 Copying of the voice guide data will be completed.

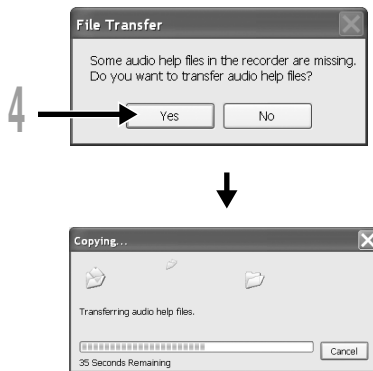

Notes

- The alarm sound (☞ P65), the Starting tune that plays when the recorder is starting up, and the Closing tune that plays when the recorder is turning off (☞ P15), will be copied together with the guidance data.
- NEVER disconnect the USB while the record/play indicator light is flashing. If you do, the data will be destroyed.

USB Microphone/USB Speaker

It is possible to use the recorder as a USB microphone or speaker with the DSS Player, to insert/add/overwrite recordings onto voice files downloaded onto a computer, or to save new recordings directly onto a computer.


In addition, it is also possible to operate the DSS Player using buttons on the recorder.

Audio set up

In order to use this recorder as a USB speaker or a USB microphone in DSS Player, it is necessary to change to [Audio Class] after connecting to the computer in the [Storage Class].

When changed for the first time, the driver will be installed into the computer.

After connection, execute the following settings.

 
Click the  icon in the toolbar to change the recorder to Audio device.

Uses as a USB Speaker

When the recorder is being used as a USB speaker, it is possible to output the sound through the recorder, rather than from the speakers attached to a computer.

When using the recorder as a USB speaker, switch the recorder to the [Audio] mode in the [Audio Setup] described above, then perform the following setting.

Select the [Select Audio Output] from the [Tools] in the menu bar, and change the output destination.



Uses as a USB microphone

When the recorder is used as a USB microphone, it can be used to make recordings with the DSS Player, and can also be used to input data on a computer using voice recognition software or other applications.

When using the recorder as a USB microphone, switch the recorder to the [Audio] mode in the [Audio Setup] described on the previous page, then perform the following setting.

Windows 2000

Select [Control Panel] → [(Sound and) Multimedia] → [Audio] tab, and select the [USB Audio Device] from the recording device.

Windows XP

Select [Control Panel] → [Sound and Audio Device] → [Audio] tab, and select the [Microphone Control (DVR)] from the recording device.

Notes

- If the USB class is set to [Audio Class] in the menu setting of this recorder, this recorder will not be displayed as a removable disk drive. Reset to the [Storage Class] class then connect to the computer.
- Changing the USB speaker can be executed from the [Control Panel] as well as the USB microphone.
- When using it as a USB microphone, regardless of the recording mode of this recorder, it becomes the USB stereo microphone. If you want to connect an external microphone to this recorder, use a stereo microphone.

Plus

Upgrade Function

The [DSS Player] enables upgrades (Options) to the [DSS Player Plus] which is equipped with more functions. In addition to the DSS Player functions, voice recognition using voice recognition software, joining of files, sharing of files and the menu setting of this recorder can be utilized.

Purchase and Upgrade

To purchase [DSS Player Plus] and upgrading from [DSS Player] is operated in the following procedures.


1 Start the DSS Player.

Please see P112 for the starting method.

2 Click the button or select [Purchase a new license for DSS Player Plus] in the [Help] menu.

The web browser will start and the purchase site of the DSS Player Plus will be displayed. Please operate according to guidance on the screen.

When the purchase procedure is completed, the license number will be issued by mail.

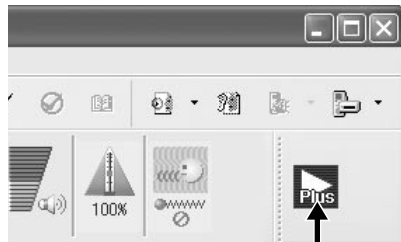


3 Select [Upgrade to DSS Player Plus] from the [Help] menu.

The [Upgrade to DSS Player Plus] dialog will be displayed.



4 In the [Upgrade to DSS Player Plus] dialog, enter the license number of your purchase, and click the [OK] button.

When starting the application next time, DSS Player will be upgraded to DSS Player Plus.

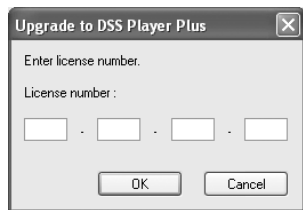

Upgrading to DSS Player Plus

When upgraded, the title of the main menu changes to [DSS Player Plus]. Also, you can confirm the upgrade by selecting [About DSS Player] from the [Help] menu on the tool bar. In the [About DSS Player] window, the [DSS Player Plus] should be displayed.

Notes

- To purchase the license number, it requires an environment where the Internet can be utilized.
- Please see the details in the website regarding the purchase of the license number.

In conjunction with [ViaVoice] or [Dragon NaturallySpeaking] by Nuance Corp. Which are on the market, the files recorded in this recorder can be transferred to a computer and converted to text. Please see the instruction manual for the voice recognition software for details.

The voice recognition software which is confirmed for use with this recorder is as follows.
(As of September, 2008)

Nuance Communications Inc.

- IBM ViaVoice Pro USB Edition 10
- Dragon NaturallySpeaking 8/9

Please inquire to the Olympus Service Center regarding the situation for software to be released hereafter. (☎ P171)

Also, when you use such software in combination with this recorder, please confirm the software operation with the user's computer and the maker.

- For information about the ViaVoice voice-recognition software, please contact the provider of the software, Nuance Communications Inc.
<http://www.nuance.com/viavoice/>
- Please contact Nuance for support information on Nuance Dragon NaturallySpeaking.

Voice Recognition in ViaVoice (Audio set up)

When the DSS Player Plus and Nuance's voice recognition software [ViaVoice] are used together, execute the setting in the following procedure to record the voice accurately, acquired from the built-in microphone or speaker.

- 1 Connect the recorder to your PC, and start the DSS Player Plus.**
- 2 Change the recorder to [Audio Class].**
Follow the procedure in P83 to change the recorder to Audio Class.
- 3 Click the [start] button, select [All Programs], then select [IBM ViaVoice VoiceCenter].**

- 4 From the [IBM ViaVoice VoiceCenter], select [ViaVoice], [Tools], then [Analyze My Voice].**

The ViaVoice User Wizard window appears.

- 5 From the [Device] list box, select [Olympus WMA File].**
Select [Olympus WMA File] in the [Device] list box, then click the [Next] button.

- 6 Click the [Next] button.**
The [Audio Setup Wizard] window appears.



7 Select a sound card.

When the [Selecting a Sound Card] window appears, select [USB Audio Device] for [Input] and follow the instructions on screen. (Select [Microphone Control (DVR)] for Windows XP.)

8 Proceed with the AUDIO Setup according to the instruction on screen.

During audio setup, enrollment, please input voice data from the recorder.

It is recommended that you enroll while in your normal surrounding environment settings. This will help improve the voice recognition by registering your voice characteristics and your environment.

Selecting a Sound Card

The wizard detected multiple sound cards in your system. Select the cards to use for ViaVoice.

Sound Cards:

Input:

Microphone Control (DVR)

Output:

Speaker Control (DVR)

Voice Recognition in Dragon NaturallySpeaking (Training)

When the DSS Player Plus and Nuance's [Dragon NaturallySpeaking] are used together, create the user in [Dragon NaturallySpeaking] in advance. It is necessary to execute the training. By executing the training, the features of your voice will be registered, and the rate of recognition will improve. Please advance the setting according to the following procedures.


1 Startup Dragon NaturallySpeaking.

Click the [start] button, select in the order of [All Programs] → [Dragon NaturallySpeaking] → [Dragon NaturallySpeaking].

*If the DSS Player Plus has started, please close it in advance.

2 [New User Wizard] will be displayed.

*If the user is already registered in Dragon NaturallySpeaking, the [Open User] dialog will be displayed. In this case, click the [New] button and display [New User Wizard].

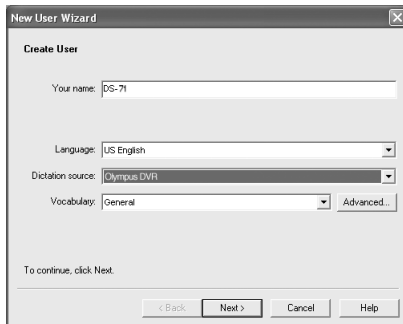

3 Creating a User.

Input a name into [Your name], and select [Olympus DVR] from the [Dictation source] list box, then click the [Next] button.

4 Description of Wizard.

Description of this wizard will be displayed. Click the [Next] button.


5 Recording Training Text.

Follow the instructions on the screen, and record the training text to this recorder. At this time, record with any one of, [PCM], [ST XQ], [ST HQ],[ST SP], [HQ], [SP] for the recording mode, and [DICT] for the microphone sensitivity. Please refer to [Notes on Recording For Voice Recognition](P134) for recording tips. After the recording is finished, click the [Next] button.

6 Transferring the Recorded Voice.

Click [Olympus DSS Player] button displayed on the screen. The DSS Player Plus will startup and then follow the instructions displayed on the screen to execute the transfer of the recorded voice. After finishing, click the [Next] button.

7 Adding a User.

Click the  button displayed on the screen. After this operation is finished, follow the instructions on the screen, then complete the registration for a new user.



Executing Voice Recognition

DSS Player Plus can easily access ViaVoice and Dragon NaturallySpeaking from the menu, and it enables text conversion of the file in the Voice File List Box.


1 Select the folder.


From the Dictation Folder Window, select the folder in which the folder to be converted to text is stored.

2 Select the voice file.

From the Voice File List Box, select the file to be converted to text.


3 Start of voice recognition.


Clicking the arrow at the right side of the voice recognition icon  displays the voice recognition software. Select and click ViaVoice or Dragon NaturallySpeaking as the software to be used.

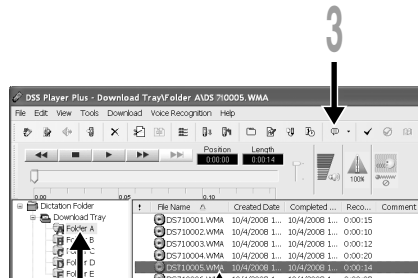

When Dragon NaturallySpeaking is Selected


The [Open User] dialog will be displayed, and select the user created in procedure 3 on P130, then click the [Open] button. The [Transcription Options] dialog will be displayed, and select the option according to the purpose, then click the [Transcribe] button.

The text conversion will start. However, if the voice recognition software is not installed, the voice recognition software start icon  becomes an invalid display.

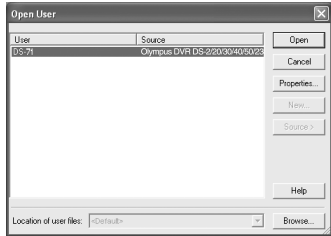

Noise Canceling Function

Check [Use Noise Cancellation] in the [Voice Recognition] menu to output voice using the noise canceling function to the voice recognition software.

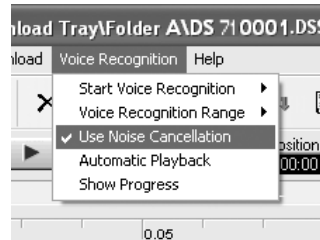

Note

- The voice recognition of the file recorded in LP mode cannot be recognized.

Notes on Recording For Voice Recognition

When recording voice to be processed with voice recognition, set up your recorder as follows to improve recognition accuracy.

- Set the microphone sensitivity to [DICT]. (☞ P35)
- Set the recording mode other than [LP] mode. (☞ P32)
- Set the Variable Control Voice Actuator (VCVA) to [Off]. (☞ P28)
- Register/enroll your voice in the voice recognition software using the recorder.
- Record in a relatively quiet environment.
- Have the recorder microphone 5 to 10 cm away from your chin.

- Speak normally.
- When your voice is to be recorded, and reduce the influence of the surrounding noise, and use the ME12 microphone for dictation recording.

The file recorded in the next condition, will be a low rate of recognition, which can not be used for voice recognition.

- A conference or meeting where many voices are recorded.
- Seminar or lecture where high-level ambient noise tends to be recorded.


In DSS Player Plus, designated multiple voice files can be joined and one voice file can be created.

1 Select the folder.

From the Dictation Folder Window, select the folder which contains the files to be joined.


2 Select the voice files.

From the Voice File List Box, select more than one file to be joined.

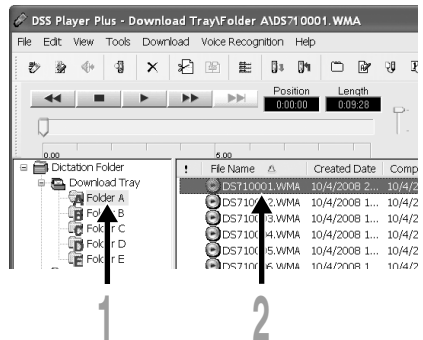

3 Select [Join] from the [Edit] menu or press the button.

The dialog to join files will be displayed, listing the files selected in step 2.

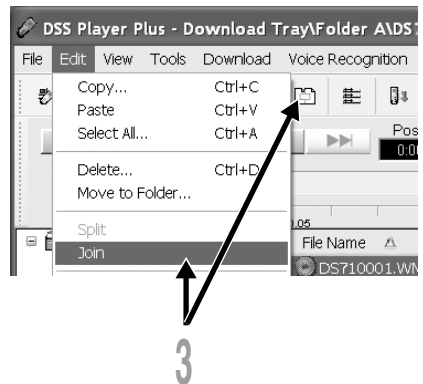

4 Set the order of files.


After joining, the playback order of the files can be changed. Select a file, and move the file to its appropriate position in the order using the [Up] and [Down] buttons.

5 Input File Names.

The file name is created automatically after joining and also, it enables input optionally.

6 Press the [Join] button.

The resulting file is saved under the name specified in step 5, and stored in the selected folder.

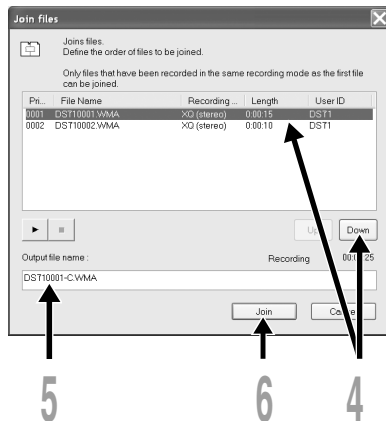

Note

- If the files to be joined have different recording modes, the mode of the file listed at the top is selected.


One designated voice file can be split into the two files in DSS Player Plus.

1 Select the folder.

Select the folder containing the file to be split from the Dictation Folder Window.



2 Select the voice files.


Select one file to split from the Voice File List Box.

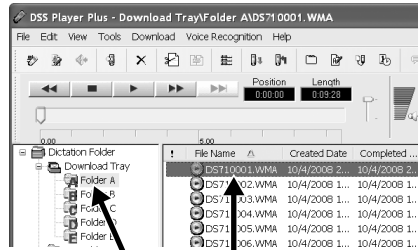



 3 Select [Split] from the [Edit] menu or press the button.

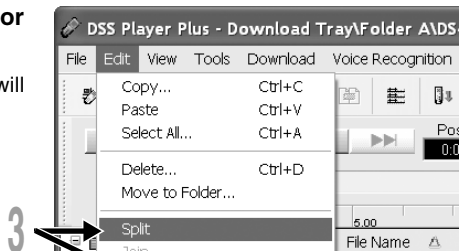The setting dialog of the file to be split will be displayed.

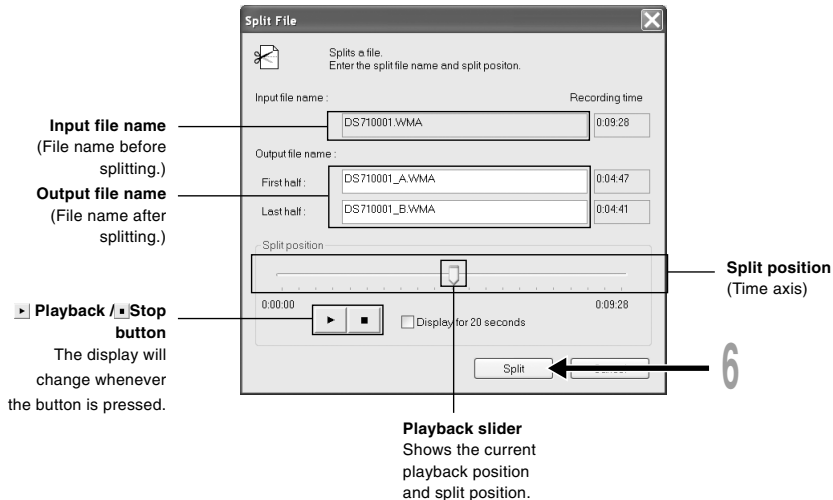



4 Set the split position.

Press the  button to playback the file, and press the  button in the position to be divided.

Also, the playback slider position in the time axis shows the current playback position, and also shows the split position (slide the playback slider to the right or left, which enables moving to the position to be split).

5 Input File Names.

The file name is created automatically after splitting and also, it enables input optionally.

6 Press the [Split] button.


The splitting of the file will complete, and the file name designated in procedure 5 will be saved.

Menu Setting of this Recorder

The menu setting of this recorder can be changed in the [Configure recorder menu] screen in the computer.

1 Select [Configure recorder menu] from the [Download] menu.

The [Configure recorder menu] dialog will be displayed.

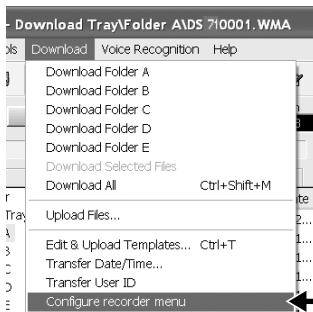


2 Execute Menu Setting.

Click the radio button to be changed, and input a check.

3 Press the [OK] button.

The set contents will be transferred to this recorder.

After the finishing, the menu setting of this recorder will be changed by removing the USB connection of this recorder from the computer.

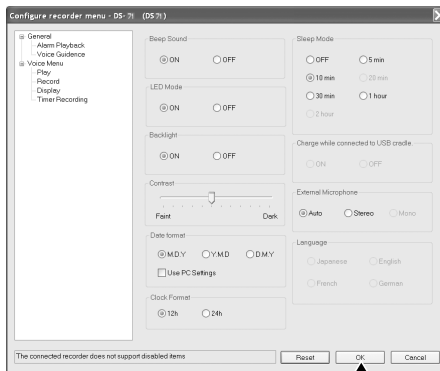

Importing Content for Listening on the Recorder

You can transfer language content and music files imported from language CDs and the Internet using Windows Media Player for playing on the recorder.

You can also use DSS Player to import and enjoy Podcast content found on the Internet.

The recorder is compatible with WMA and MP3 language content.

In addition, recorder is compatible with the Audible content of the ACELP and MP3 formats when recorder is in the Audible mode.

Import files using Windows Media Player

- Copy music files and language content from CDs to a computer.
➔ Please see [Copying Music from CD] (☞ P143) for details.
- Transfer copied music files and language content from the computer to the recorder.
➔ Please see [Transferring Music File to the Recorder] (☞ P144) for details.

Import files using DSS Player

- Import Podcast content from the Internet to a computer.
➔ Please see [Importing Podcast Content] (☞ P147) for details.

Download Audible content using the Audible Manager


- Download Audible content available from the Audible web site for a fee to a computer.
➔ See [Loading Audible Content] (☞ P154) for details.

Directly record files to the Recorder

- Connect the recorder to another device to record directly to the recorder.
➔ Please see [Recording the Sound of Other Devices with This Recorder] (☞ P41) for details.
Download from www.Somanuals.com. All Manuals Search And Download.

Using Windows Media Player

By using Windows Media Player, music files from music CDs can be converted (ripped) (P143) and music files that you have bought from any music distribution sites can be easily transferred to the recorder. (P144)

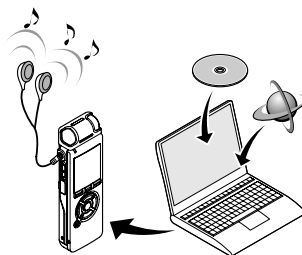

Copyright and Copyright Protection Feature (DRM)

By the Copyright Act, any voice/music files and music CDs downloaded from the Internet without the copyright holder's permission may not be reproduced, distributed, publicized/republicized on the Internet, or converted into WMA or MP3 files for the purpose of commercial business or sale.

A WMA file may be provided with DRM (Digital Right Management) for copyright protection. DRM limits the file to copy or distribute music files that are converted (ripped) from a music CD or downloaded from music distribution services. To transfer a WMA file with DRM to the recorder, you need to use appropriate methods such as Windows Media Player. Copying the music files with DRM purchased from online music distribution service to a portable device such as this recorder may be restricted.

Note

- This recorder is compatible with Microsoft Corporation DRM9, but not with DRM10.


Window Names (Windows Media Player)

Windows Media Player 11



- ① Features taskbar
- ② Seek slider
- ③ Shuffle button
- ④ Repeat button
- ⑤ Stop button
- ⑥ Previous button
- ⑦ Play button
- ⑧ Next button
- ⑨ Mute button
- ⑩ Volume slider

Windows Media Player 10

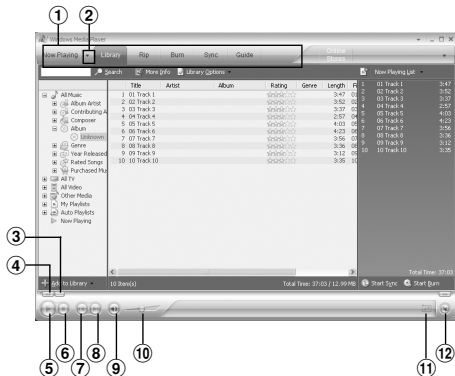

- ① Features taskbar
- ② Quick Access Panel button
- ③ Seek slider
- ④ Repeat button
- ⑤ Play button
- ⑥ Stop button
- ⑦ Previous button
- ⑧ Next button
- ⑨ Mute button
- ⑩ Volume slider
- ⑪ Shuffle/Repeat button
- ⑫ Fast Forward button

Copying Music from CD

1 Insert CD into the CD-ROM drive and start Windows Media Player.

2 From the Features taskbar, click the [Rip] menu.

After clicking [Rip] menu, click [ViewAlbum Info] for Windows Media Player 10 as necessary.

If Internet connectivity is available, CD information is searched.

3 Put a check mark on the music file that you want to copy.


4 Click [Start Rip].

For Windows Media Player 10 Click [Rip Music].

Files copied to a PC are stored in WMA format. Music files copied are categorized by artist, album, genre, etc. and added to the play list.



Windows Media Player 11

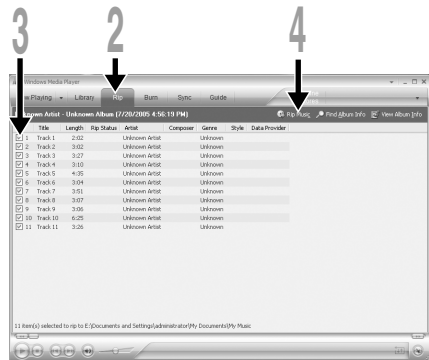

Windows Media Player 10

Transferring Music File to the Recorder


You can transfer the music files saved in your PC to this recorder. For how to copy the music files from the CD to your PC, see [Copying Music from CD]. (P143)

Windows Media Player 11

- 1 Connect the recorder to a PC, and start Windows Media Player.
- 2 From the Features taskbar, click [Sync].
- 3 Click [Sync] menu again to select [DVR] → [Advanced Options] → [Set Up Sync], and set as follows.

- Click on the [Create folder hierarchy on device] to check. *1 *2
- The folder with artist name or album name is automatically created. This will make you find the file you want to listen to more easily.

- *1 If [Create folder hierarchy on device] is checked by default, click to uncheck the box once, and click it again to check.
- *2 After the synchronous transfer to the recorder, a file named [WMPInfo.xml] is created. If you delete this file, the *1 may need to be set again.

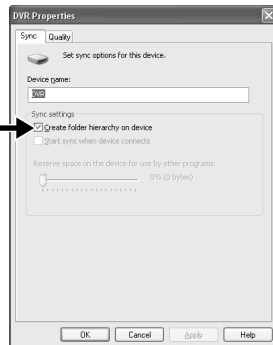

4 Select the desired category from [Library] on the left, and select music files or albums to transfer to the recorder, and Drag & Drop them in [Sync List] on the right.

5 Click [Start Sync].
The file is transferred to the recorder.




Windows Media Player 10

1 Connect the recorder to a PC, and start Windows Media Player.

2 From the Features taskbar, click [Sync].

3 From the pull down menu on the left side window, select the play list to be transferred to the recorder, and put the check marks on the music file that you want to transfer. The order of music pieces can be changed by Drag & Drop of the music file in the play list displayed.

4 From the pull down menu on the right side window, select the drive corresponding to the recorder. The recorder is recognized as a Removable Disk.

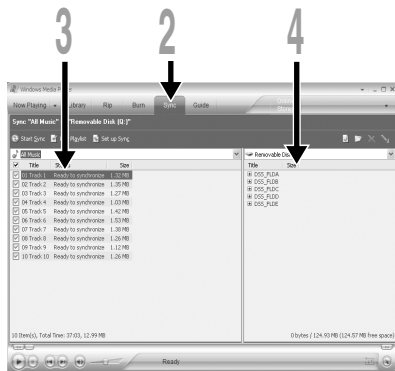

5 Click on the upper right corner, and set the synchronization options.



- Click on the [Create folder hierarchy on device] to check. *1 *2
- The folder with artist name or album name is automatically created. This will make you find the file you want to listen to more easily.

*1 If [Create folder hierarchy on device] is checked by default, click to uncheck the box once, and click it again to check.

*2 After the synchronous transfer to the recorder, a file named [WMPInfo.xml] is created. If you delete this file, the *1 may need to be set again.

6 Click [Start Sync]. The file is transferred to the recorder.

The file is transferred to the recorder. The music file transferred to the recorder is displayed in Item on Device.

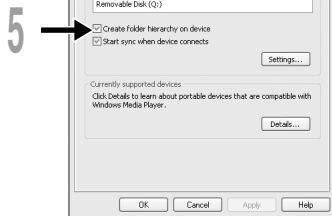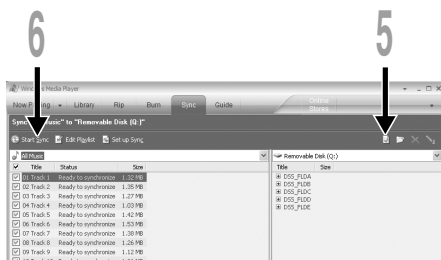

Notes

- Copying the music files with DRM purchased online music distribution service to a portable device such as this recorder may be restricted.
- Refer to the online help of Windows Media Player for details.
- To transfer the files by using Windows Media Player 9, check the Olympus website.
- If the music files are transferred to the recorder until it reaches to the maximum memory, the message [Cannot make the system file. Connect to PC and delete unnecessary file] may appear on this recorder's display. In such a case, erase the files to make free space (hundreds of KB to dozens of MB depending on the music file sizes) for the management file. (The more capacity for the management file will be necessary to download from the Web site (links are as follows). Manuals Search And Download.

Importing Podcast Content

By registering favorite programs in DSS Player, you can download the latest broadcasting content automatically. Also the new content can be transferred onto the recorder simply by connecting it to a computer.

Register a Podcast program

1 Start DSS Player.

2 Open a web browser and go to a Podcasting site.

3 Drag the Podcast registration icon and drop it in the [Podcast] folder in DSS Player.



Podcast registration icons differ depending on Podcasting sites. Please check each Podcasting site for details.

4 Program registration will complete.

When a program is registered, a list of broadcasting content provided by the program will appear in the [Podcast] folder's list view.

By default, the latest content at the time of registration will be automatically downloaded.

Drag and drop the icon to the Podcast registration icon.

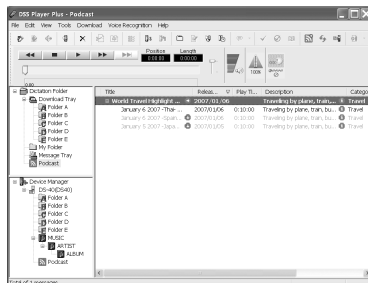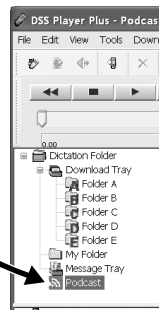

Note

- Please note that this recorder cannot play back content other than in MP3 and WMA formats.


Download from www.Somanuals.com. All Manuals Search And Download.

Update a program

By default, programs registered in DSS Player will be automatically updated. To change update intervals, go to [Tools] then [Options], and change them in the Options dialog's Podcast tab. See the Online Help for details. (P109)

If you don't want to update programs automatically, you can update the using the following procedure.


- 1 Select the [Podcast] folder.
- 2 Select a program you want to update.

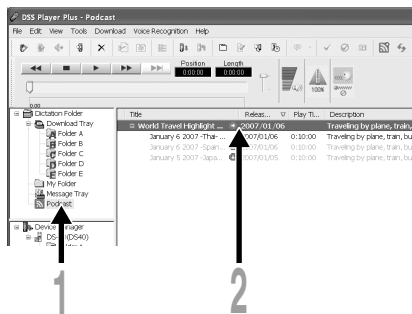

- 3 Select [Update Podcast] from the [Tools] menu or press the  button.

Updating program starts.


Once the program has been updated the new content will be displayed in gray. The content displayed in gray has not yet been downloaded onto a computer.

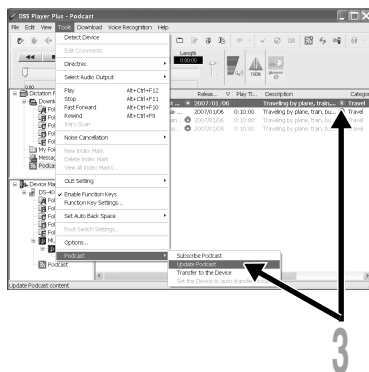

Download the Content

By default, if new content is found when a program is updated, the latest content will be automatically downloaded. This setting can be changed by selecting [Tools] then [Options] and going to the Options dialog's Podcast tab. See the Online Help for details. (P109) If you want to download manually, The content can be downloaded with the procedure described below.

1 Select the [Podcast] folder.

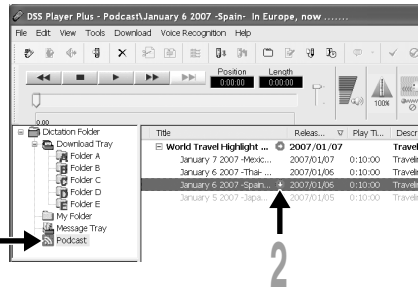

2 Click the [Download] button of the content you want to download.


Content downloading will start.

The status is displayed by the percentage while contents are being downloaded.



3 Download will complete.

Downloaded content can be played and transferred to the recorder.

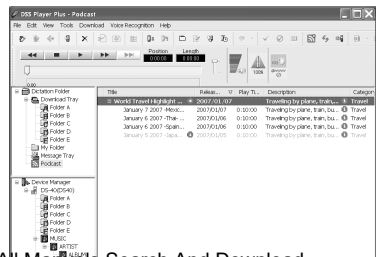


Transfer Content to the Recorder

In the default setting, the content automatically transferred into the [Podcast] folder on the recorder when the recorder connects to a computer. This setting can be changed by selecting [Options] under [Extras], and by selecting the [Podcast] tab displayed on the Option dialog box. See the Online Help (P109) for details.


If you want to transfer content manually, follow the procedure below.

1 Select the [Podcast] folder.

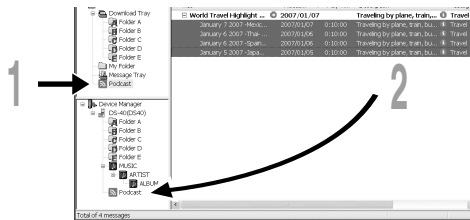

2 Select the content you want to transfer, and drag it to the [Podcast] folder of the recorder and drop it.

 
Content transfer will start.



A progress window will appear during transfer.

3 Transfer will complete.

Content transferred to the recorder will have an icon indicating a completed transfer. Press the Podcast button on the recorder to easily open transferred files. (P20)

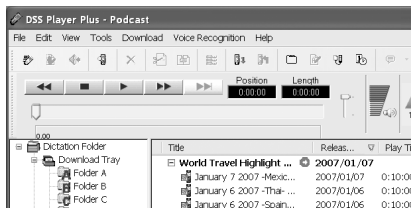


Note

- NEVER disconnect the USB while the record/play indicator light is flashing. If you do, the data will be destroyed.

Download from www.Somanuals.com. All Manuals Search And Download.

Bookmark mode



The recorder has the bookmark mode in the contents file of the [Music] folder which is transferred to the recorder. When the recorder is in bookmark mode, it automatically memorizes the last stop position as a [Playback Position]. Even the recorder is stopped while a file is being played back, the last stop position is recalled from the file, and the file can be played back from that position next time.

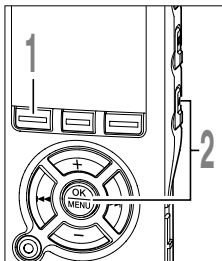

1 Selecting the desired contents in the [Music] folder.

2 Press the **PLAY** or **OK** button to start playback.

The record/play indicator light glows green. When you play the file which you have previously played back, the playback starts from the last stop position.

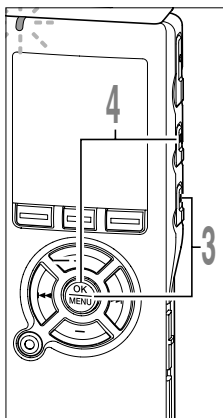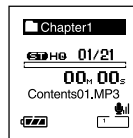



3 Press the **STOP** or **OK** button at any point you want to stop the playback.

Stop a file play back at any point. The stop position is memorized as a [Playback Position] in the file. In this status, even if you select an empty file, move to the other folder, or turn the recorder off, the playback starts from the last memorized position when you play the same file.

4 Playing back the contents file which has been played back halfway.

Press the **PLAY** or **OK** button to start playing back from where it was stopped.

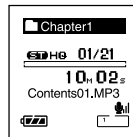

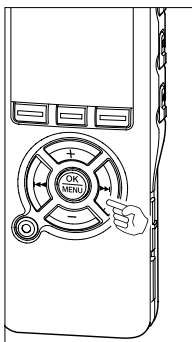

Forwarding


Press and hold the **▶▶** button while the recorder is stopped.

- ▶ When you release the button, the recorder stops, but the Playback Position will not be updated. Press the PLAY or OK button to start playing back from where it was stopped.

Press and hold the **▶▶** button while playing a file.

- ▶ When you release the **▶▶** button the recorder will resume normal playback.

- If a temp mark (⌘ P73) or Playback Position is marked in the middle of the file, the playback stops once at that position.
- The recorder stops when it reaches the end of the file. Continue pressing the **▶▶** button to proceed with the cue from the beginning of the next file.

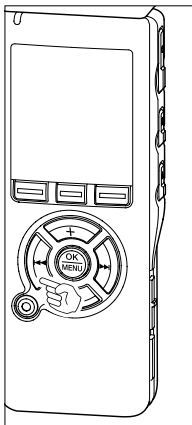

Rewinding

Press and hold the **◀◀** button while the recorder is stopped.

- ▶ When you release the button, the recorder stops, but the Playback Position will not be updated. Press the PLAY or OK button to start playing back from where it was stopped.

Press and hold the **◀◀** button while playing a file.

- ▶ When you release the **◀◀** button the recorder will resume normal playback.

- If a temp mark (⌘ P73) or Playback Position is marked in the middle of the file, the playback stops once at that position.
- The recorder stops when it reaches the beginning of the file. Continue pressing the **◀◀** button to proceed with the review from the end of the previous file.
- If the **◀◀** button is kept pressed while the recorder is stopped at the start of the top file, the recorder will fast rewind starting from the end of the last file.

Locating the Beginning of the File



Press the ►► button during playback, slow playback, or fast playback.

- The next file is cued and playback starts at the previously set speed.



Press the ◀◀ button during playback, slow playback, or fast playback.

- The file being played is cued and playback starts at the previously set speed.



Press the ◀◀ button 2 times during playback, slow playback or fast playback.

- The previous file is cued and playback starts at the previously set speed.

- If a temp mark (Ⓜ P73) is marked in the middle of the file, It reproduces from the position.
- If the skip space is set at other than file skip (Ⓜ P50), the recorder will F. Skip (forward skip) or R. Skip (reverse skip) for a set time before playback.

To skip a file



Press the ►► button while the recorder is stopped.

- It skips to the Playback Position of the next file.



Press the ◀◀ button when the playback is stopped at the beginning of the file.

- It skips to the Playback Position of the previous file.



Press the ◀◀ button when the playback is stopped in the middle of the file.

- It skips to the head of the file.

Notes

- The bookmark mode is compatible with the files within the [Music] folder.
- If the content Download from WWW Service, also Play Back, Position Search, and Download simultaneously.

Loading Audible Content

Use the AudibleManager to load Audible content onto the recorder.

Playback, management, and transfer of Audible content to the recorder can be done using the AudibleManager.

Installing AudibleManager

When AudibleManager is not installed on a computer, install the AudibleManager according to the procedure described below.

1 Access one of Audible web sites from the web browser and download the AudibleManager.

<http://www.audible.com/> (United States)


<http://www.audible.co.uk> (United Kingdom)

<http://www.audible.fr> (France)

<http://www.audible.de> (Germany)

2 Start up the downloaded executable file.


The AudibleManager Setup screen will be displayed. Select the name of the device in use (OLYMPUS DS-61 or DS-71) and click the [Install] button.

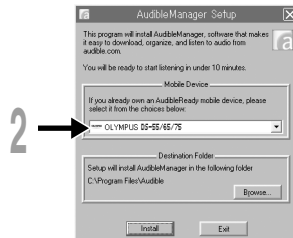

3 When the [Audible Manager License Agreement] is displayed, click the [I Accept] button.

4 Installation starts.


Wait until process has been completed. Once the installation has been completed AudibleManager starts up automatically.

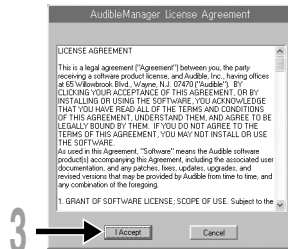


Adding Device to AudibleManager

If AudibleManager has already been installed, add a device in order to handle the recorder in the AudibleManager. Follow the procedure described below.


1 Select [Add New Device] in the [Devices] menu.

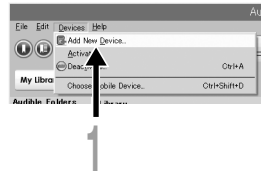

2 When the dialog box displays, verify the internet connection and click the [Yes] button.

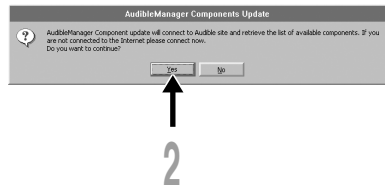

3 When the dialog box is displayed, check the name of the device in use (DS-61 or DS-71) and click the [OK] button.

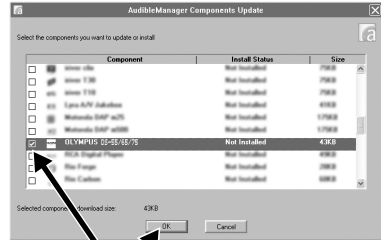


4 Installation starts. Wait until the process has been completed. Once the installation has been completed, AudibleManager restarts. Verify that the device in use has been added to the [Mobile Devices] menu.



Purchasing Audible Content

Audible content can be purchased from the Audible web site. Access to the Audible web site using web browser and download the content by following the purchase procedures described on the web site.

With the existing setting, content downloads to the Library folder in the AudibleManager. When download has been completed, the AudibleManager starts up and purchased content displays on the contents list in the Library.

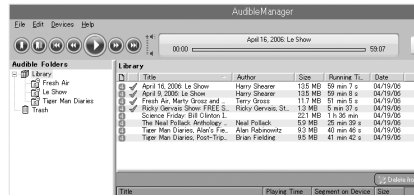


Transferring Audible Content

Audible content can be transferred into the [Audible] folder on the recorder by following the procedure described below.

1 Connect the recorder to a computer.

2 Select [Library] in the [Audible Folders] tree listing.
A list of content stored in the [Library] displays on the right side.

3 Select the content to be transferring to the recorder and click the [Add to Device] button.

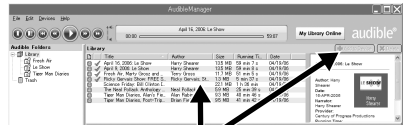


4 When the [Activate Your Device] entry screen is displayed, enter the user name and password for Audible and click the [OK] button.



5 The transfer begins.

Wait until the transfer of the content has been completed. When it has been completed, the transferred content is displayed in the contents listing of the device. Also, the transferred content is displayed in the Library.

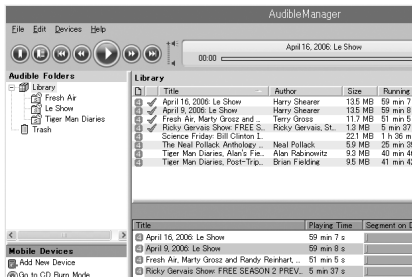

Notes

- When a content file is transferred to the recorder, a [.pos] file will be automatically created for each content file in the Audible folder.
- When the [.pos] file is deleted, using Explorer, the stored Playback Position will be deleted. The next time the file is selected, playback starts from the beginning of the file.
- When a content file is transferred to the recorder, a system file will be created as a hidden file inside the Audible folder. When this file is deleted using Explorer, it is no longer possible to play back the Audible content.




Enjoy Audible Content with the Recorder

Audible content that has been transferred into the [Audible] folder on the recorder from a computer can be enjoyed with an exclusive mode optimally suited for the operation of Audible content.

Audible Mode


When you select the [Audible] folder on the recorder, the recorder automatically switches to the Audible mode. The Audible mode is an exclusive mode for enjoying Audible content (modes 2, 3, and 4 formats*) transferred from a computer. The operating method for Audible mode differs from when other folders on the recorder are selected (Normal mode). See the [Operating Recorder in Audible Mode] (☞ P161) for details.

File Display Screen in Audible Mode

In the Audible mode, [Playback mode] (☞ P55) becomes the [File] setting regardless of the menu settings and the recorder stops after playing back one file. In addition, icons (, , ) which indicate Audible files are also displayed on the File display screen.

See [Selecting Folders and Files] (☞ P20, 21) for details relating to the selection method of folders and files.

Ⓐ **Audible file indicator**

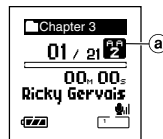

Re-playable Audible Files

Files of modes 2, 3, and 4 formats can be played back in the Audible mode. Only those Audible files that have an [.aa] extension are displayed in the Audible mode (in the Audible folder on the recorder).

Re-playable Audible files formats *

Mode	Codec
2 (AA 2)	ACELP (8.5kbps)
3 (AA 3)	ACELP (16kbps)
4 (AA 4)	MP3 (32kbps)

Playback Position and Section

In the Audible mode, the starting position can be moved easily by referring to the [Playback Position] which is the positional information stored from previous stops for each file, and by referring to [Section] where the content distributor has preset the position.

Playback Position

The Playback Position (positional information) is stored in the [.pos] file, which is created automatically by the recorder for each Audible content file ([.aa] file).

The Playback Position is initially located at the beginning of the file, and the stop position will be updated by playback or the use of S. Play (slow playback)/F. Play (fast playback).

Press the ►► or ◀◀ button to move the stop position while the recorder is stopped. The Playback Position will not be updated.

Section

Up to a maximum 100 divisions (chapters of a story or segments of news) are set arbitrarily for each file by the distributor of the content.


.....

Notes

- When a content file is transferred to the recorder, a [.pos] file will be automatically created for each content file in the Audible folder.
- You can not set the Index marks or the Temp marks in the Audible mode.
- When the [* .pos] file is deleted, using Explorer, the stored Playback Position will be deleted. The next time the file is selected, playback starts from the beginning of the file.
- When a content file is transferred to the recorder, a system file will be created as a hidden file inside the Audible folder. When this file is deleted using Explorer, it is no longer possible to play back the Audible content.

Operating Recorder in Audible Mode

The operating method on the recorder is different in the Audible mode when the [Audible] folder is selected, then while in the Normal mode.

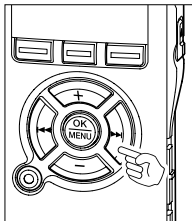

Forwarding


Press and hold the ►► button while the recorder is stopped.

- ➔ When the button is released fast forwarding stops. The Playback Position is not updated. When the PLAY or OK button is pressed playback resumes from that position.

Press and hold the ►► button while playing a file.

- ➔ When the button is released playback resumes from that position.

- If the starting position of a section (Ⓜ P160) and the playback position are in the middle of a file, the recorder stops at that position.
- When the ►► button is held down while the recorder is stopped, the recorder moves to the end of the file and then stops. If the ►► button is still held down, the recorder moves to the next file and continues fast forwarding from the beginning of the file. After fast forward reaches the end of the last file, the recorder stops at the beginning of the last file.
- When the ►► button is held down during playback and the end of the file is reached, the recorder goes back to the beginning of the file and stops.

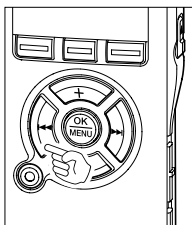

Rewinding


Press and hold the ◀◀ button while the recorder is stopped.

- ➔ When the button is released fast rewinding stops. The Playback Position is not updated. When the PLAY or OK button is pressed playback resumes from that position.

Press and hold the ◀◀ button while playing a file.


- ➔ When the button is released playback resumes from that position.

- If the starting position of a section (Ⓜ P160) and the playback position are in the middle of a file, the recorder stops at that position.
- When the ◀◀ button is held down while the recorder is stopped, the recorder returns to the beginning of the file and then stops. If the ◀◀ button is still held down, the recorder moves back to the end of the previous file and continues fast rewinding.
- When the ◀◀ button is held down during playback and the recorder reaches the beginning of the file, the recorder starts playback from the beginning of that file.
- If the ◀◀ button is kept pressed while the recorder is stopped at the start of the top file, the recorder will fast rewind starting from the end of the last file.

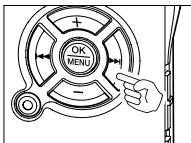

Press the ►► button while the recorder is stopped.

- The recorder skips to a playback position or the starting position of a section, whichever is closer in the file, and stops. After a stop position, if there is no playback position, or a starting position of a section, the recorder will skip to a playback position in the next file and stop.

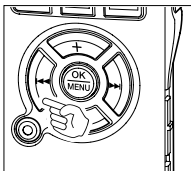


Press the ◀◀ button when the recorder has stopped at the beginning of a file.

- The recorder skips to the Playback Position of the previous file and then stops.

Press the ◀◀ button if the recorder has not stopped at the beginning of a file.

- The recorder skips to a playback position or the starting position of a section, whichever is closer in the file, and stops.

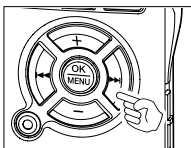

Press the ►► button during playback.

- The recorder skips three seconds forward, or to the starting position of the next section, whichever is closer, and starts to play back the file. After reaching the end of the file the recorder stops at the beginning of the file. The Playback Position is updated to the beginning position of the file at this time.



Press the ◀◀ button during playback.

- The recorder skips three seconds back, or to the starting position of the current section, whichever is closer, and starts to play back the file. When the recorder reaches the beginning of a file the file plays from the beginning.

- The [Skip Space] (Ⓜ P50) setting is invalid in the Audible mode.

Setting menu during playback

Press and the hold the **MENU** button for 1 second or longer while the file is playing.

- Enter the Menu screen (Ⓜ P99, 101) to set the [Playback Speed] (Ⓜ P52), [Noise Cancel] (Ⓜ P59), and [Voice Filter] (Ⓜ P61).



Using as External Memory of the Computer

With the recorder connected to your PC, you can download data from the memory to your PC and upload data stored on your PC to the memory.

Example: Copying Data from PC to Recorder using Explorer

1 Start Windows.

2 Connecting the recorder to your PC.

For the connection procedure, refer to [Connecting to Your PC using the USB cable]. (☞ P110)

3 Open the Explorer window.

The product's name is displayed.

4 Copy the data.

While the data are being written or copied, the record/play indicator light on the recorder will flash.

5 Unplug the recorder from a computer.

For how to unplug the recorder, please see [Disconnecting from your PC]. (☞ P111)

Notes

- NEVER disconnect the USB while the record/play indicator light is flashing. If you do, the data will be destroyed.
- Make sure that the computer setting is storage class. If it is audio class, it won't recognize the recorder as a removable disk. (☞ P83)

Alarm Message List

Message	Meaning	Explanation	Action
Battery Low	Low battery power	Battery power is getting low.	Replace with new batteries (☞ P13).
File Protected	Erase-locked	Tried to delete a locked file.	Unlock the file(☞ P75).
Index Full	Index full	The file is full of index marks (maximum of 16 marks).	Erase index marks that are no longer required (☞ P73).
Temp Full	Tempmark full	The file is full of Tempmarks (maximum of 16 marks).	Erase Tempmarks that are no longer required (☞ P73).
Illegal Folder	Not an audio-recording folder.	Recording has been attempted with a folder other than [Folder A] through to [Folder E].	Select a folder from [Folder A] through to [Folder E] and try recording again (☞ P25).
Folder Full	Folder full	The folder is full of files (maximum of 200 files).	Erase unnecessary files (☞ P70).
Memory Error	Error in the internal memory	Error in the internal memory.	This is a malfunction, so go to the store where you purchased the recorder or an Olympus service station for repair.
License Mismatch	Illegally copied file	The music files copied illegally.	Delete the file (☞ P70).
Memory Full	Zero remaining memory	No remaining internal memory.	Erase unnecessary files (☞ P70).
No File	No file	No files were found in the folder.	Select another folder.
Format Error	Formatting error	There was an error while formatting the recorder's memory.	Reformat the memory (☞ P81).
Can't Make The System File.Connect To PC And Delete Unnecessary File	The management file cannot be created.	The file for management cannot be created due to a shortage of capacity for remaining flash memory.	Connect the recorder to a computer and delete any unnecessary files.

Troubleshooting

Symptom	Probable cause	Action
Nothing appears on the display	The batteries are not loaded properly.	Verify polarity is correct.
	The batteries are dead.	Replace with new batteries (☞ P13).
	The power is off.	Turn the power on (☞ P15).
Will not start	The power is off.	Turn the power on (☞ P15).
	The recorder is in HOLD mode.	Release the recorder from HOLD (☞ P16).
	The batteries are dead.	Replace with new batteries (☞ P13).
Unable to record	Low remaining internal memory.	Erase unnecessary files (☞ P70).
	The maximum number of files has been reached.	Check another folder.
No playback tone heard	The earphone is connected.	Unplug the earphones to use the internal speaker.
	The VOLUME button is set to 0.	Adjust the VOLUME button (☞ P47).
Unable to erase	The file is locked.	Unlock the file (☞ P73).
	The file is read-only.	Cancel the read-only setting of the file on the PC.
Noise heard during playback	The recorder was shaken during recording.	—
	The recorder was placed near a cell phone or fluorescent lamp while recording or during playback.	Move the recorder.
Recording level too low	The recording level has not been adjusted.	Adjust the recording level and then try.
	The microphone sensitivity is too low.	Set the microphone sensitivity to LECTURE or CONF mode and try again (☞ P35).
	This could potentially be because the recording level and output level for the connected external devices are too low.	If you cannot record clearly even after adjusting the recording level, then adjust the output level for the connected devices.
Recording level too high	The recording level has not been adjusted.	Adjust the recording level and then try recording once more (☞ P34).
	This could potentially be because the recording level and output level for connected external devices are too high.	If you cannot record clearly even after adjusting the recording level, then adjust the output level for the connected devices.

Symptom	Probable cause	Action
Unable to set index marks, tempmarks	The maximum number of marks has been reached.	Erase unnecessary marks (☞ P73).
	The file is locked.	Unlock the file (☞ P75).
	The file is read-only.	Cancel the read-only setting of the file on the PC.
Cannot find the recorded voice	Wrong folder.	Switch to the right folder.
The recorder does not start at the set time with [Timer Rec] or [Alarm]	The clock has not been set properly.	Verify the [Current Time] to reset the date and time if they are not properly set (☞ P18).
The Alarm, Starting tune and Closing tune, and guidance are not available	The data has been deleted by the formatting.	Copy the data to the recorder using the DSS Player (☞ P122). When copy the guidance data, the Alarm, Starting tune and Closing tune are also copied together.
You hear distortion in the earphone attached to the recording monitor	There is feedback.	Adjust the recorder and the earphone, such as keeping the earphone away from the microphone, avoiding turning the microphone toward the earphone, or turning down the volume on the recording monitor.

Accessories (optional)

Stereo microphone: ME55S

This is a stereo microphone dedicated to the DS-61 and DS-71 models. Two types are available, the ME55SA which is the same color as the DS-61 model, the ME55SK which is the same color as the DS-71 model.

Stereo microphone: ME51SW

The high fidelity of the recording, which only stereo can perform. Furthermore, it gives clear sound quality with less noise.

Highly sensitive noise-cancellation monaural microphone: ME52W

This microphone is used to record sound at a distance while minimizing surrounding noise.

Noise-Cancellation monaural microphone: ME12

(Dictation microphone)

Used to get crisp recordings of your own voice by reducing the effects of ambient noise.

Tie clip microphone: ME15

(Monaural)

Small concealing microphone with a tie-clip.

Telephone pickup: TP7

Earphone type microphone can be plugged into your ear while phoning. The voice or conversation over the phone can be clearly recorded.

AC adapter: A328 (US and Canada)

Ni-MH rechargeable battery: BR401

High-efficiency rechargeable long life batteries.

Connecting cord: KA333

Connecting cord which has stereo mini-plugs ($\phi 3.5$) with resistance at both ends. Use to connect from the earphone jack output of the recorder to the microphone input jack when recording. Converting plug adapters (PA331/PA231) which convert to the monaural mini plug ($\phi 3.5$) or monaural mini plug ($\phi 2.5$) are also enclosed.

Exclusive remote control: RS29

Special remote control for the DS-61 and DS-71. Remotely controls the recorder's recording/stop functions. If the supplied stereo microphone (ME55S) is plugged in, it can be used as a remote control stereo microphone.

Exclusive case: CS113 (supplied for the DS-61)

Belt loop on the back of the case.

Magnet hook for smooth opening and closing.

Exclusive case: CS122 (supplied for the DS-71)

The DS-71, 61's leather case guards the device from sustaining impact or becoming dirty.

Belt loop on the back of the case.

Magnet hook for smooth opening and closing.

This can also be used as a stand of the device.



Specifications

Recording medium

Built-in flash memory
DS-71: 4 GB
DS-61: 2 GB

Recording format

Linear PCM (Pulse Code Modulation)
(DS-71)
WMA (Windows Media Audio)

Input level

-63 dBv

Sampling frequency

PCM mode: 44.1 kHz
STEREO XQ mode: 44.1 kHz
STEREO HQ mode: 44.1 kHz
STEREO SP mode: 22 kHz
HQ mode: 44.1 kHz
SP mode: 22 kHz
LP mode: 8 kHz

Overall frequency response

PCM mode: 50 to 20,000 Hz
STEREO XQ mode: 50 to 19,000 Hz
STEREO HQ mode: 50 to 16,000 Hz
STEREO SP mode: 50 to 9,000 Hz
HQ mode: 50 to 13,000 Hz
SP mode: 100 to 8,000 Hz
LP mode: 100 to 3,000 Hz

Speaker

Built-in \varnothing 23 mm round dynamic speaker

MIC jack

\varnothing 3.5 mm mini-jack, impedance 1.4k Ω or more

EAR jack

\varnothing 3.5 mm mini-jack, impedance 8 Ω or more

Maximum working output (3 V DC)

250 mW or more (8 Ω speaker)

Maximum working output (3 V DC)

250 mW or more (8 Ω speaker)

Maximum headphone output

150mV (according to EN 50332-1)

Wide band characteristic headphone output

75 mV (according to EN 50332-2)

Clock accuracy

Monthly deviance less than 120 seconds.

Input power requirement

Rated voltage: 3 V
Batteries: Two AAA batteries (LR03, R03 or ZR03) or Two Ni-MH rechargeable batteries
External power supply: AC adapter
3V \approx 300mA

External dimensions

Recorder: 96 x 37.5 x 16 mm
(without protrusions)
Microphone(ME55S) + Recorder:
111 x 37.5 x 16 mm (without protrusions)

Weight

Recorder: 73 g
(including alkaline batteries)
Microphone(ME55S) + Recorder: 80g
(including alkaline batteries)

Maximum recording time per file	
PCM	3 hours 20 minutes
STEREO XQ	26 hours 40 minutes
STEREO HQ	26 hours 40 minutes
STEREO SP	53 hours 40 minutes
HQ	26 hours 40 minutes
SP	53 hours 40 minutes
LP	148 hours 40 minutes

A maximum recording time per file is set for each mode. Even if the recorder's memory is not used up, recording cannot be continued beyond the limit.

- * Specifications and design are subject to change without notice.
- * Battery life is measured by Olympus. It varies greatly according to the type of batteries used and the conditions of use.

Guide to recording times

Mode \ Model	DS-61 (2GB)	DS-71 (4GB)
PCM	—	6 hours 10 minutes
STEREO XQ	33 hours 50 minutes	67 hours 50 minutes
STEREO HQ	67 hours 40 minutes	135 hours 40 minutes
STEREO SP	135 hours 30 minutes	271 hours 30 minutes
HQ	135 hours 30 minutes	271 hours 30 minutes
SP	266 hours 50 minutes	534 hours 30 minutes
LP	530 hours 50 minutes	1062 hours 50 minutes

Available recording time may be shorter if many short recordings are made.
(The displayed available recording time and recorded time are approximate indications.)

Guide to battery life

● Alkaline battery life

Recording	
Linear PCM	Approx. 25 hours
STEREO XQ	Approx. 20 hours
LP	Approx. 32 hours

Playback: Speaker Playback	
All mode	Approx. 20 hours
Playback: Earphone Playback	
All mode	Approx. 28 hours

● Ni-MH Rechargeable battery life

Recording	
Linear PCM	Approx. 17 hours
STEREO XQ	Approx. 14 hours
LP	Approx. 22 hours

Playback: Speaker Playback	
All mode	Approx. 13 hours
Playback: Earphone Playback	
All mode	Approx. 20 hours

Technical Assistance and Support

The following are contact information for technical support for Olympus recorders and software only.

- ◆ Technical Hotline Number in the U.S. and Canada
1-888-553-4448
- ◆ User Support E-mail address in the U.S. and Canada
distec@olympus.com
- ◆ Technical Hotline Number in Europe
Toll free number
00800 67 10 83 00
available for Austria, Belgium, Denmark, Finland, France, Germany, Italy, Luxemburg,
Netherlands, Norway, Portugal, Spain, Sweden, Switzerland, United Kingdom
Charged numbers for the Rest of Europe
+49 180 567 1083
+49 40 23773 4899
- ◆ User Support E-mail address in Europe
dss.support@olympus-europa.com



OLYMPUS IMAGING CORP.

Shinjuku Monolith, 3-1 Nishi-Shinjuku 2-chome, Shinjuku-ku, Tokyo 163-0914, Japan. Tel. 03-3340-2111
<http://www.olympus.com>

OLYMPUS IMAGING AMERICA INC.


3500 Corporate Parkway, P.O.Box 610, Center Valley, PA 18034-0610, U.S.A. Tel. 1-888-553-4448
<http://www.olympusamerica.com>

For customers in North and South America

Declaration of Conformity

Model Number: DS-61/71
Trade Name: DIGITAL VOICE RECORDER
Responsible Party: OLYMPUS IMAGING AMERICA INC.
Address: 3500 Corporate Parkway, P.O. Box 610, Center Valley, PA 18034-0610,
U.S.A.
Telephone Number: 1-888-553-4448

This device Complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

 Tested To Comply
With FCC Standards
FOR HOME OR OFFICE USE

Canadian RFI

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the Radio Interference Regulations of the Canadian Department of Communications.

Cet appareil numérique ne dépasse pas les limites de Catégorie B pour les émissions de bruit radio émanant d'appareils numériques, tel que prévu dans les Règlements sur l'Interférence Radio du Département Canadien des Communications.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>