

DIGITAL VOICE RECORDER

**VN-6200PC
VN-5200PC
VN-3200PC**

EN INSTRUCTIONS

Thank you for purchasing an Olympus Digital Voice Recorder. Please read these instructions for information about using the product correctly and safely. Keep the instructions handy for future reference.

To ensure successful recordings, we recommend that you test the record function and volume before use.

OLYMPUS IMAGING CORP.
Shinjuku Monolith, 3-1 Nishi-Shinjuku 2-chome, Shinjyuku-ku, Tokyo 163-0914, Japan. Tel. +81 (0)3-3340-2111
<http://www.olympus.com>

 
OLYMPUS IMAGING AMERICA INC.
3500 Corporate Parkway, P.O. Box 610, Center Valley, PA 18034-0610, U.S.A. Tel. 1-888-553-4448
<http://www.olympusamerica.com>

For customers in North and South America:

Declaration of Conformity

Model Number: VN-6200PC/VN-5200PC/VN-3200PC
Trade Name: DIGITAL VOICE RECORDER
Responsible Party: OLYMPUS IMAGING AMERICA INC.
Address: 3500 Corporate Parkway, P.O. Box 610, Center Valley, PA 18034-0610, U.S.A.
Telephone Number: 1-888-553-4448

This device Complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



Canadian RFI:

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the Radio Interference Regulations of the Canadian Department of Communications.
Cet appareil numérique ne dépasse pas les limites de la Catégorie B pour les émissions de bruit radio émanant d'appareils numériques, tel que prévu dans les Règlements sur l'Interférence Radio du Département Canadien des Communications.

Introduction

- The contents of this document may be changed in the future without advanced notice. Contact our Customer Support Center for the latest information relating to product names and model numbers.
- The utmost care has been taken to ensure the integrity of the contents of this document. In the unlikely event that a questionable item, error, or omission is found, please contact our Customer Support Center.
- Any liability for passive damages or damage of any kind occurred due to data loss incurred by a defect of the product, repair performed by the third party other than Olympus or an Olympus authorized service station, or any other reason is excluded.

Trademarks and registered trademarks:

- Microsoft, Windows and Windows Media are registered trademarks of Microsoft Corporation.
- Macintosh is the trademark of Apple Inc.

Other product and brand names mentioned herein may be the trademarks or registered trademarks of their respective owners.

 
Safe and Proper Usage

Before using your new recorder, read this manual carefully to ensure that you know how to operate it safely and correctly. Keep this manual in an easily accessible location for future reference.
The warning symbols indicate important safety related information. To protect yourself and others from personal injury or damage to property, it is essential that you always read the warnings and information provided.




Getting Started

Identification of Parts

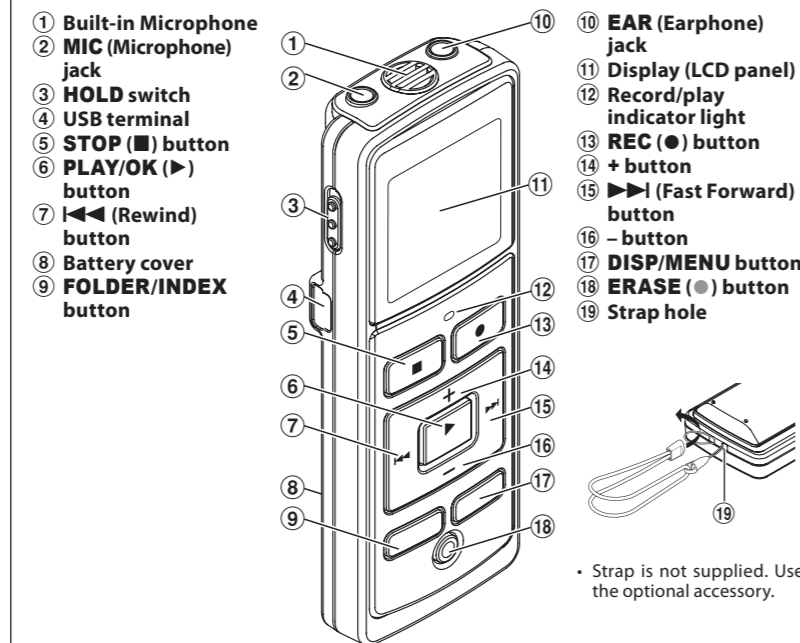


Display (LCD panel):

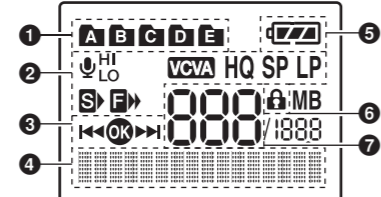 

- 1 Folder indicator
- 2 Microphone sensitivity indicator
- 3 Variable Control Voice Actuator indicator
- 4 Record mode indicator
- 5 Fast playback indicator
- 6 Slow playback indicator
- 7 Guide indicator
- 8 Character information display
- 9 Recording level meter
- 10 Battery indicator
- 11 Erase lock indicator
- 12 Current file number

 Inserting Batteries

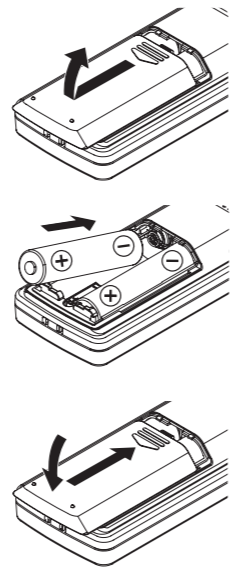

1 Lightly press down on the arrow and slide the battery cover open.

2 Insert two size-AAA alkaline batteries, observing the correct polarity.

 
3 Close the battery cover completely.
When the HOLD switch is set to the direction of the arrow, the display is turned off after [HOLD] is displayed. Follow the next step without regard to it.

An optional Ni-MH Rechargeable Battery (BR401) from Olympus can be used for the recorder.

Replacing the Batteries:

When [] appears on the display, replace the batteries as soon as possible. Size-AAA alkaline batteries are recommended. When the batteries are depleted, [] appears on the display, and the recorder shuts off.
To replace the battery, make sure that you set the HOLD switch to the opposite direction of the arrow before replacing.

Power Supply

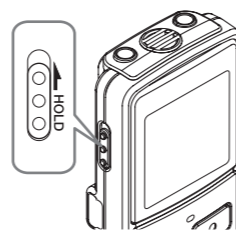

Power on: Slide the HOLD switch in the direction opposite that indicated by the arrow.
Power off: Slide the HOLD switch in the direction indicated by the arrow while the recorder is not in operation.

Standby Mode and Display Shut Off:

If the recorder is stopped for 5 minutes or longer during recording or playing, it goes into Standby (power-save) mode, and the display shuts off. To exit Standby mode and turn on the display, press any button.

Hold

Setting the HOLD switch to the direction of the arrow holds the current status, and all button operations are disabled. Remember to release the HOLD switch to use the recorder.

Setting Time and Date [Time & Date]

If you have set the time and date, information as to when a sound file was recorded is stored automatically with that file.

When you install batteries for the first time or each time you replace the batteries, the "Month" indication will flash. In such a case, be sure to set the time and date by following steps 1 through 4 described below.

- Press and hold the DISP/MENU button for 1 second or longer to go to the main menu.
- Press the >>> or <<<< button to select [Sub Menu].
- Press the PLAY/OK (>) button.
[Time & Date] appears on the display, and [] flashes.
- Press the >>> or <<<< button to select the item to set.
Select the item from "Month", "Day", "Year", "Hour" and "Minute" with a flashing point.

- Press the + or - button to set.
Follow the same steps by pressing the >>> or <<<< button to elect the next item, and press the + or - button to set.
- Press the PLAY/OK (>) button to complete the setup screen.
The clock will start from the set date and time.
Press the PLAY/OK (>) button according to the time signal.
- Press the STOP (■) button to close the menu mode.
This completes the time and date setup procedure.

Notes:
You can choose between 12 and 24 hour display by pressing the DISP/MENU button while setting the hour and minute.
You can change the order of the date indication by pressing the DISP/MENU button while you are setting the year, month, or day.

Recording

Notes on the Folders

The recorder provides five folders, [A], [B], [C], [D], and [E]. To change the folder selection, press the FOLDER/INDEX button while the recorder is stopped.

Note:
Up to a total of 200 files can be recorded in each folder.

Recording

- Press the FOLDER/INDEX button to select the desired folder.
a Current folder
- Press the REC (●) button to start recording.
The record/play indicator light turns red, and recording starts.
If you start recording after inserting the earphone into the earphone jack on the recorder, you can hear the sound being recorded. The sound volume on the recording monitor can be adjusted by pressing the + or - button.
b Current recording mode
c Current file number
d Recording time
e Remaining recording time
f Recording level meter
- Press the STOP (■) button to stop recording.
New recordings are saved as the last file in the folder.

To Pause Recording

To Pause:
While the recorder is during recording mode, press the REC (●) button.
[Rec Pause] appears on the display.

To Resume Recording:
Press the REC (●) button again.
Recording will resume at the point of interruption.

LCD Display Information

You can select an option for the display of the recorder. This will help review and confirm different recorder settings and file information.

State of the recorder	Operation	Display
While in stop mode	Press and hold the STOP (■) button	While holding the button down, "Remaining recording time" and "Remaining memory" are displayed.
While in record mode	Press the DISP/MENU button	Each press switches the display in the order of "Recording elapsed time", "Remaining recording time" and "Recording level meter".
While in stop mode or playback mode	Press the DISP/MENU button	Each press switches the display in the order of "Playback elapsed time", "Remaining playback time", "Date of recording" and "Time at recording".

Playback

Playback

- Press the FOLDER/INDEX button to select the desired folder.
- Press the >>> or <<<< button to select the file to playback.
- Press the PLAY/OK (>) button to start playback.
The record/play indicator light turns green, and the elapsed playing time is indicated on the display.
a Current file number
b Playing time
- Press the + or - button to select the proper sound volume.
The display shows the volume level. You can choose between [00] to [30].

Canceling Playback

To Stop:
Press the STOP (■) button.
The recorder stops in the middle of the file being played.

To Resume Playback:

Press the PLAY/OK (>) button again.
Playback will resume at the point of interruption.

 
Forwarding and Rewinding

Fast Forward:
While the recorder is during playback mode, press and hold the >>>> button.
When you release the >>>> button, the recorder will resume normal playback.

Rewind:

While the recorder is during playback mode, press and hold the <<<< button.
When you release the <<<< button, the recorder will resume normal playback.
Notes:
The recorder pauses when it reaches to the end of the file during fast forwarding or fast rewinding. Pressing and holding it continues fast-forwarding or fast-rewinding.
If there is an index mark or temp mark in the middle of the file, the recorder will stop at that location.


Locating the Beginning of the File

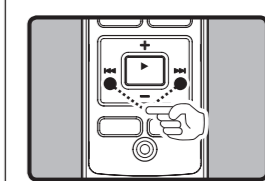

While the recorder is during playback mode (playback or playback in slow/fast mode), press the >>>> or <<<<< button.
Jumps to the beginning of the next file or the file being played back.

Note:
If there is an index mark or temp mark in the middle of the file, the recorder will stop at that location.

 Changing the Playback Speed

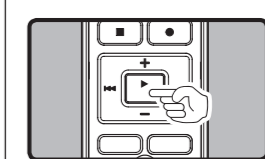

While the recorder is during playback mode, press the PLAY/OK (>) button to change the playback speed.

Notes:
When the slow playback mode is selected, the [] appears and, for the fast playback mode, [] appears on the display.
Even if playback is stopped, the changed playback speed will be retained.
The next playback will be at that speed.

Erase

You can easily erase unnecessary files. Sequential file numbers are reassigned automatically.

Erasing One File at a Time

- Press the FOLDER/INDEX button to select folder.
- Press the >>> or <<<< button to select the file to be erased.
a File to be erased
- Press the ERASE (●) button.
- Press the >>> button to select [Start].
- Press the PLAY/OK (>) button.

Erase All Files from a Folder

- Press the FOLDER/INDEX button to select the folder to be erased.
a Folder to be erased
- Press the ERASE (●) button twice.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>