



URC 4063 Easy 4

User Manual

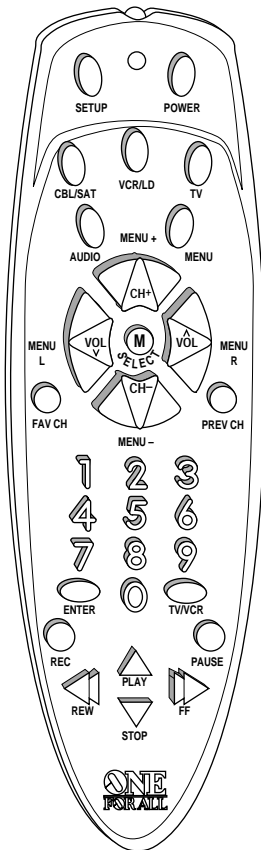
Previous Model Name: Big Easy Select

Overview

Thank you for purchasing the *One For All® Easy 4* universal remote control. Before you can use your new remote, you will need to program it to operate the specific home entertainment components you wish to control. Follow the instructions detailed in this manual to set up your *One For All® Easy 4* and enjoy your new remote control.

Features and Functions

The illustration below and the chart immediately after describe the features and functions of the *One For All® Easy 4* universal remote control. Use the drawing to locate each key on the remote, then refer to the chart for a description of the corresponding function each key performs.



Feature Function



The **Red Light (LED)** flashes red to show that the remote is working.



The **SETUP** key is used to program your *One For All® Easy 4*.



The **GLOW keys: VOL +/-** (Volume Up and Down), **CH +/-** (Channel Up and Down), **M** (Mute), **POWER, TV/VCR, ENTER** and the **Digit Keys (0-9)** operate the same as on your original remote. These keys are made of a phosphorescent material that Glows-in-the-dark. To activate the "GLOW" Feature, you must expose the **GLOW Keys** to bright light. The length of time the **GLOW Keys** remain illuminated will be determined by the length of time the remote is exposed to bright light.



SEE BELOW

The **TV, VCR/LD, CBL/SAT, and AUDIO** keys are used to select the home entertainment component you want to control.

The **MENU** key operates the same as the **MENU** or **OSD** (On Screen Display) key on your original remote. When you press the **MENU** key, your *One For All® Remote Control* enters the menu mode and enables the **CH +/-** and **VOL +/-** keys to navigate through your menu. Pressing one of the device keys will exit the remote control's menu mode and revert **CH +/-** and **VOL +/-** to their original functions. If your original remote control had a **SELECT** key, for use in your menu, try **M** (Mute) or **ENTER**. Please consult the original owners manual of your home entertainment component for more detailed instructions on accessing and navigating your on-screen menus.



The **FAV CH** (Favorite Channel) key allows you to program your *One For All® Easy 4* with up to 10 of your favorite channels.



The **PREV CH** (Previous Channel) key operates the same as the **LAST CHANNEL** or **RECALL** key on your original remote.



The **REC** (Record), **PAUSE**, **REW** (Rewind), **PLAY**, **FF** (Fast Forward), and **STOP** keys operate the same as the keys on your original VCR and CD Player remote. **As a safety feature on the One For All® Easy 4, you must press the REC key twice.**



Installing the Batteries

Your *One For All® Easy 4* requires four (4) new AAA alkaline batteries. To install the batteries:

- 1 On the back of the *One For All® Easy 4*, push down on the tab and lift the battery cover off.
- 2 Match the + and - marks on the batteries to the + and - marks in the battery case, then insert the batteries.
- 3 Press the battery cover back into place.
- 4 Test the unit by pressing **POWER**. If the batteries are inserted correctly, the red light (LED) will blink once.

NOTE: Removing the batteries for more than 15 minutes will require you to reprogram your remote.

Setting Up Your Components

Programming the *One For All® Easy 4* to operate your TV:

Locate the brand name of your TV and then write it in the space below.

TV Brand: _____

Locate the brand name of your TV in the "SETUP CODES FOR TVs" section. The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your *One For All Easy 4* to operate your TV.

To program the *One For All Easy 4* to operate your TV:

- 1 Turn on your TV.
- 2 Press **TV** and release. Press and hold **SETUP** until the *One For All® Easy 4*'s red light blinks twice, then release **SETUP**.
- 3 Enter the first three-digit TV code listed for your brand in the "Set-Up Codes for TVs" section. If you perform this procedure correctly, the red light will blink twice when you enter the final digit of your code.
- 4 Aim the *One For All® Easy 4* at your TV and press **POWER**. Your TV should turn off. If your TV does not respond, repeat Steps 2-4, trying each code listed for your brand until you find the one that operates your TV.
- 5 Your *One For All® Easy 4* is now programmed to operate your TV. Write your TV code in the boxes to the left for future reference.

Remember, if you want to use your *One For All® Easy 4* to operate your TV, press the **TV** key first.

Set-Up Codes for TVs

A-Mark	003	Anam	
Admiral	093, 016, 180, 165, 179	National	055
Adventura	046	AOC	030, 019, 185, 137, 003, 180, 056
Aiko	092	Archer	003
Akai	030, 056, 145, 151	Audiovox	180, 003
Alleron	179	Belcor	019, 030
Ambassador	177	Bell &	
Amstrad	171, 177	Howell	016, 154, 179, 180
Anam	180	Blue Star	282
		BPL	282
		Bradford	180



Attention Consumers

DO NOT USE the **MENU-** key on your *One For All® Easy 4* remote control with TVs manufactured by **Mitsubishi** in **1996** or **1997**, or on any TV manufactured in 1996 or 1997 using **TV code 150**. In 1996, Mitsubishi changed the frequency used to operate the menu down feature on these TVs. Consequently, using the **MENU-** key on your *One For All® Easy 4* remote control with these Mitsubishi TVs or with TVs using TV Code 150 will put your TV in a service mode. Universal Electronics Inc. assumes no responsibility for this change in the manufacturer's design or for any damage to your TV or any other damages that you incur as a result of these changes.

Brockwood	019
Broksonic	236, 463, 003, 180
Candle	030, 056, 186, 046
Carver	054, 187
Celebrity	000
Citizen	092, 060, 030, 056, 280, 186, 046, 039
Clairtone	185
Concerto	056
Contec	180, 185
Craig	180
Crown	180, 039
Curtis Mathes	047, 060, 054, 154, 030, 039
CXC	180
Daewoo	451, 092, 019, 039
Daytron	019, 056, 092
Dumont	017, 019
Electroband	000, 185
Electrohome	150, 056, 000, 154, 185, 039
Emerson	463, 236, 180, 177, 179, 280, 178, 282, 154, 019, 039, 185
Envision	030
Finlux	179
Fisher	154, 159
Fujitsu	179
Funai	171, 179, 180
Futuretech	180
GE	047, 451, 051, 021, 027, 282, 178, 135, 174
Gibraltar	019, 030, 017
Goldstar	060, 056, 030, 019, 178
Goodmans	179
Granada	145, 151, 178
Grandin	282, 180
Grumpy	179, 180
Hallmark	178, 179, 236, 019
Harvard	180, 236, 178, 179
HCM	282
Hinari	179
Hisawa	282
Hitachi	151, 145, 056
Hypson	282
Ima	180
Infinity	054
Janeil	046
JBL	054, 046
JCB	000
JVC	053
Kaisui	282
KEC	180, 060
Kenwood	030, 019
Kloss	046, 024, 030
KTV	180, 030, 280, 185, 039
Logik	016, 180, 236
Luxman	056
LXI	047, 054, 154, 178, 156
Magnavox	054, 096, 030, 186, 187, 024, 171, 179
Majestic	016, 017
Marantz	054, 030, 096, 187
Matsui	177, 039
Megatron	178, 145, 003, 151
MEI	185
Memorex	150, 154, 056, 016, 178
MGA	150, 030, 019, 178
Midland	047, 051, 017, 135, 039
Minutz	021, 027
Mitsubishi	150, 019, 178, 093
Motorola	093, 055, 054, 150, 051
MTC	060, 056, 030, 019, 185
Multitech	180, 179
NAD	156, 166, 178, 019
NEC	030, 056, 019
Nesco	179
Nikko	092, 030, 178
NTC	092
Onwa	180
Optimus	166, 154, 150, 165
Optonica	093, 165
Orion	236, 463, 180, 179
Panasonic	250, 051, 055,

	054
Penney	047, 051, 060, 019, 018, 030, 156, 021, 027, 178, 003, 135, 039, 250
Philco	054, 096, 030, 019, 187
Philips	054, 096, 030, 019, 187
Pilot	030, 019, 039, 060, 178, 051
Pioneer	166
Portland	092, 019, 039
Priceclub	060
Prism	051, 055
Proscan	047
Proton	466, 178, 003
Pulsar	017, 092, 019
Pulser	019, 017, 092
Quasar	250, 051, 055
RadioShack	180, 165, 039, 056, 047, 030
RCA	047, 018, 135, 090, 019, 174, 093
Realistic	154, 165, 056, 030, 019, 178, 180, 039
Rhapsody	185
Runco	060, 494, 030, 017
Saisho	177
Sampo	030, 039
Samsung	060, 427, 056, 030, 019, 178
Samsux	039
Sanyo	154, 159, 146
Scimitsu	019
Scotch	178
Scott	236, 019, 178, 180, 179
Sears	047, 054, 154, 171, 056, 156, 178, 179, 146, 451
SEI	177
Sharp	093, 491, 165, 039
Shogun	019
Signature	2000
Signature	2000
Simpson	016, 047, 054, 019
Sinudyne	186, 187, 030
Sony	177
Sony	000, 080
Soundesign	178, 180, 179, 186
Spectricon	003, 137, 180, 030, 019, 056
Squareview	171
SSS	019, 180, 236
Starlite	180, 236, 019
Supra	039
Supre-Macy	046, 039, 186
Supreme	000
Sylvania	054, 096, 030, 187, 186
Symphonic	171, 179, 180
Landy	093, 165, 039, 054, 047
Tatung	055, 003, 051
Technics	250, 051, 055
Technol Ace	179
Techwood	051, 056, 003, 055, 250
Teknika	092, 054, 060, 056, 019, 016, 180, 179, 186, 039
Tera	178
TMK	156, 177, 178, 236
Tomashi	282
Toshiba	156, 154, 060
Tosonic	185
Totevision	039
Triumph	177
Universal	027, 021, 047
Vector	030
Research	030
Victor	053
Vidikron	054
Vidtech	019, 178
Viking	046
Wards	054, 016, 096, 030, 174, 056, 165, 019, 021, 027, 020, 178, 179, 080
Yamaha	030, 019
Zenith	017, 092, 016
Zonda	003

Programming the One For All® Easy 4 to

operate your VCR or Laser Disc Player:


Locate the brand name of your VCR/Laser Disc Player and then write it in the space below.


VCR/LD Brand: _____


Locate the brand name of your VCR or Laser Disc Player in the "SETUP CODES FOR VCRs" or "SETUP CODES FOR LD PLAYERS" section. The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your One For All Easy 4 to operate your VCR or Laser Disc Player.

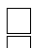
To program the One For All Easy 4 to operate your VCR or Laser Disc Player:

- 1** Turn on your VCR and insert a tape. If you are setting up a Laser Disc Player, turn on the Laser Disc Player and insert a disc.

- 2** Press **VCR/LD** and release. Press and hold **SETUP** until the *One For All® Easy 4's* red light blinks twice, then release **SETUP**.


- 3** Enter the first three-digit VCR or Laser Disc Player code listed for your brand in the "Set-Up Codes for VCRs" or "Set-Up Codes for LD Players" section. If you perform this procedure correctly, the red light will blink twice when you enter the final digit of your code.


- 4** Aim the *One For All® Easy 4* at your VCR or Laser Disc Player and press **POWER**. Your component should turn off. If your original VCR or Laser Disc Player remote control did not have a **POWER** key, press **PLAY**. Your component should start to play. If your VCR or Laser Disc Player does not respond, repeat Steps 2-4, trying each code listed for your brand until you find the one that operates your VCR or Laser Disc Player.


- 5** Your *One For All® Easy 4* is now programmed to operate your VCR or Laser Disc Player. Write your VCR or Laser Disc Player code in the boxes to the left for future reference.


Remember, if you want to use your *One For All® Easy 4* to operate your VCR or Laser Disc Player, press the **VCR/LD** key first.

Set-Up Codes for VCRs

Admiral	048	Carver	081
Action	317	CCE	278, 072
Adventura	000	CGE	000
Aiko	278	Cimline	072
Aiwa	000, 307, 406, 468	Citizen	037, 278, 240, 035, 000
Akai	041, 061, 315	Clatronics	020
Akiba	072	Colt	072
Alba	020, 278	Condor	020
American		Craig	240, 072, 037, 047, 271
High	035, 081	Crown	072, 020, 278
Amstrad	000, 325	Curtis	
Anitech	072	Mathes	035, 060, 202, 041
ASA	037, 081	Cybernex	240
Asha	240	Daewoo	278, 020, 045, 046
Asuka	037		
Audiovox	037, 038	Dansai	072
Baird	000, 041, 104	Daytron	020, 278
Basic Line	072, 020, 278	De Graaf	042
Beaumont	240	Decca	081, 000
Bell &		Dual	041
Howell	104, 048, 046	Dumont	038, 240, 045
Blaupunkt	162, 034	Dynatech	000
Brandt Elec-		Electro-	
tronique	041	home	037, 240, 043
Broksonic	184, 121, 211, 295, 361	Electro-	
Bush	072, 278	phonic	037
Calix	037	Emerex	032
Candle	037, 038	Emerson	278, 184, 479, 000, 002, 121, 211, 037, 043,
Canon	035		
Capehart	020		

	061, 208, 295, 361	Quarter	046
Ferguson	041	Quartz	046
Fidelity	000	Quasar	162, 035
Finlandia	081, 110, 104	RadioShack	000, 035, 037, 048
Finlux	000, 042, 104, 081	Radix	037
Firstline	072, 043, 045, 037	Randex	037
Fisher	104, 046, 047, 066, 054	RCA	060, 202, 042, 035, 149, 048, 240
Frontech	020	Realistic	000, 035, 048, 240, 104, 037, 046, 047, 066, 062
Fuji	033, 035, 032, 034		
Funai	000, 278, 072, 325, 240	Ricoh	035, 034
GAB	072	Runco	039
Garrard	000, 325	Samsung	240, 045
GE	060, 202, 035,	Sanky	048, 039
GEC	081	Sansui	041, 000, 067, 072, 271
Go Video	232, 350, 240	Sanyo	104, 047, 046, 240
Goldstar	037, 038, 278	Scott	184, 043, 045, 211, 121
Goodmans	278, 000, 020, 072, 037, 062	Sears	104, 035, 000, 037, 042, 046, 047, 066, 054
Gradiente	000	SEI	081
Granada	048, 035	Semp	045
Grandin	072, 000, 037	Sharp	048, 062
Grundig	081	Shintom	072, 000, 240
Harley		Shogun	240
Davidson	000	Singer	072, 037, 240
Harman/		Sony	032, 033, 034, 000, 035
Kardon	038	STS	042
Harvard	072	Sylvania	081, 035, 043, 110, 000
Hanwood	072	Symphonic	000
Head-		Tatung	041, 067, 000
quarter	046	TEAC	000, 041
Hi-O	047	Technics	162, 035
Hinari	072, 240	Teknika	035, 000, 037
Hitachi	042, 000, 041	Thomas	000
Imperial	000	TMK	240
Interfunk	081	Toshiba	043, 045, 066
ITT	041, 104, 046, 240	Totevision	240, 037
Jensen	041, 067,	Triumph	208
JVC	067, 008, 041	Unitach	240
Kaisui	072	Vector	045
KEC	037, 278	Vector Research	038
Kenwood	067, 008, 041, 038	Video Concepts	045, 061
KLH	072	Videoconic	240, 000, 072
Kodak	035, 037	Videotronic	035
Lloyd's	000, 208, 072, 038	Wards	048, 000, 035, 042, 047, 060, 202, 072, 081, 240, 149, 062
Logik	072	White Westinghouse	278
Luxor	043, 104, 046, 062	XR-1000	000, 035, 072
LXI	037, 000	Yamaha	038
Magnavox	035, 081, 039, 110, 149	Zenith	000, 039
Magnin	240		
Marantz	035, 081, 110		
Marta	037		
Matsushita	035, 081		
Matsui	208, 295		
MEI	035		
Memorex	000, 035, 048, 104, 037, 039, 240, 047, 046, 307		
Metz	162, 454		
MGA	043, 061		
MGN			
Technology	240		
Minolta	042		
Mitsubishi	043, 061, 067, 008, 173		
Motorola	035, 048		
MTC	000, 240		
Multitech	000, 072		
NEC	038, 041, 067, 008, 104		
Nikko	037		
Noblex	240		
Nokia	104, 240, 046, 041		
Olympus	035		
Optimus	048, 037, 104		
Optonica	062		
Orion	184, 278, 479, 121, 211, 295, 208		
Panasonic	162, 035, 454		
Penney	035, 037, 240, 042, 162, 038, 454		
Pentax	042		
Philco	035, 081		
Philips	081, 035, 062, 110		
Pilot	037		
Pioneer	067, 162		
Portland	020		
Profitronic	240		
Proline	000		
Proscan	060, 202		
Protec	072		
Pulsar	039, 240, 278		

Set-Up Codes for TV/VCR Combos

American		035*
High		035*
Broksonic	002, 294, 479	
Colt	072	
Curtis		
Mathes		035*
Daewoo	278	
Emerson	002, 294, 479	
Funai	000	
GE		035*, 060*, 048*, 240
Hitachi		035*, 000
HO		000
Lloyds		000
MGA		240
Magnavox		000, 035*, 081*
Magnin		240
Memorex		037, 162*
Mitsubishi		048*
Orion		002, 294, 479
Panasonic		035*, 162*
Penney's		035*, 240, 162*
Quasar		035*, 162*
RCA		060*, 035*, 048*
Sansui		000, 479
Sanyo		240
Sears		000, 037
Symphonic		000
Zenith		000

NOTE: If your TV/VCR is working on one of the above codes

highlighted with an asterisk (*), you may need to program a separate TV code in order to control the volume. Check the list of codes below and follow the instructions detailed in the "Programming the One For All Easy 4 to Operate Your TV" section to program the supplied TV code.

TV/VCRs working on VCR code 035 may require TV code 051 for volume control.

TV/VCRs working on VCR code 048 may require TV code 093 for volume control.

TV/VCRs working on VCR code 060 may require TV code 047 for volume control.

TV/VCRs working on VCR code 081 may require TV code 054 for volume control.

TV/VCRs working on VCR code 162 may require TV code 250 for volume control.

Programming the One For All Easy 4 to operate your Cable Converter or DBS Satellite:

Set-Up Codes for Laser Discs




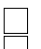
Carver 194	Pioneer 059, 023
Disco Vision 023	Quasar 204
Hitachi 023	Sega 023
Magnavox 194	Sony 201
Marantz 194	Theta Digital 194
Mitsubishi 059	
NAD 059	
Panasonic 204	
Philips 194	

Locate the brand name of your Cable Converter or Satellite and then write it in the space below.

Cable or Satellite Brand: _____

Locate the brand name of your Cable Converter or Satellite in the "SETUP CODES FOR CABLE CONVERTERS" or "SETUP CODES FOR SATELLITES" section. The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your One For All Easy 4 to operate your Cable Converter or Satellite.

To program the One For All Easy 4 to operate your Cable Converter or Satellite:

- 1 Turn on your Cable Box, Satellite or DSS.
- 2 Press **CBL/SAT** and release. Press and hold **SETUP** until the *One For All Easy 4's* red light blinks twice, then release **SETUP**. 
- 3 Enter the first three-digit Cable Box, Satellite or DSS code you wrote down in the "Looking Up Set-Up Codes for Your Components" section. If you perform this procedure correctly, the red light will blink twice. 
- 4 Aim the *One For All Easy 4* at your Cable Box, Satellite or DSS and press **POWER**. Your Cable Box, Satellite or DSS should turn off. If your Cable Box, Satellite or DSS does not respond, repeat Steps 2-4, trying each code listed for your brand until you find the one that operates your Cable Box, Satellite or DSS. 
- 5 Your *One For All Easy 4* is now programmed to operate your Cable Box, Satellite, or DSS. Write your Cable Box, Satellite, or DSS code in the boxes to the left for future reference. 

NOTE: If your original Cable Box remote control did not have an "ON" key, press **CH+** on the *One For All Easy 4* to turn your Cable Box ON.

Set-Up Codes for Cable Converters

ABC 001, 003, 007, 008, 011, 013, 014, 017

Remember, if you want to use your *One For All Easy 4* to operate your Cable Box, Satellite, or DSS, press the **CBL/SAT** key first.

Allegro 153, 315	Stargate 015, 040
Antronix 022	Starquest 015
Archer 022, 153	Sylvania 001
Belcor 056	TV86 063
Cable Star 056	Tandy 258
Cabletenna 022	Televue 040
Cableview 022	Texscan 001
Century 153	Tocom 012, 013
Citizen 153, 315	Tusa 015
Colour Voice 025	Unika 022, 153
Comtronics 040	United Artists 007
Contec 019	United Cable 003
Eastern 002	Universal 022, 056, 153
Everquest 015, 040	Videoway 250
Focus 400	Viewstar 063, 258
GC	Zenith 525
Electronics 056	Zentek 400
Garrard 153	
Gemini 015	

Set-Up Codes for Satellites

Channel	
Master 018	
Chaparral 053	
Citoh 164	
Drake 018, 064	
Echostar 775, 269, 280	
ExpressVu 775	
General	
Instruments 547, 038, 050, 361	
HTS 775	
Homecable 238	
Hughes	
Network	
Systems 749	
IQ 210	
Janeil 152	
Jerrold 361, 627	
Legend 269	
Macom 018, 050	
Memorex 269	
Panasonic 152, 701	
Primestar 627, 361	
RCA 566	
Realistic 052	
STS 210	

Programming the One For All Easy 4 to operate your CD Player:




Locate the brand


name of your CD Player and then write it in the space below.

CD Player Brand: _____

Locate the brand name of your CD Player in the "SETUP CODES FOR CD PLAYERS" section. The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your One For All Easy 4 to operate your CD Player.

To program the One For All Easy 4 to operate your CD Player:

- 1 Turn on your CD Player and insert a compact disc.
- 2 Press **AUDIO** and release. Press and hold **SETUP** until the *One For All Easy 4's* red light blinks twice, then release **SETUP**. 
- 3 Enter the first three-digit CD Player code you wrote down in the "Looking Up Set-Up Codes for Your Components" section. If you perform this procedure correctly, the red light will blink twice. 
- 4 Aim the *One For All Easy 4* at your CD Player and press **PLAY**. Your CD Player should play your disc. If your CD Player does not respond, repeat Steps 2-4, trying each code listed for your brand until you find the one that operates your CD Player. 
- 5 Your *One For All Easy 4* is now programmed to operate your CD Player. Write your CD Player code in

 the boxes to the left for future reference.

Remember, if you want to use your *One For All Easy 4* to operate your CD Player, press the **AUDIO** key first.

Set-Up Codes for CD Players

Aiwa 124, 157	Panasonic 029
California	Philips 157
Audio Lab 029	Pioneer 032, 305, 468
Carver 57, 179	Proton 157
DKK 000	QED 157
Denon 003	Quasar 029
Emerson 305	RCA 053, 179, 305
Fisher 048, 088, 179	Realistic 179
Garrard 393	Rotel 157
Genexxa 032, 305	SAE 157
Hitachi 032	Sansui 157, 305
JVC 072	Sanyo 179
Kenwood 028, 037, 048, 190	Scott 305
Krell 157	Sears 305
LXI 305	Sharp 037
Linn 157	Sony 000, 185, 490, 604, 605
MCS 029	Soundesign 145
Magnavox 157, 305	TEAC 393
Marantz 029, 157	Technics 029, 303
Mission 157	Victor 072
NSM 157	Wards 157
Onkyo 101	Yamaha 036, 187
Optimus 000, 032, 037, 048, 145, 179, 305, 468	

Reassigning Device Keys


You can use the *One For All Easy 4* to operate a second TV or a second VCR or any combination of four home entertainment components. For example, you may want your *One For All Easy 4* to control 1 TV, 1 CD Player and 2 VCRs. To accomplish this, you would reassign the **CBL/SAT** key to operate the desired component, in this case, a second VCR. The chart below shows you how to reassign a particular device key and then set up your new component.


TV to VCR/LD	SETUP* + 992 + VCR/LD + TV + TV + SETUP* + VCR or Laser Disc code.
TV to CBL/SAT	SETUP* + 992 + CBL/SAT + TV + TV + SETUP* + Cable or Satellite code.
TV to AUDIO	SETUP* + 992 + AUDIO + TV + TV + SETUP* + CD Player code.
VCR/LD to TV	SETUP* + 992 + TV + VCR/LD + VCR/LD + SETUP* + TV code.
VCR/LD to CBL/SAT	SETUP* + 992 + CBL/SAT + VCR/LD + VCR/LD + SETUP* + Cable or Satellite code.
VCR/LD to AUDIO	SETUP* + 992 + AUDIO + VCR/LD + VCR/LD + SETUP* + CD Player code.
CBL/SAT to TV	SETUP* + 992 + TV + CBL/SAT + CBL/SAT + SETUP* + TV code.
CBL/SAT to VCR/LD	SETUP* + 992 + VCR/LD + CBL/SAT + CBL/SAT + SETUP* + VCR or Laser Disc code.
CBL/SAT to AUDIO	SETUP* + 992 + AUDIO + CBL/SAT + CBL/SAT + SETUP* + CD Player code.
AUDIO to TV	SETUP* + 992 + TV + AUDIO + AUDIO + SETUP* + TV code.
AUDIO to VCR/LD	SETUP* + 992 + VCR/LD + AUDIO + AUDIO + SETUP* + VCR or Laser Disc code.
AUDIO to CBL/SAT	SETUP* + 992 + CBL/SAT + AUDIO + AUDIO + SETUP* + Cable or Satellite code.


***NOTE:** Here you must hold **SETUP** until the *One For All Easy 4's* red light blinks twice.


Using the Favorite Channel Key

Your *One For All® Easy 4* is equipped with a favorite channel key (**FAV CH**). You can set up the **FAV CH** key with a list of up to 10 of your favorite channels for either your TV, VCR, Cable Box, Satellite or DSS. Please note, the **FAV CH** key can only be set up for one device key (**TV, VCR/LD** or **CBL/SAT**) at a time. You cannot set up a favorite channel list for another device key until you have cleared the **FAV CH** key of your original list.


-  Press the device key (**TV, VCR/LD, or CBL/SAT**) for the home entertainment component that will contain your favorite channel list.







-  Press and hold **SETUP** until *One For All® Easy 4*'s red light blinks twice. Release **SETUP** and press **9-9-6**.

9-9-6

-  Enter the channel number of the first channel you would like to add to your favorite channel list. Then press **SETUP**.


- If you are entering a single digit channel number, you must press **0** first.
- If you are entering a channel that is three digits long, such as **103**, you do not have to press **SETUP** after you have entered the channel number.
- If your original remote control required you to use an **ENTER** key to change channels, press **ENTER** instead of **SETUP** after entering your channel number. For example, if you want to add TV channel "4" to your favorite channel list, you would: Press **TV**, then press and hold **SETUP** until the *One For All® Easy 4*'s red light blinks twice, then release **SETUP** and press **9-9-6**. Press **0-4**, followed by **ENTER**. Then, add your second channel, followed by **ENTER**, and continue adding your favorite channels until you have added the 10 channels you desire in your favorite channel list.

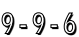
-  Continue adding your favorite channels, up to 10 channels. Once you have finished, press and hold **SETUP** until the *One For All® Easy 4*'s red light blinks twice.

-  To scan through your favorite channel list, press **FAV CH**. Your *One For All® Easy 4* will automatically scan through your favorite channel list, stopping at each channel for three seconds.

- To stop at one of your favorite channels, press any key on the *One For All® Easy 4*.

To clear an entire favorite channel list from the **FAV CH** key:

-  Press and hold **SETUP** until the *One For All® Easy 4*'s red light blinks twice, then release **SETUP**.

-  Press **9-9-6**, then press and hold **SETUP** until the *One For All® Easy 4*'s red light blinks twice.



Troubleshooting

Problem	Solution
Red light not blinking when you press a key?	Replace the batteries with four (4) new AAA alkaline batteries.
The red light blinks when you press a key but you receive no response from your home entertainment component?	Make sure you are aiming your <i>One For All® Easy 4</i> at your home entertainment component and that you are within 15 feet of the component you are trying to operate before using your remote.
The <i>One For All® Easy 4</i> does not operate your home entertainment component or is not performing commands properly?	Try all the codes listed for your home entertainment component in the "Set-Up Codes" section. Many set-up codes may allow for partial functionality, however, only one set-up code will operate your home entertainment component properly. Make sure that all of the components you are setting up are able to be operated with an infrared remote control.
Problems programming a TV/VCR combo?	Use the VCR set-up codes for your brand. Some combo units may require both a TV code to control volume and a VCR code for full operation.
VCR not recording?	As a safety feature on the <i>One For All® Easy 4</i> , you must press the REC key twice.
No volume when in the Cable mode or when operating a second TV or TV/VCR combination?	Press and hold SETUP until the <i>One For All® Easy 4</i> 's red light blinks twice. Release SETUP and enter 9-9-3 followed by VOL + .
Channel +/- and RECALL not working for your RCA TV?	Due to RCA design (1983-1987), only the original remote control will operate these functions. However, using the FAV CH key will allow you to run through a list of up to 10 of your favorite channels.
Problems changing channels?	If your original remote control required a ENTER keystroke when changing channels, press the ENTER key on the <i>One For All® Easy 4</i> after you enter the channel number.
Keypad scrambled?	Press and hold SETUP until the <i>One For All® Easy 4</i> 's red light blinks twice. Release SETUP and enter 9-6-9 .

World Wide Web: <http://www.oneforall.com>

One For All® PRODUCTS Limited Warranty

One For All("OFA") warrants, to the original purchaser only, that this product will be free from defects in materials and workmanship, under normal use, for ninety (90) days from the date of original purchase.

This warranty does not cover damage or failures caused by products or services not supplied by OFA, or which result from accident, misuse, abuse, neglect, mishandling, misapplication, faulty installation, set-up adjustment, improper maintenance, alteration, maladjustment of consumer controls, modifications, commercial use, or that is attributable to acts of God.

There are no express warranties except as listed above. OFA SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE WARRANTY PERIOD SET FORTH ABOVE. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

To obtain warranty service for a defective product during the warranty period, please return the product, preferably in the original carton, along with your purchase receipt, to the store of original purchase. A note detailing the complaint would be helpful. The store, at its option, will replace or repair this product if found to be defective.

One For All
(330)-405-8584

One For All® is a trademark of Universal Electronics Inc.

Copyright 1996 by Universal Electronics Inc. No part of this publication may be reproduced, transmitted, transcribed, stored in any retrieval system, or translated to any language, in any form or by any means, electronic, mechanical, magnetic, optical, manual, or otherwise, without the prior written permission of Universal Electronics Inc.

This One For All® product is designed for compatibility in North America excluding Mexico.

URC-4063 - One For All® Big Easy Select Easy 4.
M4022

5/98

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>