

 
ORECK[®] XL

SIMPLY AMAZING[®]

ORECK[®]

Oreck Corporation
100 Plantation Road
New Orleans, LA 70123

USER'S GUIDE Zip Vac[®] Ultra[®] Rechargeable Vacuum ZIP100 Series

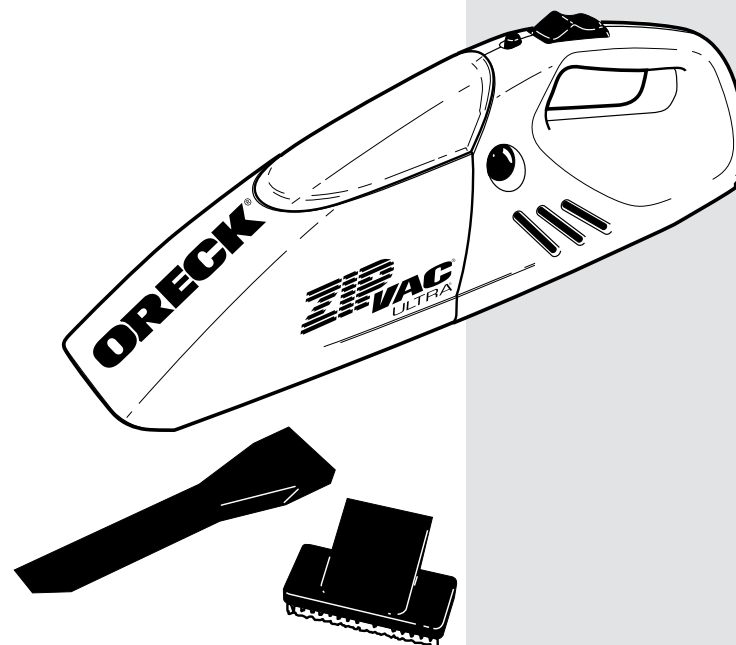

 USA: 1-800-989-3535
CANADA: 1-888-676-7325

 WWW.ORECK.COM

 VISIT ONE OF OUR
OVER 750 LOCATIONS

**REGISTER YOUR PRODUCT
ON THE WEB:
WWW.ORECK.COM**

•IMPORTANT•
SAVE THIS BOOKLET!

Includes:
Important Safety Instructions
Warranty
Operating Instructions

IMPORTANT SAFETY INSTRUCTIONS

This owner's manual contains IMPORTANT SAFETY INSTRUCTIONS.

First and foremost, when using a rechargeable vacuum basic precautions should always be followed.

READ ALL INSTRUCTIONS BEFORE USING THIS VACUUM CLEANER

WARNING

To reduce the risk of fire, electric shock, or injury to persons:

- Read and follow instructions.
- Use only for intended use as described in this manual. Do not use other than manufacturer's recommended attachments.
- If appliance is not working properly, has been dropped, damaged, exposed to weather or dropped in water, return it to a service center for examination and repair. Do not disassemble the cleaner, it is not user serviceable.
- Do not use a damaged cord. Replace immediately.
- Do not operate with any opening blocked; keep free of dust, lint, hair, and the like.
- Do not put any object into openings.
- Keep hair, loose clothing, fingers, and the like away from any openings and moving parts.
- Do not pick up cigarettes, hot ashes, matches, or similar materials.
- Do not pick up flammable or combustible liquids such as gasoline, or use in areas where they may be present.
- Do not operate without filter bag and dust cup in place.
- Close supervision is necessary when used by or near children. Do not allow to be used as a toy.
- Store in a safe place.

SAVE THESE INSTRUCTIONS

Warranty

Oreck Corp. warrants that all new vacuums are free from defects in material and workmanship under normal, non-commercial use and service. Oreck will remedy any such defects if they appear within one (1) year from date of purchase. This warranty gives you specific legal rights, and you may have other rights which vary state to state.

Register your product on the web:

WWW.ORECK.COM

Parts

- Lighted Rechargeable Vac
- Crevice Tool (40110-01)
- Brush Tool (40109-01)

Replacement Parts (Sold Separately)

Bulb w/Reflector Assembly 40227-01
Dust Filter 40113-01

Repair or Replacement

Your ORECK Zip Vac Ultra is a product of precise engineering. If you require additional information or have problems with your Oreck product, you may call ORECK CUSTOMER SERVICE at:

US: 1-800-989-3535 Canada: 1-888-676-7325

Please specify the product and model number.

Save your sales or purchase slip. Should your Oreck product require warranty service in the U.S.A., present this slip to the Authorized Service Center as your proof of purchase date or, in Canada, call customer service.

Before Initial Use

 
- Mount wall holder to wall.
- Wrap excess cord around the wall holder.
- Plug charger into wall socket.
- Place rechargeable vac onto holder. The pilot light comes on to indicate that the unit is charging.

IMPORTANT

- **Before first use, charge the vacuum for at least 12 hours.**
- The voltage on the contact strips of the holder is low (max 6 volts) and thus not dangerous.

Operating Instructions


Push the power switch forward to operate unit.

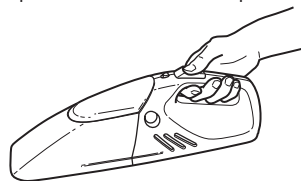

Leave the charger plug in the wall socket and always place the vacuum cleaner back in the holder immediately after use.


Using the Light

The light can be switched on and off, independently of the vacuum, using the switch located on top in front of the ON/OFF switch.

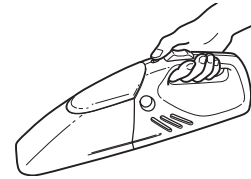


Using Attachments

To use the attachments (i.e. the crevice tool and brush tool), simply push the required tool into the nozzle as shown.

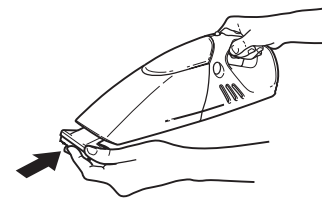


 The crevice tool is stored on the back bottom of the vacuum. To remove tool, simply slide out of slot. Replace tool when finished to prevent loss.




Cleaning

 To remove the dust container, press down on the release button and gently tilt the dust container forward as shown.

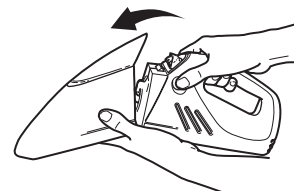

 Remove the filter from the dust container and clean.

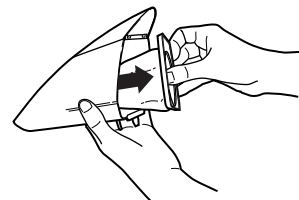


Empty, wash and dry the inside of the dust container. Make sure the dust container is dry and replace the filter before reusing.

Replace dust container by attaching bottom of container with vacuum and raising up to lock in place.

Bulb Replacement

 To replace the light, simply push the bulb in and twist counter-clockwise to remove bulb. Insert new bulb, push and twist clockwise to replace.

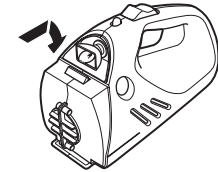

NOTE: Make sure you use the same type of bulb when replacing the old bulb (6V).

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>