

Oricom[®]

Professional Series



User Guide

Pro900 Amplified Cordless / Corded with Answering System

TABLE OF CONTENTS

Warnings and Safety Information	1
Getting Started	2
Operating the Telephone	6
Telephone.....	9
Using the Menu, Telephone Base.....	16
Phone Book, Telephone Base	21
Caller ID, Telephone Base.....	23
Using the Menu, Cordless Handset.....	25
Phone Book, Cordless Handset.....	31
Caller ID, Cordless Handset.....	33
Using the Answering Machine	35
Using Remote Access	38
Advanced Setting.....	39
Troubleshooting	41
Technical Properties.....	43
Default settings	44
Maintenance/Guarantee.....	45
Index	47

IMPORTANT

- Persons with pacemakers should seek advice from their doctor before using this product.
- Avoid exposure of this telephone to moisture or liquid.
- To prevent electric shock, do not open the handset or base cabinet.
- Avoid metallic contact (e.g. metal clips, keys) between the battery contacts and charging conductors.
- There is a slight chance that the telephone could be damaged by an electrical storm. It is recommended that users unplug the phone from the mains supply and telephone socket during a storm.
- Do not use the handset in an explosive hazard area such as where there is gas leaking.
- Follow the local regulations regarding the disposal of your packing materials, exhausted batteries and used phone. Wherever possible, recycle those materials.
- We advise that this phone should not be used near intensive care medical equipment.
- Clean with a dry, soft, lint-free cloth. Never use cleaning agents, particularly aggressive solvents.
- Because the phone works by sending radio signals between base station and handset, wearers of hearing aids may experience interference in the form of a humming noise. The telephone is compatible with most popular hearing aids on the market. However, due to the wide range of hearing aids available, there is no guarantee that the telephone will function "problem free" with every model.
- Your phone can interfere with electrical equipment such as answering machines, TV and radios, clock radios and computers if placed too close. It is recommended that you position the base unit at least one metre from such appliances.

- This telephone complies with applicable safety requirements for exposure to radio waves (EMR). The mean power of this telephone does not exceed 20mW limit at which point testing is required.
- The earpiece of the handset may attract small metal objects such as staples and pins. Care should be taken when placing the handset near these items.
- Do not use your telephone during an electrical storm thunderstorm as it is possible to get an electric shock. Refer to information contained in White pages directory.
- This phone is designed for connection to a PSTN telephone line or an analogue extension port of a PBX system. If you connect this device to a digital extension of a PBX, damage may result to the PBX.

CAUTION



Use only the mains adaptors supplied with this product. Incorrect adaptor polarity or voltage can seriously damage the unit.

Adaptor for base unit:

Input: 100~240VAC 50/60Hz 680mA

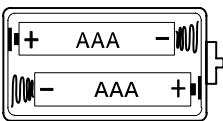
Output: 12VDC 670mA

This telephone is capable of producing very high volume levels when the "Boost" is switched on and the volume control is set to maximum. Extreme caution should be taken if the handset is to be shared between users with normal hearing and those with hearing impairments.

Installation

Cordless Phone

1. Connect the mains adaptor (supplied) to the socket on the back of the base unit and to the wall mains supply.
2. Connect the telephone cord to the phone socket on the back of the base unit and into the wall phone socket.
3. Insert 2 rechargeable Ni-MH AAA 1.2V 800mAh batteries (included), observing the correct polarity, into the battery compartment on the handset. Slide the battery door firmly into place.
4. Place the handset on the charging cradle and charge the batteries for a full 15 hours before using it for the first time.



Corded Phone

1. Connect the mains adaptor (supplied) to the socket on the back of the base unit and to the wall mains supply.
2. Connect the telephone cord to the phone socket on the back of the base unit and into the wall phone socket.

Select your country

After the phone is fully charged you will need to select your country. The phone will display Welcome. Press []. Scroll [] or [] to select Australia or New Zealand. Press [] again to confirm.

Note:

It may take some time for the cordless handset to power up, and it may get warm during initial charge. This is normal.

It is good practice to put the cordless handset on the charging cradle when it is not in use to ensure that the handset is always fully charged.

IMPORTANT: DO YOU HAVE BROADBAND/ADSL?

If you do, you must connect an in line filter (not supplied) between the telephone socket and your Pro900 base to ensure that your broadband and Pro900 will work properly. If you do not install the filter you will experience interference on the Pro900 and your Broadband may suffer dropouts. Please refer to the user guide of the in line filter for installation.

WARNING

DO NOT USE STANDARD/ALKALINE BATTERIES IN THIS PRODUCT, AS THERE IS A RISK OF EXPLOSION AND/OR INJURY. USE ONLY NI-MH RECHARGEABLE BATTERIES AS SPECIFIED IN THIS USER GUIDE. CONTACT ORICOM FOR REPLACEMENT BATTERIES. RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.

Never use non-rechargeable batteries. Use recommended type supplied with this product.

- Never use alkaline or lithium batteries.
- Do not dispose of the batteries in a fire, as they can explode.
- Do not open or mutilate the battery. Released electrolyte is corrosive and can cause damage to the eyes or skin. It can be toxic if swallowed.
- Avoid contact with metal objects when handling the battery. These objects could short out the batteries or cause the conductor to overheat resulting in burns.
- Do not attempt to recharge the battery cell by heating it. Sudden release of battery electrolyte can cause burns or irritation to the eyes or skin.
- Observe the proper polarity, or direction, of any battery. Reverse insertion of the battery cell can result in leakage or explosion.
- Remove the batteries if you do not plan to use the product for several months at a time.
- Follow the local regulations regarding the disposal of your packing materials, exhausted batteries and used phone. Wherever possible, recycle those materials.

Pack contents

Depending on the model you have purchased this pack should contain the following items:

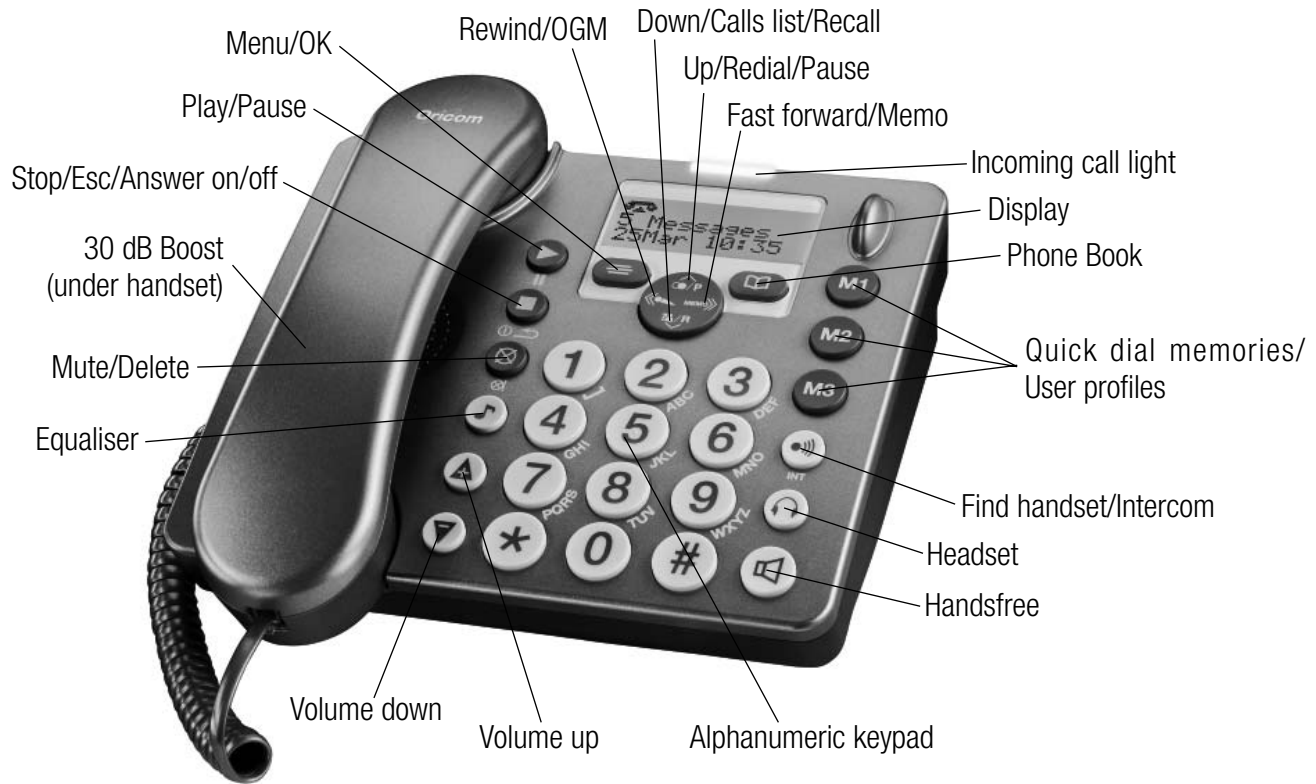
If any of these are missing, please contact Oricom directly.

	Pro900-1	Pro900-2
Corded Telephone Answering Machine Base	1	1
Cordless handsets	1	2
Charging cradle	1	2
Power adaptors	1	2
Modular adaptor plug	1	1
Line cord	1	1
User guide	1	1
Handset Rechargeable AAA Ni-MH Batteries (1.2V 800mAh)	2	4
Handset Battery cover	1	2

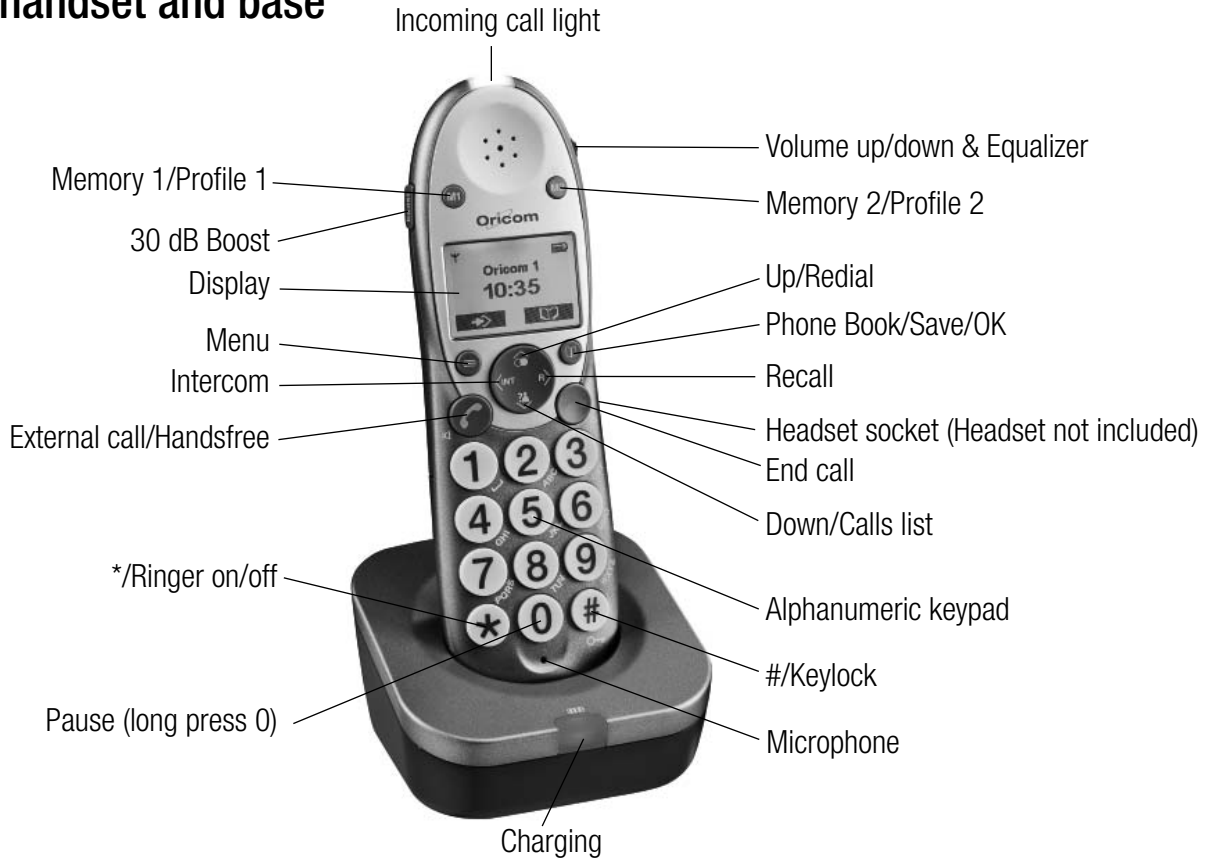
Purchasing additional handsets

You may expand your Pro900 by adding more handsets (PROHS). These can be purchased separately from the reseller where you purchased the product, or directly from Oricom (Australia). The Pro900 can accommodate a total of 4 cordless handsets.

Corded Telephone answering machine base










 



Cordless handset and base













Operating the Telephone

The instructions throughout this guide are for both the telephone base and the cordless handset, unless stated otherwise.





 



 





Display and explanation of operation sequences.

	Enter digits or letters
	Press the button shown, briefly
2 x 	Press the button shown, twice briefly
2 sec 	Press the button shown for 2 seconds
Press and hold 	Press and hold the button shown
Release 	Release button shown
	Handset rings
	Base station rings
	Cordless handset external call button
	End a call and/or return to standby on the cordless handset
VOLUME 1 or 	Text or icon in the display

Icons in the telephone base station display

Icon	Description
	Phone Book mode
	Ringer off
	Handsfree mode
	Call in progress
	Boost receiver volume is on
X	Handset microphone is muted
	Handsfree mode
	You have new calls
	Internal call in progress
	New calls in the calls list
	Old calls in the calls list

 
Icons in the handset display


















Icon	Description
	Phone Book mode
	There are more digits to view on the left
	There are more digits to view on the right
	Battery status
	Ringer off
	Keylock is on
	Handsfree mode
	Call in progress
	Boost receiver volume is on
	Handset microphone is muted
	You have new calls
	When steady indicates that the handset is in range of the base. When flashing indicates that the handset is out of range of the base.
	Internal call in progress
	Message waiting Note: Indicates a message from your network operators service. Subscription charges and access fees may apply.

 
Navigating in the menu

All telephone base and cordless handset functions can be accessed via the menu.

Please refer to “Using the menu” on pages 16 and 25 for information on how to access each function.

 All descriptions in this operating manual assume that the handset is in Standby mode









 or 	Open the main menu
 or 	Select the submenu required
 or 	Open the submenu
 or 	Select the function required
 or 	Open the function
 or 	Select the setting required
	Enter digits or letters using the relevant keys
  , or Save	Confirm the entries
 or 	Cancel and return to standby mode

 Every process is automatically cancelled if there is no input within 20 seconds. The handset will return to standby mode.






 
Operating the Telephone

Creating phone book entries in the telephone base - example








This example explains how to navigate and create entries in the phone book. Proceed as in this example for all the settings.

2 sec 	Opens add phone book entry mode
 	Enter the name (max. 16 letters) and confirm it
 	Enter the phone number (max. 24 digits) and confirm it
 or  , 	Select and confirm a ringing melody






Creating phone book entries in the cordless handset - example

	Open the phone book
Option, 	Select "New entry"
 Save	Enter the name (max. 16 letters) and confirm it
 Save	Enter the phone number (max. 24 digits) and confirm it
 or  , Save	Select and confirm a ringing melody

Storing a quick dial entry in the telephone base

2 sec M1, M2 or M3	Opens add quick dial entry mode
 	Enter the name (max. 16 letters) and confirm it
 	Enter the phone number (max. 24 digits) and confirm it
 or  , 	Select and confirm a ringing melody

Storing a quick dial entry in the cordless handset





M1 or M2	Opens add quick dial entry mode
Option, 	Select "New entry"
 save	Enter the name (max. 16 letters) and confirm it
 save	Enter the phone number (max. 24 digits) and confirm it
 or  , save	Select and confirm a ringing melody

If you see a ◀ or ▶ icon, there are more digits to be viewed than can be shown on the display. Press the < or > key to view the digits.

Telephone

Making a call using the telephone base

Each digit you enter before picking up the handset or pressing handsfree will be announced.




	Enter the phone number (max. 24 digits)
	Following incorrect input, press to delete the last digit
 or 	Dial the phone number

It is also possible to press the external call button first to obtain dialling tone. The digits entered will then be dialled immediately.



It is not possible to correct wrong digits individually using this dialling procedure.

Making a call using the cordless handset

	Enter the phone number (max. 24 digits)
	Following incorrect input, press to delete the last digit
	Dial the phone number

It is also possible to press the external call button first to obtain dialling tone. The digits entered will then be dialled immediately.


 
 




It is not possible to correct wrong digits individually using this dialling procedure.

End a call


,  or  End the call



 

Take a call

, , ,  or  Take the call

Redial using the telephone base

Your telephone stores the last 5 telephone numbers dialled (max. 24 digits each). As you scroll to each telephone number in the list, it will be announced.


 
 Open the redial list

 or ,  or  Select an entry and dial the number

Telephone

 

Redial using the cordless handset

Your telephone stores the last 10 telephone numbers dialled (max. 24 digits each).

-
- | | |
|---|-------------------------------------|
|  | Open the redial list |
|  | Select an entry and dial the number |
-

Calling back missed calls



Your telephone stores the last 30 incoming calls in the calls list. As you scroll to each telephone number in the calls list in the telephone base, it will be announced.

-
- | | |
|---|-------------------------------------|
|  | Open the calls list |
|  | Select an entry and dial the number |
-

Dialling phone numbers from the phone book


There must be phone numbers stored in the phone book. See pages 21 & 31.

Your telephone can store up to 200 name and number entries in the phone book. As you scroll to each telephone number in the phone book in the telephone base, it will be announced.

-
- | | |
|---|-------------------------------------|
|  | Open the phone book |
|  | Select an entry and dial the number |
-

 
 
Quick dial

Phone numbers must have been stored as quick dial numbers. See page 8. The stored quick dial number in the telephone base will be announced when you press the quick dial button.

-
- | | |
|---|---------------------------------------|
| M1, M2 or M3 | Press the required quick dial button. |
|  | Dial the number |
-



Chain dialling

This feature is used for more complex telephone services, eg for telephone banking or calling card procedures. Several numbers stored in the phone book can be dialled successively when a connection has already been made. It is also possible to combine numbers from the phone book with numbers entered manually. Numbers stored in the phone book can be chained and transmitted as required.

-
- | | |
|--|---|
|  | Open the phone book when a connection has been made |
|  | Select an entry and dial the number |
-


Adjusting the receiver volume, telephone base

The receiver volume of your telephone is louder than with a standard telephone.

 or  When on a call, adjust the setting with the volume buttons




Adjusting the receiver volume, cordless handset

The receiver volume of your telephone is louder than a standard telephone. Push up or down and release for each volume step.

 When on a call, adjust the setting with the side switch

Boosting the receiver volume


When on a call, you can increase the loudness of each volume setting if you press the 30dB button.

 or   Press the button, an icon flashes in the display

Handsfree, telephone base

Use Handsfree to listen to your caller via the loudspeaker.

 Switch on handsfree mode

 Deactivate handsfree mode

Handsfree, cordless handset



Use Handsfree to listen to your caller via the loudspeaker.

2 x  Switch on handsfree mode

 Deactivate handsfree mode



Adjusting the Handsfree volume, telephone base

There are 5 handsfree volume levels available. The “30dB” feature is not available in handsfree mode.

 or  Adjust the volume with the volume buttons

Adjusting the Handsfree volume, cordless handset

There are 5 handsfree volume levels available. The “30dB” feature is not available in handsfree mode.


 or  Adjust the volume with the side switch or up and down arrows


Telephone


Talk time display

The duration of each call is displayed in minutes and seconds during the call.

Equaliser, telephone base only

Everyone's hearing is different and some people can hear higher frequencies more clearly than others. Press the  button to adjust the tone and high frequencies within a call, until it's right for you.

, << or >> Adjust the tone with the left and right buttons

 Please don't be surprised to find that the volume can reduce when you set the tone control to a frequency higher or lower than normal. This is a normal effect. Please use the volume control to correct the volume if necessary.

Using a Headset (not included), telephone base

Connect a headset to the headset socket and press the headset button. You will now be able to hear and speak to your caller via the headset

Using a Headset (not included), cordless handset

Connect a headset to the headset socket. You will now be able to hear and speak to your caller via the headset.

Muting the microphone, telephone base

The microphone can be activated and deactivated during a telephone conversation when you are in handset or handsfree mode.

 Mute Switches the microphone off (Mute)

 Unmute Switches the microphone on

Muting the microphone, cordless handset

The microphone can be activated and deactivated during a telephone conversation when you are in handset or handsfree mode.

 Mute Switches the microphone off (Mute)

 Unmute Switches the microphone on

Ringer on/off, cordless handset only

You can turn the bell of the ringer on and off.

2 sec ,  Switches the bell ringer off

2 sec  Switches the bell ringer on

Keylock, cordless handset only

 

Calls can still be answered in the normal way when the keylock is on.

2 sec ,  Locks the keypad

Unlock,  Unlocks the keypad

Making internal calls




When making internal calls the telephone base is “HS0” and the cordless handset is HS1. Internal calls are free of charge.

HS0: ,  eg 1 Dial the internal call number of the required handset


HS1:  Accept the internal call on the other handset



HS0/HS1:   End the internal call

Transferring external calls internally

 HS0: Press and hold  INT until a short beep is heard, , eg 1

HS1:  Accept the internal call on the other handset




HS0:  External call is transferred to the other handset

 If the called handset does not answer, you can take the call back by pressing the  button.

Telephone

Conference calls

You can hold a conference call between 1 external and 2 internal callers.

 HSO: Press and hold  INT until a short beep is heard, , eg 1

HS1:  Accept the internal call on the other handset


HSO: 2 sec  INT Activates conference call

HSO:  INT /HS1:<INT Put external call on hold

HSO/HS1:   End conference call

Handset registration



 

You only need to register a handset that has become deregistered from the base or if you have purchased a new handset.





 New handsets must be fully charged before you attempt to register them.

At the base





 

10 sec , Register Activate registration mode

At the handset

,  or ,  Open the menu, select "Handset"



 

 or , ,  Select "Registration", "Register"



, ,  Select 1,2,3 or 4



, , , , ,  Enter the PIN code and confirm

Handset deregistration, telephone base

You will only need to de-register a handset if you decide that you have too many handsets registered or your handset develops a fault and you need to replace it.





,  or ,  Open the menu, select "Remove HS"


,  Enter the PIN code and confirm






 
,  Enter the handset number and confirm



Handset deregistration, cordless handset

You will only need to de-register a handset if you decide that you have too many handsets registered or your handset develops a fault and you need to replace it.

 ,  or  ,  Open the menu, select "Handset"

 or  ,  ,  ,  Select "Registration", "De-register"

 ,     ,  Enter the PIN code and confirm


 ,  , Enter the handset number and confirm

Power fail, telephone base

If you have a mains power failure, you can still use your telephone base to make and receive telephone calls but the display will only function when you lift the handset.

You can also use the following functions when the handset is lifted:

- View or dial from the phone book or M1, M2 or M3 keys
- Dial out Recall (Flash) and pause
- Adjust the receiver volume
- Mute the microphone

 The phone will ring for an incoming call in power fail mode but the incoming call light will not function and the callers' details will not be stored in the calls list.

Using the menu

Answering Machine (see page 35)

Phonebook (see page 21)

Priority/Default Setting

If you are the main user of this telephone you should change the settings in the menu so that they are just right for you. These settings will be memorised automatically whenever you wish to make or answer a call.

The user profile feature can be used by others in the household whose preferences for volume, boost and equaliser will also be memorised and applied as indicated below.

User Profiles

You can store 3 different user profiles, each with different settings for the “Volume”, “Boost” and “Equaliser” features. You can also personalise each Profile by naming it (Max 10 letters).

Changing the Profile name

You can personalise each profile by naming it.

☰, ^ or v, ☰	Open the Menu, select “Profile”
^ or v, ☰	Select “Profile 1, 2 or 3”
^ or v, ☰	Select “Name”
⊗	Delete the current name
☰, ☰	Enter the new name and confirm it (max. 10 letters).

Changing the Profile Handset Volume

There are 5 volume settings available

^ or v, ☰	Select “Volume”
3	The current setting is shown
^ or v, ☰	Select and confirm the handset volume


Changing the Profile “Boost” setting

^ or v, ☰	Select “Boost”
Off	The current setting is shown
^ or v, ☰	Select and confirm “On” or “Off”

Changing the Profile “Equaliser” setting

∧ or ∨, ☰ Select “Equaliser”

∧ or ∨, ☰ Select and confirm

☞ Press the  key to return to standby.

Selecting a Profile for use

Incoming calls

When you receive an incoming call and before you answer the telephone, press the M1, M2 or M3 key for the profile you wish to use. The display will confirm the profile that has been selected and you can answer the call as normal.

Outgoing calls

When you wish to make an outgoing call, press and hold the M1, M2 or M3 key for the profile you wish to use. The display will confirm the profile that has been selected and you can now make your outgoing call as normal.

If you do not dial your outgoing call within 30 seconds of pressing the M1, M2 or M3 key, the selected profile will timeout and the default telephone settings will be used for the call.

User profiles cannot be selected in Handsfree mode. You must lift the handset.

Ringer tone

There are 10 different ringing melodies available for External and Internal calls.

☰, ∧ or ∨, ☰ Open the Menu, select “Ringer Tone”

∧ or ∨, EXT
Melody or INT
Melody, ☰ Select and confirm the melody to change

Melody 8 The current setting is shown

∧ or ∨, ☰ Select and confirm a ringing melody

Using the Menu, Telephone Base

Ringer Volume

There are 5 different volume settings available and "OFF".

⊖, ^ or v, ⊕	Open the Menu, select "Ringer Tone"
^ or v, ⊕	Select "Volume"
Ring Vol 3	The current setting is shown
^ or v, ⊕	Select and confirm a ringing volume or "Ring Off"

Key Tone

Choose to turn the key tone "ON" or "OFF".

⊖, ^ or v, ⊕	Open the Menu, select "Key Tone"
ON	The current setting is shown
^ or v, ⊕	Select and confirm "ON" or "OFF"

Display

Contrast

There are 5 different contrast levels available so that you can set the display to how you find it most easy to read.

⊖, ^ or v, ⊕	Open the Menu, select "Display"
^ or v, ⊕	Select "Contrast"
Level 3	The current setting is shown
^ or v, ⊕	Select and confirm the contrast setting

Language

There are 5 languages available, English, German, French, Spanish and Italian.

⊖, ^ or v, ⊕	Open the Menu, select "Display"
^ or v, ⊕	Select "Language"
English	The current setting is shown
^ or v, ⊕	Select and confirm a language

Settings

Boost Memory

With this feature set to "ON", if you use the 30dB button, your handset will remember and use your last Boost setting for each call.

☺, ^ or v, ☺	Open the Menu, select "Settings"
^ or v, ☺	Select "Boost Mem"
OFF	The current setting is shown
^ or v, ☺	Select and confirm "ON" or "OFF"

Read Number

With this feature set to "ON", each incoming caller display number will be announced. See page 23 for caller display.

☺, ^ or v, ☺	Open the Menu, select "Settings"
^ or v, ☺	Select "Read Number"
ON	The current setting is shown
^ or v, ☺	Select and confirm "ON" or "OFF"

Change Case

☺, ^ or v, ☺	Open the Menu, select "Settings"
^ or v, ☺	Select "Change case"
ABC	The current setting is shown
^ or v, ☺	Select and confirm

System PIN

☺, ^ or v, ☺	Open the Menu, select "Settings"
^ or v, ☺	Select "System PIN"
☺ ☺	Enter the old PIN and confirm it
2x ☺ ☺	Enter the new PIN and confirm it












NZ Caller ID

☺, ^ or v, ☺	Open the Menu, select "Settings"
^ or v, ☺	Select "NZ Caller ID"
OFF	The current setting is shown
^ or v, ☺	Select and confirm "ON" or "OFF"

Using the Menu, Telephone Base

Time

Date/Time











 ,  or  , 	Open the Menu, select "Time"
 or  , 	Select "Date & Time"
 , 	Enter the day, month and year and confirm
 , 	Enter the hours (24 hour clock) and confirm



When setting the time and date (on the telephone base), it is also possible to use the left and right keys to move backward and forward to make corrections. This also applies when entering phonebook entries.

Time Format

You can set the time to be displayed in 24 or 12 hour clock

 ,  or  , 	Open the Menu, select "Time"
 or  , 	Select "Format"
24 hour	The current setting is shown
 or  , 	Select and confirm 24 or 12 hour

Remove HS (See page 15)

Reset (see page 40)

Phone Book

200 names and phone numbers can be stored in the phone book with a maximum of 16 letters and 24 digits for each entry.


* Always enter the area dialling code with each phone book entry.

* The phone book entries are managed alphabetically. To go quickly to a phone book entry, enter the first letter of the corresponding entry.








Entering a name

The digit keys are also labelled with letters for the entry of the respective letters. Pressing the respective key the necessary number of times enables capital letters and digits to be entered.

 








①	Space
ⓧ	Delete
①	Special characters

To enter the same letter twice, press the button to  enter the letter. Wait until the cursor moves forward one place. Enter the letter again.

Creating phone book entries


 



 
 
 

2 sec  , 	Opens add phone book entry mode
 	Enter the name (max. 16 letters) and confirm it
 	Enter the phone number (max. 24 digits) and confirm it
^ or v, 	Select and confirm a ringing melody

Editing phone book entries

 
 





 

 , 	Open the phone book
^ or v	Select a phone book entry
 , ^ or v, 	Open phone book options, select "Edit"
<< >>  	Edit the name (max. 16 letters) and confirm it
<< >>  	Edit the phone number (max. 24 digits) and confirm it
^ or v, 	Select and confirm a ringing melody

Phone Book, Telephone Base

Deleting single phone book entries

	Open the phone book
 or 	Select a phone book entry
 ,  or  , 	Open phone book options, select "Delete"
Delete?,  or 	Confirm the deletion or Cancel

Deleting all phone book entries


 



 
 


	Open the phone book
 or 	Select a phone book entry
 ,  ,  , 	Open phone book options, select "Delete All"
Delete All?,  or 	Confirm the deletion or Cancel

Copy phone book entries to another registered handset

Copy entry - copy a single entry to another registered handset

Copy append - copy only those entries that are not already in the phone book of the other registered handset

Copy all - copy all the entries to another registered handset

	Open the phone book
 or 	Select a phone book entry
 ,  ,  , 	Activate the copying process (Copy entry, Copy append or Copy all)
<< >> eg HS2 	Select the destination handset
HS2 	Accept on destination handset




If you copy all the entries from one handset to another. All the existing entries on the destination handset will be deleted.

Caller ID

If you subscribe to your telephone operators service (charges may apply), numbers of the incoming calls will be displayed on the screen and stored in the call log (please consult your telephone service provider for details).



The number of the caller (or name if stored in the Phone Book) appears in the display when the phone rings. If the caller has withheld their phone number, a corresponding message appears in the display. The phone number is not displayed and will not be stored in the calls list. A total of 30 incoming calls, with a maximum of 16 letters for the name and 23 digits for the number can be stored in the calls list.

The number of new calls received will be shown in the display along with the flashing  icon.


Take two different calls at the same time

If you have subscribed to your telephone network operators Call Waiting Caller ID service, your phone will display the number of the second incoming call for around 20 seconds while you are talking on the phone.

During a call, you will hear two loud beeps periodically to notify you of another incoming call. If you wish to answer this call

1. When the handset receives a second call, the number of the caller appears on the display. It will display for 20 seconds or until you press a key on the phone.
2. Press [] to listen for dial tone then Press [2] to put the current call on hold and talk with the second caller.
3. Subsequent presses [] to listen for dial tone then Press [2] will toggle you between these 2 callers.

Displaying calls list entries

	Opens the calls list at most recent entry
^ or v	Select an entry






 
 



 
 





Caller ID, Telephone Base

Other messages that you may see in the display, if your telephone network provider supports this service, are:

WITHHELD PRIVATE	The caller has withheld their number or the information is not available
INTERNATIONAL	The caller is dialling you whilst abroad or may be using an internet telephony service.
PAYPHONE	The caller has dialled you from a public payphone
OPERATOR	Call from a network operator


 








Storing calls list entries in the phone book, or quickdial memories

A phone number stored in the calls list can be stored directly to the phone book or quickdial memories.


 








 	Opens the calls list at most recent entry
 or 	Select an entry
 ,  or  , 	Open the Options Menu, select “Save to PB” or “M1, M2 or M3”
 , 	Enter the name and confirm it
 < >   , 	Edit the number and confirm it
 or  , 	Select and confirm a ringing melody

Deleting calls list entries

Deleting a single calls list entry

 	Opens the calls list at most recent entry
 or 	Select an entry
 ,  or  , 	Open the Options Menu, select “Delete”
Delete? ,  or 	Confirm the deletion or Cancel

Deleting all calls list entries

 	Opens the calls list at most recent entry
 or 	Select an entry
 ,  or  , 	Open the Options Menu, select “Delete All”
Delete All? ,  or 	Confirm the deletion or Cancel

Using the menu

Answering Machine (see page 35)

Phone book (see page 31)

Priority/Default Setting

If you are the main user of this telephone you should change the settings in the menu so that they are just right for you. These settings will be memorised automatically whenever you wish to make or answer a call.

The user profile feature can be used by others in the household whose preferences for volume, boost and equaliser will also be memorised and applied as indicated below.

User Profiles

You can store 2 different user profiles, each with different settings for the “Volume”, “Boost” and “Equaliser” features. You can also personalise each Profile by naming it (Max 10 letters).

Changing the Profile name

You can personalise each profile by naming it.

↩, ^ or v, ☑	Open the Menu, select “Profile”
^ or v, ☑	Select “Profile 1 or 2”
^ or v, ☑	Select “Name”
☒	Delete the current name
☒, Save	Enter the new name and confirm it (max. 10 letters).

Changing the Profile Handset Volume

There are 5 volume settings available


^ or v, ☑	Select “Volume”
3	The current setting is shown
^ or v, Save	Select and confirm the handset volume

Changing the Profile “Boost” setting



^ or v, ☑	Select “Boost”
Off	The current setting is shown
^ or v, ☑	Select and confirm “On” or “Off”

Using the Menu, Cordless Handset

Changing the Profile “Equaliser” setting



∧ or ∨,  Select “Equaliser”

∧ or ∨, Save Select and confirm

 Press the  key to return to standby.

Copy a User Profile



You can also copy a user profile to other registered compatible Professional series handsets.

, ∧ or ∨,  Open the Menu, select “Profile”

∧ or ∨,  Select “Profile 1 or 2”

∧ or ∨,  Select “Copy”

< > 2, 3, 4  Select the destination handset

 or  Accept or cancel on the destination handset


Selecting a Profile for use

Incoming calls

When you receive an incoming call and before you answer the telephone, press the M1 or M2 key for the profile you wish to use. The display will confirm the profile that has been selected and you can answer the call as normal.

Outgoing calls

When you wish to make an outgoing call, press and hold the M1 or M2 key for the profile you wish to use. The display will confirm the profile that has been selected and you can now make your outgoing call as normal.

 If you do not dial your outgoing call within 30 seconds of pressing the M1 or M2 key, the selected profile will timeout and the default telephone settings will be used for the call.

 User profiles cannot be selected in Handsfree mode.

Handset

Handset Ringing melody

There are 10 different ringing melodies available.

↵, ^ or v, ☑	Open the Menu, select "Handset"
☑	Select "Ring tone"
^ or v, ☑	Select "External" or "Internal (intercom)"
Melody 8 (External), Melody 8 (Internal)	The current setting is shown
^ or v, Save	Select and confirm a ringing melody

Handset Ringing volume



There are 5 ringing volume settings available and "OFF".

↵, ^ or v, ☑	Open the Menu, select "Handset"
v, ☑	Select "Ringer volume"
Volume 3	The current setting is shown
^ or v, Save	Select and confirm a ringing tone volume or "OFF"

Equaliser

Use the equaliser feature to adjust the tone and high frequencies until they are right for you.

↵, ^ or v, ☑	Open the Menu, select "Handset"
^ or v, ☑	Select "Equaliser"
^ or v, Save	Adjust the settings and confirm

You can also adjust the equaliser settings when you are on a call. Press the middle of the  key to switch between the volume control and the equaliser. When the equaliser screen is displayed, use the up or down of the  key to adjust the setting.

Boost Memory

With this feature set to "On", if you use the 30dB button, your handset will remember and use your last Boost setting for each call.

↵, ^ or v, ☑	Open the Menu, select "Handset"
^ or v, ☑	Select "Boost memory"
Off	The current setting is shown
^ or v, ☑	Select and confirm "On" or "Off"

Using the Menu, Cordless Handset

Handset name

You can personalise your handset by naming it (max. 12 letters).


⇒ , ^ or v, ✓	Open the Menu, select "Handset"
^ or v, ✓	Select "Handset name"
✖	Delete the current name
⌨ , Save	Enter new name and confirm it

Keypad Beep

⇒ , ^ or v, ✓	Open the Menu, select "Handset"
^ or v, ✓	Select "Keypad Beep"
On	The current setting is shown
^ or v, ✓	Select and confirm "On" or "Off"

Contrast

There are 5 different contrast levels available so that you can set the display to how you find it most easy to read.

⇒ , ^ or v, ✓ 	Open the Menu, select "Handset"
^ or v, ✓	Select "Contrast"
Level 3	The current setting is shown
^ or v, Save	Select and confirm the contrast setting

Auto talk

With this feature set to "On", your handset will automatically answer the call when you pick up the handset from the base. This is the default setting.

⇒ , ^ or v, ✓	Open the Menu, select "Handset"
^ or v, ✓	Select "Auto talk"
Off	The current setting is shown
^ or v, ✓	Select and confirm "On" or "Off"

Backlight time

You can select the number of seconds 10, 20, 30 or 40 before the backlight turns off.

⇒ , ^ or v, ✓	Open the Menu, select "Handset"
^ or v, ✓	Select "Backlight time"
10S	The current setting is shown
^ or v, Save	Select and confirm

Confirm beep

⇒ , ^ or v, ✓	Open the Menu, select "Handset"
^ or v, ✓	Select "Confirm beep"
On	The current setting is shown
^ or v, ✓	Select and confirm "On" or "Off"

Select base

➔, ^ or v, ☑	Open the Menu, select "Handset"
^ or v, ☑	Select "Select base"
Auto	The current setting is shown
^ or v, ☑	Select and confirm "Auto" or "Manual"

Language

There are 5 languages available, English, German, French, Spanish and Italian.

➔, ^ or v, ☑	Open the Menu, select "Handset"
^ or v, ☑	Select "Language"
German	The current setting is shown
^ or v, ☑	Select and confirm a language

Base settings**Base Ringing melody**

There are 10 different ringing melodies available.

➔, ^ or v, ☑	Open the Menu, select "Base settings"
☑	Select "Ring tone"
8	The current setting is shown
^ or v, Save	Select and confirm a ringing melody

Base Ringing volume

There are 5 ringing volume settings available and "OFF".

➔, ^ or v, ☑	Open the Menu, select "Base settings"
v, ☑	Select "Ringer volume"
3	The current setting is shown
^ or v, Save	Select and confirm a ringing tone volume or "Off"

Shaker

You can plug a shaker accessory (VIB100 not included) into the socket on the back of the base. This can be purchased separately from the reseller where you purchased the product, or directly from Oricom (Australia). With this feature turned "ON" the shaker will vibrate when you receive an incoming call.

➔, ^ or v, ☑	Open the Menu, select "Base settings"
v, ☑	Select "Shaker"
On	The current setting is shown
^ or v, Save	Select and confirm "On" or "Off"

Using the Menu, Cordless Handset

System PIN

→, ^ or v, ✓	Open the Menu, select “Base settings”
^ or v, ✓	Select “System PIN”
☰, ✓	Enter the old PIN and confirm it
2x ☰, ✓	Enter the new PIN and confirm it

Time

Date/Time

→, ^ or v, ✓	Open the Menu, select “Time”
✓	Select “Date and Time”
☰, Save	Enter the day, month and year, followed by the time in 24 hour clock and confirm.

Set Time Format

→, ^ or v, ✓	Open the Menu, select “Time”
v, ✓	Select “Set time format”
24 Hour	The current setting is shown
^ or v, ✓	Select and confirm “12 hour” or 24 hour”

Alarm

Set Alarm

→, ^ or v, ✓	Open the Menu, select “Alarm”
✓	Select “Set alarm”
^ or v, ✓	Select Once, Every Day, Mon to Fri or Off
☰ Save	Enter the alarm time (24hour clock) and confirm
☰ Save	Select the alarm melody and confirm

Night Light

→, ^ or v, ✓	Open the Menu, select “Alarm”
✓	Select “Night Light”
On	The current setting is shown
^ or v, ✓	Select and confirm On or Off

Phone Book

200 names and phone numbers can be stored in the phone book with a maximum of 16 letters and 24 digits for each entry.


* Always enter the area dialling code with each phone book entry.


* The phone book entries are managed alphabetically. To go quickly to a phone book entry, enter the first letter of the corresponding entry.

Entering a name





The digit keys are also labelled with letters for the entry of the respective letters.

Pressing the respective key the necessary number of times enables capital letters and digits to be entered.







①	Space
	Delete
★	Press the “*” key to switch between upper “ABC” and lower “abc” case.

To enter the same letter twice, press the button to  enter the letter. Wait until the cursor moves forward one place. Enter the letter again.

Creating phone book entries







	Open the phone book
Option, 	Select “New entry”
 Save	Enter the name (max. 16 letters) and confirm it
 Save	Enter the phone number (max. 24 digits) and confirm it
^ or v Save	Select and confirm a ringing melody

Editing phone book entries









	Open the phone book
^ or v	Select a phone book entry
Option, v, 	Activate the editing process
  Save	Edit the name (max. 16 letters) and confirm it
  Save	Edit the phone number (max. 24 digits) and confirm it
^ or v Save	Select and confirm a ringing melody

Phone Book, Cordless Handset

Show details








 


-  Open the phone book
-  or  Select a phone book entry
- Option,  or ,  Select "Show details"

Deleting phone book entries

-  Open the phone book
-  or  Select a phone book entry
- Option,  or ,  Activate the deletion process (Delete entry or Delete all)
- 2 x**  or  Confirm the deletion or Cancel

Copy phone book entries to another registered handset

- Copy entry** - copy a single entry to another registered handset
- Copy append** - copy only those entries that are not already in the phone book of the other registered handset
- Copy all** - copy all the entries to another registered handset

-  Open the phone book
-  or  Select a phone book entry
- Option,  or ,  Activate the copying process (Copy entry, Copy append or Copy all)
-  or , eg HS2  Select the destination handset
- HS2  Accept on destination handset




If you copy all the entries from one handset to another. All the existing entries on the destination handset will be deleted.

Caller ID

If you subscribe to your telephone operators service (charges may apply), numbers of the incoming calls will be displayed on the screen and stored in the call log (please consult your telephone service provider for details).

The number of the caller (or name if stored in the Phone Book) appears in the display when the phone rings. If the caller has withheld their phone number, a corresponding message appears in the display. The phone number is not displayed and will not be stored in the calls list.

A total of 30 incoming calls, with a maximum of 16 letters for the name and 23 digits for the number can be stored in the calls list. The flashing  indicates new calls in the calls list.



Take two different calls at the same time

If you have subscribed to your telephone network operators Call Waiting Caller ID service, your phone will display the number of the second incoming call for around 20 seconds while you are talking on the phone.

During a call, you will hear two loud beeps periodically to notify you of another incoming call. If you wish to answer this call.

1. When the handset receives a second call, the number of the caller appears on the display. It will display for 20 seconds or until you press a key on the phone.
2. Press [R>] to listen for dial tone then Press [2] to put the current call on hold and talk with the second caller.
3. Subsequent presses [R>] to listen for dial tone then Press [2] will toggle you between these 2 callers.

Displaying calls list entries

	Opens the calls list at most recent entry
^ or v	Select an entry
	To display further information.





Caller ID, Cordless Handset

Other messages that you may see in the display, if your telephone network provider supports this service, are:

WITHHELD PRIVATE	The caller has withheld their number or the information is not available
INTERNATIONAL	The caller is dialling you whilst abroad or may be using an internet telephony service.
PAYPHONE	The caller has dialled you from a public payphone
OPERATOR	Call from a network operator





Storing calls list entries in the phone book

A phone number stored in the calls list can be stored directly to the phone book.





	Opens the calls list at most recent entry
^ or v	Select an entry
Option 	Save to phone book
 , Save	Enter the name and confirm it
 , Save	Edit the number and confirm it
^ or v , Save	Select and confirm a ringing melody

Deleting calls list entries

Deleting a single calls list entry

	Opens the calls list at most recent entry
^ or v	Select an entry
Option, ^ or v , 	Select "Delete"
 or 	Confirm or Cancel


Deleting all calls list entries

	Opens the calls list at most recent entry
Option, ^ or v , 	Select "Delete all"
Delete all calls?	Confirm or Cancel
 or 	

 

 
 

 
 
Answering Machine

Your answering machine can be ready for use within a few seconds of plugging in the telephone line cord and switching on the mains power. Just follow the steps in this section to set up and use your answering machine.



Switch on/off

	Switches the answering machine on or off. The current answer mode is announced.
---	---

Set the voice prompt language



 x 2	Open the answering machine menu
 or  , 	Select "Language"
 or  , 	Select "German", "French" or "English" and confirm

Set the answer mode


	Switch the answering machine on
2 sec 	To change the mode between "Answer & Rec.", and "Answer Only"

 

Record your outgoing message (OGM)

Your answering machine comes with a default outgoing message but you can record your own personal OGM of up to 2 minutes long.



 


 

2 sec 	Record your message after the beep
	Press to end your recording

Check your OGM

	The current OGM is announced
---	------------------------------

 To return to the factory pre-set OGM, just press and hold the  key whilst the current OGM is playing.

Set the answer delay

 
 x 2	Open the answering machine menu
 or  , 	Select "Answer Delay"
3 rings	The current setting is shown
 or  , 	Select and confirm the number or rings (2-9) or "Time Saver".

Using the Answering Machine

Time saver: This feature can save you the cost of a call when you ring in to listen to your messages from another phone. If your answering machine answers after 2 rings you have new messages, if it answers after 5 rings then there are no new messages. Hang up after the 2nd ring and you will not be charged for the call.

Record a memo

You can use your answering machine to record memo messages for other users to listen to later. The maximum length of the message is 2 minutes. The minimum length of the message is 1 second.

2 sec  Record your memo after the beep

 Press to end your recording

Listening to your messages/memos

Your messages/memos are played back in the order that they were received. New messages are played before old messages. The time and date of each recording is announced before each message is played back. The maximum length of the message is 2 minutes.


 Play/Pause

 Stop

 Rewind

 Fast forward

Delete a single message/memo

 Play the message to be deleted

2 sec  Delete the message

Delete all messages/memos

 x 2 Open the answering machine menu

 or  Select "Del All Msgs"

Delete All?

 or  Confirm or cancel

Listen to your messages/memos via the handset

↔, ^ or v, ☑ Open the Menu, select “Ans Machine”

^ or v, ☑ Select “Play New Msgs” or “Play All Msgs”

☞ Press the ⏪ key to return to standby.

Memory Full

Should your answering machine become full either during a recording or after the memory has become full, “Answering Machine Full” will be announced and the Answer Mode will change automatically to “Answer Only”. You will need to delete some messages before any new messages can be recorded.



 





Remote Access

You can call your answering machine from any Touchtone™ phone or mobile phone whilst you are away from home to listen to your messages.




PIN Code for remote access

A 3-digit PIN code is required for remote access to your answering machine. The default code is “000” but for security reasons you should change this to a code personal to you.


Changing the PIN code

 x 2	Open the answering machine menu
 or  , 	Select “Remote PIN”
 	Enter the old PIN code and confirm it
 	Enter the new PIN code and confirm it

Call in to check your messages

	Dial your own phone number
3 x  , 	Switch to remote access and enter your 3 digit PIN code

If you enter your PIN code correctly you can now remotely control your answering machine by using the digits on the keypad.

 If you enter your PIN code incorrectly 3 times, the answering machine will hang up the call.





Remote commands

Digit	Function
1	Rewind
2	Play/Pause
3	Fast Forward
4	1st OGM Playback (Answer & Record)
5	1st OGM Recording
6	Stop
7	Delete current message
8	Answer Off
9	Answer On
0	Delete all old messages
#	Record a memo

Advanced Setting




Setting the Recall time, telephone base

Two recall timings are available. Short 100ms (Australia) and Long 600ms (New Zealand).

 ^ or v , 	Open the Menu, select "Settings"
^ or v , 	Select "Recall"
Short	The current setting is shown
^ or v , 	Select and confirm "Short" or "Long"

Setting the Recall time, cordless handset

Two recall timings are available. Short 100ms (Australia) and Long 600ms (New Zealand).

 , ^ or v , 	Open the Menu, select "Base settings"
^ or v , 	Select "Recall"
Short	The current setting is shown
^ or v , Save	Select and confirm "Short" or "Long"

R button on PBX phone systems

If the telephone is connected to a PBX phone system functions such as transferring calls and automatic call back can be used via the R button.



R button and Supplementary services

Your telephone supports the supplementary services offered by your telephone network provider, such as call waiting and conference calls. The supplementary services can be used in conjunction with the R button. Please contact your telephone network provider with regard to enabling the supplementary services and which recall time must be used.


Dialling pause (PBX ONLY)

When using some older PBX phone systems, it takes a little time before the dialling tone becomes available. It is possible to insert a pause after the number for the outside line so that the number can be dialled in a continuous process without having to wait for the dial tone.

Telephone base

 ,  P	Enter digit/s, Insert a pause. "P" is shown in the display.
---	---

Cordless handset

2 sec 	Insert a pause. "P" is shown in the display.
---	--





Advanced Setting

Reset to default settings, telephone base

You can reset the telephone base to its original default settings.



Caution: The phone book, calls list, redial list and any answering machine messages and memos are deleted when you reset the telephone base.

  or ,  Open the Menu, select "Reset"

Base Reset?, Confirm or Cancel

 or 

Reset to default settings, cordless handset

You can reset your handset to its original default settings. The phone book, calls and redial lists are not deleted when you reset the handset.


10 sec R>, Activate Reset

 or  Confirm or cancel

Troubleshooting

Problem	Possible cause(s)	Solution(s)
Bad audio quality (crackles,echo, etc.).	<ol style="list-style-type: none"> 1. Interference from nearby electrical appliance. 2. Base unit is installed in a room with thick walls. 3. The handset is too far from the base unit. 4. If you have Broadband/ADSL you need an in line filter (not supplied) connected where this product connects to the phone socket. 5. Faulty telephone line. 	<ol style="list-style-type: none"> 1. Try a different connection point, one that is away from other electrical appliances. 2. Install the base unit in a DIFFERENT room OR use EXTENSION leads. 3. Move CLOSER to the base unit. 4. Ensure a in-line ADSL filter is installed on all phone sockets between wall plate and your phone. 5. Contact your network service provider to check your line.
Caller ID does not work.	<ol style="list-style-type: none"> 1. Service not activated with your Network service provider. 2. Caller ID service is activated but does not work or is intermittent. 	<ol style="list-style-type: none"> 1. Check your SUBSCRIPTION with the SERVICE provider. 2. Ask your service provider to re set your caller ID service.
Phone does not ring when a call comes in.	<ol style="list-style-type: none"> 1. The ringer is off. 2. Too many phones are sharing the same phone line. 3. Base unit not plugged in. 	<ol style="list-style-type: none"> 1. Turn ON the ringer. 2. Disconnect some of the phones from the phone line. 3. Check base unit CONNECTIONS.
Keypad does not work.	Keypad may be locked.	UNLOCK the keypad.
Busy tone + in use light on.	<ol style="list-style-type: none"> 1. Other handset may still be connected. 2. Check power supply connection. 	<ol style="list-style-type: none"> 1. Check ALL handsets and END all calls. 2. Check CONNECTIONS to wall and base.
Handset registration fails continuously.	The base memory may be fully charged.	Delete un-used handsets and try again.

Troubleshooting

Problem	Possible cause(s)	Solution(s)
Cannot make/answer a 2nd call.	2nd call service can be activated.	Check with your service provider. Check the recall selection is correct.
The battery icon  is not scrolling when the handset is placed on the base.	<ol style="list-style-type: none">1. Bad battery contact.2. Dirty contact.3. Battery is fully charged	<ol style="list-style-type: none">1. Move the handset slightly.2. Clean the battery contact with a dry cloth.3. Its fine to leave on the base when fully charged.
A phonebook entry cannot be stored.	The phonebook is full.	Delete any unused entries to free memory.
Answering machine does not record messages.	<ol style="list-style-type: none">1. The answer machine may be turned off.2. The memory may be full.3. Answer mode may be set to ANSWER ONLY.	<ol style="list-style-type: none">1. Switch the answering machine on.2. Delete some messages.3. Change the mode to ANSWER & REC.
Cannot access messages remotely.	<ol style="list-style-type: none">1. Remote access may be switched off.2. Wrong PIN is entered.	<ol style="list-style-type: none">1. Switch Remote access on.2. Enter the PIN once again.
Cannot record outgoing message.	<ol style="list-style-type: none">1. The memory may be full.	<ol style="list-style-type: none">1. Delete messages.
Answering machine stops recording part way through a message.	<ol style="list-style-type: none">1. The memory may be full.2. The maximum message length is more than 2 minutes.	<ol style="list-style-type: none">1. Delete messages.

Note:

If none of the above solutions help, reset your phone by disconnecting the mains power from the base and removing all batteries from handset/s. Reconnect after 15 minutes.

Technical properties

Feature	Value
Standard	DECT ¹ GAP ²
Power supply (base station)	Input: 100~240VAC 50/60Hz 680mA Output: 12VDC 670mA
Power supply (charging station)	Input: 100~240VAC 50/60Hz 200mA Output: 7.5VDC 100mA
Range	Outdoors Approx 300m Indoors Approx 50m
Standby	Up to 100 h
Max. talk time	Up to 11 h
Rechargeable batteries	AAA 1.2V 800mAh NiMH
Permissible ambient temperature	0°C to 45°C
Permissible relative humidity	20% to 80%
Recall	100, 600 ms

¹ **DECT**: Digital Enhanced Cordless

Telecommunication = Standard for cordless telephones.

² **GAP**: Generic Access Profile = Standard for the interoperation of handsets and base stations from different manufacturers.

Default settings

Telephone base

The default settings can be restored via the menu. Refer to page 40 for the sequence of menu option selections.

Language	English
Answer mode	Answer and record
PIN-Code for remote access	000
Answer delay	3
Time format	24 Hour
External melody	8
Internal melody	8
Ringing volume	3
Key tone	On
Contrast	3
Boost memory	Off
Shaker	On
Recall time	100 ms
Dialling mode	Tone

Cordless handset

The default settings can be restored via the menu. Refer to page 40 for the sequence of menu option selections.

Language	English
Handset name	Oricom
Handset Ringing melody (External)	8
Handset Ringing melody (Internal)	8
Handset Ringing volume	3
Base Ringing melody	8
Base Ringing volume	5
Keypad beep	On
Auto talk	Off
Contrast	3
Backlight time	10S
Boost memory	Off
Recall time	100 ms
Dialling mode	Tone
PIN-Code	0000

Warranty (Australia)

- (a) Warranty Oricom International Pty Ltd (Oricom) warrants that the product is free from defects in materials and workmanship for a period of 12 months effective from the date of purchase. This warranty in no way affects your statutory warranty under the Trade Practices Act 1974 or any other similar legislation. It is important that you read the Warranty Card as it contains full and additional details of the warranty, limitation of warranty and conditions for receiving the warranty services during the warranty period. The Warranty Card is located in the package.
- (b) Exclusion and limitation of liability. Oricom will not be in breach of a warranty or condition expressly stated in this User Guide or the Warranty Card or implied by the Trade Practices Act and excludes any liability arising under any statutory or common law for damages or any other remedy if the damage occurs as a result of:
 - (i) Failure by you to follow the instructions in the User Guide for the installation and proper functioning of the product;
 - (ii) Negligence on your part or misuse by you of the product;
 - (iii) Any un-controlled external cause to the product not functioning including but not limited to electricity failure, lighting, over voltage;
 - (iv) Non adherence by you to the warnings in the User Guide and the User Guide generally; and

- (v) Modification to the product or services carried out to the product by anyone other than Oricom or on Oricom's behalf.

Oricom will not be liable for consequential losses including loss of profits arising from a cause of action in contract, tort or any other statutory or common law (except where a statute or any law prohibits this exclusion). The warranty does not extend to damage caused by misuse, negligence, excessive voltage or lightning. This warranty in no way affects your statutory rights. Full details of the warranty are contained in the enclosed warranty card.

Customer Support

If you feel this product is not working correctly please consult the user guide and ensure that you are using the product in accordance with the instructions.

To order spare parts additional parent units, replacement parts and in case of any technical issues you may have with this product please consult our website for further information or send us an email for a prompt response to your enquiry.

In the unlikely event of a fault developing, please contact us for assistance. If the product is then found to be faulty you will be asked to return it directly to us with a copy of the purchase receipt.

Notes for operation in New Zealand

The grant of a Telepermit for any item of terminal equipment indicates only that Telecom has accepted that the item complies with the minimum conditions for connection to its network. It indicates no endorsement of the product by Telecom, nor does it provide any sort of warranty. Above all, it provides no assurance that any item will work correctly in all respects with another item of Telepermitted equipment of a different make or model, nor does it imply that any product is compatible with all of Telecom's network services. This device may be subject to ringing or bell tinkle when certain other devices are connected to the same line. If this occurs, the problem should not be referred to the Telecom Faults service.

This equipment shall not be set to make automatic calls to the Telecom "111" Emergency Service.

This equipment may not provide for the effective hand-over of a call to another device connected to the same line.

This equipment should not be used under any circumstances that may constitute a nuisance to other Telecom Customers.

REN (RN for New Zealand)

The REN (Ringer Equivalence Number) or (RN) is of significance only if you wish to connect more than 1 telephone to your telephone line. A standard telephone line has a maximum REN capacity of 3 (RN of 5). It is possible to connect 3 (5) devices with a REN of 1 (RN of 1) with no degradation to the product's performance. Exceeding this limit may cause the volume of the ringer in any phone to decrease or not ring at all.

Caller ID

Customers using non Telecom toll services should not use the dial back feature for local calls as this will incur a charge only the 7 digit number should be dialled. Some of the CID services listed may not be available in New Zealand.

Index

A

Adjusting the Handsfree volume, cordless handset	11
Adjusting the Handsfree volume, telephone base	11
Adjusting the receiver volume, cordless handset	11
Adjusting the receiver volume, telephone base	11
Answering Machine	35
Auto talk (Cordless Handset)	28

B

Backlight time (Cordless Handset)	28
Base Ringing melody (Cordless Handset)	29
Base Ringing volume (Cordless Handset)	29
Boost Memory (Cordless Handset)	27
Boost Memory (Telephone Base)	19
Boosting the receiver volume	11

C

Call in to check your messages	38
Caller ID (Cordless Handset)	33
Caller ID (Telephone Base)	23
Calling back missed calls	10
Chain dialling	10
Change Case (Telephone Base)	19
Changing the PIN code	38
Changing the Profile “Boost” setting (Cordless Handset)	25
Changing the Profile “Boost” setting (Telephone Base)	16
Changing the Profile “Equaliser” setting (Cordless Handset)	26
Changing the Profile “Equaliser” setting (Telephone Base)	17
Changing the Profile Handset Volume (Cordless Handset)	25

Changing the Profile Handset Volume (Telephone Base)	16
Changing the Profile name (Cordless Handset)	25
Changing the Profile name (Telephone Base)	16
Check your OGM	35
Conference calls	14
Confirm beep (Cordless Handset)	28
Contrast (Cordless Handset)	28
Contrast (Telephone Base)	18
Copy a User Profile (Cordless Handset)	26
Copy phone book entries to another registered handset (Cordless Handset)	32
Copy phone book entries to another registered handset (Telephone Base)	22
Corded Telephone answering machine base	4
Cordless handset and base	5
Creating phone book entries (Cordless Handset)	31
Creating phone book entries (Telephone Base)	21
Creating phone book entries in the cordless handset - example	8
Creating phone book entries in the telephone base - example	8

D

Date/Time (Cordless Handset)	30
Date/Time (Telephone Base)	20
Default settings	44
Delete a single message/memo	36
Delete all messages/memos	36
Deleting a single calls list entry (Cordless Handset)	34
Deleting a single calls list entry (Telephone Base)	24
Deleting all calls list entries (Cordless Handset)	34
Deleting all calls list entries (Telephone Base)	24

Deleting all phone book entries (Telephone Base)	22	I	
Deleting phone book entries (Cordless Handset)	32	Icons in the handset display	7
Deleting single phone book entries (Telephone Base)	22	Icons in the telephone base station display	6
Dialling pause (PBX ONLY)	39	Installation	2
Dialling phone numbers from the phone book	10	K	
Display and explanation of operation sequences	6	Key Tone (Telephone Base)	18
Displaying calls list entries (Cordless Handset)	33	Keylock, cordless handset only	13
Displaying calls list entries (Telephone Base)	23	Keypad Beep (Cordless Handset)	28
E		L	
Editing phone book entries (Cordless Handset)	31	Language (Cordless Handset)	29
Editing phone book entries (Telephone Base)	21	Language (Telephone Base)	18
End a call	9	Listen to your messages/memos via the handset	37
Entering a name (Cordless Handset)	31	Listening to your messages/memos	36
Entering a name (Telephone Base)	21	M	
Equaliser (Cordless Handset)	27	Making a call using the cordless handset	9
Equaliser, telephone base only	12	Making a call using the telephone base	9
G		Making internal calls	13
Guarantee	52	Memory Full	37
H		Muting the microphone, cordless handset	12
Handset	27	Muting the microphone, telephone base	12
Handset deregistration, cordless handset	15	N	
Handset deregistration, telephone base	14	Navigating in the menu	7
Handset name	28	Night Light (Cordless Handset)	30
Handset registration	14	Notes for operation in New Zealand	46
Handset Ringing melody	27	NZ Caller ID (Telephone Base)	19
Handset Ringing volume	27	P	
Handsfree, cordless handset	11	Phone book	26, 37
Handsfree, telephone base	11		

Index

Power fail	20	Set Time Format (Cordless Handset)	30
Private branch exchanges	45	Setting the Recall time, cordless handset	39
Q		Setting the Recall time, telephone base	39
Quick dial	10	Shaker (Cordless Handset)	29
R		Show details (Cordless Handset)	32
R button and Supplementary services	39	Storing a quick dial entry in the cordless handset	8
R button on PBX phone systems	39	Storing a quick dial entry in the telephone base	8
Read Number (Telephone Base)	19	Storing calls list entries in the phone book (Cordless Handset)	34
Record a memo	36	Storing calls list entries in the phone book, or quickdial memories (Telephone Base)	24
Record your outgoing message (OGM)	35	Switch on/off	35
Redial using the cordless handset	10	System PIN (Cordless Handset)	30
Redial using the telephone base	9	System PIN (Telephone Base)	19
Remote commands	38	T	
REN (RN for New Zealand)	46	Take a call	9
Reset to default settings, cordless handset	40	Take two different calls at the same time (Telephone Base)	23
Reset to default settings, telephone base	40	Talk time display	12
Ringer on/off, cordless handset only	12	Technical properties	43
Ringer tone (Telephone Base)	17	Time Format (Telephone Base)	20
Ringer Volume (Telephone Base)	18	Transferring external calls internally	13
S		Troubleshooting	41
Select base (Cordless Handset)	29	U	
Select your country	2	User Profiles (Cordless Handset)	25
Selecting a Profile for use (Cordless Handset)	26	User Profiles (Telephone Base)	16
Selecting a Profile for use (Telephone Base)	17	Using a Headset (not included), cordless handset	12
Set Alarm (Cordless Handset)	30	Using a Headset (not included), telephone base	12
Set the answer delay	35	W	
Set the answer mode	35	Warranty (Australia)	45
Set the voice prompt language	35		

Australia

Oricom International Pty Ltd
Locked Bag 658
South Windsor, NSW 2756

Customer Support

Email: support@oricom.com.au
Web: www.oricom.com.au
Phone: 02 4574 8888
Fax: (02) 4574 8898



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>