

Oster®

User Manual **2609/2611 HAND BLENDER WITH BLENDING CUP**

2612 HAND BLENDER WITH BLENDING CUP AND CHOPPER

Manual de Instrucciones **2609/2611 MEZCLADORA MANUAL Y VASO PARA MEZCLAR**

2612 MEZCLADORA MANUAL Y VASO PARA MEZCLAR Y HACHER

Manuel d'Instructions **2609/2611 MÉLANGEUR PORTATIF AVEC BOL À MÉLANGER**

2612 MÉLANGEUR PORTATIF AVEC BOL À MÉLANGER ET À HACHER

**MODELS/MODELOS
MODÈLES**

2609, 2611, 2612



Visit us at www.oster.com P.N. 111797
Download from www.Somanuals.com. All Manuals Search And Download.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

READ ALL INSTRUCTIONS BEFORE USE

- Always operate the hand blender from power source of the same voltage, frequency and rating as indicated on the product identification plate.
- Do not use with an extension cord.
- Close supervision is necessary when hand blender is used by or near children, or incapacitated persons. Do not allow children to use it as a toy.
- Do not operate hand blender with a damaged cord or plug, after the appliance malfunctions or if it is dropped or damaged in any manner. Return appliance to the nearest Authorized Sunbeam Service Center for examination, repair or electrical or mechanical adjustment.
- Do not twist, kink or wrap the power cord around the appliance as this may cause the insulation to weaken and split particularly where it enters the unit.
- To protect against risk of electrical shock, do not put hand blender motor in water or other liquid. This may cause personal injury and/or damage to the product.
- After each operation, allow the hand blender to cool for 3 minutes before using it again.
- Do not process food containing hard objects that cannot be safely broken up by the blade.
- To protect against fire, do not operate the unit in the presence of explosive and/or flammable fumes.
- This hand blender should not be used in the immediate vicinity of water, such as bathtub, washbowls, swimming pool, etc., where the likelihood of immersion or splashing could occur.
- Switch off and unplug from outlet while not in use, before putting on or taking off parts and before cleaning. Remove by grasping the plug; do not pull on the cord.
- Avoid contact with moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils away from blade during operation to reduce the risk of injury to persons and/or damage to the hand blender. A spatula or scraper may be used when the appliance is not in operation.
- When mixing liquids, especially hot liquids, use a tall container or make small quantities at a time to reduce spillage.

- Do not place hand blender on or near a hot burner or in a heated oven.
- Do not use over a stove or other heat source. When mixing soups or other hot foods or liquids, remove the saucepan from the heat source before using the hand blender.
- This appliance is not intended to chop ice. Add ice to beverage after blending.
- Blades are sharp. Handle with extreme care.
- Do not use hand blender for other than intended use.
- Do not leave hand blender unattended while it is operating.
- The use of attachments not recommended or sold by Sunbeam Products may cause fire, electrical shock or injury.
- Do not let cord hang over edge of table or countertop.
- Do not use outdoors or for commercial purposes.
- This product is intended for normal domestic household use only.

CAUTION: Blades are sharp. Handle carefully. Keep hands and utensils out of the container while operating to prevent the possibility of severe personal injury and/or damage to the product or property.

THIS UNIT FOR HOUSEHOLD USE ONLY

FOR PRODUCTS PURCHASED IN THE U.S. AND CANADA ONLY

To reduce the risk of electrical shock, this appliance has a polarized plug (*one blade is wider than the other*). This plug fits a polarized outlet only one way; if the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

 
SAVE THESE INSTRUCTIONS

WELCOME

Congratulations on your purchase of an OSTER® Hand Blender!
To learn more about Oster products, please visit us at www.oster.com.

Thank you for purchasing the OSTER® Hand Blender. Before you use this product for the first time, please take a few moments to read these instructions and keep it for reference. Pay particular attention to the Safety Instructions provided. Please review the product service and warranty statements.

LEARNING ABOUT YOUR HAND BLENDER

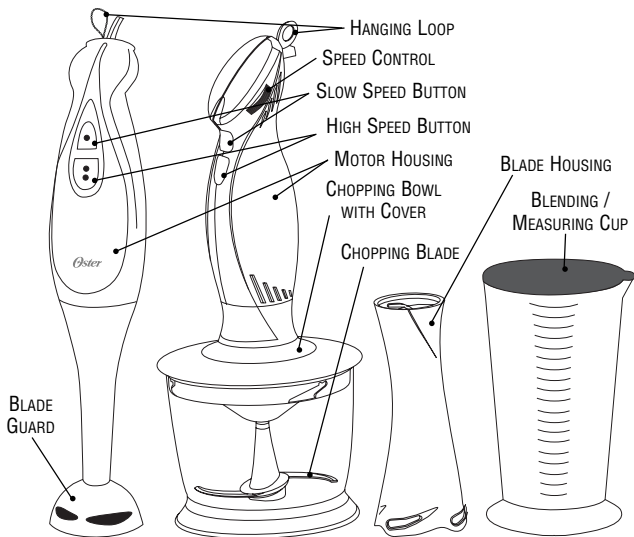

	2609	2611	2612
Blending Cup	•	•	•
Chopper			•

Line art representation may vary

PREPARING TO USE YOUR HAND BLENDER FOR THE FIRST TIME

Read and follow all the instructions for this section on Use and Care and find a place to keep this instruction manual ready for future reference.

For your convenience, record the complete model number (*located on the back of the motor*) and the date you received the product, together with your purchase receipt and attach to the warranty and service information. Retain in the event that the warranty service is required.

 
NOTE: The use of attachments not recommended or sold by Sunbeam Products may cause fire, electrical shock, injury or damage to the product.
Download from www.Somanuals.com All Manuals Search And Download.

OPERATING INSTRUCTIONS

TO OPERATE YOUR HAND BLENDER

CONNECTION AND USE

- Your blender is a three-part assembly. The upper part contains the motor housing and the speed buttons. The lower part contains the Blade housing or the chopper attachment.
- **To Lock:** Hold the motor housing in the right hand and the Blade housing or the chop housing in the left. Attach the motor housing up to the Blade housing or the chop housing. Rotate the motor housing to the left. The assembly locks firmly.
- **To Unlock:** Hold the motor housing in the right hand and the Blade housing or the chop housing in the left. Rotate the motor housing to the right to separate the units.
- Place dual purpose lid on the bottom of the blending/measuring cup for added stability.
- Immerse the blade guard completely into ingredients.
- Depress the High or Low button and begin blending ingredients by moving the appliance up and down and in circles. Adjust speed as necessary. For continuous blending, maintain pressure on button for a maximum of 1 minute. Blending action stops as soon as button is released.
(Models 2609 and 2611 only)
- Hold the hand blender firmly.

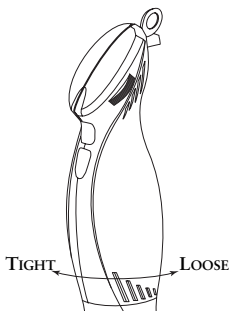

- NOTE:** During blending use, it is normal for suction to be created at the bottom of the container.
- When desired consistency has been reached, release button and lift the blender from mixture. To prevent splashing, always release button before removing blender from ingredients.

CAUTION: To extend the life of this appliance, never let it operate continuously for more than 1 minute at a time. After 1 minute of continuous operation, release button and let appliance rest for 3 minutes before using it again.

WARNING: Do not use hand blender in saucepan directly on stovetop. Remove pan from heat before blending.

BLENDING CUP / MEASURING CUP INFORMATION

- The lid can be easily used as a cover for storage.
- For added stability, use the dual purpose lid on the base of the Blending Cup.
- The cup which is included with your hand blender functions as a blending cup, a measuring cup and can also be used for storage.

MEASURING CHART FOR BLENDING CUP

MILLILITERS	CUPS	OUNCES
50	.21	1.70
100	.42	3.40
150	.63	5.00
200	.85	6.76
250	1.10	8.50
300	1.25	10.00
350	1.50	12.00
400	1.70	13.50
450	1.90	15.25
500	2.10	17.00
550	2.32	18.50
600	2.50	20.25
650	2.75	22.00
700	3.00	24.00

REMOVAL OF BLENDING ROD

Grasp blending rod firmly and rotate motor housing to the right.

 
USING THE CHOPPER ATTACHMENT* (MODEL 2612 ONLY)

The chopper accessory is ideal for chopping a wide range of vegetables, dried fruits, nuts, etc.

- Insert cutting blade into the chopping bowl
- For best results, cut large ingredients into pieces of approximately 1/2-inch cubed before chopping

NOTE: Do not chop large ice cubes or extremely hard foods, such as whole nutmegs, coffee beans, dried corn and grains.

- Secure the chopper cover by setting on the bowl and turning to the right until firmly locked into place. The upper shaft of the chopping blade will fit into the receiving hole in the underside of the cover.
- Attach the motor housing into the top of the bowl cover and turn to the right until the motor housing is firmly locked into place. Plug cord into convenient outlet.
- The chopper has two speeds*. Press and hold the appropriate button to switch the blender on. Release the button to switch the unit off.

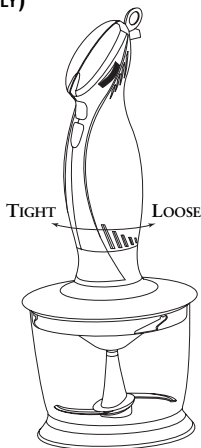

*Variable speed for Model 2612.

- Use the slow speed where possible especially if you want to chop the food into bigger pieces. The high speed can be used for chopping the food to small pieces or for pureed foods.
- You can adjust the speed of the unit with the speed control when using slow speed or high speed function. (*Model 2612*)
- Set the speed control dial to the desired speed and depress the slow or high speed button as desired. (*Model 2609*)
- If the ingredients stick to the chopper bowl sides, loosen them by adding a small amount of liquid or by using a spatula to scrape the food back into the inner part of the bowl.
- Release the speed control button and allow the blade to come to a complete stop before removing the bowl cover by turning cover to the left. Take care when removing the blade and hold only by the shaft handle as the metal blade is sharp.

NOTE: Do not clean blades with fingers but use a spoon or spatula to scrape food into bowl after blade is removed.

CAUTION: Unplug the appliance before attaching the chopper attachment. Put the food ingredients in the chopper bowl, secure the bowl cover to the chopping bowl and attach the motor housing to it. Use the slow speed, especially if you are chopping lumps in the ingredients. The high speed can be used as a finishing touch.

CLEANING YOUR HAND BLENDER

BE SURE UNIT IS UNPLUGGED BEFORE ATTEMPTING TO CLEAN.

Motor unit should be wiped clean with a damp cloth or sponge. **NEVER immerse motor unit in water.**

After using your hand blender, the blades, blending cup and/or chopper bowl may be washed by hand with mild soap and water. Wash lid and/or chopper bowl cover by hand using warm, soapy water with a cloth or sponge.

CAUTION: Blades are sharp. Handle carefully.

Make sure all parts are completely dry before attempting to use again.

NOTE: Do not place hand blender components in dishwasher.

STORAGE

Unplug unit and store in a clean, dry place. Never wrap cord tightly around the appliance. Do not put any stress on the cord where it enters the unit as it could cause the cord to fray and break.

One-Year Limited Warranty

Sunbeam Products, Inc., or if in Canada, Sunbeam Corporation (Canada) Limited (collectively "Sunbeam") warrants that for a period of one year from the date of purchase, this product will be free from defects in material and workmanship. Sunbeam, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. Sunbeam dealers, service centers, or retail stores selling Sunbeam products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than Sunbeam or an authorized Sunbeam service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

What Are the Limits on Sunbeam's Liability?

Sunbeam shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

Sunbeam disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

Sunbeam shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

How to Obtain Warranty Service

In the U.S.A. –

If you have any question regarding this warranty or would like to obtain warranty service, please call 1.800.334.0759 and a convenient service center address will be provided to you.

In Canada –

If you have any question regarding this warranty or would like to obtain warranty service, please call 1.800.667.8623 and a convenient service center address will be provided to you.

In the U.S.A., this warranty is offered by Sunbeam Products, Inc., located in Boca Raton, Florida 33431. In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited, located at 5975 Falbourne Street, Mississauga, Ontario L5R 3V8.

PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.



For product questions contact:
Sunbeam Consumer Service

USA : 1.800.334.0759
Canada : 1.800.667.8623
www.oster.com

©2003 Sunbeam Products, Inc. All rights reserved.

OSTER® and BURST OF POWER® are registered trademarks of Sunbeam Products, Inc.
Distributed by Sunbeam Products, Inc., Boca Raton, FL 33431

Pour les questions de produit:
Sunbeam Consumer Service

États-Unis : 1.800.334.0759
Canada : 1.800.667.8623
www.oster.com

©2003 Sunbeam Products, Inc. Tous droits réservés.

OSTER® et BURST OF POWER® sont marques déposées de Sunbeam Products, Inc.
Distribué par Sunbeam Products, Inc., Boca Raton, Florida 33431

Para preguntas sobre los productos llame:
Sunbeam Consumer Service

EE.UU. : 1.800.334.0759
Canadá : 1.800.667.8623
www.oster.com

©2003 Sunbeam Products, Inc. Todos los derechos reservados.

OSTER® y BURST OF POWER® son marcas registradas de Sunbeam Products, Inc.
Distribuido por Sunbeam Products, Inc., Boca Raton, FL 33431

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>