 




Palm™ DualDate™ 1.1 Getting Started Guide

Palm™ DualDate™ is an enhanced version of the Palm™ Date Book that allows you to:

- Share Your Calendar With Other Palm Powered™ Handheld Users
- Receive Another Person's Calendar
- View Two Calendars Together
- Synchronize Your Shared Calendars

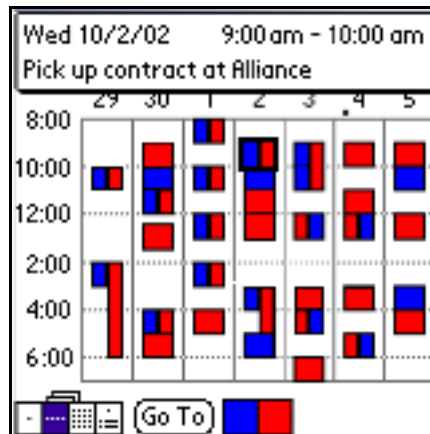

Contents

1. What is Palm™ DualDate™?	1
2. System Requirements	2
3. Installation and Removal	2
4. Backup and Restore	2
5. Sending, Receiving, and Deleting a Calendar	3
6. Viewing Two Calendars Together	6
7. Synchronizing Shared Calendars	8
8. Notes on DualDate and Date Book Behavior	9

About This Guide

This Guide describes the enhancements that the Palm™ DualDate™ application adds to your existing Palm™ Date Book. It assumes that you are familiar with your handheld, the beaming function, and the Palm Date Book application and also that you have access to the documentation for your handheld.

Copyright and Trademark

Copyright © 2002 Palm, Inc. or its subsidiaries. All rights reserved. Graffiti, HotSync, and Palm OS are registered trademarks of Palm, Inc. or its subsidiaries in one or more countries. Palm, Palm Powered, and the Palm logo and Palm Powered logo are trademarks of Palm, Inc. or its subsidiaries. Other product and brand names may be trademarks or registered trademarks of their respective owners.

Disclaimer and Limitation of Liability

Palm, Inc. and its subsidiaries assume no responsibility for any damage or loss resulting from the use of this guide.

Palm, Inc. and its subsidiaries assume no responsibility for any loss or claims by third parties that may arise through the use of this software. Palm, Inc. and its subsidiaries assume no responsibility for any damage or loss caused by deletion of data as a result of malfunction, dead battery, or repairs. Be sure to make backup copies of all important data on other media to protect against data loss.

Important: Please read the End User Software License Agreement with this product before using the accompanying software program(s). Using any part of the software indicates that you accept the terms of the End User Software License Agreement.

 
 
What is Palm™ DualDate™?

With Palm™ DualDate™ you and another Palm handheld user can share your calendars.

Currently the Palm Date Book contains a single calendar. Palm DualDate enhances the Palm™ Date Book by allowing you and other Palm DualDate users to send, receive, and synchronize your calendars. This enhancement also lets you view the two calendars side-by-side on your handheld.

Palm DualDate adds these features to your Date Book:

- Beam your calendar to another Palm DualDate user
 - Option to share Private events (displayed as "***private**" with no detail)
 - Option to limit data beamed to only today's and future events
- Receive another person's calendar
 - Receiver cannot modify events on shared calendar
 - Replace the shared calendar with a different shared calendar
 - Delete the shared calendar
 - Alarms are not shared
- View two calendars together
 - Your calendar and the shared calendar are displayed side-by-side in Day View and merged in the Week, Month, and Agenda Views
 - Switch between single calendar and dual calendar display by tapping the active calendar view icon
 - Events are easily distinguished on both color and grayscale devices in Day and Week View
- Synchronize shared calendars with other Palm DualDate users
 - After sharing your calendar with other DualDate users, you update their copy of your calendar by beaming it to them again.

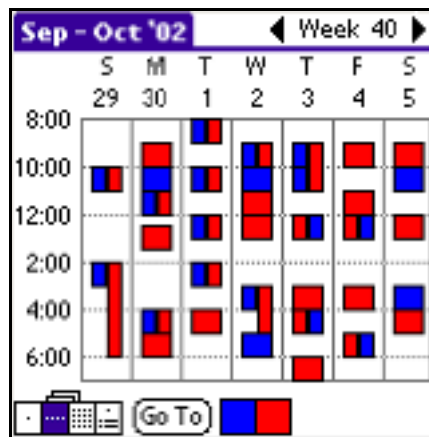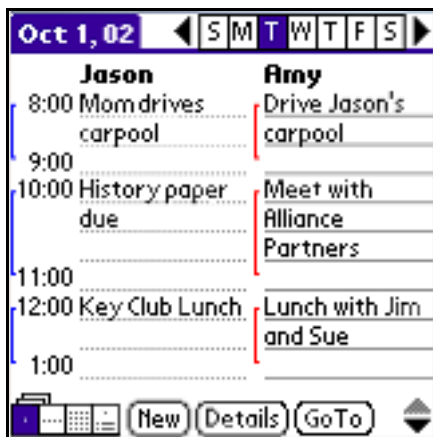

System Requirements

Palm DualDate requires the following:

- A handheld running, or upgradeable to, Palm OS® 3.5, 4.0, or 4.1
- At least 300KB free memory is recommended, which includes:
 - Approximately 160 KB free memory for the DualDate application
 - Enough free memory to accommodate a shared calendar in addition to your Palm Date Book

Important

Installing DualDate onto an expanded memory card – such as SD/MMC, Memory Stick, or the Handspring Springboard Memory Module – is not supported.

Installation and Removal

Installation

You can install the Palm DualDate application using the Palm™ Install Tool or by having someone beam it to you.

Once installed on your handheld, you can launch DualDate either by tapping the DualDate icon from the Applications Launcher or by pressing the Date Book button.

Notes:

- While most people will use DualDate exclusively, any changes you make to your personal calendar in DualDate will appear in your Date Book application, and vice versa.
- DualDate adds “Share Calendar” and “Delete Calendar” entries to the standard Date Book Record menu list. A “Select Color” entry is added to the Options menu and “Share Private Events” is added to the Options > Preferences dialog box.
- When installed, DualDate inherits your existing Date Book Preferences and Display settings.
- Installing DualDate does not change the Date Book HotSync® conduits or affect your Palm™ Desktop Date Book display. The shared calendar is visible only in the Palm DualDate application on your handheld.

Removal

Removing Palm DualDate from your handheld will not affect the Palm Date Book application. All your personal calendar information will be retained, including changes made while DualDate was in use.

Backup and Restore

All Palm DualDate information is backed up to your desktop when you perform a HotSync operation, including the DualDate application and the database it uses to store the shared calendar.

If you experience an unexpected loss of the DualDate application or the calendar shared to you when you last performed a HotSync operation, the DualDate application and this shared calendar will be restored to your handheld the next time you HotSync. If you intentionally delete the DualDate application or the second calendar, they will not be automatically restored during the next HotSync.

Sending, Receiving, and Deleting a Calendar

 
 
With Palm DualDate, you can share your entire calendar with other DualDate users by beaming it to them. Palm Date Book allows individual events to be beamed between Palm handhelds, rather than full calendars.

DualDate calendars are shared such that only the owner of a shared calendar may add, modify, or delete events on the calendar.

Sharing Your Calendar

You can share your calendar with another Palm DualDate user by beaming it as follows:

1. From the Day View in DualDate, tap the Menu icon to display the Record menu option.
2. Tap Share Calendar to begin the beam operation.

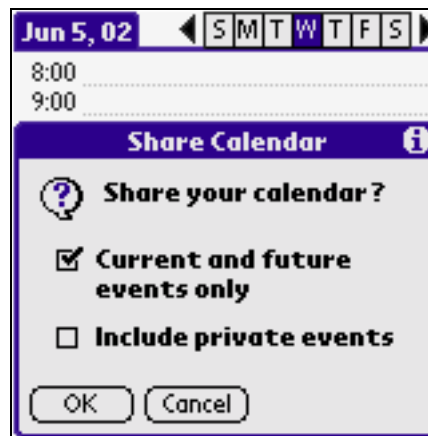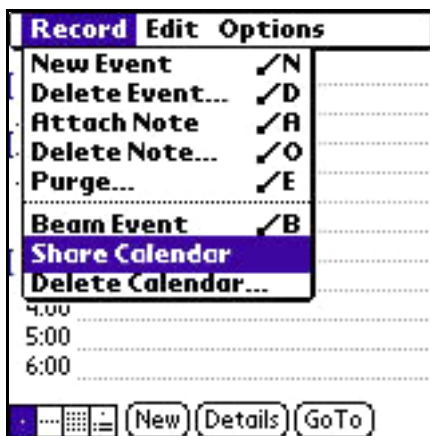

3. When you tap Share Calendar, two options are displayed in the Share Calendar dialog box. These options allow you to choose how much of your calendar will be beamed.

 
To beam events starting with those scheduled for today, select *Current and future events only*. Uncheck the box to include all events on your calendar, including past events.

To beam private events check the *Include private events* box.

Note: DualDate Beam send and receive times vary depending on the size of the calendar. Beam times may be significantly longer when the *Current and future events only* box is unchecked. Unchecking the box allows all events to be beamed. Choose *Current and future events only* to reduce the amount of data beamed and to shorten the beam time.

Sharing Private Events

If you choose to share your Private events, Palm DualDate will display them on the recipient's handheld as ****private****, with only the event date and time visible.

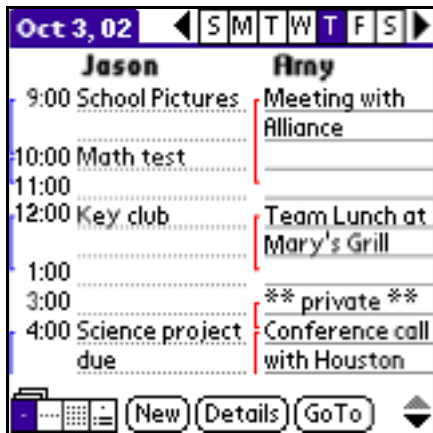

Private event is masked in shared calendar

 
Alarms

Alarms you have set will not be beamed along with the events.

Receiving A Calendar

You can receive a calendar beamed to you by another Palm DualDate user at any time – you do not have to be in DualDate in order to receive it.

1. After a Share Calendar beam has been established, your handheld will display a dialog box asking if you want to receive the calendar:

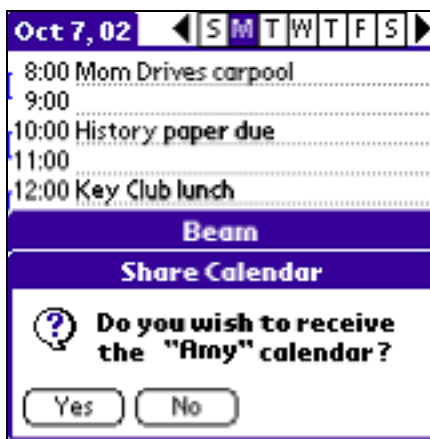

2. Tap Yes to receive the calendar.
3. When the beam has completed successfully, DualDate will launch automatically and display your calendar and the shared calendar side-by-side in Dual Calendar Day View mode.

Notes:

- The name assigned to the shared calendar is the same as the owner's handheld User name and cannot be changed by the recipient.
- Recipients of shared calendars cannot beam them to anyone else.
- Individual events on shared calendars can be beamed to other Palm Powered handheld users, even if they do not have DualDate installed.
- Users of some wireless enabled Palm Powered handhelds running Palm OS 4.0 or higher can use the Date Book Beam Event feature to email individual events from the shared calendar to any valid email address.

Replace an Existing Shared Calendar with a New Shared Calendar

You can choose to replace a shared Palm DualDate calendar with a different one. To do this, either delete the existing shared calendar first or simply replace it when prompted by the Receive Calendar Dialog.

 


Tap Yes in response to the Replace Calendar Dialog when the Share Calendar Beam is initiated.


Deleting A Calendar

You can easily delete a shared calendar from Palm DualDate, as follows:

1. From Day View, tap the Menu icon to display the Record menu options.

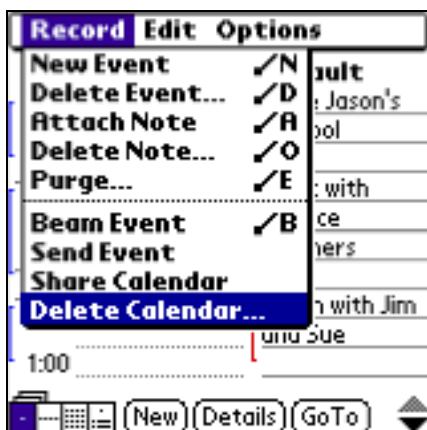

 2. Tap Delete Calendar and the Delete Calendar dialog box will display.

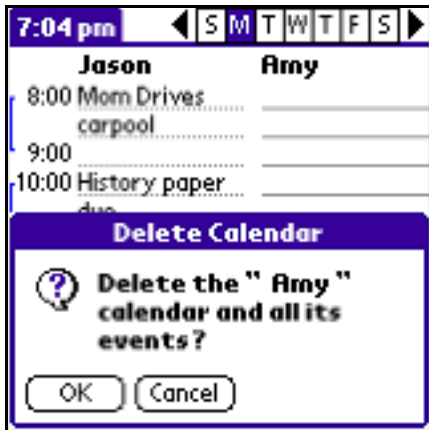

3. Tap OK to delete the calendar and all its data.

Viewing Two Calendars Together

Palm DualDate allows you to easily switch between single calendar and dual calendar display modes by tapping the currently active Day, Week, Month or Agenda View icon (located at the lower-left of the display). You can also change display modes by pressing the Date Book button.

In Day View, the two calendars appear side-by-side. Your calendar is always on the left and the shared calendar is on the right. The solid underlines on the shared calendar indicate that it is Read Only and cannot be modified.

 
In the Week, Month, and Agenda Views, events on the two calendars are displayed as merged.

Switching Between Single and Dual Calendar Display Modes

To switch your Palm DualDate display between single and dual calendar modes:

1. Tap the Day, Week, Month or Agenda view icon to toggle between single and dual calendar display modes. Note that cascading icons indicate dual calendar mode.

Day Views


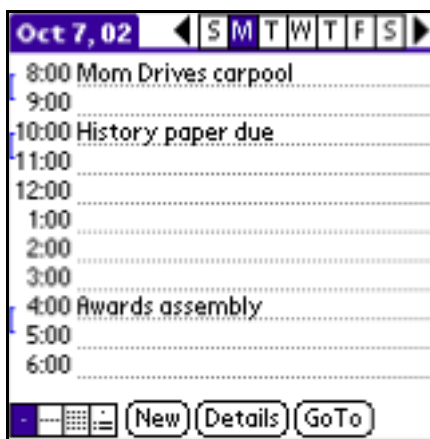


Cascading Day View Icon

Single Calendar View

Dual Calendar View

  Week Views

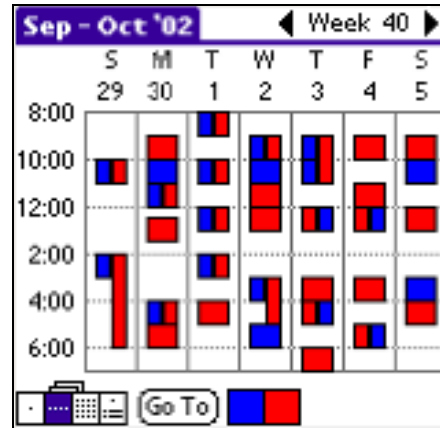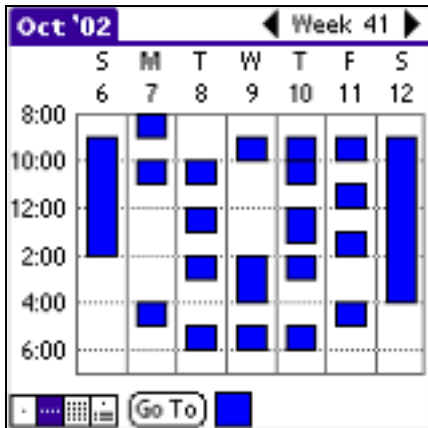

Cascading Week View Icon

Single Calendar View

Dual Calendar View

Note: If both your calendar and the DualDate shared calendar have events scheduled for the same time, tapping either event in Dual Calendar Week View mode will display one of the two Event Descriptions. Which Description is selected is arbitrary. To see both Descriptions, switch to Dual Calendar Day View.

 
Color and Grayscale Coding of Events

Palm DualDate makes it easy to distinguish which events belong to each calendar. In Day View and Week View calendars are assigned identifying color or grayscale shading.

On a color device, your Date Book calendar color code defaults to blue and the shared calendar defaults to red. However, you can change these colors.

On a grayscale device, the DualDate grayscale shading is pre-determined and cannot be changed.

Grayscale Displays

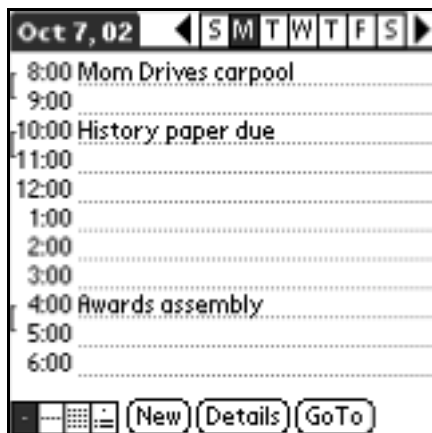


Single Calendar View

Dual Calendar View

Changing Calendar Colors

You can change the colors of your calendar and the shared calendar in DualDate using Select Color under the Options menu in Day View or Week View. You can also access the Select Color dialog box by tapping the “color picker” icon at the bottom of the screen in Week View.

 Note: Shared calendars will always default to red and do not display in the color assigned by the owner.

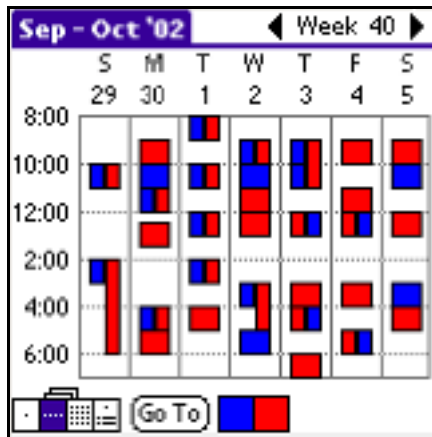

Tap the color picker box



 
Tap the desired color, and then tap OK

Synchronizing Shared Calendars

Although the people you share your Palm DualDate calendar with cannot create or edit events on it, you can easily synchronize the changes you have made by beaming your calendar to them again. Updated calendars can be beamed to other DualDate users as often as you wish.

To synchronize your updated calendar:

1. From the DualDate Day View, tap the Menu icon to display the menu options.
2. Tap Share Calendar.
3. After the beam has been initiated, the person with whom you are synchronizing needs to tap Yes in response to the “Do you wish to update the calendar?” dialog box that appears.

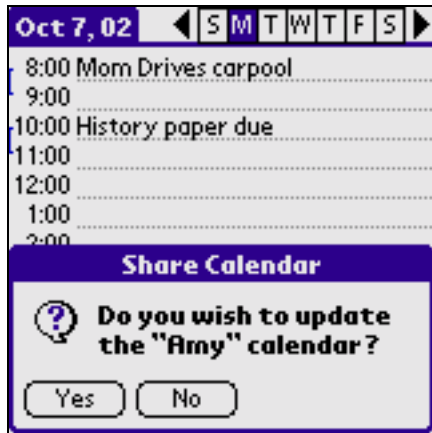

Notes on DualDate and Date Book Behavior

DualDate has all of the features and functions as Date Book. DualDate is designed to integrate with Date Book and any changes you make in either application are immediately updated in both.

Since DualDate and Date Book are separate applications, following are some behaviors you may experience.

Responding to Alarms in DualDate

If you tap the GoTo Event option when responding to an Alarm in DualDate, Date Book launches and displays the event. To return to DualDate, press the Date Book button or tap the DualDate application icon in the Application Launcher.

Accepting Beamed Events when in DualDate

If you receive a beamed event while you are in DualDate, you will be switched to Date Book, and the beamed event will display. To return to DualDate, press the Date Book button or tap the DualDate application icon in the Application Launcher.

Using the Find Feature

If you do a Find for an event, the found event will be displayed as appearing in both Date Book and DualDate.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>