

## Digital Cordless Answering System

# Operating Instructions

Model No. **KX-TCD515E**

## Contents

### Preparation

Before Initial Use.....	2
Important Information.....	5
Location of Controls.....	6
Meanings of Icons above SOFT KEYS.....	7
Meanings of Symbols and Operations of Keys.....	8
Display.....	9
Setting up.....	10

### Cordless Telephone

Using the Telephone.....	14
Caller ID.....	19
List Menu.....	20
Using the Phonebook.....	23
SMS Feature (Text Message)....	31
Settings Menu Chart.....	43
Handset Settings.....	45
Base Unit Settings.....	57
Multi-Unit User Operations.....	62
Walkie-Talkie.....	69

### Answering System

Answering System.....	72
-----------------------	----

### Useful Information

Using the Belt Clip.....	84
Optional Headset.....	84
Wall Mounting.....	85
Before Requesting Help.....	86
Character Table.....	89
Index.....	91
Technical Information.....	92
Guarantee.....	93



## SMS

Caller ID and SMS Compatible

**Please read these Operating Instructions before using the unit and save for future reference.**

**Charge the battery for about 7 hours before initial use.**

# Before Initial Use

## ◆◆ Features



### Digital Answering System

Up to 30 minutes recording time, with time/day stamp that records when messages were received and counts the total number.



### SMS (Short Message Service) compatibility

Now the convenience of sending and receiving text messages is available from a home telephone.



### 32-Polyphonic Ring Tones

A variety of high-quality sounds can be reproduced for your ring tones. You can choose from 9 pre-set melodies and 6 ring tones.



### Hands-Free Speakerphone

You can talk without holding handset. Convenient for talking while doing something else.



### Headset Socket

Plug in the optional headset and the hands-free facility provides total ease and freedom of use.



### Illuminated Keypad

Lights up when there is an incoming call or you touch any key for easier operation even in the dark.



### 200+20-Station Phonebook

Stores 200 station names and numbers with the built-in telephone directory of the handset to be recalled easily and stores 20 station names and numbers in the base unit for Audible Caller ID feature.



### Multiple Handsets

Up to 6 handsets can be registered with a single base unit for added convenience. (Optional handset/charger is available separately.)



### LCD Backlight

Lights up when there is an incoming call or you touch any key for easier operation even in the dark.

*Thank you for purchasing your new Panasonic digital cordless telephone.*

## **Sales and Support Information Customer Care Centre**

- For UK customers: **08700 100 076**
- For Republic of Ireland customers:  
**01289 8333**
- Visit our website for product information  
<http://www.panasonic.co.uk>
- E-mail:  
[customer.care@panasonic.co.uk](mailto:customer.care@panasonic.co.uk)

## **Direct Sales at Panasonic UK**

- Order accessory and consumable items for your product with ease and confidence by phoning our Customer Care Centre Monday - Friday  
9:00am - 5:30pm.  
(Excluding public holidays)  
Or go on line through our Internet Accessory ordering application at  
Shop@Panasonic <http://www.panasonic.co.uk>
- Most major credit and debit cards accepted.
- All enquiries transactions and distribution facilities are handled directly by Panasonic UK Ltd.
- It couldn't be simpler!
- Also available through our Internet is direct shopping for a wide range of finished products, take a browse on our website for further details.

Dear purchaser,

 




You have acquired a KX-TCD515E, which is a product made in accordance with the Digital Enhanced Cordless Telecommunications (DECT). DECT technology is characterized by high-security protection against interceptions as well as high-quality digital transmission. This telephone was designed for a wide range of applications. For example, this telephone can be used within a network of base units and handsets, constituting a telephone system which:

- operates up to 6 handsets at one base unit.
- allows an intercom between 2 handsets.
- allows the operation of a handset at up to 4 base units, expanding the communication radio area.

Caller ID and SMS Services, where available, are network provider service. After subscribing to Caller ID, this phone will display the caller's phone number.

# Before Initial Use

## Accessories (specific to product type)
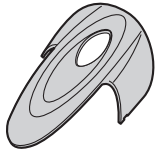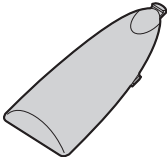
<p><input type="checkbox"/> AC Adaptor Order No. PQLV19EZ (PQLV19E)</p>  <p>one</p>	<p><input type="checkbox"/> Telephone Line Cord Order No. PQJA87S (for UK)</p>  <p>one</p>	<p><input type="checkbox"/> Rechargeable Batteries (AAA size) Order No. HHR-4EPT/BA2 (P03P)</p>  <p>two</p>
<p><input type="checkbox"/> Belt Clip Order No. PQKE10355Z1 (Metallic Grey) PQKE10355Z2 (Violet)</p>  <p>one</p>	<p><input type="checkbox"/> Battery Cover Order No. PQKK10134Y6 (Metallic Grey) PQKK10134Y7 (Violet)</p>  <p>one</p>	<p><input type="checkbox"/> Operating Instructions...one</p> <p><input type="checkbox"/> Quick Guide.....one</p>

Only use the power supply included with the product.

**Do not connect the AC Adaptor to any AC outlet other than the standard AC220-240 V.**

**The apparatus is approved for use with PQLV19E (Order No. PQLV19EZ) power supply.**

This apparatus is unable to make calls under the following conditions:

- The portable handset batteries need recharging, or have failed.
- During a mains power failure.
- When the Key Lock is set to ON.
- When the unit is in Direct Call mode.

Do not open the base unit or handset (other than to change the batteries).

This apparatus should not be used near emergency/intensive care medical equipment and should not be used by people with pacemakers.

Care should be taken that objects do not fall onto, and liquids are not spilled into the unit. Do not subject this unit to excessive smoke, dust, mechanical vibration or shock.

## Environment

Do not use this unit near water.

This unit should be kept away from heat sources such as radiators, cookers, etc. It should also not be placed in rooms where the temperature is less than 5 °C or greater than 40 °C.

The AC Adaptor is used as the main disconnect device. Ensure that the AC outlet is located/installed near the unit and is accessible.

## WARNING:

TO PREVENT THE RISK OF ELECTRICAL SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR ANY OTHER TYPE OF MOISTURE.

## Battery Caution


1. Use only the specified batteries.
2. **Only use rechargeable batteries.**
3. Do not mix old and new batteries.
4. Do not dispose of batteries in a fire, as they may explode.  
Check local waste management codes for special disposal instructions.
5. Do not open or mutilate the batteries. Released electrolyte from the batteries is corrosive and may cause burns or injury to the eyes or skin.  
The electrolyte may be toxic if swallowed.
6. Exercise care in handling the batteries in order not to short circuit the batteries with conductive materials such as rings, bracelets and keys.  
The batteries and/or conductor may overheat and cause burns.
7. Charge the batteries in accordance with the information provided in this operating guide.

## Location


- For maximum distance and noise-free operation, place your base unit:
  - Away from electrical appliances such as TVs, radios, personal computers or other phone.
  - In a convenient, high, and central location.

# Location of Controls

## ◆◆ Handset

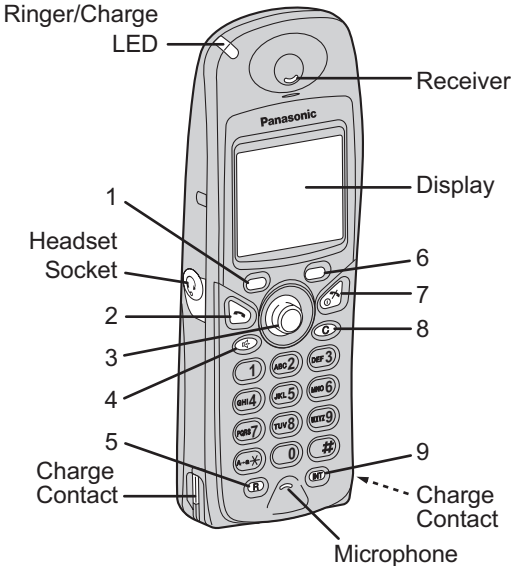

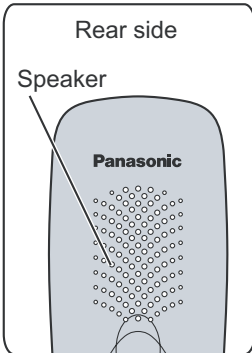


- 1 - LEFT SOFT KEY
- 2 - TALK Button
- 3 - JOYSTICK
- 4 - SPEAKERPHONE Button
- 5 - RECALL Button
- 6 - RIGHT SOFT KEY
- 7 - POWER/TALK OFF Button
- 8 - CLEAR Button
- 9 - INTERCOM Button




### How to Use the Handset Soft Keys

3 soft keys are used to select functions displayed directly above the keys. Functions displayed above the keys will change depending on the state of use.


For example, on the standby mode display, “”, “”, “” are displayed above the soft keys.


**Example:** Standby Mode Display


To operate “” (Phonebook), press **LEFT SOFT KEY**.

To operate “” (Menu), press **JOYSTICK** directly as the middle soft key.


To operate “” (Redial), press **RIGHT SOFT KEY**.

When “” is displayed above a soft key, the soft key will not work.

- To select only “” (Menu), you can also select it moving **JOYSTICK** up, down, left or right.

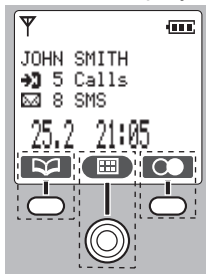


 

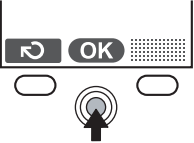


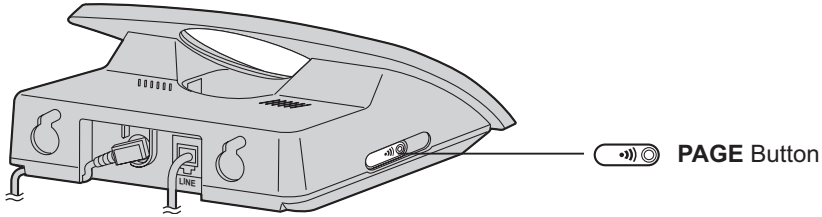

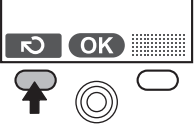




## ◆◆ Base Unit



## Meanings of Icons above SOFT KEYS

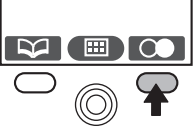
Icon	Function	Icon	Function
	Go Back		LetterWise®
	Menu		Alphabet
	Sub-Menu		Numeric
	OK		Extended 1
	Redial		Extended 2
	Phonebook		Greek
	New Phonebook		Russian
	Search		Select
	Key Lock		Pause
	12/24 Hour Clock		Mute
	Stop		Delete
	No Function		









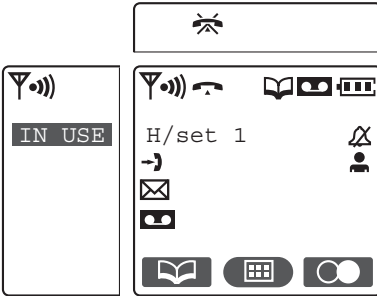






# Meanings of Symbols and Operations of Keys

Symbol	Meaning	
	Move <b>JOYSTICK</b> up, down, left or right. e.g., Search the main menu. 	
e.g., OK 	e.g., Display of menu items 	Press <b>JOYSTICK</b> directly in the centre.  In this example, the desired item is selected.  Press Directly
e.g., Redial 	e.g., Standby Mode Display 	Press <b>RIGHT SOFT KEY</b> .  In this example, the telephone number last dialled is displayed.
e.g., Go Back 	e.g., Display of menu items 	Press <b>LEFT SOFT KEY</b> .  In this example, the display returns to the previous menu.   has the same function.
	Press <b>POWER/TALK OFF</b> Button. <u>Press this button for one or two times, then the display returns to the standby mode any time.</u>	
	To go to the next step.	
“ ”	The words in “ ” indicate the words in the display.	
	Ringing Phone	



## ◆◆ Display Icons










-  Within range of a base unit
-  Out of range/No registration/  
No power on base unit
-  Paging or Intercom/  
While connecting with base unit
-  Making or answering calls
-  Call Bar ON
-  Phonebook Mode
-  Answering System ON
-  Message indication
-  Battery strength
-  Direct Call ON
-  Ringer Volume OFF
-  New call (Caller ID only)
-  H/set 1 Handset Name (e.g., Handset 1)
-  SMS mail (text messages) indication
-  The line is being used by another handset (for additional handset users).
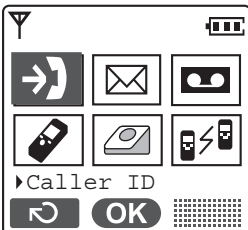
## ◆◆ Main Menu Display

To go to the **Main Menu**, press **JOYSTICK**  directly in the centre (or move  while in the standby mode display. The selected menu icon is turned over, and its title is displayed.

**Example:** "Caller ID" is selected.




-  Caller ID
-  SMS
-  TAM Operation
-  Setting Handset
-  Setting Base
-  Walkie-Talkie

# Setting up

## ◆◆ Connection

Do not connect the telephone line cord to the phone socket 4 until the handset is fully charged.

Plug in the AC adaptor and the telephone line cord in order 1, 2, 3.

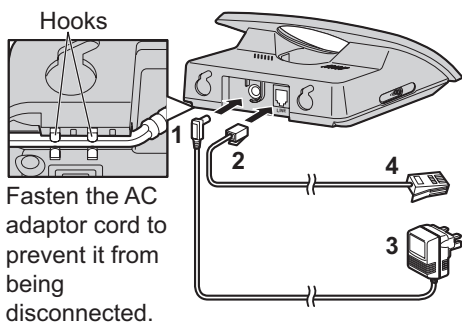


- The AC adaptor must remain connected at all times (It is normal for the adaptor to feel warm during use).
- Never install telephone wiring during a lightning storm.
- USE ONLY WITH Panasonic AC ADAPTOR PQLV19E (Order No. PQLV19EZ).

## ◆◆ Battery Installation


Please ensure the batteries are inserted as shown. ⊖ part should be inserted first. Close the cover as indicated by the arrow.

- When you replace the batteries, ⊕ part should be removed first.

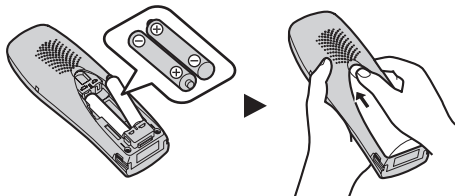

## ◆◆ Battery Charge


At the time of shipment, the batteries are not charged. To charge, place the handset on the base unit. **Please charge the batteries for about 7 hours before initial use.**

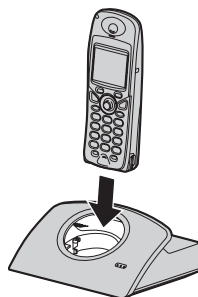

During charging, the charge LED will light as shown below.

**During charging**

**Fully charged**

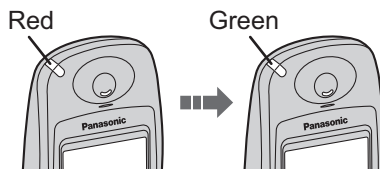

Display icon	Battery strength
	High
	Medium
	Low
	Needs to be charged

The handset which power is off will be turned on automatically when it is placed on the base unit.

**The handset will not operate while it is on the base unit.**

If you do not recharge the handset battery for more than 15 minutes, the display will flash when the handset is lifted off the base unit.

## ◆◆ Battery Information

After your Panasonic battery is fully charged:

### Ni-MH Batteries (typical 700 mAh)

Operation	Operating Time
While in use (TALK)	10 hrs approx.
While not in use (Standby)	120 hrs approx.


### Ni-Cd Batteries (typical 250 mAh)

Operation	Operating Time
While in use (TALK)	4 hrs approx.
While not in use (Standby)	40 hrs approx.

- Times indicated are for peak performance.
- The battery operating time may be shortened depending on usage conditions and ambient temperature.
- **Clean the charge contacts of the handset and the base unit with a soft, dry cloth once a month. Clean more often if the unit is subject to grease, dust or high humidity.** Otherwise the battery may not charge properly.
- The batteries cannot be overcharged unless they are repeatedly removed and replaced.
- For maximum battery life, it is recommended that the handset not be recharged until the battery icon flashes



## ◆◆ Replacing the Batteries

If the  icon flashes after a few telephone calls even when the handset batteries have been fully charged, both batteries must be replaced.

- **Charge new batteries for approximately 7 hours before initial use.** (The telephone line cord must not be connected to the telephone socket at this time.)
- **When replacing the batteries, be sure to set up the battery type even if you install the same type of batteries to initialise battery remaining memory of your handset.** (See Setting the Battery Type on page 54.)
- Do not use non-rechargeable batteries. If non-rechargeable batteries are fitted and start charging, it may cause the leakage of the battery electrolyte.
- Press the notch on the cover firmly and slide it as indicated by the arrow. Replace both batteries (p.10) and close the cover then charge the handset for about 7 hours.



**Please order Panasonic P03P (Ni-MH) or P03H (Ni-Cd) batteries.**

# Setting up

## ◆◆ Power ON/OFF

### ◆ Power ON

Press and hold  
**POWER.**



When **POWER** is released, the display changes to the standby mode.

### ◆ Power OFF


Press and hold  
**POWER.**



The display goes blank.

## ◆◆ Selecting the Display Language

You can select one of 19 languages. The factory preset is English.

To exit the operation, press  at any time.

 
**1** Press **JOYSTICK**  
(or move).



**2** Select " Setting Handset".



**3** Select "Display Option".



**4** Select "Select Language".



**5** Select the desired language.



- If you set a language you cannot read, reset the handset to its initial settings.


Press  → Press  → Move  → Press  → Move  → Press  → Move 


Press  → Enter 4-digit Handset PIN (Factory Preset 0000) → Move 


 


Press 

All handset settings will be reset to their initial settings (p.56), however, the phonebook data will be saved.








## ◆◆ Setting the Date and Time

After a mains power failure, the clock needs to be adjusted. Ensure that the  icon is not flashing.

To exit the operation, press  at any time.



<p><b>1</b> Press <b>JOYSTICK</b> (or move).</p> 	<p><b>2</b> Select "Setting Handset".</p> 	<p><b>3</b> Select "Set Date/Time".</p> 
<p><b>4</b> Enter the date (see below).</p>	<p><b>5</b> Enter the time (see below).</p>	<p><b>6</b> Press <b>JOYSTICK</b>.</p> 

**Example:** To set 16 February, 2003, 7:15 pm.

Date			Time		
Day	Month	Year	Hour	Minute	12/24 hour clock
					 

### ◆ To select 12/24 hour clock


Press **RIGHT SOFT KEY** repeatedly.

	24 hour clock	→	12 hour clock (AM)	→	12 hour clock (PM)
					


# Using the Telephone

## ◆◆ Making a Call

### ◆ Pre-Dialling



<b>1</b> Enter Phone Number.	<b>2</b> Press <b>TALK</b> .
	

### ◆ Post-Dialling


<b>1</b> Press <b>TALK</b> .	<b>2</b> Enter Phone Number.
	

- If you need to make a correction while entering the phone number when using **Pre-Dialling**, press **C**. The digit is cleared to the left, then you can enter numbers. All digits are cleared if you press and hold **C**.
- You can also press **↵** to make a call.

## ◆◆ Answering a Call

	→	Press <b>TALK</b> .
		

### ◆ Terminating a Call

(During a call)	→	Press <b>TALK OFF</b> .
		

- You can also answer a call by pressing **0** to **(MZR)**, **(A-S)**, **#**, **↵** or **(INT)** (**Any Key Talk**).

## ◆◆ Auto Talk

If you set **Auto Talk** to ON, you can answer the call by lifting the handset off the base unit. (See **Setting Auto Talk ON/OFF** on page 54.)

## ◆◆ Receiver (or Headset Receiver)/Speaker Volume

The choices for the receiver (or headset receiver) volume are 3 levels, and 6 levels for the speakerphone volume.

(During a call) ➔ To increase volume, move the **JOYSTICK** up.  
To decrease volume, move the **JOYSTICK** down.



## ◆◆ Have a Hands-Free Phone Conversation (using Digital Speakerphone)

Hands-free allows you to talk to your caller without holding the handset and allows other persons in the room to listen to the conversation.

### ◆ To Return to Receiver

(During a call) ➔ Press **SPEAKERPHONE**.



Press **TALK**.



- For best performance, please note the following:
  - Talk alternately with the caller in a quiet environment.
  - If either party has difficulty hearing, move the **JOYSTICK** up or down to change the volume accordingly. The choices for the speakerphone volume are 6 levels.

## ◆◆ Muting Your Conversation

During a call, you can mute your phone so the other party cannot listen to you. When muting your conversation, you can hear the other party.

### ◆ To Mute

(During a call) ➔ Press **LEFT SOFT KEY**, then Icon flashes.





### ◆ To Return to the conversation

Press once more.  
Icon stops flashing.



# Using the Telephone


## ◆◆ Key Lock

You can lock the handset dialling buttons. Only incoming calls are accepted while the key lock is ON. When the key lock is ON, the menu icon  changes to .

**When the key lock is ON, emergency calls (p.59) cannot be made until key lock is cancelled.**


### ◆ Key Lock ON

(Standby Mode Display) → Press and hold **JOYSTICK** directly for more than 2 seconds.



### ◆ Key Lock OFF

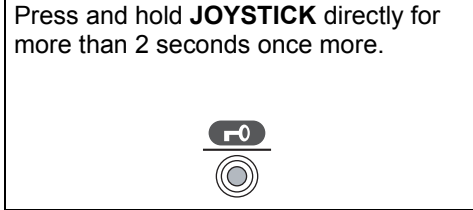

Press and hold **JOYSTICK** directly for more than 2 seconds once more.





## ◆◆ Handset Locator/Paging



 
You can locate a misplaced handset by paging it.

### ◆ Paging

<b>&lt;Base Unit&gt;</b> Press <b>PAGE</b> .	→	<b>&lt;All Handsets&gt;</b> All registered handsets ring for 1 minute.
		

### ◆ To Stop Paging

<b>&lt;Base Unit&gt;</b> Press <b>PAGE</b> .	<b>OR</b>	<b>&lt;One of Handsets&gt;</b> Press <b>TALK</b> .
		

- You can also stop paging by pressing  to , , , ,  or .



## ◆◆ Redialling

The last 10 numbers dialled are automatically stored in the redial list.

### ◆ Dialling with the Redial List

**1** Press **RIGHT SOFT KEY**.





**2** Search for the desired dialled item.



**3** Press **TALK**.



- If there is no item stored in the redial list when pressing , the display shows "Memory Empty".
- If the items are scrolled at the end when you search for the desired dialled item, an end tone sounds.
- You can also press  to make a call.
- To save the numbers from the redial list into the phonebook, or to edit or delete from memory, see pages 21 and 22.

### ◆ Dialling the Last Number Dialed





**1** Press **TALK**.




**2** Press **RIGHT SOFT KEY**.



### Auto Redial

If you press  then  to redial and the dialled number is engaged, the unit will automatically call back every 40 seconds, up to 12 times. When using Auto Redial, press  again after pressing  if the muting has not be cancelled.

## ◆◆ Recall Feature


**RECALL**  is used to access special telephone services. Contact your network provider for details. If your unit is connected to a PBX, pressing **RECALL** allows you to access some features of your host PBX such as transferring an extension call.

# Using the Telephone

## ◆◆ Dialling Pause (for PBX line/long distance service users)

A dialling pause is used when a pause in the dialling of a phone number is necessary using a PBX or accessing a long distance service.

For example, when 0 (line access number) is dialled followed by a pause to access an outside line through a PBX:

<b>1</b> Press <b>0</b> .	<b>2</b> Press <b>RIGHT SOFT KEY</b> .	<b>3</b> Enter Phone Number.	<b>4</b> Press <b>TALK</b> .
			

- Entering a pause prevents misdialling when you redial or dial a stored number.
- Pressing **RIGHT SOFT KEY** more than once increases the length of the pause between numbers.
- To change the pause time, see page 58.

## ◆◆ Call Waiting

**Call Waiting is a service of your network provider and will only operate if you have subscribed to this service.** You can answer the second call, keeping the first call on hold.

(Call waiting tone sounds during a call)	➔	Press <b>RECALL</b> .	➔	The first call is put on hold and you can answer the second call.
				

### ◆ To Return to the First Caller

Press <b>RECALL</b> once more.


- If you subscribed to Caller ID and Call Waiting services, your handset displays a second caller's phone number while talking.
- If the phone number is stored in the phonebook with its name, the caller's name will also be displayed.
- Please consult your Network provider for details of this service.

 
## ◆◆ Caller ID Service

**Caller ID is a service of your Network provider and will only operate if you have subscribed to this service.**

**After subscribing to Caller ID, this phone will display the caller information.**

If your unit is connected to a PBX or a telephone line that does not support this service, you will not be able to use it.

### ◆ Standby Mode Display



H/set 1  
→ 10 Calls


17.8 14:59

When new calls have been received, the display shows the number of calls.

In the example on the left, 10 new calls have been received.

## ◆◆ Making a Call from the Caller ID List

 
The last 50 caller's phone numbers are stored in the order the calls were received. When the 51st call is received, the oldest caller information is cleared. If the caller's name has been stored with the number in the phonebook (see **Storing Caller Information** on page 24), the caller's name will also be displayed.

To exit the operation, press  at any time.

### 1 Press **JOYSTICK** (or move).



### 2 Select "→" Caller ID".



### 3 The newest caller information is displayed.

Time Received

Date Received 17.8 14:59

Name JOHN SMITH

Tel No. 0123456789




### 4 Search for the desired item.



### 5 Press **TALK**.










- You can also press  to make a call.
- "✓" indicates you have already viewed this caller information, or answered the call.
- If the caller has requested not to display his/her information, the display shows "Private Caller".
- If the caller dialed from an area which does not provide Caller ID service, the display shows "Out of Area".
- If the items are scrolled at the end when you search for the desired item, an end tone sounds.

# List Menu

## ◆◆ Caller ID List Menu

You can save the numbers from the Caller ID list into the Phonebook, and you can edit (for calling) or delete item(s) in the Caller ID List.







To exit the operation, press  at any time.

<b>1</b> Press <b>JOYSTICK</b> (or move). 	<b>2</b> Select "  Caller ID".  → 	<b>3</b> Select the desired item.  → 
Go to step 4.		

- If the items are scrolled at the end when you search for the desired item, an end tone sounds.
- If there is no item stored in the caller list when "Caller ID" is selected, the display shows "Memory Empty".





## ◆ Storing the Number in the Phonebook


Follow steps 1 to 3 shown above, then:

<b>4</b> Select "Save Phonebook".  → 	<b>5</b> Enter Name (p.26). (max. 16 characters)	<b>6</b> Press <b>JOYSTICK</b> twice.  twice
<b>7</b> Select desired category or "Off" (p.23).  → 	<b>8</b> Select "Save", then "Saved" is displayed. 	

## ◆ Editing the Received Number for Calling

Follow steps 1 to 3 shown above, then:

<b>4</b> Select "Edit for Call".  → 	<b>5</b> Edit Phone Number. (max. 24 digits)	<b>6</b> Press <b>TALK</b> or press <b>JOYSTICK</b> to call.  OR 
---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	----------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

- You can also press  to make a call.

## ◆ Deleting One/All Caller ID Item(s)

Follow steps 1 to 3 on the previous page, then:

**4** Select "Delete" or "Delete All".




**5** Select "Yes", then "Deleted" is displayed.



## ◆◆ Redial List Menu

You can save the numbers from the redial list into the Phonebook, and you can edit (for calling) or delete item(s) in the redial list.

To exit the operation, press  at any time.


**1** Press **RIGHT SOFT KEY**.



**2** Select the desired item.



Go to step 3.

- If there is no item stored in the redial list when pressing , the display shows "Memory Empty".

## ◆ Storing the Number in the Phonebook

Follow steps 1 and 2 shown above, then:

**3** Select "Save Phonebook".



**4** Enter Name (p.26).  
(max. 16 characters)

**5** Press **JOYSTICK** twice.



**6** Select desired category or "Off" (p.23).



**7** Select "Save", then "Saved" is displayed.



# List Menu

## ◆ Editing the Dialed Number for Calling

 
Follow steps 1 and 2 on the previous page, then:


**3** Select "Edit for Call".



**4** Edit Phone Number.  
(max. 24 digits)

**5** Press TALK or press JOYSTICK to call.



- You can also press  to make a call.

## ◆ Deleting One/All Redial Item(s)

Follow steps 1 and 2 on the previous page, then:

**3** Select "Delete" or "Delete All".



**4** Select "Yes", then "Deleted" is displayed.



You can store up to 200 caller information in the handset phonebook and up to 20 caller information in the base unit phonebook. If you subscribed to Caller ID and you received a call from the same phone number you stored with name in the phonebook, the display will show the caller's name.

## ◆◆ Private Category Feature

You can categorise caller information in the phonebook. There are 9 categories available. For example, category 1 can be used to save all friends numbers. For each category, you can rewrite the category names (max. 10 digits: see **Changing the Category Name** on page 50), you can select one of 3 Ringer LED colours (see **Setting the Private Colour** on page 50) and one of 15 ringer types (see **Ringer Options** on page 47).

**This feature is only available after subscribing to Caller ID Service.** Please contact your network provider for further information.

### Example

Private Category No.	Ringer LED Colour*			Private Ringer Type	Category Name
	Green	Orange	Red		
1		✓		3	Friends
3			✓	2	Customers

\* The factory preset LED colour is green.

- The unit will indicate an incoming call using the factory preset LED colour (green) and the ringer pattern assigned to external calls (p. 48) momentarily until Caller ID information is received from the network provider.

## ◆◆ Audible Caller ID


To use this feature, you need to subscribe to Caller ID service. For further information, please contact your network provider. You need to store caller information and to record the name into the base unit phonebook (p. 25).

When a call comes in, the unit will ring and the caller information will be received. If you receive a call from one of the same phone numbers stored in the base unit phonebook, the recorded name will be announced.

- If the ringer volume of the handset is OFF, recorded names will not be announced. Announcement volume depends on the handset ringer setting (p.48).
- Your unit may mute one or more of rings in order to announce the name of the caller, as announcement is prior to rings.

# Using the Phonebook

## ◆◆ Storing Caller Information

To exit the operation, press  at any time.

### ◆ Handset Phonebook

**1** Press **LEFT SOFT KEY**.



**2** Press **JOYSTICK**.



**3** Select "H/set Phonebook", then the display shows the number of empty phonebook entries.



**4** Enter Name (p.26). (max. 16 characters)

**5** Press **JOYSTICK**.



**6** Enter Phone Number. (max. 24 digits)

**7** Press **JOYSTICK**.




**8** Select desired category or "Off".



**9** Select "Save", then "Saved" is displayed.



- If "Memory Full" is displayed when you press , the phonebook is full. To store, delete other stored items in the phonebook.
- To continue storing other caller information, repeat from step 4.



# Using the Phonebook

## ◆ Base Unit Phonebook

To use an Audible Caller ID feature (p.23), you must store caller information into the base unit phonebook.

Follow steps 1 and 2 on the previous page, then:

**3** Select "Base Phonebook", then the display shows the number of empty phonebook entries.



**4** Enter Name (p.26). (max. 16 characters)

**5** Press **JOYSTICK**.



**6** Enter Phone Number. (max. 24 digits)

**7** Press **JOYSTICK**.



**8** Select "Start Recording".



**9** Record the name within 1 minute.

**10** Press **JOYSTICK**.



**11** Select "Save", then "Saved" is displayed.



- If you don't use Audible Caller ID feature, select "Skip Recording" at step 8 and go to step 11.

## ◆ Copying an Item from Handset Phonebook to Base Unit Phonebook


 




Press **INTERCOM** (INT) → Press  → Press  to select "Copy to Base" →

Move  to select the desired item → Press  ("Copy Complete" is displayed.)

To use the Audible Caller ID feature, record the name (see **Editing a Caller Information** on page 28).

# Using the Phonebook

## ◆◆ Entering Names/Characters

Keys	Operations
	Move the <b>JOYSTICK</b> up, down, left or right to move the cursor.
	Press to enter letters/numbers. (Items are added to the left of the cursor. If the cursor is at the beginning of a line, the item is added at the beginning.)
	Press to delete characters. (Character on the cursor is deleted. To delete all characters, press and hold.)
	Press to change between upper and lower case.
	Press to insert a blank space (except when in Numeric input mode).
	Press to insert a symbol ( * , # , / , etc.) (except when in Numeric input mode).


### ◆ Selecting the Input Mode

You can select one of 7 input modes by pressing **RIGHT SOFT KEY** while entering a name. The function icon above the key displays the current input mode. The factory preset is "**LetterWise®**". **LetterWise®** is a simplified text entry system. This system suggests to the user the most likely letter to follow the text entered previously. To enter texts in this mode, see page 35.

For the full character map, see **Phonebook Character Table** (see page 89).

To switch the input mode while editing the name in the phonebook, press **RIGHT SOFT KEY**.


LetterWise®    Alphabet    Numeric    Greek    Extended 1    Extended 2    Russian

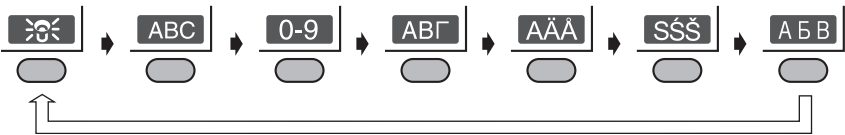

- If **LetterWise®** is selected, select a language you require (see page 54).


### Example (Alphabet Mode)

 Enter the name using the letters on the keypad. For example, to enter "Anne" in Alphabet Mode:



## ◆◆ Finding Items in the Phonebook

All phonebook items are stored in the following order: Alphabet letter/Symbol/Number/Telephone Number (when a name is not stored).


To exit the operation, press  at any time.

**1** Press **LEFT SOFT KEY**.



**2** Move **JOYSTICK** up or down to search for the desired item.



- When finding items in the Base Unit phonebook, press  twice on step 1.

## ◆ Searching for a Name by Initial

**Example:** To find “Felix”

**1** Press **LEFT SOFT KEY**.



**2** Press **3** repeatedly until the first item under “F” is displayed.



**3** Move **JOYSTICK** down until “Felix” is displayed.



## ◆ Searching by Private Category

**1** Press **LEFT SOFT KEY**.



**2** Press **RIGHT SOFT KEY**.



**3** Select “Category”.



**4** Select the desired category.









**5** Select the desired item to display.




# Using the Phonebook




## ◆ Searching by Index Search Mode


**Example:** To find “ΣΟΦΙΑ” (SOPHIA).

<b>1</b> Press <b>LEFT SOFT KEY</b> .	<b>2</b> Press <b>RIGHT SOFT KEY</b> .	<b>3</b> Select “Index Search”.
		
<b>4</b> Press <b>RIGHT SOFT KEY</b> repeatedly until the desired input mode (Greek) appears.	<b>5</b> Select the desired initial character “Σ”.	<b>6</b> Move the <b>JOYSTICK</b> down until “ΣΟΦΙΑ” is displayed.
		


- When finding items in the Base Unit phonebook , press  twice on step 1.




## ◆◆ Dialling from the Phonebook


<b>1</b> Press <b>LEFT SOFT KEY</b> .	<b>2</b> Select the desired item (see above or previous page).	<b>3</b> Press <b>TALK</b> or <b>SPEAKERPHONE</b> .
		 OR 

- When finding items in the Base Unit phonebook , press  twice on step 1.


## ◆◆ Editing a Caller Information

To exit the operation, press  at any time.

<b>1</b> Press <b>LEFT SOFT KEY</b> .	<b>2</b> Select the desired item.	<b>3</b> Select “Edit”.
		
<b>4</b> For handset phonebook: Go to step 4 on page 24. For base unit phonebook: Go to step 4 on page 25.		

- When finding items in the Base Unit phonebook , press  twice on step 1.
- To continue editing other caller information, repeat from step 2.

## ◆◆ Deleting Caller Information

To exit the operation, press  at any time.

**1** Press **LEFT SOFT KEY**.



**2** Select the desired item.




**3** Select "Delete".



**4** Select "Yes", then "Deleted" is displayed.



- When finding items in the Base Unit phonebook, press  twice on step 1.
- To continue deleting other caller information, repeat from step 2.
- If there are no items stored in the phonebook when selecting the desired item, the display shows "Memory Empty".









# Using the Phonebook

 
## ◆◆ Hot Keys

You can assign the dialling buttons (1) through (9) as hot keys. You can choose 9 phone numbers from the phonebook.



To exit the operation, press (0/\*) at any time.

### ◆ Registering a Phone Number as a Hot Key





<b>1</b> Press <b>LEFT SOFT KEY</b> . 	<b>2</b> Select the desired item.  → 	<b>3</b> Select "Reg. to Hot Key".  → 
<b>4</b> Select the desired dialling button number.  → 	<b>5</b> Select "Save", then "Saved" is displayed. 	

- If there is no item stored in the phonebook when searching for the desired item, the display shows "Memory Empty".
- If an item is already stored to a hot key, "✓" will be displayed on the left of the key number. If a hot key number with "✓" is selected, press "" to select "Overwrite".

### ◆ Dialling with a Hot Key

<b>1</b> Press and hold the dialling button registered as a hot key until a phone number is displayed.	<b>2</b> Press <b>TALK</b> or <b>SPEAKERPHONE</b> .  OR 
--------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

### ◆ Deleting the Hot Key Registration

<b>1</b> Press and hold the dialling button registered as a hot key until a phone number is displayed.	<b>2</b> Press <b>JOYSTICK</b> . 	<b>3</b> Select "Delete". 
<b>4</b> Select "Yes", then "Deleted" is displayed.  → 		

- Phonebook registration will not be erased when hot key registration is deleted.

# SMS Feature (Text Message)

You can send and receive text messages between other fixed and mobile phones that also support a compatible SMS feature and network.

**The SMS feature is only available after subscribing to Caller ID.**

Before sending your first text message, or to find out more information on SMS conditions and registration, please read your SMS Conditions (Text Messaging) for Bizzyline (Direct) Ltd. If you have any questions relating to the SMS Terms and Conditions, please call 09063020069. Calls are charged at 50p per minute. The helpdesk is open from 9.00am-5.30pm (Mon-Fri).

The SMS Network Provider described in these Operating Instructions is not available within the Republic of Ireland.

For further information, please contact the Customer Care Helpline No.: R.O.I. 01289 8333

Please note the following instructions when sending text messages between fixed lines and all mobile networks.

## To Send a Text Message from Fixed Line to Fixed Line

There are no special requirements when sending a text message between fixed lines. Please follow the instructions under **Writing and Sending New Messages**.

## To Send a Text Message from Fixed Line to Mobile

There are no special requirements when sending a text message between fixed line and mobile. Please follow the instructions under **Writing and Sending New Messages**. To enable the person receiving your message to reply, the server will insert your telephone number, within hash symbols, at the very end of your message. E.g. #01234 567899#. Please note: If you have used up the full 160 characters for your text message, your telephone number will overwrite the last letters of your message.

## To Send a Text Message from Mobile to Fixed Line

There are special requirements when sending a text message from a mobile to a fixed line. If the mobile sender is unaware of the fixed line SMS providers requirements for sending a text message to a fixed line, please inform them of the following procedures.

### Example: A Mobile is Replying to a Fixed Line Text Message

- **Select reply to message.**
- **Input your text message.**
- **Within the text message, enter the fixed line phone number.**

The number can be added anywhere within the message but it must be entered with a hash at the beginning and the end of the number.

E.g. #01234 567899#

- **Select send.**

### Example: Mobile is Writing/Sending a New Text Message to a Fixed Line

- **Input your text message.**
- **Within the text message, enter the fixed line phone number.**


The number can be added anywhere within the message but it must be entered with a hash at the beginning and the end of the number.

E.g. #01234 567899#

- **Send the message (including number) to Big Mobile on: 07786 201010.**

# SMS Feature (Text Message)

## ◆◆ Writing and Sending New Messages

To exit the operation, press  at any time.

**1** Press **JOYSTICK**  
(or move).



**2** Select "SMS".



**3** Select "Create".



**4** Enter Message.  
(p.34)

**5** Press **JOYSTICK**, then  
"Destination" is displayed.



Go to step 6.

## ◆ Entering a Number Manually

Follow steps 1 to 5 shown above, then:

**6** Enter Phone Number.  
(max. 20 digits)

Press **JOYSTICK**.



Go to step 7 on the next page.

## ◆ Entering a Number from the Phonebook

Follow steps 1 to 5 shown above, then:

**6** Press **LEFT SOFT  
KEY**.



Select the desired item (p.27).



twice

Go to step 7 on the next page.



# SMS Feature (Text Message)

## ◆ Entering a Number from the Caller ID List

Follow steps 1 to 5 on the previous page, then:

**6** Select the desired item.



Go to step 7.

## ◆ Entering a Number from the Redial List

Follow steps 1 to 5 on the previous page, then:

**6** Press **RIGHT SOFT KEY**. Select the desired item.



twice

Go to step 7.

Follow steps 1 to 6 on the previous page and above, then:

**7** "Save?" is displayed, then select "Yes" or "No". (If "Yes" is selected, "Saved Message" is displayed.)




 




**8** Select "Send".



- "Sending Message" is displayed after step 8. The display returns to the standby mode, then "Transferring Message" is displayed.
- If the base unit does not have sufficient memory to send a message, the display will show "SMS lists are memory full. Delete messages.". The unit will then return to the function menu.
- Once you have created a SMS message, the unit will display "▲Use Last Text?" each time you select "Create". If you want to use the text of the last message sent once again, move the **JOYSTICK** up to recall the last message.
- If you try to send a message using a phone number (Destination) over 20 digits long from one of the Phonebook, Caller ID or Redial lists, "Invalid Number" is displayed and the display returns to "<Enter Phone No>".
- The maximum message length is 160 characters. Please consult your SMS service provider for further details.
- 69 messages can be memorized when you enter 80 characters/1 message.
- If your phone is connected to PBX (Private Branch eXchange: private branch exchange), see page 42 to enter the destination number.

# SMS Feature (Text Message)


## ◆◆ Text Entry

Keys	Operations
	Move <b>JOYSTICK</b> up, down, left or right to move the cursor.
	Press to enter letters/numbers. (Items are added to the left of the cursor. If the cursor is at the beginning of a line, the item is added at the beginning.)
	Press to delete characters. (Character on the cursor is deleted. To delete all characters, press and hold.)
	Press to switch between upper and lower case.
	Press to insert a blank space (except when in Numeric input mode).
	Press to insert a symbol ( * , # , / , etc.) (except when in Numeric input mode).

## ◆ Selecting the Input Mode

There are 5 text input modes: **LetterWise**<sup>®</sup> (default mode), Alphabet (ABC), Numeric (0-9), Greek (ΑΒΓ) and Extended (ΑĂĂ). The function icon above the key displays the current input mode. For the full character map, see **SMS Character Table** (p.90).

To change the input mode while inputting a message, press **RIGHT SOFT KEY**.

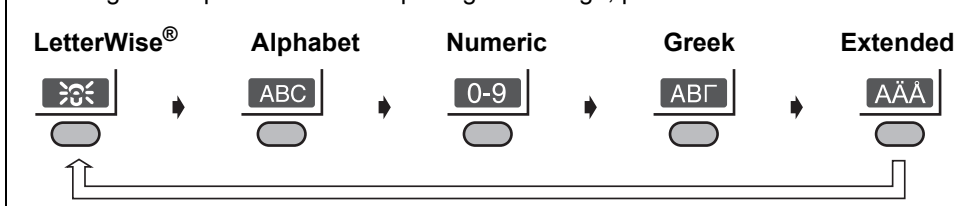

- If **LetterWise**<sup>®</sup> (see next page) is selected, select a language you require (see page 54).

## ◆◆ Entering Text in LetterWise® Mode

**LetterWise®** is the default input mode. **LetterWise®** is a simplified text entry system. This system suggests to the user the most likely letter to follow the text entered previously.

### Inserting Operations

Enter letters by pressing (ABC2) - (XYZ9).

If the letter displayed is not correct, change the letter by pressing (#) (possibly several times).

Continue writing the word always checking that the letters displayed are correct and change them if necessary.

To insert symbols, use (1). If the symbol you want does not appear, press (#) repeatedly until the required symbol appears.

### Example (When the language choice is English.)

To enter "hello".

**1** Press (↵) to change to the small letter.

Enter Message>

**2** Press (GHI4). "i" is the most frequent first letter of a word.

i

**3** Press (#) to display the next candidate letter. "h" is the second most frequent letter.

h

**4** Press (DEF3). "e" is most frequent letter.

he

**5** Press (JKL5). "l" is most frequent letter.

hell

**6** Press (JKL5). "l" is most frequent letter.

helll


**7** Press (MNO6). "o" is most frequent letter.

hello










# SMS Feature (Text Message)

## ◆◆ Reading/Displaying a Message in the Outgoing List

You can display messages saved in date/time order.

To exit the operation, press  at any time.

### ◆ Reading/Displaying a message

<b>1</b> Press <b>JOYSTICK</b> (or move). 	<b>2</b> Select "SMS".  → 	<b>3</b> Select "Send List".  → 
<b>4</b> Select the desired message.  → 	<b>5</b> Scroll through the message to read/display. 	<b>6</b> Press <b>JOYSTICK</b> . 

Go to step 7.

### ◆ Sending a message

Follow steps 1 to 6 shown above, then:

**7** Select "Send".



Follow steps from 6 of **Writing and Sending New Messages** (p.32, 33).

### ◆ Deleting a message

Follow steps 1 to 6 shown above, then:

**7** Select "Delete".



**8** Select "Yes", then "Deleted" is displayed.



• You can also delete by pressing  then selecting "Yes" on step 4.

### ◆ Editing a message

Follow steps 1 to 6 shown above, then:


**7** Select "Edit Message".



Follow steps from 4 of **Writing and Sending New Messages** (p.32, 33).

## ◆◆ Receiving a Text Message


When a message has been received, the display will show the following and a tone will sound.

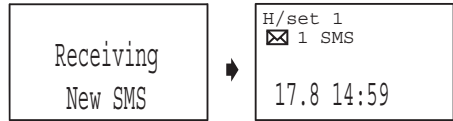

The number indicates how many mails were received.  
When the SMS message memory is full, “Full” is displayed.  
No messages can be received if the memory is full.

# SMS Feature (Text Message)

## ◆◆ Reading/Displaying a Message in the Incoming List

To exit the operation, press  at any time.

**1** Press **JOYSTICK** (or move).



**2** Select “ SMS”.




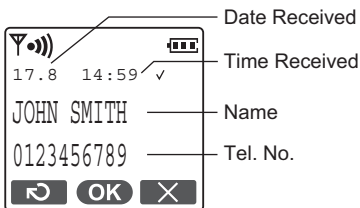
**3** Select “Receive List”.



☺))	☰
New	2
Total	10

**4** Move the **JOYSTICK** down.

- The most recent sender's details are displayed.
- If the name and number have been stored in the phonebook, the name is also displayed.
- You can delete a message by pressing  then selecting “Yes”.



**5** Select the desired message.



**6** Scroll through the message to **read/ display**.



Go to step **7** on pages 39 and 40.

- If there is a “✓” icon placed against the time, this means the message has been read or displayed previously.
- If the list is accessed and no messages have been received, “Receive List Memory Empty” is displayed.
- If the base unit does not have sufficient memory to receive a message, the display will show “SMS lists are memory full. Delete messages.”.
- Certain SMS service providers may attach a 1-digit number to the sender's phone number, the name will not be displayed even if the name and number have been stored in the phonebook.

# SMS Feature (Text Message)

## ◆ Replying to a message

Follow steps 1 to 6 on the previous page, then:

**7** Press **JOYSTICK**.



**8** Select "Reply".



**9** Enter Message.

**10** Press **JOYSTICK** twice.



**11** "Save?" is displayed, then select "Yes".



**12** "Saved Message" is displayed, then select "Send".



- "Sending Message" is displayed. The display returns to the standby mode, then "Transferring Message" is displayed.
- If the base unit does not have sufficient memory to send a message, the display will show "SMS lists are memory full. Delete messages."

## ◆ Deleting a message

Follow steps 1 to 6 on the previous page, then:

**7** Press **JOYSTICK**.



**8** Select "Delete".



**9** Select "Yes", then "Deleted" is displayed.



# SMS Feature (Text Message)

## ◆ Editing a message

Follow steps 1 to 6 on page 38, then:

**7** Press **JOYSTICK**.



**8** Select "Edit Message".



**9** Follow steps 4 to 8 of **Writing and Sending New Messages** (p.32, 33).

## ◆ Storing the Sender's Phone Number in the Phonebook

Follow steps 1 to 6 on page 38, then:

**7** Press **JOYSTICK**.



**8** Select "Save Phonebook".



**9** Follow steps from 4 to 9 of **Storing Caller Information** (p.24).

## ◆ Editing the sender's Phone Number for Call

Follow steps 1 to 6 on page 38, then:

**7** Press **JOYSTICK**.



**8** Select "Edit for Call".



**9** Edit Phone Number.  
(max. 24 digits)

**10** Press **JOYSTICK**, **TALK** or **SPEAKERPHONE**.



## ◆ Calling the Message Sender

Follow steps 1 to 5 (or 4) on page 38, then:

**6** Press **TALK** or **SPEAKERPHONE**.






# SMS Feature (Text Message)

## ◆◆ Changing the SMS Message Centre Numbers

To send and receive SMS text messages, you need your SMS Message Centre telephone numbers. Two numbers have been preset in your phone.

The phone number for SMS Message Centre 1 is used to SEND text messages while the number for Message Centre 2 is used to RECEIVE text messages.

You can change the preset numbers if required.

To exit the operation, press  at any time.

**1** Press **JOYSTICK**  
(or move).



**2** Select "SMS".




**3** Select  
"Parameters".



**4** Enter 4-digit Base Unit  
PIN.  
(Factory Preset 0000)

**5** Select Message Centre  
1 or 2.



**6** Erase the current  
number by  
pressing ,  
then enter the  
new Message  
Centre number.

**7** Press **JOYSTICK**.



**8** Select "Save", then  
"Saved" is displayed.



For your reference, these are the numbers that have been preset in your phone.


Message Centre 1: 0911 023 5029












Message Centre 2: 0161274599

- If your phone is connected to a PBX, you need to add the PBX line access number (and a dialling pause) only to the Message Centre 1 phone number.


# SMS Feature (Text Message)










## ◆◆ Setting the PBX Line Access Number

This feature is only for the phones connected to a PBX. This allows you to delete automatically the PBX line access number (max. 4 digits) when you enter the destination phone number of an SMS outgoing message from Phonebook, Redial or Caller ID lists. To exit the operation, press  at any time.

<b>1</b> Press <b>JOYSTICK</b> (or move). 	<b>2</b> Select "SMS".  → 	<b>3</b> Select "Parameters".  → 
<b>4</b> Enter 4-digit Base Unit PIN. (Factory Preset 0000)	<b>5</b> Select "PBX Prefix".  → 	<b>6</b> Select "On".  → 
<b>7</b> Enter Line Access Number. (max. 4 digits)	<b>8</b> Press <b>JOYSTICK</b> . 	<b>9</b> Select "Save", then "Saved" is displayed. 

## ◆◆ Turning the SMS Feature On/Off

To exit the operation, press  at any time.

<b>1</b> Press <b>JOYSTICK</b> (or move). 	<b>2</b> Select "SMS".  → 	<b>3</b> Select "Parameters".  → 
<b>4</b> Enter 4-digit Base Unit PIN. (Factory Preset 0000)	<b>5</b> Select "SMS On/Off".  → 	<b>6</b> Select "On" or "Off".  → 

### When the SMS feature is turned off;

- If you send a message, a tone sounds and the message will return to the SMS incoming list with "FD" attached.
- If you receive from SMS centre call, the message will not be received but SMS centre phone number will remain in the Caller ID list.

- If you turn the SMS feature on, the unit will begin ringing (one ring) after other connected telephones.
- The factory preset is "On".

# Settings Menu Chart

## ◆◆ Handset Settings Menu Chart

1st Menu	2nd Menu	3rd Menu	
Setting Handset	Set Date/Time		
	Memo Alarm		
	Ringer Option		Ringer Volume
			EXT Ringer Type
			INT Ringer Type
			Paging Tone
			Private Ring
	Tone Option		Key Tone
	Display Option		Standby Display
			Talk Display
			Select Language
			Private Colour
			Category Name
	Call Option		Call Bar
			Direct Call No.
			Direct On/Off
	Registration		Register H/set
			Cancel Base
	Select Base		Auto
			Base 1
			∴ Base 4
	Other Option		Change H/S PIN
			Change H/S Name
		Auto Talk	
		LetterWise	
		Battery Type	
		Reset Handset	

# Settings Menu Chart


---

## ◆◆ Base Unit Settings Menu Chart

1st Menu	2nd Menu	3rd Menu
Setting Base	Ringer Option	Ringer Volume
	Call Option	Recall
		Pause Time
		Emergency Call
		Call Restricted
	Cancel Handset	
	Other Option	Change Base PIN
		Reset Base


## ◆◆ Memo Alarm

Set the date and time before setting the memo alarm (see page 13).

To exit the operation, press  at any time.

**1** Press **JOYSTICK** (or move).



**2** Select “ Setting Handset”.



**3** Select “Memo Alarm”.



**4** Select the desired alarm number (1 -3).



Go to step 5.

## ◆ Setting the Alarm Mode “Once” or “Daily”

Follow steps 1 to 4 shown above, then:

**5** Select “Once” or “Daily”.



**6** “Once”: Enter the date and time.  
“Daily”: Enter time.

**7** Press **JOYSTICK**.



**8** Enter a memo message (max. 32 characters) then press **JOYSTICK**.



**9** Select the desired ringer pattern.



**10** Select “Save”, then “Saved” is displayed.



- When setting the time, remember to select 12 or 24 hour clock (see page 13).
- Memo Alarm volume depends on handset ringer volume. Even if you set ringer to off, only Memo Alarm still rings.

# Handset Settings

## ◆ Setting the Alarm “Off”


Follow steps 1 to 4 on the previous page, then:

**5** Select “Off”.



**6** Select “Save”, then “Saved” is displayed.







 
 


- The factory preset is “Off”.
- To delete the displayed memo alarm, press  then select “Yes” on step 4.

## ◆ To Stop the Alarm

(The Alarm sounds: Max. 3 minutes)




Press .

- You can also stop the alarm by pressing , ,  to , ,  or .
- If “Once” is selected, the setting is turned off. When in talk or intercom mode, the alarm will not sound until the call is ended.

## ◆◆ Ringer Options

There are 15 ringer patterns available on each ringer. "Ringer 1" to "Ringer 6" are the bell ringer patterns. "Ringer 7" to "Ringer 15" are the preset melody patterns as below. The music data in this product belongs to M-ZoNE Co., Ltd.

To exit the operation, press  at any time.


Ringer No.	Ringer Pattern or Name
Ringer Pattern 1 to 6: Bell Patterns	
Ringer Pattern 7 to 15: Preset Melody Patterns	
7	Symphony No.5 in C minor
8	Air on G String
9	Wholetemperiere Clavier 1 Teil No 1 Fuga Das
10	Fantaisie Impromptu
11	Allegro Spring/The Four Seasons
12	Also Sprach Zarathustra
13	Liebstraum
14	Polovetsian Dance
15	24 Caprices











\* © 2003 M-ZoNE Co., Ltd.

- If you select one of the melody ringer patterns, the phone will ring for 10 seconds even if a caller has hung up. Therefore, you may hear a dial tone or no one on the line after you answer a call.

# Handset Settings





## ◆ Setting the Ringer Volume

The choices are 6 levels and off. If you set the volume to OFF, “” is displayed, however, still the volume of a paging and intercom call are level 1.

<b>1</b> Press <b>JOYSTICK</b> (or move). 	<b>2</b> Select “  Setting Handset”.  → 	<b>3</b> Select “Ringer Option”.  → 
<b>4</b> Select “Ringer Volume”  → 	<b>5</b> To increase volume, move the <b>JOYSTICK</b> up. To decrease volume, move the <b>JOYSTICK</b> down. 	<b>6</b> Press <b>JOYSTICK</b> . 







- The factory preset is 6.

## ◆ Selecting the Ringer Pattern for External Call/Internal Call/Paging

Follow steps 1 to 3 shown above, then:	
<b>4</b> Select “EXT Ringer Type”, “INT Ringer Type” or “Paging Tone”.  → 	<b>5</b> Select the desired ringer pattern.  → 

- The factory preset is 1.

## ◆ Selecting the Ringer Pattern for Private Ring


Follow steps 1 to 3 shown above, then:		
<b>4</b> Select “Private Ring”.  → 	<b>5</b> Select the desired category.  → 	<b>6</b> Select the desired ringer pattern.  → 









- The factory preset of each ringer pattern is 1.



## ◆◆ Setting the Handset Key Tone ON/OFF


You can turn the key tone on/off.






To exit the operation, press  at any time.

<b>1</b> Press <b>JOYSTICK</b> (or move). 	<b>2</b> Select "Setting Handset".  → 	<b>3</b> Select "Tone Option".  → 
<b>4</b> Press <b>JOYSTICK</b> to select "Key Tone". 	<b>5</b> Select "On" or "Off".  → 	

- The factory preset is "on".





## ◆◆ Display Options

To exit the operation, press  at any time.

<b>1</b> Press <b>JOYSTICK</b> (or move). 	<b>2</b> Select "Setting Handset".  → 	<b>3</b> Select "Display Option".  → 
Go to step 4.		

## ◆ Selecting the Standby Mode Display

Follow steps 1 to 3 shown above, then:

<b>4</b> Select "Standby Display".  → 	<b>5</b> Select "Base Number", "Handset Name" or "Off".  → 
-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

- The factory preset is "Handset Name".

# Handset Settings

## ◆ Selecting the Talk Mode Display

Follow steps 1 to 3 of **Display Options** on the previous page, then:

**4** Select "Talk Display".



**5** Select "Talk Time" or "Phone Number".



- Even if you select "Phone Number", the length of the call will appear on your display when you receive calls.
- The factory preset is "Talk Time".

## ◆ Setting the Private Colour

Follow steps 1 to 3 of **Display Options** on the previous page, then:

**4** Select "Private Colour".



**5** Select the desired category.



**6** Select Private Colour "Green", "Red" or "Orange" for each category.



- The factory preset is "Green".
- When you select the private colour on step 6, the Ringer LED will flash at the selected colour.

## ◆ Changing the Category Name

Follow steps 1 to 3 of **Display Options** on the previous page, then:

**4** Select "Category Name".



**5** Select the desired category.










**6** Edit Category Name.  
(max. 10 characters: p. 26)

**7** Press **JOYSTICK**.



## ◆◆ Call Options





To exit the operation, press  at any time.


<p><b>1</b> Press <b>JOYSTICK</b> (or move).</p> 	<p><b>2</b> Select “ Setting Handset”.</p>  → 	<p><b>3</b> Select “Call Option”.</p>  → 
Go to step 4.		

## ◆ Call Bar On/Off



When this feature is set to ON, outgoing calls cannot be made. Intercom calls and calls to numbers assigned as emergency numbers can be made (see **Setting the Emergency Calls** on page 59).

Follow steps 1 to 3 shown above, then:







<p><b>4</b> Select “Call Bar”.</p>  → 	<p><b>5</b> Enter 4-digit Handset PIN. (Factory Preset 0000)</p>	<p><b>6</b> Select “On” or “Off”.</p>  → 
----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------


- While the Call Bar mode is turned on, “” is displayed.

## ◆ Setting the Direct Call Number

After a direct call number has been set and the feature has been turned on, you can dial the direct call number only by pressing  or . Incoming calls are able to be accepted.

Follow steps 1 to 3 shown above, then:

<p><b>4</b> Select “Direct Call No.”.</p>  → 	<p><b>5</b> Enter Direct Call Number. (max. 24 digits)</p>	<p><b>6</b> Press <b>JOYSTICK</b>.</p> 
<p><b>7</b> Select “Save”.</p> 	<p><b>8</b> Select “On”.</p>  → 	

 
- While the direct call mode is turned on, “” is displayed.

# Handset Settings

## ◆ Setting the Direct Call ON/OFF


Follow steps 1 to 3 on the previous page, then:

**4** Select "Direct On/Off".




**5** Select "On" or "Off".



- If the direct call mode is turned off, "●" will disappear.
- If you did not set the Direct Call Number, "Enter Phone No" will be displayed. Enter the number then press  twice.

## ◆◆ Other Options

To exit the operation, press  at any time.

**1** Press **JOYSTICK**  
(or move).



**2** Select " Setting  
Handset".



**3** Select "Other  
Option".



Go to step 4.

## ◆ Changing Handset PIN (Personal Identification Number)

The factory preset is 0000.

Once you have programmed the handset PIN, you cannot confirm it. We recommend you write down the handset PIN. If you forget it, please consult our Panasonic Customer Care Helpline. U.K. 08700 100 076 R.O.I. 01289 8333

Follow steps 1 to 3 shown above, then:

**4** Select "Change H/S PIN".



**5** Enter current 4-digit Handset PIN.

**6** Enter new 4-digit Handset PIN.

**7** Enter new 4-digit Handset PIN again  
to verify.

# Handset Settings

## ◆ Changing Handset Name

Follow steps 1 to 3 on the previous page, then:

**4** Select "Change H/S Name".



**5** Edit Handset Name.  
(max. 10 characters)

**6** Press **JOYSTICK**.



## ◆ Setting Auto Talk ON/OFF

Follow steps 1 to 3 on the previous page, then:

**4** Select "Auto Talk".



**5** Select "On" or "Off".



- The factory preset is "Off".

## ◆ Changing the LetterWise® Language

Follow steps 1 to 3 on the previous page, then:

**4** Select "LetterWise".



**5** Select the desired language.



- The factory preset is "English".

## ◆ Setting the Battery Type

Follow steps 1 to 3 on the previous page, then:

**4** Select "Battery Type".



**5** Select "Ni-Cd" or "Ni-MH".



- The factory preset is "Ni-MH".

## ◆ Reset the Handset Settings

You can reset all of the handset settings to their initial settings.

**1** Press **JOYSTICK**  
(or move).



**2** Select "Setting  
Handset".



**3** Select "Other Option".



**4** Select "Reset  
Handset".



**5** Enter 4-digit Handset  
PIN.  
(Factory Preset 0000)

**6** Select "Yes", then  
"Deleted" is displayed.



# Handset Settings


---

## Handset Initial Settings

Functions	Initial Settings
Memo Alarm Mode	OFF
Alarm Time	Delete
Handset Ringer Volume	6
Handset External Ringer Pattern	1
Handset Internal Ringer Pattern	1
Handset Paging Tone Pattern	1
Handset Private Ringer Pattern	1
Handset Alarm Tone Pattern	1
Key Tone	ON
Standby Mode Display	Handset Name
Talk Mode Display	Talk Time
Display Language	English
Call Bar Mode	OFF
Direct Call Mode	OFF
Direct Call Number	Delete
4-Digit Handset PIN	0000
Auto Talk	OFF
Select Base	Automatic Base Unit Selection
Redial Memory	Delete All
Handset Receiver Volume	Medium
Walkie-Talkie Setting	Group
SMS Text Input Mode	LetterWise®
Phonebook List	Remain



## ◆◆ Setting the Base Unit Ringer Volume

To exit the operation, press  at any time.

- 1** Press **JOYSTICK** (or move).

 


- 2** Select " Setting Base".



- 3** Enter 4-digit Base Unit PIN.  
(Factory Preset 0000)

- 4** Select "Ringer Option".



- 5** Select "Ringer Volume".



- 6** To increase volume, move the **JOYSTICK** up.  
To decrease volume or set to OFF, move the **JOYSTICK** down. (3 levels)




- 7** Press **JOYSTICK**.









- The factory preset is medium.

# Base Unit Settings







## ◆◆ Call Options

To exit the operation, press  at any time.

<b>1</b> Press <b>JOYSTICK</b> (or move). 	<b>2</b> Select "  Setting Base".  → 	<b>3</b> Enter 4-digit Base Unit PIN. (Factory Preset 0000)
<b>4</b> Select "Call Option".  → 		
Go to step 5.		

## ◆ Selecting the Flash/Earth Mode





An earth relay can be installed as an option depending on your PBX requirements. Please consult our Panasonic Customer Care Helpline for installation. On installation, you can then select the flash or earth mode to suit your PBX or network provider.

Follow steps 1 to 4 shown above, then:	
<b>5</b> Select "Recall".  → 	<b>6</b> Select "Flash" or "Earth".  → 
<b>When "Flash" was selected;</b>	
<b>7</b> Select desired flash type. (see below)  → 	

- The factory preset is "Flash".
- "Type 1": 700 ms, "Type 2": 80 ms, "Type 3": 400 ms. The factory preset is "Type 2".

## ◆ Selecting the Pause Time

You can select the pause time to 3 or 5 seconds, depending on your PBX requirements.

Follow steps 1 to 4 shown above, then:	
<b>5</b> Select "Pause Time".  → 	<b>6</b> Select "Short" (3 sec.) or "Long" (5 sec.).  → 

- The factory preset is "Short".

## ◆ Setting the Emergency Calls

Even if handset is in Call Bar Mode, you can make an emergency call.

Follow steps 1 to 4 on the previous page, then:

**5** Select "Emergency Call".



**6** Select "Emergency Call1" to "Emergency Call5".



**7** Enter Emergency Call Number.

**8** Press **JOYSTICK**.



- The factory presets are **112** and **999**.

## ◆ Call Restriction

You can restrict selected handset(s) from dialling selected phone numbers. You can assign up to 6 call restriction numbers (up to 8 digits). If you dial a restricted number, the call does not connect and the restricted number flashes.

Follow steps 1 to 4 on the previous page, then:

**5** Select "Call Restricted".



**6** Search and press **RIGHT SOFT KEY** to attach (or cancel) "✓" to the desired Handset(s) to restrict.



**7** Press **JOYSTICK**.



**8** Select the restricted Number item (1-6).



**9** Enter the restricted phone number (up to 8 digits).


**10** Press **JOYSTICK**.



**NOTE:** When you put a first digit on step 9, it must overwrite the current displayed numbers. We recommend you to write down the restricted phone number you entered.

# Base Unit Settings

## ◆◆ Other Options

To exit the operation, press  at any time.

**1** Press **JOYSTICK**  
(or move).



**2** Select " Setting  
Base".



**3** Enter 4-digit Base  
Unit PIN.  
(Factory Preset  
0000)

**4** Select "Other Option".



Go to step 5.

## ◆ Changing the Base Unit PIN (Personal Identification Number)

The factory preset is 0000.

Once you have programmed the base unit PIN, you cannot confirm it. We recommend you write down the base unit PIN. If you forget it, please consult our Panasonic Customer Care Helpline. U.K. 08700 100 076 R.O.I. 01289 8333

Follow steps 1 to 4 shown above, then:

**5** Select "Change Base  
PIN".



**6** Enter new 4-digit Base  
Unit PIN.

**7** Enter new PIN again  
to verify.

## ◆ Reset the Base Unit Settings

You can reset all of the base unit settings to their initial settings.

Follow steps 1 to 4 shown above, then:

**5** Select "Reset Base".



**6** Select "Yes".



# Base Unit Settings

## Base Unit Initial Settings

Function	Initial Setting
Recall	Flash (Type 2: 80ms)
Pause Timing	Short (3 seconds)
Emergency Call Number 1	112
Emergency Call Number 2	999
Call Restricted Handset(s)	Delete All
Call Restriction Number(s)	Delete All
4-Digit Base Unit PIN	0000
Base Unit Ringer Volume	Medium
SMS Message Centre Number 1	0911 023 5029
SMS Message Centre Number 2	0161274599
Caller ID List	Delete All
SMS Message Lists	Delete All
SMS PBX Line Access Number Support ON/OFF	OFF
SMS PBX Line Access Number	Delete All
SMS Feature	ON
Date/Time	31-12-03/00:00
Answering System	ON
Your Own Greeting Message	Remain
Caller's Recording Time	No Limit
Number of Rings	4 Rings
Greeting Monitor	ON
Remote Code	Delete (OFF)
Incoming/Memo Message(s)	Remain


# Multi-Unit User Operations

## ◆◆ Operating Additional Handsets

Additional **KX-TCA151E** handsets are available for purchase separately. Up to 6 handsets can be registered to a single base unit. Using additional handsets allows you to have an intercom call while simultaneously conducting a call to an outside line.

## ◆◆ Operating Additional Base Units

You can register and operate your handset with up to 4 base units. Each base unit forms 1 radio cell. If the individual bases are linked to the same telephone line then you can extend the operating range of the system by positioning the bases so that the two radio cells overlap. If the handset is set to auto base selection, then in standby mode the handset will automatically swap to the second base if the range on the first base is exceeded. It is not possible to transfer calls between bases (only between handsets linked to the same base unit).

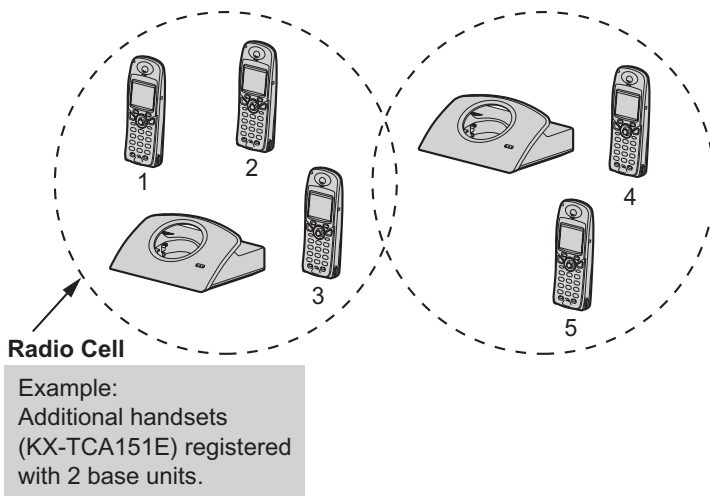

**NOTE:** Calls are disconnected when the handset moves from one radio cell to another.


## ◆◆ Handset Registration to a Base Unit

The handset supplied with the base unit is already registered. If an optional handset is purchased, it must be registered as follows.

**Charge the optional handset batteries for 7 hours before initial use.**

**Handset registration must be completed within 1 minute after pressing the .**

**If over 1 minute, press  then start over again.**

To exit the operation, press  at any time.

**1** Press **JOYSTICK**  
(or move).



**2** Select "Setting  
Handset".

 



**3** Select  
"Registration".



**4** Select "Register  
H/set".



**5** Press and hold  on the Base Unit (for about 3 seconds) until the tone sounds.

- If all registered handset(s) start ringing (paging), press  to stop paging then start over again.

**6** Select the desired  
base unit.



**7** Enter 4-digit Base Unit  
PIN.  
(Factory Preset 0000)

**8** Press **JOYSTICK**.




When a handset is registered successfully, a confirmation tone sounds and the "Y" icon is displayed.










- If you enter the incorrect Base Unit PIN, the error tone sounds and repeat from step 1.
- To register an handset to more than one base unit, repeat from step 1 with the other base unit(s).
- The handset main menu may changes corresponding to the base unit registered to.

# Multi-Unit User Operations


## ◆ Cancelling a Handset

Each handset can cancel itself or another handset. This feature is usually used to cancel a link between Handset and Base Unit.








To exit the operation, press  at any time.

<p><b>1</b> Press <b>JOYSTICK</b> (or move).</p> 	<p><b>2</b> Select “ Setting Base”.</p>  → 
<p><b>3</b> Enter 4-digit Base Unit PIN. (Factory Preset 0000)</p>	<p><b>4</b> Select “Cancel Handset”.</p>  → 
<p><b>5</b> Search and press <b>RIGHT SOFT KEY</b> to attach “✓” to the handset(s) to cancel.</p>  → 	<p><b>6</b> Press <b>JOYSTICK</b>.</p> 

## ◆ Cancelling a Base Unit

If another handset is out of range and/or power is OFF when **Cancelling a Handset**, the previous base unit number will still remain in the cancelled handset. Therefore, you need to cancel the base unit registered in the cancelled handset. To exit the operation, press  at any time.

Follow steps **1** to **3** on the previous page, then:


<p><b>4</b> Select “Cancel Base”.</p>  → 	<p><b>5</b> Enter 4-digit Handset PIN. (Factory Preset 0000)</p>
<p><b>6</b> Search and press <b>RIGHT SOFT KEY</b> to attach “✓” to the base unit to cancel.</p>  → 	<p><b>7</b> Press <b>JOYSTICK</b>.</p> 
<p><b>8</b> Select “Yes”, then “Deleted” is displayed.</p>  → 	




 



## ◆◆ Base Unit Selection

When "Auto" (Automatic Base Unit Selection) is selected, the handset automatically searches for other registered base units if you move outside of the radio cell of the current base unit.

When a specified base unit is selected, the handset will access that base unit only. Calls (both incoming and outgoing) can be conducted only via the selected base unit, even if the radio cells overlap with neighbouring base units.


To exit the operation, press  at any time.

<p><b>1</b> Press <b>JOYSTICK</b> (or move).</p> 	<p><b>2</b> Select " Setting Handset".</p> 
<p><b>3</b> Select "Select Base".</p> 	<p><b>4</b> Select "Auto" or desired base unit.</p> 





## ◆◆ Intercom Between Handsets

You can use your handsets as a 2-way intercom.

**Intercom calls can be conducted within the radio cell of the current base unit, but not with units in neighbouring radio cells.**

To exit the operation, press  at any time.

◆ **For example, when Handset 1 calls Handset 2:**

<p><b>&lt;Handset 1&gt;</b></p> <p><b>1</b> Press <b>INTERCOM</b> , then press desired handset number .</p> <p><b>2</b></p>	<p><b>&lt;Handset 2&gt;</b></p>  <p>Press <b>TALK</b> .</p>
------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

- You can also answer a call by pressing ,  to , ,  or  instead of pressing  (**Any Key Talk**).


◆ **Terminating a call**

<p><b>&lt;Handset 1 or 2&gt;</b></p>	<p><b>3</b> Press <b>TALK OFF</b> .</p>
--------------------------------------	----------------------------------------------------------------------------------------------------------------------------






# Multi-Unit User Operations


 








## ◆◆ Transferring a Call to Another Handset

The intercom can be used during a call to transfer an external call between handsets that are registered to the same base unit.

To exit the operation, press  at any time.

  
### ◆ For example, when Handset 1 transfers a call to Handset 2:

	<Handset 1>	<Handset 2>
	(During a call)	
<b>1</b>	Press <b>INTERCOM</b>  , then press desired handset number  .	
<b>2</b>		Press <b>TALK</b>  .
	(Conversation between handset 1 and 2)	
<b>3</b>	Press <b>TALK OFF</b>  .	
	(Conversation between outside line and Handset 2)	

 









- You can also answer a call by pressing ,  to , ,  or  instead of pressing  (**Any Key Talk**).
- If you press  after pressing the desired handset number, a call can be transferred to another handset without speaking to another handset.  
If the transferred call is not answered within 60 seconds, Handset 1 will ring again.
- When Handset 2 answers a call transferred, press  to establish a **conference call** or press  to complete a call transfer.

## ◆◆ Phonebook Copy

You can copy phonebook information between handsets registered to the same base unit. The phonebook copy must be performed while in intercom mode (see **Intercom Between Handsets** on page 65).


To exit the operation, press  at any time.

### ◆ Copying an Item






	<Handset 1: Receiver> (During an intercom call)	<Handset 2: Sender> (During an intercom call)
1	Press <b>JOYSTICK</b> . 	
2	Select "Recv Phonebook". "Start Copying" is displayed.  → 	
3		Press <b>JOYSTICK</b> . 
4		Select "Send Phonebook".  → 
5		Select the desired item to copy.  → 
6		Select "Copy One Item" then "Start Copying" is displayed.  → 

# Multi-Unit User Operations

## ◆ Copying All Items

To exit the operation, press  at any time.

Follow steps 1 to 4 on the previous page, then:

	<Handset 1: Receiver>	<Handset 2: Sender>
5		Press <b>JOYSTICK</b> .  
6		Select "Copy All Items", then "Start Copying" is displayed.  →  

- When copying is completed, a beep sounds and "Copy Complete" is displayed. After a few seconds, the display will return to the intercom call. "Copy Incomplete" will be displayed if the receiver handset memory is full. If "Copy Failure" is displayed on the sender handset, the receiver did not prepare for copying.
- If you move **JOYSTICK** up or down before pressing **JOYSTICK** on step 5, all items will not be copied. The items, from the item indicated now to the last item, are copied.

The Walkie-Talkie feature allows handsets to communicate with each other outside the range of the base unit. When the handsets are in Walkie-Talkie mode, external calls cannot be received. Only **KX-TCA151E** with Walkie-Talkie feature can communicate with one another.

Talk time in this mode is approximately 6 hours. Standby time in this mode is approximately max. 15 hours. (It changes by the use conditions.) When using the handset in Walkie-Talkie mode, we recommend keeping the handset turned off, turning it on only when talking in Walkie-Talkie mode. Turning the handset off immediately after use will improve battery operating time.

### Range:

**The maximum range between two handsets while in Walkie-Talkie mode is up to 300 metres outdoors.**

## ◆◆ Setting the Walkie-Talkie Mode

You can set the Walkie-Talkie mode. There are two types: Common Base Station mode and Group mode. The factory preset is Group mode.

- In Common Base Station mode, communication is possible between handsets registered to a common base unit. If the handsets are registered to more than one base unit, the same base unit must be selected.


Please note, the feature will not operate if AUTO is set in the base unit selection.

If Common mode is selected and the handset is not registered to a base unit, an error tone sounds.

- In Group mode, communication is possible between handsets that are both set to this mode and whose Group ID's are common.

This allows handsets to communicate in Walkie-Talkie mode regardless of which base unit they are registered to.

# Walkie-Talkie

To exit the operation, press  at any time.

**1** Press **JOYSTICK**  
(or move).



**2** Select “Walkie-Talkie”.



**3** Select “Setting”.



**4** Select “Common” or “Group”.



**When “Group” was selected;**

**5** Enter 3-digit Group Code.  
(Factory Preset 000)

**6** Press **JOYSTICK**.



**7** Enter Handset Number.  
(1-9: Factory Preset is 1)

**8** Press **JOYSTICK** twice.




- If you select “Group”, enter Group Code (this can be 3 digits of your choice - the factory preset is 000). Make note of your code.
- The factory preset of Handset Number is 1.

**IMPORTANT:** Each handset should have its own unique number.

## ◆◆ To Turn the Walkie-Talkie Mode On/Off

To use the Walkie-Talkie feature, all handsets in conversation must be in Walkie-Talkie mode.



To exit the operation, press  at any time.

### ◆ To Turn the Walkie-Talkie Mode On

<p><b>1</b> Press <b>JOYSTICK</b> (or move).</p> 	<p><b>2</b> Select "Walkie-Talkie".</p> 	<p><b>3</b> Select "On".</p> 
------------------------------------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------

- When the Walkie-Talkie mode is ON, the handset number is displayed after "Walkie-Talkie" appears on the display.

### ◆ To Turn the Walkie-Talkie Mode Off


<p><b>1</b> Press <b>JOYSTICK</b>.</p> 	<p><b>2</b> Select "Off".</p> 
--------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------




 
- This feature is also turned off if you turn power off then on.



## ◆◆ Talking in Walkie-Talkie Mode

Before proceeding with this function, please ensure Walkie-Talkie mode is turned on, and the appropriate Walkie-Talkie mode has been selected.

**For example, Handset 1 is calling Handset 2.**

To exit the operation, press  at any time.

 	<Handset 2>
<p><b>1</b> Press <b>INTERCOM</b> (INT),  or , then press desired handset number (ABC 2).</p>	
<p><b>2</b></p>	<p>Press <b>TALK</b> .</p>

- You can also answer a call by pressing (INT), 0 to 9, \*, # or  instead of pressing  (**Any Key Talk**).

# Answering System






If you set the current date and time (p.13) and set the answering system ON, a synthesized voice announce the date and time an/a incoming/memo message was recorded after playback-**Voice Date/Time Stamp**.

The total recording capacity is approximately 30 minutes or 64 messages. Any recorded noise may shorten the recording time up to 3 minutes. The greeting recording time is limited to 2 minutes and 30 seconds. We recommend you to record a brief greeting message in order to leave more time for recording new incoming/memo messages. All messages (greeting, incoming and memo) are stored indefinitely on a "Flash memory" IC chip-even if a power failure occurs. All of the messages are saved until you erase them-**Flash Memory Message Backup**.






## ◆◆ Answering System ON/OFF

When you set the answering system ON, a caller can leave her/his messages.

### ◆ To Set ON

<b>1</b> Press <b>JOYSTICK</b> (or move). 	<b>2</b> Select "☎ TAM Operation".  → 	<b>3</b> Select "Answer On", then ☎ is displayed.  → 
-----------------------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

### ◆ To Set OFF

<b>1</b> Press <b>JOYSTICK</b> (or move). 	<b>2</b> Select "☎ TAM Operation".  → 	<b>3</b> Select "Answer Off", then ☎ is disappeared.  → 
-----------------------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------



## ◆◆ Greeting Message

### ◆ Recording Your Own Greeting Message

**1** Press **JOYSTICK** (or move).



**2** Select "TAM Operation".



**3** Select "Record".



**4** Select "Record OGM".



**5** Record Greeting Message.  
8 inches (20 cm)  
away from the Mic.

**6** Press **JOYSTICK** to finish recording.



### ◆ Selecting the Caller's Recording Time

Follow steps 1 to 2 shown above, then:

**3** Select "Setting TAM".



**4** Select "Msg Rec Time".



**5** Select "1 Minute" or "No Limit" (up to 30 minutes) or "Greeting Only" (no incoming message will be recorded).



- The factory preset is "No Limit".

# Answering System

## ◆ Playing back a Pre-Recorded Greeting Message






If you do not record your own greeting message, one of two pre-recorded messages will be played. A pre-recorded greeting message depends on the selecting of same phone caller's recording time.

When the recording time is set to "1 Minute" or "No Limit" (30 minutes).









- "Hello, we are not available now. Please leave your name and phone number after the beep. We will return your call."

When the recording time is set to "Greeting Only".

- "Hello, We are not available now. Please call again. Thank you for your call."

<b>1</b> Press <b>JOYSTICK</b> (or move). 	<b>2</b> Select "☎ TAM Operation".  → 	<b>3</b> Select "Play OGM".  → 
-----------------------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

## ◆ Deleting Your Own Greeting Message

<b>1</b> Press <b>JOYSTICK</b> (or move). 	<b>2</b> Select "☎ TAM Operation".  → 	<b>3</b> Select "Play OGM".  → 
<b>4</b> Press <b>RIGHT SOFT KEY</b> . 	<b>5</b> Select "Yes", then "Deleted" is displayed.  → 	

## ◆◆ Selecting the Number of Rings

You can select the number of times the unit rings before the answering system answers a call, from 2 to 7 or Auto (for **Toll Saver**; as below).






### ◆ Toll Saver (When set to "Auto")

When you call the unit from a touch tone telephone:

If the unit answers on the 2nd or 3rd ring, there is at least one new message.

If the unit answers on the 5th or 6th ring, there are no new messages.

**Hang up when you hear the 4th ring. This will save you the toll charge for the call.**


<p><b>1</b> Press <b>JOYSTICK</b> (or move).</p> 	<p><b>2</b> Select "TAM Operation".</p> 	<p><b>3</b> Select "Setting TAM".</p> 
<p><b>4</b> Select "Number of Rings".</p> 	<p><b>5</b> Select "Auto" or "2 Rings" to "7 Rings" to select the number of rings.</p> 	


- The factory preset is "4 Rings".

# Answering System

## ◆◆ Incoming/Memo Messages

Incoming messages and memo messages are stored in chronological order. New messages cannot be recorded when “Full” is displayed. We recommend you erase unnecessary messages after each playback to leave more time for recording new message(s).

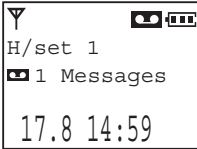

If new message(s) is (are) recorded,  icon and the number of messages will be displayed.

### ◆ Playing New Incoming/Memo Message(s)

**1** Press **JOYSTICK** (or move).



**2** Select “ TAM Operation”.



**3** Select “Play New Msg.”.



### ◆ Playing All Incoming/Memo Messages

**1** Press **JOYSTICK** (or move).



**2** Select “ TAM Operation”.



**3** Select “Play All Msg.”.



### ◆ Repeating a Message During Playback

(During Playing Message) →

**1** Move **JOYSTICK** to **LEFT**.



- If you press within 5 seconds from the start of playback, the previous message will be played. If you press after 5 seconds from the start of playback, the current message will be played.

### ◆ Skipping a Message During Playback

(During Playing Message) →

**1** Move **JOYSTICK** to **RIGHT**.




## ◆ Stopping a Message During Playback

(During Playing Message) → **1** Press **LEFT SOFT KEY**.




## ◆ Selecting the Receiver Volume During Playback

(During Playing Message) → **1** Move **JOYSTICK** to **UP** or **DOWN**.

 


## ◆ Clearing One Incoming/Memo Message


(During Playing Message) → **1** Press **JOYSTICK**.



**2** Select "Delete".




**3** Select "Yes", then "Deleted" is displayed.




- You can also delete the message by pressing  during playing message (p.76).

## ◆ Clearing All Incoming/Memo Messages

 
**1** Press **JOYSTICK**.




**2** Select "TAM Operation".




**3** Select "Delete Message".



**4** Select "Delete All".




**5** Select "Yes", then "Deleted" is displayed.




## ◆ Calling back to the Caller

 (During Playing Message) → **1** Press **JOYSTICK**.




**2** Select "Call Back".





# Answering System




## ◆ Editing a Number for Call

(During Playing Message) →

**1** Press **JOYSTICK**.  



**2** Select "Edit for Call".  
 → 



**3** Edit Phone Number.



**4** Press **JOYSTICK**, **TALK** or **SPEAKERPHONE**.  
 OR  OR 



## ◆◆ Monitor Function ON/OFF



When your greeting message is being played to the caller and the caller's message is being recorded, you can listen to it through the handset.

**1** Press **JOYSTICK** (or move).  


**2** Select "TAM Operation".  
 → 

**3** Select "Setting TAM".  
 → 

**4** Select "Greet Monitor".  
 → 

**5** Select "On" or "Off".  
 → 

- The factory preset is "On".

## ◆◆ Answering System Direct Command

You can operate the answering system by pressing dialling button as direct command.

**1** Press **JOYSTICK**  
(or move).



**2** Select "TAM  
Operation".



**3** Select "Play New Msg."  
or "Play All Msg.".



Follow steps **1** to **3** shown above, then:

Press (1)	To repeat a message.
Press (ABC 2)	To skip a message.
Press (WXYZ 9)	To stop the answering system operation.
Press (A-a*) (GHI 4)	To delete one incoming/memo message. *1
Press (A-a*) (JKL 5)	To delete all incoming/memo message.

Follow steps **1** to **2** shown above, then:

Press (DEF 3)	To enter the answering system setting menu.
Press (GHI 4)	To playback new incoming/memo message(s).
Press (JKL 5)	To playback all incoming/memo message(s).
Press (MNO 6)	To playback a greeting message.
Press (PQRS 7) (GHI 4)	To record a memo message.
Press (PQRS 7) (MNO 6)	To record your own greeting message.
Press (TUV 8)	To set the answering system ON.
Press (WXYZ 9)	To stop the answering system operation.
Press (0)	To set the answering system OFF.
Press (A-a*) (MNO 6)	To delete your own recorded greeting message.

\*1 This function is available only during incoming/memo message playback.

# Answering System













## ◆◆ Remote Operation from a Touch Tone Phone

You can operate the answering system from any touch tone phone.

**Firstly you must store your remote code using the handset near the base unit.**

The 3-digit remote code prevents unauthorised use of your answering system for listening to recorded messages.

### ◆ Setting the Remote Code ON

<b>1</b> Press <b>JOYSTICK</b> (or move). 	<b>2</b> Select "TAM Operation".  →  → 	<b>3</b> Select "Setting TAM".  →  → 
<b>4</b> Select "Remote Code".  →  → 	<b>5</b> Enter 3-digit Remote Code.	<b>6</b> Press <b>JOYSTICK</b> .  → 

### ◆ Setting the Remote Code OFF

Follow steps 1 to 4 of <b>Setting the Remote Code ON</b> , then:	
<b>5</b> Press <b>*</b> . 	<b>6</b> Press <b>JOYSTICK</b> .  → 

- The factory preset is Remote Code OFF.

### ◆ Turnign ON the Answering System Remotely

You can Turnign on the answering system from any touch tone phone.

<b>1</b> Call from a touch tone phone then wait for 20 rings.	<b>2</b> Enter remote code within 10 seconds after a long beep.
<b>3</b> Enter remote code after greeting message playback.	<b>4</b> Voice menu starts after 3 seconds. → Follow the guidance (See page 82).
<b>OR</b>	
Enter your desired direct remote command (See next page).	

- If your remote code is not stored, you cannot turn on the answering system remotely.



## ◆ Summary of Remote Operation

You can operate the answering system from any touch tone phone.

- |                                           |                                                                                           |                             |
|-------------------------------------------|-------------------------------------------------------------------------------------------|-----------------------------|
| <b>1</b> Call from a touch tone phone.    | <b>2</b> Greeting message playback.                                                       | <b>3</b> Enter remote code. |
| <b>4</b> Number of new message is played. | <b>5</b> Voice menu is started after 3 seconds.<br>▶ Follow the guidance (See next page). |                             |

**OR**

Enter your desired direct remote command (See below).

## ◆ Direct Remote Commands

After entering the remote code, you can choose to operate your answering system using direct commands as below, in place of listening to the voice menu. Hang up to end the remote operation at any time.

Command	Function
<b>1</b>	Repeat message (during playback)
<b>2</b>	Skip message (during playback)
<b>4</b>	New message playback
<b>5</b>	All message playback
<b>6</b>	Check greeting message
<b>7</b> ▶ <b>Record</b>	Greeting message recording
<b>9</b>	Stop operating
<b>0</b>	Answering system off
<b>*</b> ▶ <b>4</b>	Deleting specific message (during playback)
<b>*</b> ▶ <b>5</b>	Deleting all messages
<b>*</b> ▶ <b>6</b>	Deleting greeting messages (during playback)
<b>*</b> ▶ <b>□</b>	Disconnect

# Answering System

## ◆ Voice Menu

The words in “ ” means a voice guidance.

	Press <b>1</b> . ➡		
	Press <b>2</b>	“Press 1 to playback all messages. Press 2 for other functions.”	“All message playback.” At the end of the last message, “End of final message” is announced. When the remaining recording time becomes less than 5 minutes, the remaining recording time is announced.
	Press <b>2</b>	“Press 1 to playback new messages. Press 2 for other functions.”	“New message playback.”
	Press <b>2</b>	“Press 1 to record your message. Press 2 for other functions.”	“Please leave your message.” Talk after you hear this message. ↓ Hang up to finish recording.
	Press <b>2</b>	“Press 1 to erase all messages. Press 2 for other functions.”	“No message.”
	Press <b>2</b>	“Press 1 to record your greeting. Press 2 for other functions.”	“Press 7 to record your greeting. Press 9 to end recording.” Press <b>7</b> to start recording. ↓ Talk after the long beep. ↓ Press <b>9</b> to finish recording.

- After playback, the voice menu will start again from the beginning.
- If you hear “Memory full” after playback, erase some or all of the messages (See page 77).

## ◆◆ Recording a Memo Message

**1** Press **JOYSTICK** (or move).



**2** Select "☰ TAM Operation".



**3** Select "Record".



**4** Select "Record Memo".



**5** Record Memo Message.  
8 inches (20cm)  
away from the Mic.

**6** Press **JOYSTICK**.



 
## ◆◆ Recording Your Telephone Conversation

When you record your 2-way telephone conversation, you should inform the other party that the conversation is being recorded.

During recording, a beep will sound approximately every 15 seconds.

(During a call) →

**1** Press **JOYSTICK** twice to start recording, then "Recording" is displayed.




**2** Press **JOYSTICK** to stop recording.



# Using the Belt Clip

---

You can hang the handset on your belt or pocket using the belt clip.

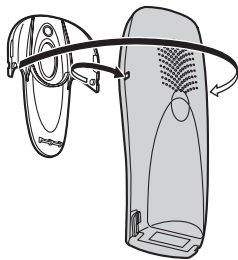

To remove the belt clip.




# Optional Headset

---

Plugging an optional headset into the handset allows hands-free phone conversations. Please use only the Panasonic KX-TCA89EX headset. To order, call the accessories telephone number on page 3. While using the headset, speakerphone is not available. To switch to speakerphone, disconnect the headset.


## ◆ Connecting the optional headset to the handset

Open the headset socket cover, and connect the optional headset to the headset socket as shown.

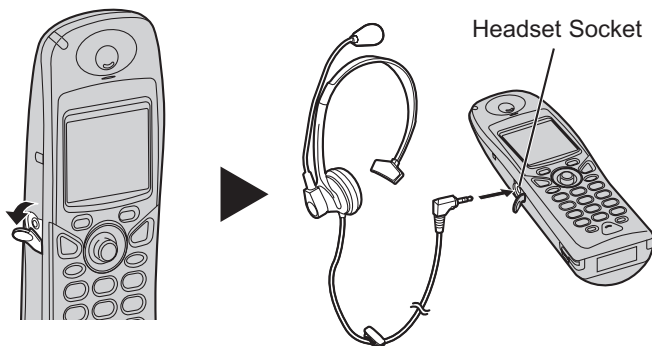


This unit can be mounted on a wall.

- Insert screws into the wall. The centre of the screw holes should be 8 cm horizontally apart.
- Make sure the screws are securely fastened to the wall.
- Connect the AC adaptor and the telephone line cord.
- Arrange the wires as shown, then mount the unit.

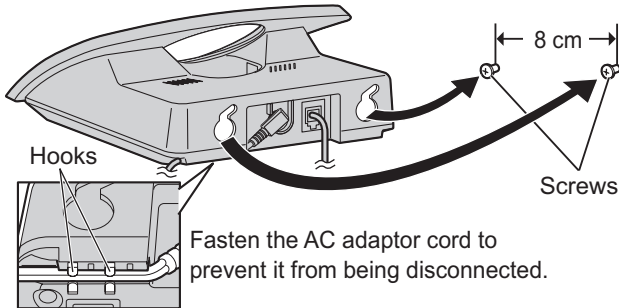

- Make sure the screws are securely fastened to the wall.

## Wall Template

 


# Before Requesting Help


If you experience any problems with the normal use of your apparatus, you should unplug it from the telephone outlet and connect a known working telephone in its place. If the known working telephone still has problems, then please contact the customer service department of your Network provider.

If it operates correctly, then the problem is likely to be a fault in your apparatus. In this case, contact your supplier for advice. Your Network provider may charge you if they attend a service call that is not due to an apparatus supplied by them.

**Turn the power OFF then ON (Handset)/Disconnect then connect the AC adaptor (Base Unit).**

Problem	Possible cause	Solution	Page
The unit does not work.	<ul style="list-style-type: none"> <li>Batteries not installed properly.</li> <li>AC adaptor of base unit not connected properly.</li> </ul>	<ul style="list-style-type: none"> <li>Re-install batteries properly.</li> <li>Disconnect and then connect AC adaptor.</li> </ul>	p.10
Display is blank.	<ul style="list-style-type: none"> <li>Handset not turned on.</li> </ul>	<ul style="list-style-type: none"> <li>Turn on power.</li> </ul>	p.12
Handset will not turn on.	<ul style="list-style-type: none"> <li>Batteries not inserted.</li> <li>Batteries not charged.</li> </ul>	<ul style="list-style-type: none"> <li>Insert the 2 rechargeable batteries supplied.</li> <li>Place handset on base and connect AC adaptor to base and AC outlet (full charge period 7 hrs).</li> </ul>	p.10
Battery charge icon not counting up.	<ul style="list-style-type: none"> <li>Dirty charge contact.</li> <li>Base not powered up.</li> </ul>	<ul style="list-style-type: none"> <li>Clean charge/battery contact and retry charge.</li> <li>Connect AC adaptor to base unit and AC outlet.</li> </ul>	p.11 p.10
📶 icon flashes.	<ul style="list-style-type: none"> <li>Handset not registered to base.</li> <li>Handset out of range of base.</li> <li>No power into base unit.</li> </ul>	<ul style="list-style-type: none"> <li>Register handset to base.</li> <li>Move handset closer to base.</li> <li>Connect AC adaptor to base unit and AC outlet.</li> </ul>	p.63 p.10
Handset busy tone heard when  is pressed.	<ul style="list-style-type: none"> <li>Handset out of range of base.</li> <li>Another handset in use.</li> </ul>	<ul style="list-style-type: none"> <li>Move handset closer to base.</li> <li>Wait for the other user to complete call.</li> </ul>	
No dial tone.	<ul style="list-style-type: none"> <li>Telephone line not connected.</li> </ul>	<ul style="list-style-type: none"> <li>Insert telephone cord to network.</li> <li>Turn power OFF then ON.</li> </ul>	p.10 p.12
Cannot dial out.	<ul style="list-style-type: none"> <li>Call Bar mode set.</li> <li>Particular dialled number is restricted.</li> <li>Key lock mode ON.</li> </ul>	<ul style="list-style-type: none"> <li>Turn feature off.</li> <li>Remove number from call restricted list.</li> <li>Turn key lock OFF.</li> </ul>	p.51 p.59 p.16

# Before Requesting Help

Problem	Possible cause	Solution	Page
Handset will not ring.	<ul style="list-style-type: none"> <li>• Ringer switched off.</li> </ul>	<ul style="list-style-type: none"> <li>• Set ringer to one of 6 volume levels.</li> </ul>	p.48
Audible Caller sounds late.	<ul style="list-style-type: none"> <li>• Recording time is long.</li> </ul>	<ul style="list-style-type: none"> <li>• Shorten recording time.</li> </ul>	p.25
No Caller ID number displayed.	<ul style="list-style-type: none"> <li>• Service not supplied.</li> <li>• Caller has withheld info.</li> </ul>	<ul style="list-style-type: none"> <li>• Caller ID service must be arranged with Network provider.</li> </ul>	p.19
 icon flashes	<ul style="list-style-type: none"> <li>• Battery low.</li> </ul>	<ul style="list-style-type: none"> <li>• Recharge batteries.</li> </ul>	p.10
Cannot register handset to base.	<ul style="list-style-type: none"> <li>• Max. number of bases already registered to handset.</li> <li>• Max. number of handsets already registered to base unit.</li> <li>• Wrong PIN number entered (Default 0000).</li> <li>• Electrical noise in local area.</li> </ul>	<ul style="list-style-type: none"> <li>• Delete unused base registrations from handset.</li> <li>• Delete unused handset registrations from base.</li> <li>• If PIN number is lost, contact the Panasonic Customer Care Helpline.</li> <li>• Move base/handset away from sources of electrical noise (e.g. TVs, radios, etc.).</li> </ul>	p.64 p.64 p.60 p.5
The unit begins ringing (one ring) after other connected telephones.	<ul style="list-style-type: none"> <li>• The SMS feature is turned on.</li> </ul>	<ul style="list-style-type: none"> <li>• Turn the SMS feature off, if you do not use an SMS service.</li> </ul>	p.42
The display is blank even if the unit is charged.	<ul style="list-style-type: none"> <li>• Battery low.</li> </ul>	<ul style="list-style-type: none"> <li>• Recharge batteries more than about 15 minutes.</li> </ul>	

## Answering System

Problem	Possible cause	Solution	Page
The answering system is on, but incoming messages are not recorded.	<ul style="list-style-type: none"> <li>• The recording time is set to "Greeting Only".</li> <li>• Memory is full (30 minutes or 64 messages).</li> </ul>	<ul style="list-style-type: none"> <li>• Select "1 Minute" or "No Limit (see "Answering System").</li> <li>• Erase some or all of the messages.</li> </ul>	p.73 p.77
You cannot operate the answering system from a touch tone phone.	<ul style="list-style-type: none"> <li>• Incorrect remote code entered.</li> <li>• Tone are too short to activate the unit.</li> <li>• The answering system is off.</li> </ul>	<ul style="list-style-type: none"> <li>• Enter the correct remote code.</li> <li>• Press each button firmly.</li> <li>• Turn on the answering system.</li> </ul>	p.81 p.72, 80

# Before Requesting Help

## Answering System

Problem	Possible cause	Solution	Page
You cannot operate the answering system with the handset.	<ul style="list-style-type: none"> <li>Someone is operating the answering system</li> <li>You are too far from the base unit.</li> </ul>	<ul style="list-style-type: none"> <li>Retry when other user has finished operation.</li> <li>Move closer to the base unit.</li> </ul>	
While recording a greeting message, the unit starts to ring and stops recording.	<ul style="list-style-type: none"> <li>A call is being received.</li> </ul>	<ul style="list-style-type: none"> <li>To answer the call, press <b>TALK</b>. The recording stops halfway. Start from the beginning after hanging up.</li> </ul>	
During playback, the unit starts to ring and stops playback.	<ul style="list-style-type: none"> <li>A call is being received.</li> </ul>	<ul style="list-style-type: none"> <li>To answer the call, press <b>TALK</b>.</li> </ul>	

## SMS-Text Messaging

Problem	Possible cause	Solution	Page
Cannot send a message.	<ul style="list-style-type: none"> <li>You have not subscribed to Caller ID.</li> <li>SMS Centre number is not stored in your telephone.</li> <li>Message was interrupted during sending.</li> </ul>	<ul style="list-style-type: none"> <li>Caller ID service must be arranged with Network provider.</li> <li>Store the number.</li> <li>Wait until the message has been sent before using any other telephone functions.</li> </ul>	<p>p.31</p> <p>p.41</p>
Cannot send or receive a message.	<ul style="list-style-type: none"> <li>Memory is full.</li> </ul>	<ul style="list-style-type: none"> <li>Delete messages in the Outgoing/Incoming lists.</li> </ul>	<p>p.36</p> <p>p.39</p>

Error Code	Description	Page
FD	<ul style="list-style-type: none"> <li>Could not connect to the SMS Centre. Check that you have the correct SMS Centre numbers or turn the SMS feature on.</li> </ul>	<p>p.41</p> <p>p.42</p>
FE	<ul style="list-style-type: none"> <li>There was a problem sending the message.</li> </ul>	
EO	<ul style="list-style-type: none"> <li>Your number is permanently withheld or you have not subscribed to a Caller ID service.</li> </ul>	p.31



## ◆◆ Phonebook Character Table

Buttons	Alphabet (ABC)	Numeric (0-9)	Greek (ABΓ)	Extended 1 (ÄÅ)	Extended 2 (Šš)	Russian (АБВ)
<b>1</b>	Space # & ' ( ) * , - . / 1	1	Space # & ' ( ) * , - . / 1	Ä Å Ä Å	Š š	А Б В Г
<b>2</b>	ABC 2 abc 2	2	Α Β Γ 2	Ä Å Ä Å Æ Β C Ç 2 a å ä å ä å æ b c ç 2	Š š Š š Š š Š š	А Ä Å В С Ć Ć 2 a å ä å b c ç Ć 2
<b>3</b>	DEF 3 def 3	3	Δ Ε Ζ 3	Đ Ę Ę Ę Ę Ę F 3 d ě è é ê ë ě f 3	Š š Š š Š š Š š	Д Ę Ж З 3 d ě è é ê ë ě f 3
<b>4</b>	GHI 4 ghi 4	4	Η Θ Ι 4	Ĝ Ĥ Ĥ Ĥ Ĥ Ĥ Ĥ Ĥ Ĥ 4 g ĝ ĥ ĥ ĥ ĥ ĥ ĥ ĥ ĥ 4	Š š Š š Š š Š š	И Й К Л 4 G Ĥ Ĥ Ĥ Ĥ Ĥ Ĥ Ĥ Ĥ 4 g ĥ ĥ ĥ ĥ ĥ ĥ ĥ ĥ 4
<b>5</b>	JKL 5 jkl 5	5	Κ Λ Μ 5	J K L 5 j k l 5	Š š Š š Š š Š š	М Н О П 5 J K L 5 j k l 5
<b>6</b>	MNO 6 mno 6	6	Ν Ξ Ο 6	M Ñ Ń Ő Ő Ő Ő Ő Ő 6 m ñ ñ o ó ó ó ó ó 6	Š š Š š Š š Š š	Р С Т У 6 M Ñ Ń Ő Ő Ő Ő Ő Ő 6 m ñ ñ o ó ó ó ó ó 6
<b>7</b>	PQRS 7 pqrs 7	7	Π Ρ Σ 7	P Q R S 7 p q r s 7	Š š Š š Š š Š š	Ф Х Ц Ч 7 P Q R R Ŕ Ŕ S Š Š 7 p q r Ŕ Ŕ s Š Š 7
<b>8</b>	TUV 8 tuv 8	8	Τ Υ Φ 8	T U Ū Ū Ū Ū Ū Ū Ū 8 t ŭ ŭ ŭ ŭ ŭ ŭ ŭ ŭ 8	Š š Š š Š š Š š	Ш Щ Ъ Ы 8 T Ť U Ū Ū Ū Ū Ū Ū Ū 8 t ť u ŭ ŭ ŭ ŭ ŭ ŭ 8
<b>9</b>	WXYZ 9 wxyz 9	9	Χ Ψ Ω 9	W Ŵ X Y Z 9 w ŵ x y z 9	Š š Š š Š š Š š	Ь Э Ю Я 9 W X Y ŷ ŷ Z Ž Ž Ž Ž 9 w x y ŷ ŷ z ž ž ž ž 9
<b>0</b>	Space 0	0	Space 0	Space 0	Š š Š š Š š Š š	

- The following letters of Greek, Russian (Cyrillic), Polish, Czech and Slovakian are not available. The same letter as capital (or small) will be displayed. a ç è t l ñ ø r š s ů ŵ ŷ ž ž ž
- Press **↔** to change letter size; Capital > Small, Small > Capital.
- To enter on LetterWise® Mode, see next page. (As for **1**, see the table on this page.)

# Character Table

## ◆◆ SMS Character Table

### "LetterWise®" Character Table

Buttons	①	(ABC) 2	(DEF) 3	(GHI) 4	(JKL) 5	(MNO) 6	(PQRS) 7	(TUV) 8	(WXYZ) 9
Character Displayed	Space . @ / : ; * # + - ' " , ! ? _ ¸ € ¤ £ \$ ¥ ( ) [ ] { } & % \ ^ ~   < > = ¢ §	ABC 2	DEF 3	GHI 4	JKL 5	MNO 6	PQRS 7	TUV 8	WXYZ 9
		abc 2	def 3	ghi 4	jkl 5	mno 6	pqrs 7	tuv 8	wxyz 9

- Press (0) for space or 0.
- Press (↔\*) to change letter size; Capital > Small, Small > Capital.
- Press (#) to show the next suggested character.

### "Alphabet", "Numeric", "Greek" and "Extended" Character Table

Buttons	Alphabet (ABC)	Numeric (0-9)	Greek (ABΓ)	Extended (AÄÅ)
①	Space . @ / : ; * # + - ' " , ! ? _ ¸ € ¤ £ \$ ¥ ( ) [ ] { } & % \ ^ ~   < > = ¢ §	1	Space . @ / : ; * # + - ' " , ! ? _ ¸ € £ \$ ¥ ( ) [ ] { } & % \ ^ ~   < > = ¢ §	Space . @ / : ; * # + - ' " , ! ? _ ¸ € £ \$ ¥ ( ) [ ] { } & % \ ^ ~   < > = ¢ §
(ABC) 2	ABC 2 abc 2	2	ΑΒΓ 2	À Á Â Ã Ä Å Æ Β C Ç 2 à á â ã ä å æ β c ç 2
(DEF) 3	DEF 3 def 3	3	ΔΕΖ 3	Ď È É Ê Ë Ì Í Ĭ Ï Ñ 3 ď è é ê ë ì í î ï ñ 3
(GHI) 4	GHI 4 ghi 4	4	ΗΘΙ 4	Ĝ Ğ Ĩ Ī Ĵ ĵ 4 ğ ğ ĩ ī ĵ 4
(JKL) 5	JKL 5 jkl 5	5	ΚΛΜ 5	JKL 5 jkl 5
(MNO) 6	MNO 6 mno 6	6	ΝΞΟ 6	MÑ Ń Ó Ô Õ Ö Ø ϕ 6 m ñ ñ ó ô õ ö ø ø 6
(PQRS) 7	PQRS 7 pqrs 7	7	ΠΡΣ 7	PQR SŞ ß 7 p q r s ş ß 7
(TUV) 8	TUV 8 tuv 8	8	ΤΥΦ 8	TU Û Ü Ú Ů Ů V 8 t u ù ú û ü ů v 8
(WXYZ) 9	WXYZ 9 wxyz 9	9	ΧΨΩ 9	W X Y Z 9 w x y z 9
0	Space 0	0	Space 0	Space 0

- The following small (or capital) letters are not available. The same letter as capital (or small) will be displayed.  
ø §
- Press (↔\*) to change letter size; Capital > Small, Small > Capital.

AC Adaptor .....	4, 10
Accessories .....	4
Answering a Call .....	14
Answering System .....	72
Any Key Talk .....	14
Audible Caller ID .....	23
Auto Talk .....	14, 54
<b>Base Unit</b>	
Initial Settings .....	61
PIN .....	60
Reset .....	60
Selection .....	65
<b>Battery</b>	
Caution .....	5
Charge .....	10
Information .....	11
Installation .....	10
<b>Call Bar</b> .....	51
<b>Call Restriction</b> .....	59
<b>Call Waiting</b> .....	18
<b>Caller ID List Menu</b>	
Deleting .....	21
Editing .....	20
Storing .....	20
<b>Cancelling a Base Unit</b> .....	64
<b>Cancelling a Handset</b> .....	64
<b>Conference call</b> .....	66
<b>Date and Time</b> .....	13
<b>Dialling Pause</b> .....	18, 58
<b>Direct Call Number</b> .....	51
<b>Display</b>	
Standby Mode .....	49
Talk Mode .....	50
<b>Emergency Calls</b> .....	59
<b>Flash/Earth</b> .....	58
<b>Guarantee</b> .....	93
<b>Handset</b>	
Display .....	9
Initial Settings .....	56
Locator/Paging .....	16
PIN .....	53
Registration .....	63
Reset .....	55
Ringer Pattern .....	48
Ringer Volume .....	48
Hands-Free Phone .....	15
Intercom .....	65
<b>Key</b>	
Lock .....	16
Tone .....	49
<b>Making a Call</b> .....	14
Memo Alarm .....	45
Memo Message .....	76, 83
Mute .....	15
<b>Phonebook</b>	
Copy .....	67
Hot Keys .....	30
Storing .....	24, 25
Power ON/OFF .....	12
Private Category .....	23
<b>Recall</b> .....	17, 58
Receiver Volume .....	15
Recording Telephone Conversation .....	83
<b>Redial List Menu</b>	
Deleting .....	22
Editing .....	22
Storing .....	21
Redialling .....	17
<b>Setting up</b> .....	10
SMS Feature .....	31
Specifications .....	92
<b>Transferring a Call</b> .....	66
<b>Walkie-Talkie</b> .....	69

# Technical Information

---

## Specifications

<b>Standard:</b>	DECT=( <u>D</u> igital <u>E</u> nhanced <u>C</u> ordless <u>T</u> elecommunications) GAP=( <u>G</u> eneric <u>A</u> ccess <u>P</u> rofile)
<b>Number of channels:</b>	120 Duplex Channels
<b>Frequency range:</b>	1.88 GHz to 1.9 GHz
<b>Duplex procedure:</b>	TDMA (Time Division Multiple Access)
<b>Channel spacing:</b>	1728 kHz
<b>Bit rate:</b>	1152 kbit/s
<b>Modulation:</b>	GFSK
<b>RF Transmission Power:</b>	approx. 250 mW
<b>Voice coding:</b>	ADPCM 32 kbit/s
<b>Power source:</b>	AC Adaptor 220 - 240 V, 50 Hz
<b>Power consumption, base unit:</b>	5 VA
<b>Operating conditions:</b>	5 - 40 °C, 20 - 80 % relative air humidity (dry)
<b>Dimensions, Base Unit:</b>	About (58 mm x 128 mm x 105 mm) x 200 g
<b>Dimensions, Handset:</b>	About (143 mm x 48 mm x 32 mm) x 125 g

- Specifications are subject to change.
- The illustrations used in this manual may differ slightly from the original device.

**Connections:** The telephone will not work during a power failure. We therefore recommend you use a standard telephone and T Adaptor to connect this Digital Cordless Phone to the line. Your Panasonic Sales Shop can offer you more information about connection possibilities.

“Eatoni and LetterWise are trademarks of Eatoni Ergonomics, Inc.”

## CONDITIONS OF GUARANTEE

This guarantee is in addition to and does not in any way affect any statutory or other rights of consumer purchasers. If within the applicable guarantee period, the appliance proves to be defective by reason of faulty design, workmanship or materials, we undertake subject to the following conditions to have the defective appliance (or any part or parts thereof) repaired or replaced free of charge.

1. The appliance shall have been purchased and used solely within either the UK or ROI and in accordance with standard operating instructions and the technical and/or Safety Standards required in the UK.
2. The appliance should be returned together with this guarantee and proof of date of purchase promptly on being found defective at the purchaser's risk and expense to the authorised dealer from whom the appliance was purchased or to the nearest authorised dealer. All enquires must be through such dealers.
3. This guarantee shall not apply to damage caused through fire, accident, lightning, misuse, wear and tear, neglect, incorrect adjustment or repair, to damage caused through installation, adaption, modification or use in an improper manner or inconsistent with the technical and/or safety standards required in the country where this appliance is used, or to damage occurred during transit to or from the purchaser.
4. If at any time during the guarantee period any part or parts of the appliance are replaced with a part or parts not supplied or approved by us or of an objective quality safe and suitable for the appliance, or the appliance has been dismantled or repaired by any person not authorised by us, we shall have the right to terminate this guarantee in whole or in part immediately without further notice.
5. The purchaser's sole and exclusive remedy under this guarantee against us is for the repair or replacement of the appliance or any defective part or parts and no other remedy, including, but not limited to, incidental or consequential damage or loss of whatsoever nature shall be available to the purchaser.
6. This guarantee shall not apply to batteries and any other items of limited natural life.
7. Our decision on all matters relating to complaints shall be final. Any appliance or defective part which has been replaced shall become our property.
8. The guarantee period applicable to this product shall be 12 months.

Please keep these Operating Instructions with your receipt.

### **Panasonic Business Systems U.K.**

---

Receipt No.	Date of Purchase
-------------	------------------

---

Model No. KX-TCD515E	Serial No.
----------------------	------------

---





Hereby, Panasonic Communications Co., Ltd., declares that this Dect Cordless Telephone is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

A copy of the manufacturer's declaration of conformity to the essential requirements of the R&TTE Directive is available at the following web address:

<http://doc.panasonic-tc.de>

**For your future reference**

Serial No.

Date of purchase

---

(found on the bottom of the unit)

Name and address of dealer

---

Attach or keep original receipt to assist with any repair under warranty.

Customer Care Helpline Tel. No. : U.K. 08700 100 076  
R.O.I. 01289 8333

# CE0436

1999/5/EC

This equipment is designed for use on the United Kingdom only.

In the event of problem, you should contact your equipment supplier in the first instance.

Technical specifications are subject to change.

**Sales Department:**

**Panasonic Business Systems U.K.**

Panasonic House, Willoughby Road, Bracknell, Berkshire, RG12 8FP

**Panasonic Communications Co., Ltd.**

1-62, 4-chome, Minoshima, Hakata-ku, Fukuoka 812-8531, Japan



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>