

Panasonic

AAC WMA MP3 CD Player/Receiver
AAC WMA MP3 CD-плеер/ресивер
AAC WMA MP3 CD 플레이어/라디오

Model: **CQ-C7405W**



AAC

WMA


MP3


- Please read these instructions carefully before using this product and keep this manual for future reference.
- Перед началом эксплуатации просим прочитать настоящую инструкцию внимательно и хранить ее на пользование на будущее.
- 본 제품의 바른 사용을 위해, 이 사용설명서를 잘 읽어 주십시오.
잘 보관하시어 필요하실 때마다 읽어주시기 바랍니다.

Safety Information

- Read the operating instructions for the unit and all other components of your car audio system carefully before using the system. They contain instructions about how to use the system in a safe and effective manner. Panasonic assumes no responsibility for any problems resulting from failure to observe the instructions given in this manual.

- This manual uses pictographs to show you how to use the product safely and to alert you to potential dangers resulting from improper connections and operations. The meanings of the pictographs are explained below. It is important that you fully understand the meanings of the pictographs in order to use this manual and the system properly.

 **Warning** This pictograph intends to alert you to the presence of important operating instructions and installation instructions. Failure to heed the instructions may result in severe injury or death.

 **Caution** This pictograph intends to alert you to the presence of important operating instructions and installation instructions. Failure to heed the instructions may result in injury or material damage.

Warning

Observe the following warnings when using this unit.

- ❑ **The driver should neither watch the display nor operate the system while driving.**
Watching the display or operating the system will distract the driver from looking ahead of the vehicle and can cause accidents. Always stop the vehicle in a safe location and use the parking brake before watching the display or operating the system.
- ❑ **Use the proper power supply.**
This product is designed for operation with a negative grounded 12 V DC battery system. Never operate this product with other battery systems, especially a 24 V DC battery system.
- ❑ **Keep batteries and insulation film out of reach of infants.**
Batteries and insulation film can be ingested, so keep them out of the reach of infants. If an infant ingests a battery or insulation film, please seek immediate medical attention.
- ❑ **Protect the Deck Mechanism.**
Do not insert any foreign objects into the slot of this unit.
- ❑ **Do not disassemble or modify the unit.**
Do not disassemble, modify the unit or attempt to repair the product yourself. If the product needs to be repaired, consult your dealer or an authorized Panasonic Service Center.
- ❑ **Do not use the unit when it is out of order.**
If the unit is out of order (no power, no sound) or in an abnormal state (has foreign objects in it, is exposed to water, is smoking, or smells), turn it off immediately and consult your dealer.
- ❑ **The remote control unit should not lie about in the car.**
If the remote control unit lies about, it could fall on the floor while driving, get wedged under the brake pedal, and lead to a traffic accident.
- ❑ **Refer fuse replacement to qualified service personnel.**
When the fuse blows out, eliminate the cause and have it replaced with the fuse prescribed for this unit by a qualified service engineer. Incorrect replacement of the fuse may lead to smoke, fire, and damage to the product.

Observe the following warnings when installing.

- ❑ **Disconnect the lead from the negative (–) battery terminal before installation.**
Wiring and installation with the negative (–) battery terminal connected may cause electrical shock and injury due to a short circuit.
Some cars equipped with the electrical safety system have specific procedures of battery terminal disconnection.
FAILURE TO FOLLOW THE PROCEDURE MAY LEAD TO THE UNINTENDED ACTIVATION OF THE ELECTRICAL SAFETY SYSTEM RESULTING IN DAMAGE TO THE VEHICLE AND PERSONAL INJURY OR DEATH.
- ❑ **Never use safety-related components for installation, grounding, and other such functions.**
Do not use safety-related vehicle components (fuel tank, brake, suspension, steering wheel, pedals, airbag, etc.) for wiring or fixing the product or its accessories.
- ❑ **Installing the product on the air bag cover or in a location where it interferes with airbag operation is prohibited.**
- ❑ **Check for piping, gasoline tank, electric wiring, and other items before installing the product.**
If you need to open a hole in the vehicle chassis to attach or wire the product, first check where the wire harness, gasoline tank, and electric wiring are located. Then open the hole from outside if possible.
- ❑ **Never install the product in a location where it interferes with your field of vision.**
- ❑ **Never have the power cord branched to supply other equipment with power.**
- ❑ **After installation and wiring, you should check the normal operation of other electrical equipment.**
The continuation of their using in abnormal conditions may cause fire, electrical shock or a traffic accident.
- ❑ **In the case of installation to an airbag equipped car, confirm warnings and cautions of the vehicle manufacturer before installation.**
- ❑ **Make sure the leads do not interfere with driving or getting in and out of the vehicle.**
- ❑ **Insulate all exposed wires to prevent short circuiting.**

Caution

Observe the following cautions when using this unit.

- Keep the sound volume at an appropriate level.**
Keep the volume level low enough to be aware of road and traffic conditions while driving.
- Do not insert or allow your hand or fingers to be caught in the unit.**
To prevent injury, do not get your hand or fingers caught in moving parts or in the disc slot. Especially watch out for infants.
- This unit is designed for use exclusively in automobiles.**
- Do not operate the unit for a prolonged period with the engine turned off.**
Operating the audio system for a long period of time with the engine turned off will drain the battery.
- Do not expose the unit to direct sunlight or excessive heat.**
Otherwise these will raise the interior temperature of the unit, and it may lead to smoke, fire, or other damage to the unit.
- Do not use the product where it is exposed to water, moisture, or dust.**
Exposure of the unit to water, moisture, or dust may lead to smoke, fire, or other damage to the unit. Make especially sure that the unit does not get wet in car washes or on rainy days.

Observe the following cautions when installing.

- Refer wiring and installation to qualified service personnel.**
Installation of this unit requires special skills and experience. For maximum safety, have it installed by your dealer. Panasonic is not liable for any problems resulting from your own installation of the unit.
- Follow the instructions to install and wire the product.**
Not following the instructions to properly install and wire the product could cause an accident or fire.
- Take care not to damage the leads.**
When wiring, take care not to damage the leads. Prevent them from getting caught in the vehicle chassis, screws, and moving parts such as seat rails. Do not scratch, pull, bend or twist the leads. Do not run them near heat sources or place heavy objects on them. If leads must be run over sharp metal edges, protect the leads by winding them with vinyl tape or similar protection.
- Use the designated parts and tools for installation.**
Use the supplied or designated parts and appropriate tools to install the product. The use of parts other than those supplied or designated may result in internal damage to the unit. Faulty installation may lead to an accident, a malfunction or fire.
- Do not block the air vent or the cooling plate of the unit.**
Blocking these parts will cause the interior of the unit to overheat and will result in fire or other damage.

- Do not install the product where it is exposed to strong vibrations or is unstable.**
Avoid slanted or strongly curved surfaces for installation. If the installation is not stable, the unit may fall down while driving and this can lead to an accident or injury.
- Installation Angle**
The product should be installed in a horizontal position with the front end up at a convenient angle, but not more than 30°.
The user should bear in mind that in some areas there may be restrictions on how and where this unit must be installed. Consult your dealer for further details.
- Wear gloves for safety. Make sure that wiring is completed before installation.**
- To prevent damage to the unit, do not connect the power connector until the whole wiring is completed.**
- Do not connect more than one speaker to one set of speaker leads. (except for connecting to a tweeter)**

Observe the following cautions when handling the battery for the remote control unit.

- Use only specified battery (CR2025).
- Match the polarity of the battery with the (+) and (-) marks in the battery case.
- Replace dead battery as soon as possible.
- Remove the battery from the remote control unit when not using it for an extended period of time.
- Insulate the battery (by placing them in a plastic bag or covering them with vinyl tape) before disposal or storage.
- Dispose of the battery according to the local regulations.
- Do not disassemble, recharge, heat or short the battery. Do not throw a battery into a fire or water.

In case of battery leakage

- Thoroughly wipe the battery liquid off the battery case and insert new battery.
- If any part of your body or clothing comes into contact with battery liquid, wash it with plenty of water.
- If battery liquid comes into contact with your eyes, wash them with plenty of water and get immediate medical attention.

Caution

**THIS PRODUCT IS A CLASS I LASER PRODUCT.
USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE
OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN
MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.
DO NOT OPEN COVERS AND DO NOT REPAIR BY YOURSELF.
REFER SERVICING TO QUALIFIED PERSONNEL.**

Before Reading These Instructions

Panasonic welcomes you to our constantly growing family of electronic products owners. We endeavor to give you the advantages of precise electronic and mechanical engineering, manufactured with carefully selected components, and assembled by people who are proud of the reputation their work has built for our company. We know this product will bring you many hours of enjoyment, and after you discover the quality, value and reliability we have built into it, you too will be proud to be a member of our family.

 
The instruction manual consists of 2 books. One is "Operating Instructions" describing the operations of the main unit. The other is "System Upgrade Guidebook" describing the optional devices such as CD changer.

Before Reading These Instructions (continued)



Operating Instructions

(YFM284C664CA)



System Upgrade Guidebook

(YFM284C665CA)



Installation Instructions

(YFM294C092CA)

Instruction kit


Q'ty: 1 set



Remote Control Unit
(including a battery)
(CR2025)

(EUR7641010)

 
Q'ty: 1



Power Connector

(YGAJ021011)


Q'ty: 1

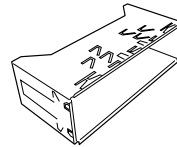

Mounting Collar

(FX0214C384ZB)

 
Q'ty: 1



Trim Plate

(YEFC051013)

 Q'ty: 1



Lock Cancel Plate



Mounting Bolt

(5 mmø)



Tapping Screw

(5 mmø x 16 mm)



Hex. Nut

(5 mmø)

(YEP0FZ5739)

Q'ty: 1 set



Rear Support Strap

(YFG044C002ZA)

Q'ty: 1



Removable Face Plate Case

(YFC054C089CA)

Q'ty: 1

Notes:

- The number in parenthesis underneath each accessory part name is the part number for maintenance and service.
- Accessories and their parts numbers are subject to modification without prior notice due to improvements.
- Mounting Collar and Trim Plate are mounted on the main unit at shipment.

Features

Compatible with the AAC format

This unit has newly become compatible with AAC-formatted files in addition to the existing MP3 and WMA files.

Note: Some of AAC files (such as SD-Jukebox type) are not playable.

Hands-Free Phone System

Connection of the optional Hands-Free Phone System (Hands-Free Kit featuring *Bluetooth*[®] technology: CY-BT100N) allows users to talk on a handsfree cellular phone if the phone supports Bluetooth.

Note: This unit is designed **only for receiving calls**. It cannot send calls.

Bluetooth[®]

The Bluetooth word mark and logo are owned by the Bluetooth SIG, Inc. and any use of such marks by Matsushita Electric Industrial Co., Ltd. is under license. Other trademarks and trade name are those of their respective owners.

Expansion Module (hub unit)

Connection of the Expansion Module (hub unit, CY-EM100N) allows users to connect up to 4 optional devices shown below.

Note: A hub unit is not required to connect only one optional component.

Wide array of components for system upgrade

Various optional components allow users to obtain availability of wide range of system upgrade. Upgrading the system delivers relaxed AV space in a car. For further information, refer to the separate **System Upgrade Guidebook**.

- **DVD Changer**
The optional adapter (Conversion Cable for DVD/CD Changer: CA-CC30N) allows you to connect the optional Panasonic DVD changer unit (CX-DH801W).
- **CD Changer**
The optional adapter (Conversion Cable for DVD/CD Changer: CA-CC30N) allows you to connect the optional Panasonic CD changer unit (CX-DP880).
- **iPod[®]**
The optional adapter (Direct Cable for iPod: CA-DC300N) allows you to connect the optional iPod series.
iPod is a trademark of Apple Computer, Inc., registered in the U.S. and other countries.

Sound Control

SQ (Sound Quality)

You have six preset modes (FLAT, ROCK, POP, VOCAL, JAZZ, CLUB). You can customize your settings for these and save them for instant recall.

SQ7

This is 7-band equalizer with 60, 160, 400, 1 k, 3 k, 6 k, and 16 kHz. Each band is adjustable between -12 dB and 12 dB in steps of 2 dB.

D-M

You can assign your favorite broadcasting station to the **[D-M]** button. As the result of doing that, your favorite broadcasting station can be received even if the unit is in the CD mode or other modes. (⇒ page 18)

Customize

Initially stored moving images and still images are editable to taste. IMAGE STUDIO* allows you to process images from a digital camera or other devices without difficulty. (⇒ page 30)

* This software is downloadable from Panasonic Web site (<http://panasonic.co.jp/pas/en/software/customize/index.html>)



Contents

| | |
|----------------|----------|
| English | 2 |
| Русский | 38 |
| 한국어 | 74 |

Common

| | |
|--|-----------|
| ● Safety Information | 2 |
| ● Before Reading These Instructions | 4 |
| ● Features | 6 |
| ● Controls Layout | 8 |
| ● Preparation (Clock adjustment etc.) | 10 |
| ● General | 12 |
| ● Sound Control | 16 |

Each Source

| | |
|-----------------------------|-----------|
| ● Radio | 18 |
| ● CD Player | 20 |
| ● MP3/WMA/AAC Player | 22 |


As Needed

| | |
|--|-----------|
| ● Audio Setting | 26 |
| ● Function Setting (Security Function Setting etc.) | 27 |
| ● Display Setting | 28 |
| ● Customize the Display (Customize Function) | 30 |
| ● Troubleshooting | 32 |
| ● Error Display Messages | 35 |
| ● Notes on Discs | 36 |
| ● Maintenance/Fuse | 36 |
| ● Specifications | 37 |


Controls Layout

Note: This instruction manual explains operations for use with the buttons on the main unit. (Different operations excluded)

Main Unit

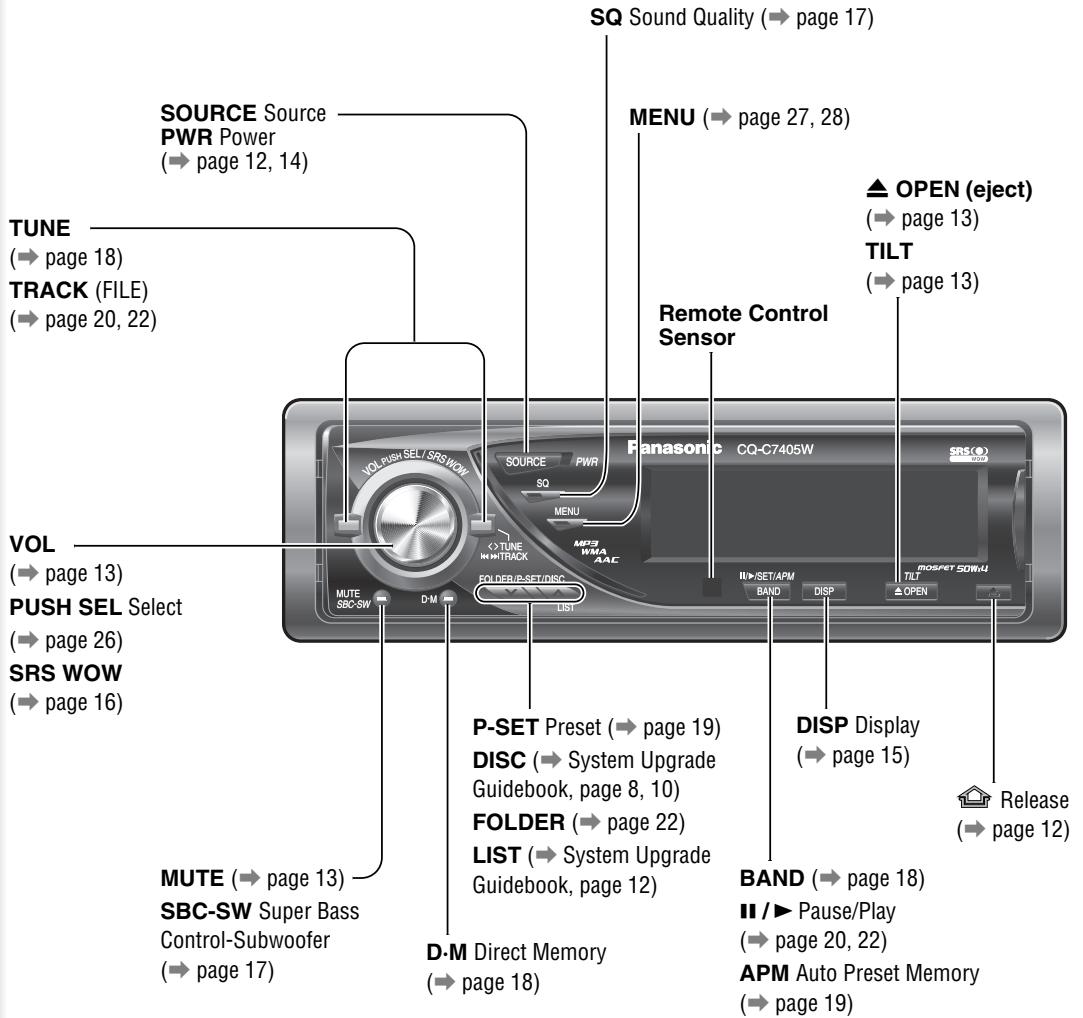

When Face Plate Opens

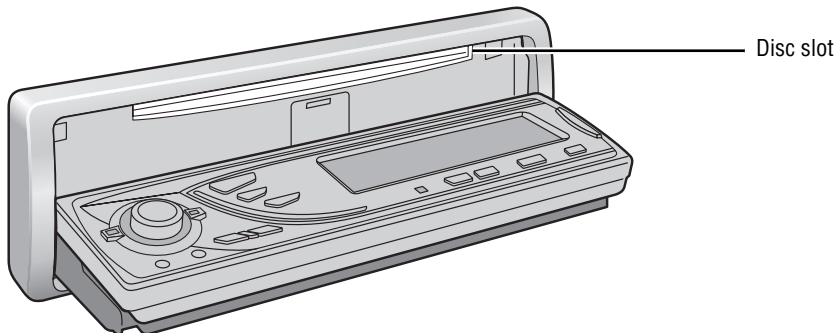

Number Buttons

0 — 9 > 0 to 9

NUMBER

RANDOM 4

SCAN 5


REPEAT 6

7 9 >

TUNE TRACK (FILE)

8 0

P-SET (Preset)
DISC (FOLDER)

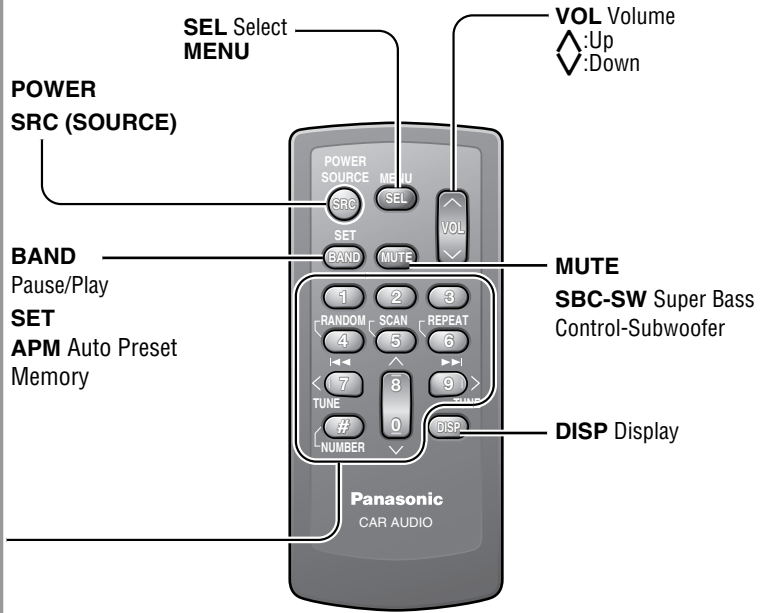

Although most of the functions of this unit are executable with both the main unit and remote control, the following functions are excluded.

Operations executable only with main unit

- Face panel's opening, closing, tilting, and removal actions (⇒ page 13)
- Disc ejection (⇒ page 13)
- SRS WOW on, off, and adjustment (⇒ page 16)
- SQ on, off, and adjustment (⇒ page 17)
- Direct memory setting and calling (⇒ page 18)

Operations executable only with remote control

- Preset station calling with one-touch operation (⇒ page 19)
- Direct access to tracks on CDs (⇒ page 21, 23)
- Random and repeat play with one-touch operation (⇒ page 21, 23)
- Scan playback (⇒ page 21, 23)

Preparation

Cancellation of demonstration screen

For the first use, the following screen may appear repeatedly.

- 1 Set your car's ignition switch to the ACC or On position.

The demonstration screen appears.



- 2 Press [SOURCE] (PWR: POWER).

- 3 Press [MENU] to display the menu display.

For using the remote control, hold down [SEL] (MENU) for 2 sec. or more.

- 4 Press [<] or [>] to display the DISPLAY menu.

- 5 Turn [VOL] to select "DEMONSTRATION".

For using the remote control, use [V] or [^].



- 6 Press [PUSH SEL] to select "OFF".

For using the remote control, use [BAND] (SET).


- 7 Press [MENU] to close the menu screen.

For using the remote control, hold down [SEL] (MENU) for 2 sec. or more.

Note: This unit is operable as usual even if the demonstration screen is activated. The demonstration screen automatically appears if no operation is executed for 1 minute.

Preparation Before Initial Use

Pull the insulation film out from the backside of remote control gently.

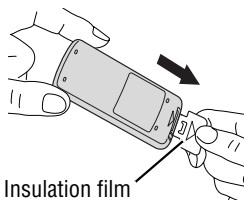


Battery Replacement


- 1 Remove the battery holder with the remote control unit placed on a flat surface.

- 1 Stick your thumbnail into the groove, and push the holder in the direction of the arrow, and at the same time.

- 2 Pull it out in the direction of the arrow using a tough pointed object.

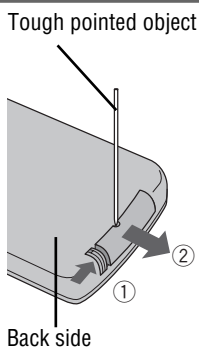

- 2 Put a battery in the case with (+) side facing up.
- 3 Put the case back.

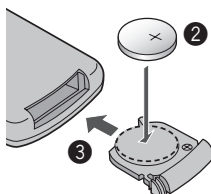

Warning

Keep batteries and insulation film out of reach of infants. If an infant ingests a battery, please seek immediate medical attention.

Cautions

- Remove and dispose of an old battery immediately.
- Do not disassemble, heat or short a battery. Do not throw a battery into a fire or water.
- Follow local regulations when disposing of a battery.
- Improper use of a battery may cause overheating, an explosion or ignition, resulting in injury or a fire.

Note: Battery Information:


Battery Type: Panasonic lithium battery (CR2025)
(Included in the remote control)

Battery Life: Approximately 6 months under normal use
(at room temperature)

Remote Control Preparation

The following functions are activated when the Security Function is ON. (→ page 27)

- The security indicator lights up when removing the face plate.

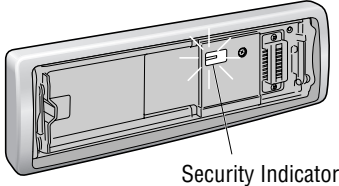

- The alarm sounds and the message appears on the screen to warn you to remove the face plate at ACC off.



You may need to set the following depending on the devices to be connected.

Using Subwoofer

- Subwoofer level adjustment (→ page 26)
- Subwoofer low pass filter (→ page 26)

Note: Adjust the clock when “ADJUST” appears on the display.

- 1 Press **[MENU]** to display the menu display.
For using the remote control, hold down **[SEL] (MENU)** for 2 sec. or more.
- 2 Press **[<]** or **[>]** to display the DISPLAY menu.
- 3 Turn **[VOL]** to select “CLOCK ADJ”.
For using the remote control, use **[V]** or **[^]**.
- 4 Press **[PUSH SEL]**, and the clock adjustment screen appears.
For using the remote control, use **[BAND] (SET)**.

5 Adjust the setting value.



[>]: Adjusting minutes

[<]: Adjusting hours

① : Forward

② : Backward



- 6 Press **[PUSH SEL]**, and the menu screen resumes.

For using the remote control, use **[BAND] (SET)**.

- 7 Press **[MENU]** to close the menu screen.
For using the remote control, hold down **[SEL] (MENU)** for 2 sec. or more.

This chapter explains how to turn on or off the power, how to adjust the volume, etc.

Power On/off (PWR: POWER)

Power on

Press [**SOURCE**] (**PWR: POWER**).




Power off

Hold down [**SOURCE**] (**PWR: POWER**) until you hear a beep, then release it.

You can remove the face plate to prevent it from being stolen.



Removing


- 1 Turn off the power (→ page 12)
- 2 Press [(The face plate disengages with a click when it is removed.)



The face plate automatically closes after a lapse of 5 seconds while it is open.


The power is automatically turned off while the unit is active.

- 3 Put the face plate in the case.

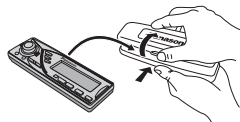

Mounting

- 1 Slide the left side of the face plate in place.
- 2 Press the right end of the face plate until “click” is heard.

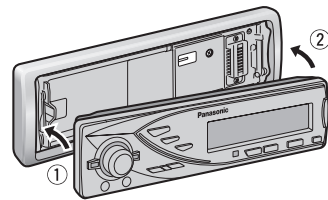



⚠ Cautions

- It is recommended to remove or mount the face plate when the plate is at the closed position. Do not remove or mount the face plate when the plate is in motion.
- This face plate is not waterproof. Do not expose it to water or excessive moisture.
- Do not remove the face plate while driving your car.
- Do not place the face plate on the dashboard or nearby areas where the temperature rises to high levels.
- Do not touch the contacts on the face plate or on the main unit, since this may result in poor electrical contacts.
- If dirt or other foreign substances get on the contacts, wipe them off with clean and dry cloth.
- To avoid damaging the face plate, do not push it down or place objects on it while it is open.

Face Plate Removing/Mounting (ANTI-THEFT SYSTEM)

Open/Eject

Press [**▲ OPEN**].
When a disc is already loaded, the disc will automatically be ejected.

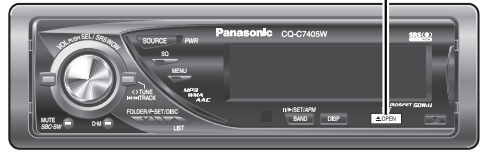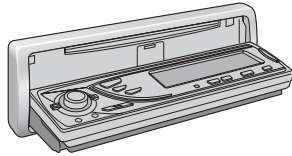

⚠ Cautions


- To avoid damaging the face plate, do not push it down or place objects on it while it is open.
- Do not pinch your finger or hand in the face plate.
- Do not insert foreign objects into the disc slots.
- For the following cases, the face plate automatically closes. Use caution not to catch your finger.
 - After a lapse of 20 seconds
 - When a disc is inserted
 - When the face plate is removed (→ page 12)
 - When ACC is set to off

Close


Press [**▲ OPEN**].

Tilt

The display angle changes among 4 levels as follows every time you hold down [**▲ OPEN**] (TILT) for 1 sec. or more and release.


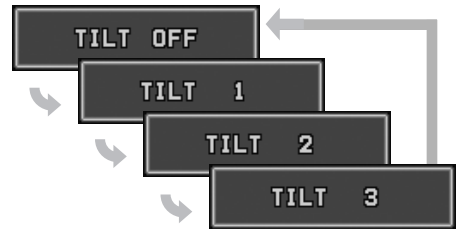


Note: The last selected angle is memorized even after turning off the power.

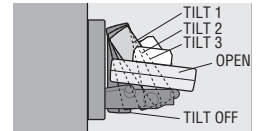

- ① Up
- ② Down

  Setting Range: 0 to 40
Default: 13



Notes:

- The volume level can be set independently for each source. (For radio, one volume setting for AM, one volume setting for all FMs)
- The volume is not adjustable while an error or the menu screen is present on the monitor.
- This unit memorizes individual volume levels for each source. Make volume adjustments of each source appropriately to prevent large volume fluctuation when the source is changed.

Volume off (down)

Press [**MUTE**].



Cancel

Press [**MUTE**] again.

Note: Volume-down range can be specified.
(→ page 27)



The source changes as follows every time [SOURCE] is pressed.



Radio

FM1, FM2, FM3, AM (→ page 18)



Player

When loading CD (→ page 20)



When loading a disc containing compressed audio files (→ page 22)



AUX 1

Device connected to the AUX terminal of the this unit



System-up Connector

Device connected to the System-up Connector of this unit

When optional devices are connected:

Shift to connected devices

When an expansion module is connected:

The devices connected to the ports 1 to 4 are activated in sequence after shifting to AUX2 (devices connected to the AUX terminal of the expansion module).

When connecting DVD Changer



When connecting CD Changer



When connecting iPod



When connecting Expansion Module



Note: For information about connectable devices, refer to the **System Upgrade Guidebook** or the instruction manual for each device.

The display changes as follows every time [DISP] (DISPLAY) is pressed.

Note: The graphic pattern and still image are selectable. (→ page 29)

At power-on:



Folder hierarchy (Compressed Audio Player mode only)




 
Ordinary display + graphic pattern



Only graphic pattern



Note: The graphic equalizer of 19 bands (S.A.) is selectable when selecting a graphic pattern.

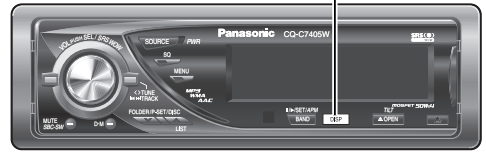

Display OFF
All displays disappear in 5 seconds.



Ordinary display + clock



Only still image




Ordinary display + still image



At power-off:

Clock display (default)

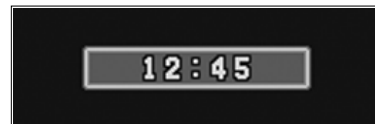

Off



Sound Control

SRS and SQ that provide users with simple adjustment of sound quality are described on this page. Audio Setting (→ page 26) allows users to adjust each speaker and the optional subwoofer in more detail (regarding BASS, TREBLE, BALANCE, FADER, SUB.W, LPF, HPF, REAR).


SRS WOW

SRS WOW™ is 3-D sound technology based on the HRTF (Head Related Transfer Function) theory. Unlike conventional audio systems, “natural 3-D sound field”, “rich bass”, and “crisp and clear sound” can be obtained at the same time in a wide area in front of speakers.

Holding down **[VOL] (SRS WOW)** for 2 sec. or more toggles SRS WOW on and off.

Note: If you enable SRS WOW, the following functions are automatically disabled:



SQ, BASS/TREBLE, BALANCE/FADER, HPF, SBC-SW

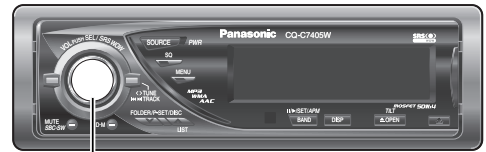

Lights when SRS WOW is activated.

You can make a fine adjustment to SRS WOW.

- 1 Set the SRS WOW mode to on.
- 2 Hold down **[SQ]** for 2 sec. or more to display “WOW MENU”.

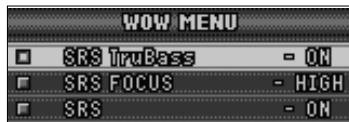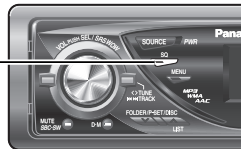


- 3 Turn **[VOL]** to select a function to be adjusted.

For using the remote control, use **[^]** or **[v]**.

- 4 Press **[PUSH SEL]** to adjust.

For using the remote control, use **[BAND] (SET)**.

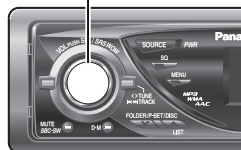

- 5 Press **[DISP:DISPLAY]** to close the menu screen.

SRS TruBass®

ON : Deep bass enhancement by application of the bass reproduction technique of a pipe organ (default)

OFF : No enhancement

SRS FOCUS®

Sound image movement in a vertical direction to make sound crisp

HIGH : high (default)

LOW : low

OFF : off

SRS®

ON : Surround function on (default)

OFF : Surround function off



is a trademark of SRS Labs, Inc.

WOW technology is incorporated under license from SRS Labs, Inc..

SRS WOW Setting (SRS WOW Menu Display)


The equalizer curve is selectable from among preset 6 types (FLAT, ROCK, POP, VOCAL, JAZZ, and CLUB) depending on your listening category.

Note: SQ is not changeable when SRS WOW is enabled. (→ page 16)

SQ changeover

The SQ category is changed every time **[SQ]** (SOUND QUALITY) is pressed.

Note: Setting of SQ, bass/treble and volume are influenced one another. If the influence mentioned above causes distortion to the audio signal, readjust bass/treble or volume. (→ page 26)

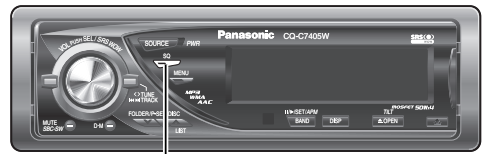

Lights when SQ is activated.

SQ is adjustable in accordance with your taste.

1 Hold down **[SQ]** (SOUND QUALITY) for 2 sec. or more to display "SOUND QUALITY MENU" when SRS WOW is disabled.

2 Press **[PUSH SEL]**.

The targeted SQ preset appears.

For using the remote control, use **[BAND]** (**SET**).


3 Adjust each band.

Band: 60, 160, 400, 1 k, 3 k, 6 k, 16 k (Hz)



[<] **[>]**: Band selection

① ②: Level up/down

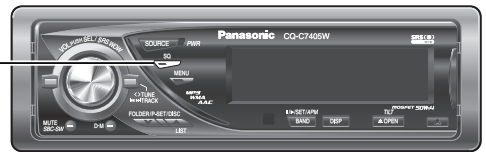

"USER" appears in the category name after adjustment.

Note: If **[PUSH SEL]** is held down for 2 sec. or more on the "SQ ADJUSTMENT" display, the preset data that is called up can be turned into the default.

4 Press **[PUSH SEL]**.

The screen of Step 1 appears again.

For using the remote control, use **[BAND]** (**SET**).

5 Press **[DISP:DISPLAY]**.

The regular screen appears again.

The rear speaker can be used as a substitutional subwoofer when a subwoofer is not connected.

Holding down **[SBC-SW]** for 2 sec. or more toggles SBC-SW on and off.

Off (default)



On



Lights when SBC-SW is activated.

Notes:

- If ON is selected, the settings of subwoofer level adjustment and subwoofer low pass filter are activated. (→ page 26)
- SBC-SW is not changeable when SRS WOW is enabled. (→ page 16)

Radio

This chapter explains how to listen to the radio.

Operation Flow

1 Press **[SOURCE]** to select the radio mode.

2 Press **[BAND]** to select a band.




3 Select a station.

Frequency adjustment

[<] (TUNE): Lower

[>] (TUNE): Higher

Note: Hold down for 0.5 sec. or more and release for station search.

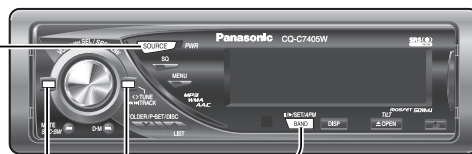

Preset station selection

[V] (P-SET: Preset): Lower preset number

[^] (P-SET: Preset): Higher preset number


Notes:

- Direct selection can be executed with [1] to [6] buttons on remote control.
- A preset station is selectable by turning [VOL] while the preset list screen is present on the monitor.
- The volume is not adjustable while the preset list screen is present on the monitor.

Radio Mode Display

Band

Frequency

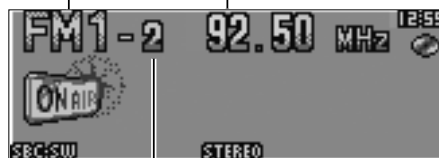

Preset Number

Lights while receiving an FM stereo signal.

Direct Memory

You can assign your favorite broadcasting station to the **[D-M]** button. As the result of doing that, your favorite broadcasting station can be received even if the unit is in the CD mode or other modes. (Default: FM 87.50 MHz)


Note: For the use of an FM transmitter, it is useful for users to register applicable frequencies on D-M (DIRECT MEMORY).

D-M station Calling

Press **[D-M]** (DIRECT MEMORY).

D-M station Setting

- 1 Select a station you would like to preset.
- 2 Hold down **[D-M]** (DIRECT MEMORY) for 2 sec. or more.

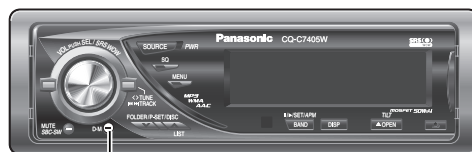

Note: If the unit is turned off during receiving a broadcasting station via D-M, the unit starts again receiving the broadcasting station via D-M by turning on the unit.

Up to 6 stations can be preset in AM, FM1, FM2, and FM3 respectively.

Preset stations can be simply called up by pressing [**^**] (**P-SET**) or [**V**] (**P-SET**).


Notes:

- Direct selection can be executed with [**1**] to [**6**] buttons on remote control.
- You can switch between 6 and 18 for FM presetting stations. (EACH BAND/ALL BAND)
- Preset stations are changeable. (Preset Swap)

Auto Preset Memory (APM)

Stations with good receiving conditions automatically preset.

- 1 Select a band.
- 2 Hold down [**BAND**] (**APM**) for 2 sec. or more.

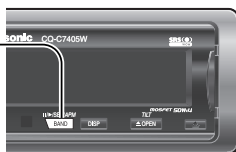

The preset stations under best receiving conditions are received for 5 sec. each after presetting the stations (SCAN). To stop scanning, press [**^**] or [**V**].

Note: New stations overwrite existing saved stations.


Manual station preset

- 1 Tune in to a station.
- 2 Hold down [**^**] or [**V**] for 2 sec. or more.
- 3 Turn [**VOL**] to select a preset number.
- 4 Hold down [**PUSH SEL**] for 2 sec. or more, and the frequency is stored at the selected preset number.


Notes:

- In step 2, a station can be registered by holding down the numeric button [**1**] to [**6**] for 2 sec. or more.
- To stop presetting stations, press [**DISP**] (DISPLAY).
- The operation above allows users to replace the current station with the station preset in the selected number while selecting a preset station. (Preset Swap)

- 1 Press [**MENU**] to display the menu display.
For using the remote control, hold down [**SEL**] (**MENU**) for 2 sec. or more.

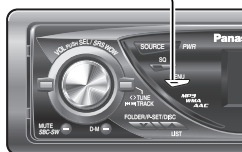

- 2 Press [**PUSH SEL**] to adjust.
For using the remote control, use [**BAND**] (**SET**).

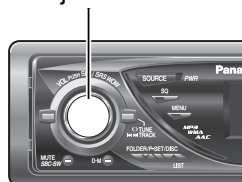

- 3 Press [**MENU**] to close the menu screen.
For using the remote control, hold down [**SEL**] (**MENU**) for 2 sec. or more.

PRESET

Preset range for FM bands

EACH BAND: Individual setting for FM1-3 each (default)

ALL BAND: Setting of FM1-3 together

CD Player

⚠ Cautions

- This unit does not support 8 cm discs.
- Do not use irregularly shaped discs. (➔ page 36)
- Do not use discs that have a seal or label attached.
- To avoid damaging the face plate, do not push it down or place objects on it while it is open.
- Do not pinch your finger or hand in the face plate when the face plate is in motion.
- Do not insert foreign matter into the disc slots.
- Refer to the section on "Notes on CD/CD Media (CD-ROM, CD-R, CD-RW)" (➔ page 36).
- This unit does not support a MIX mode CD (a CD containing both CD-DA and compressed audio data). In case of using such a CD, problems may occur such as anacoustic playback.



When a disc is already loaded, press **[SOURCE]** to select the CD mode.

1 Press **[▲ OPEN]** to open the face plate.

When a disc is already loaded (💡 lights), the disc will automatically be ejected.

2 Load a disc with the printed side facing up.

The face plate closes automatically, and the unit recognizes the disc and starts playing automatically, too.

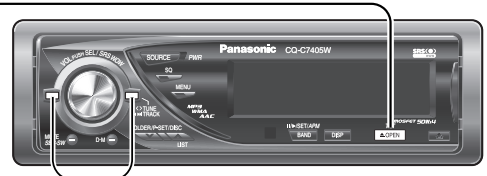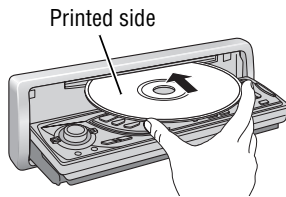

3 Select a desired portion.

Track selection

[▶▶] (TRACK): Next track

[◀◀] (TRACK): Preceding track (press twice)

Note: Hold down for fast forward/reverse.

Pause

Press **[BAND]** (||▶).

Press again to cancel.

4 Press **[▲ OPEN]** to eject the disc.

Note: The panel automatically closes after 20 seconds.

Operation Flow

CD Mode Display

Track number

Time



CD-TEXT display

Notes:

- For scrolling text, hold down **[DISP: DISPLAY]** for 2 sec. or more.
- "NO TEXT" is displayed when there is no information on the disc.

Play Mode indicators

Lights when each mode is activated.


RANDOM
REPEAT
SCAN

Lights when the disc is loaded.

Random and Repeat play can be set.


- 1 Press **[MENU]** to display the menu display.

For using the remote control, hold down **[SEL] (MENU)** for 2 sec. or more.

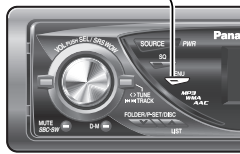

- 2 Turn **[VOL]** to select a function to be adjusted.

For using the remote control, use **[^]** or **[v]**.

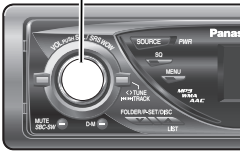

- 3 Press **[PUSH SEL]** to adjust.

For using the remote control, use **[BAND] (SET)**.

- 4 Press **[MENU]** to close the menu screen.

For using the remote control, hold down **[SEL] (MENU)** for 2 sec. or more.



RANDOM

OFF: Off (default)

ON: Random playback

REPEAT

OFF: Off (default)

ON: Playing the current track repeatedly

TEXT (CD-TEXT)

ON: Enabled (default)

OFF: Disabled

Play Mode Selection

One-touch operation is available for selecting a track playing style by use of **[RANDOM]** or **[REPEAT]**.

RANDOM

Press **[RANDOM]**.

Press again to cancel.

REPEAT

Press **[REPEAT]**.

Press again to cancel.

SCAN play

You can find your favorite track by playing first 10 sec. of each track.

Press **[SCAN]**.

Press again to cancel.

Direct Access

A track can be directly selected.

Example: track number 5

1 Press **[#] (NUMBER)**.

2 Press **[5]**.

3 Press **[SET]**.

Note: To suspend direct selection, press **[DISP] (DISPLAY)**.



MP3/WMA/AAC Player

This unit can play MP3, WMA, and AAC files.

Operation Flow



When a disc is already loaded, press **[SOURCE]** to select the compressed audio mode.

1 Press **[▲ OPEN]** to open the face plate.

When a disc is already loaded (● lights), the disc will automatically be ejected.

2 Load a disc with the printed side facing up

The face plate closes automatically, and the unit recognizes the disc and starts playing automatically, too. (It may take several minutes to start for a disc that has a lot of files.)

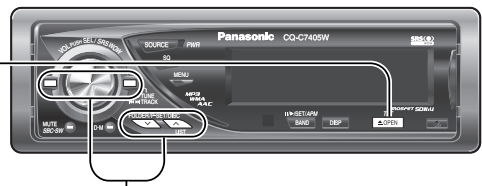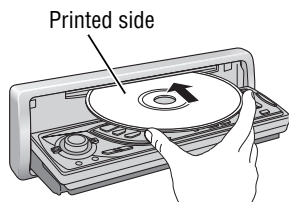

3 Select a desired portion.

Folder selection

[^] (FOLDER): Next folder

[v] (FOLDER): Preceding folder

File selection

[▶▶] (TRACK): Next file

[◀◀] (TRACK): Preceding file (press twice)

Note: Hold down for fast forward/reverse.

Pause


Press **[BAND]** (|| / ▶).

Press again to cancel.

4 Press **[▲ OPEN]** to eject the disc.

Note: The panel automatically closes after 20 seconds.

Compressed Audio Player Mode Display

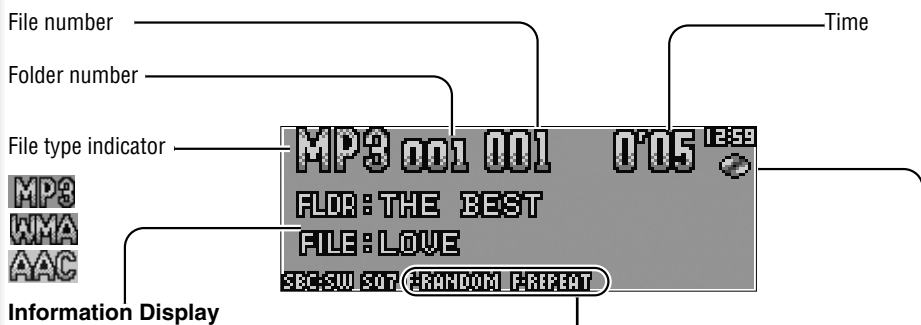

Notes:

- For scrolling text, hold down **[DISP: DISPLAY]** for 2 sec. or more.
- "NO TEXT" is displayed when there is no information on the disc.

Play Mode indicators

Lights when each mode is activated.

RANDOM

REPEAT

SCAN

F-RANDOM (Folder Random)

F-REPEAT (Folder Repeat)

F-SCAN (Folder Scan)


Notes:

- Refer to the pages 24 and 25 for cautions.
- This unit does not support a MIX mode CD (a CD containing both CD-DA and compressed audio files). In case of using such a CD, problems may occur such as anacoustic playback.

Random and Repeat play can be set.


- 1 Press **[MENU]** to display the menu display.

For using the remote control, hold down **[SEL] (MENU)** for 2 sec. or more.

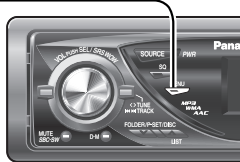

- 2 Turn **[VOL]** to select a function to be adjusted.

For using the remote control, use **[^]** or **[v]**.

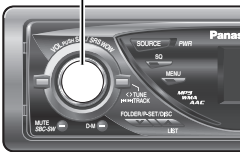

- 3 Press **[PUSH SEL]** to adjust.

For using the remote control, use **[BAND] (SET)**.

- 4 Press **[MENU]** to close the menu screen.

For using the remote control, hold down **[SEL] (MENU)** for 2 sec. or more.

**RANDOM**

OFF: Off (default)

ON: Random playback (disc)

FOLDER RANDOM

OFF: Off (default)

ON: Random playback (folder)

REPEAT

OFF: Off (default)

ON: Playing the current file repeatedly

FOLDER REPEAT

OFF: Off (default)

ON: Playing the current folder repeatedly.

TEXT

FOLDER/FILE: Folder name/File name (default)

ALBUM/TITLE: Album/Title/Artist (tag information)

OFF: No display

RE-MASTER

The high-range signal lost through MP3/WMA/AAC compression is reproduced to more closely recreate the pre-compressed sound.

Notes:

- At high bit rates, the Re-master function may have little effect.
- The Re-master function is only effective for playback of MP3/WMA/AAC data.

ON: Digital sound enhancer activated (default)

OFF: Digital sound enhancer inactivated

Random, Repeat Play (Compressed Audio Player Menu Display) (RANDOM, REPEAT)**Play Mode Selection**

One-touch operation is available for selecting a file playing style by use of **[RANDOM]** or **[REPEAT]**.

RANDOM, REPEAT

Press the button. Press again to cancel.

FOLDER RANDOM, FOLDER REPEAT

Hold down the button for 2 sec. or more. Hold down again to cancel.

SCAN play

You can find your favorite file by playing first 10 sec. of each file.

SCAN (All files)

Press **[SCAN]**. Press again to cancel.

FOLDER SCAN (1st file in each folder)

Hold down **[SCAN]** for 2 sec. or more. Hold down again to cancel.

Direct Access

A file in the current folder can be directly selected.

Example: file number 5

- 1 Press **[#] (NUMBER)**.
- 2 Press **[5]**.
- 3 Press **[SET]**.

**Notes:**

- For folder selection, enter a number after pressing **[#] (NUMBER)** twice.
- To suspend direct selection, press **[DISP] (DISPLAY)**.

Functions Only by Remote Control Unit

MP3/WMA/AAC Player (continued)

Cautions as to compressed audio files

Each of MP3 (MPEG Audio Layer-3), WMA (Windows Media™ Audio), and AAC (Advanced Audio Coding) is a format for compressed audio file. These formats allow users to save all the files contained in approximately 10 pieces of existing CDs on one piece of CD-R/RW.

Note: Each of encoding software is not included with this unit.

Setting at file making

Common

- High bit rate and high sampling frequency are recommended for high quality sounds.
- Selecting VBR (Variable Bit Rate) is not recommended because playing time is not displayed properly and sound may be skipped.
- The playback sound quality differs depending on the encoding circumstances. For details, refer to the user manual of your own encoding software and writing software.
- Be sure to put an extension compatible with the format.

MP3

- It is recommended to set the bit rate to “128 kbps or more” and “fixed”.

WMA

- It is recommended to set the bit rate to “64 kbps or more” and “fixed”.
- Do not set the copy protect attribute on the WMA file to enable this unit to play back.

AAC

- It is recommended to set the bit rate to “128 kbps or more” and “Stereo”.
- Files with the extension of “.m4a” encoded using iTunes version 6 are playable on this unit. Some of the files using other encoders are not playable.
- Files encoded using Apple Lossless Encoder are not playable.
- Files with copyright protection are not playable.

Compression formats

| Compression method | Bit rate | VBR | Sampling frequency |
|--------------------------------------|-----------------|-----|--|
| MPEG 1 audio layer 3 (MP3) | 32 k – 320 kbps | Yes | 32, 44.1, 48 kHz |
| MPEG 2 audio layer 3 (MP3) | 8 k – 160 kbps | Yes | 16, 22.05, 24 kHz |
| MPEG 2.5 audio layer 3 (MP3) | 8 k – 160 kbps | Yes | 12, 11.205, 8 kHz |
| Windows Media Audio Ver. 2, 7, 8, 9* | 32 k – 192 kbps | Yes | 32, 44.1, 48 kHz |
| MPEG 4 AAC LC | 24 k – 320 kbps | Yes | 8, 11.205, 12, 16, 22.05, 24, 32, 44.1, 48 kHz |

* WMA 9 Professional/LossLess/Voice are not supported.



Caution

Never put an extension indicating compressed audio (such as “.mp3”, “.wma”, and “.m4a”) to files other than compressed audio files. This may not only produce noise from the speaker damage, but also damage your hearing.

Cautions as to the display of this unit

Display Information

- **Common**
Folder name,
File name
- **MP3**
Album name,
Title name/artist name
(ID3 tag)
- **WMA**
Album name,
Title name/artist name
(WMA tag)
- **AAC**
Album name,
Title name/artist name
(AAC tag)

writing software for details.

- ASCII character set and special characters in each language can be displayed.

ASCII character set

A to Z, a to z, digits 0 to 9, and the following symbols:

(space) ! " # \$ % & ' () * + , - . / : ; < = > ? @ [\] ^ _ ` { | } ~

Notes:

- Characters may be garbled depending on encoding software to be used
- Undisplayable characters and symbols will be converted into an asterisk (*).

Displayable characters

- Displayable length of file name/folder name: within 64 characters. (Uncoded file and folder names are reduced by half in the number of displayable characters.)
- Name files and folders in accordance with the standard of each file system. Refer to the instructions of

Compressed audio file writing

- Do not save an audio file (CD-DA file) and a compressed audio file on the same disc. Failure to observe this may result in difficulty in playing.
- If compressed audio files formatted with two or more types are saved on the same disc, each format shall have a different folder.
- Do not write files other than compressed audio files.
- Playability may depend on the combination of writing software and disc writer to be used.
- This unit does not support the play list function.
- Write files in a disc-at-once manner unless otherwise needed.
- You can shorten the duration between data read and playback by decreasing the quantity of files or folders, or the depth of the hierarchy.

Supported file systems


ISO 9660 Level 1/Level 2/Level 3, Joliet, Romeo

Note: Apple HFS, UDF 1.50, Mix CD and CD Extra are not supported.

Folder selection order/file playback order

Maximum number of files/folders

- Maximum number of files: 511 (files + folders)
- Maximum number of files in one folder: 255
- Maximum depth of trees: 8
- Maximum number of folders: 255 (Root folder is included.)

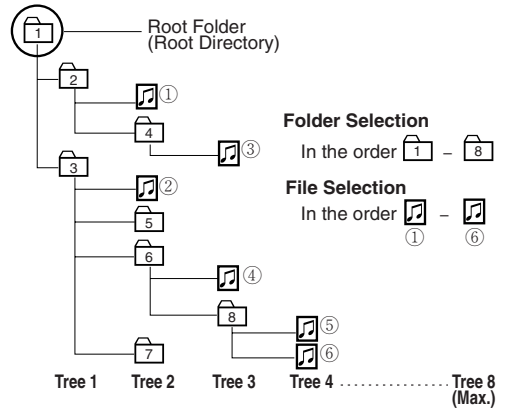

Notes:

- This unit counts the number of folders irrespective of the presence or absence of a compressed audio file.
- If the selected folder does not contain any compressed audio file, the nearest compressed audio file in the order of playback will play.
- Playback order of this unit may be different from that of other compressed audio players even if the same disc is used
- "ROOT" appears when displaying the root folder name.

Copyright

It is prohibited by copyright laws to copy, distribute and deliver copyrighted materials such as music without the approval of copyright holder except enjoying yourself personally.

No warranty

Above description complies with our investigations as of October 2006. It has no warranty for reproducibility and displayability of MP3/WMA/AAC.

iTunes is a trademark of Apple Computer, Inc., registered in the U.S. and other countries/regions.

Windows Media, and the Windows logo are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries/regions.



MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson.

Audio Setting

Adjustment to each speaker and an optional subwoofer

- 1 Press **[PUSH SEL: Select]** to display the AUDIO menu display.




For using the remote control, use **[SEL] (MENU)**.

- 2 Press **[PUSH SEL: Select]** to select a mode to be adjusted.

For using the remote control, use **[SEL] (MENU)**.

- 3 Turn **[VOL]** clockwise or counterclockwise to adjust.

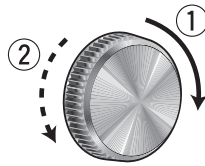

For using the remote control, use **[^]** or **[v]**.

 
Note: Only the VOLUME, SUB.W, LPF, and REAR are adjustable when SRS WOW is enabled. (→ page 16)

VOLUME

Main volume adjustment

(Setting range: 0 to 40, Default: 13)

- ① : Up
- ② : Down




BASS / TREBLE

Bass adjustment

(Setting range: -12 dB to +12 dB, 2 dB Step, Default: Bass 0 dB)

 - ① : Up
- ② : Down




BASS / TREBLE

Treble adjustment

(Setting range: -12 dB to +12 dB, 2 dB Step, Default: Treble 0 dB)

 - ① : Up
- ② : Down



Note: Do not activate SQ and Bass/Treble at same time to avoid causing sound distortion.

BALANCE / FADER

Balance adjustment

(Setting range: L (left) 15 to R (right) 15 and Center, Default: Center)

- ① : Right enhanced
- ② : Left enhanced



BALANCE / FADER

Fader adjustment

(Setting range: R (rear) 15 to F (front) 15 and Center, Default: Center)

- ① : Front enhanced
- ② : Rear enhanced



SUB WOOFER

Subwoofer level adjustment

(Setting range : mute (-∞), -6 dB to +6 dB, 2 dB Step, Default: 0 dB)

- ① : Up
- ② : Down

 


LPF

Low Pass Filter

(Setting range: 80 Hz, 120 Hz, 160 Hz, Default: 80 Hz)

- ① : Up
- ② : Down



Subwoofer output range

Other speakers output ranges

HPF

High Pass Filter

(Setting range: Filter OFF, 90 Hz, 135 Hz, 180 Hz, 225 Hz, Default: Filter OFF)

- ① : Up
- ② : Down



REAR (SRS WOW)

Rear Level Adjustment

(Setting range: 0 to -15, Default: -10)

- ① : Up
- ② : Down




Note: The rear level is adjustable only when SRS WOW is enabled. (→ page 16)

Function Setting


Adjustment to display on the FUNCTION menu

- 1 Press **[MENU]** to display the menu display.

For using the remote control, hold down **[SEL] (MENU)** for 2 sec. or more.

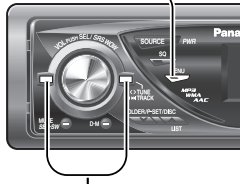


- 2 Press **[<]** or **[>]** to display the FUNCTION menu.

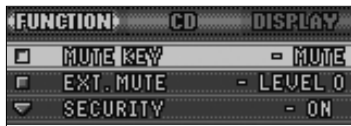

- 3 Turn **[VOL]** to select a function to be adjusted.

For using the remote control, use **[^]** or **[v]**.

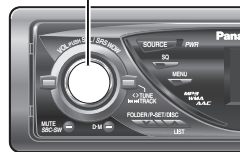

- 4 Press **[PUSH SEL]** to adjust.

For using the remote control, use **[BAND] (SET)**.

- 5 Press **[MENU]** to close the menu screen.

For using the remote control, hold down **[SEL] (MENU)** for 2 sec. or more.

MUTE KEY

Setting **[MUTE]** buttons' functions

- MUTE** : Volume off (default)
- ATT LW 1** : Volume down by 10 steps
- ATT LW 2** : Volume down by 5 steps

EXT. MUTE (External Mute)

Volume adjustment when an interruption such as car navigation signal occurs

- LEVEL 0** : Volume off (default)
- LEVEL 1** : Volume down by 10 steps
- LEVEL 2** : Volume down by 5 steps
- OFF** : No change in volume

(External muting display)



SECURITY

Setting the security function (→ page 11)

- ON** : ON (default)
- OFF** : OFF

BUILT-IN AMP

You can toggle the integrated amplifier on and off.

- ON** : Amplifier on (default)
- OFF** : Amplifier off (when the external amplifier is used)




lights when deactivated.

Display Setting

Adjustment to display on the DISPLAY menu

- 1 Press **[MENU]** to display the menu display.

For using the remote control, hold down **[SEL] (MENU)** for 2 sec. or more.

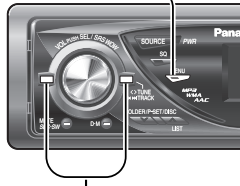

- 2 Press **[<]** or **[>]** to display the DISPLAY menu.



- 3 Turn **[VOL]** to select a function to be adjusted.

For using the remote control, use **[^]** or **[v]**.

- 4 Press **[PUSH SEL]** to adjust.

For using the remote control, use **[BAND] (SET)**.

- 5 Adjust the setting value.

- 6 Press **[PUSH SEL]**.

For using the remote control, use **[BAND] (SET)**.

- 7 Press **[MENU]** to close the menu screen.

For using the remote control, hold down **[SEL] (MENU)** for 2 sec. or more.

DEMONSTRATION

Switching by **[PUSH SEL]**.

- ON:** Demonstration screen at no operation (default)
- OFF:** Regular screen

COLOR

(Setting range: 10 types, default: STORM)

The illumination color changes as follows.

Turn **[VOL]** to make a selection.

STORM: The color varies in conjunction with time.

LEVEL: The peripheral color decoration lights up and goes out according to the bass volume.

FIRE: Red

ORANGE: Amber

SKY: Blue

OCEAN: Aquablue

FOREST: Green

SUN: Yellow

SNOW: White

CUSTOM: You can create your favorite color.



LEVEL ADJ

When LEVEL is setting in COLOR types, you can make a fine adjustment in the LEVEL ADJ display.

[<][>]: Function selection

Turn **[VOL]** to make a selection.: Item selection

Color selection

The illumination color changes.

(Setting range: FIRE, ORANGE, SKY, OCEAN, FOREST, SUN, default: FIRE)

Volume setting according to lighting

(Setting range: LEVEL1, LEVEL2, LEVEL3, default: LEVEL 1)

If the peripheral color decoration keeps lighting because the bass part is contained abundantly, select LEVEL 1, and for the opposite case, select LEVEL 3.



CUSTOM ADJ

When CUSTOM is setting in COLOR types, you can make a fine adjustment in the CUSTOM display.

(Setting range: 0 to 100, default: R50, G50, B50)

You can adjust each color.



[<][>]: RGB selection

Turn [VOL] to make a selection.: Adjustment (0 to 100)

SCREEN

Press [PUSH SEL] to select.

POSITIVE: white background (default)

NEGATIVE: black background

GRAPHIC PATTERN

(Default: All)

Turn [VOL] to make a selection.

All: Sequential display from pattern A to C.

Pattern A-C

S.A.: 19-band display (Spectrum analyzer)



STILL IMAGE

(Default: All)

Turn [VOL] to make a selection.

All: Sequential display from pattern 1 to 10


No.1-10



CONTRAST

(Setting range: 1 to 5, Default: Contrast 3)

Turn [VOL] to make a selection.

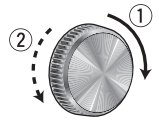

CLOCK ADJ

 
Note: Adjust the clock when "ADJUST" appears on the display.

[>]: Adjusting minutes

[<]: Adjusting hours

①: Forward

②: Backward



Notes:

- The graphic pattern and still image are changeable. (→ page 30)
- If corrupted data is selected, "DISPLAY FILE INCOMPLETE" appears. (→ page 31)

Customize the Display (Customize Function)

You can edit the moving images and still images that are initially stored in the unit. You also can use the data that is downloaded from the Panasonic Web site and the data that is stored with a digital camera or other devices and processed with exclusive software, IMAGE STUDIO. See "Notes on Customize function" (⇒ page 31) as well.


Note: Visit Panasonic Web site (<http://panasonic.co.jp/pas/en/software/customize/index.html>) for details.

Preparation:

Put the CD-R/RW that contains data to be customized in hand.

1 If there is a disc inside, take out the disc.

2 Press **[SOURCE]** to select the CD mode.

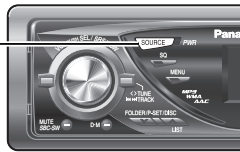

3 Hold down **[PUSH SEL]** for 4 sec. or more to display the menu screen.

CUSTOMIZE MENU

4 Load a CD-R/RW that contains data.

 
Note:

- It may take time for the unit to identify the CD-R/RW.
- Discs recorded by the packet writing software are not supported.

5 Select an item to be customized.



1 2: Select
[PUSH SEL]: Confirm



Note: To exit the customize menu, hold down **[PUSH SEL]** for 4 sec. or more.

GRAPHIC PATTERN

Moving image (graphic pattern) data (⇒ page 29)

STILL IMAGE

Still image data (⇒ page 29)


OPENING MESSAGE

Moving image at power on


CLOSING MESSAGE

Moving image at power off

6 Select a file.

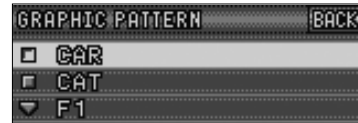

1 2 [<|>]: Select
[PUSH SEL]: Confirm

 


Notes:

- Files are automatically identified by their extensions, and target files are displayed.
- If "**BACK**" is selected, the screen of step 5 appears.

7 For a moving image file or still image file, select where to save the file.



 
1 2 [^][v]: Select
[PUSH SEL]: Confirm




Notes:

- New data overwrites existing data.
- If "**BACK**" is selected, the screen of step 6 appears.

8 Confirm the changed item.

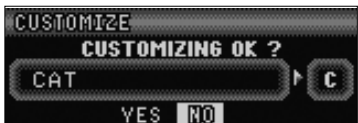

1 2: Select
[PUSH SEL]: Confirm

 

CUSTOMIZING COMPLETE

Customization is performed. Do not turn off the power in mid-operation. (It takes approx. 1 minutes to complete this operation for a 168 kB moving image.) After completion of this operation, the screen of step 5 appears.

Note: If "**NO**" is selected, the screen of step 5 appears.

9 Press **[▲ OPEN]** to eject the disc.

10 Hold down **[PUSH SEL]** for 4 sec. or more.

The CD mode comes back.

Note on Download Service

The download service may be suspended or stopped without advance notice. The download service is not available in some areas. Please visit the site below for further information.

Panasonic Web site: (<http://panasonic.net>)

Notes on IMAGE STUDIO

- This download service is not available in some areas. For details, please access the Panasonic website.
- IMAGE STUDIO is available only by downloading from the address below. It is not bundled with this unit.
- Refer to the downloaded operating manual for how to use IMAGE STUDIO.

Notes on File

- The customize-specific file is downloadable from the URL below. You can create exclusive files stored with a digital camera or other devices by using exclusive software, IMAGE STUDIO that can be accessed from the same URL.
- Do not change the extension. Otherwise, the data cannot be recognized.

At Disc Making

- Save only customize-specific data.
- Save all data in the root directory. Files contained in a folder cannot be recognized.
- Follow the table below with regard to the number of files that are saved to a disc. Files beyond the specified capacity are not readable.
- Discs recorded by the packet writing software are not supported.

| Type | Extension | Max. number |
|-----------------|-----------|-------------|
| GRAPHIC PATTERN | .pfm | 10 |
| STILL IMAGE | .pfs | 15 |
| OPENING MESSAGE | .pfo | 5 |
| CLOSING MESSAGE | .pfe | 5 |

At Customizing

- If customizing is interrupted on account of turning off the power, stopping the engine, removing the face plate or other reasons, you may lose the data. In such a case, try customizing again.
- The default image exists on the Panasonic Web site. If you would like to restore it, download the image from the site.

Download site:

<http://panasonic.co.jp/pas/en/software/customize/index.html>

Error Display Messages

NO FILES DETECTED

No customize-specific data on the disc

- ➔ **Load a disc that contains customize-specific data.**

CUSTOMIZING FAILED

Customize failed

- ➔ **Check to see whether or not the extension is correct and file contents are appropriate.**

DISPLAY FILE INCOMPLETE

Intended moving image or still image is damaged.

- ➔ **Customize it again and overwrite the file with new one.**

Troubleshooting

If You Suspect Something Wrong

Check and take steps as described below.

If the described suggestions do not solve the problem, it is recommended to take the unit to your nearest authorized Panasonic Service Center. The product should be serviced only by qualified personnel. Please refer the checking and the repair to professionals. Panasonic shall not be liable for any accidents arising out of neglect of checking the unit or your own repair after your checking.

Never take measures especially for those other than indicated by *italic* letters in "Possible Solution" described below because those are too dangerous for users to handle themselves.

Warning

- Do not use the unit in an irregular condition, for example, without sound, or with smoke or a foul smell, which can cause ignition or electric shock. Immediately stop using the unit and consult your dealer.
- Never try to repair the unit by yourself because it is dangerous to do so.

| Problem | Possible cause → Possible solution |
|---|--|
| No power to the unit | The power cord (battery, power and ground) is connected in the wrong way. → Check the wiring. |
| | Fuse blows out. → Eliminate the cause of fuse blowout and replace the fuse with new one. Consult your dealer. |
| Sound is not generated. | MUTE is set to ON. → Set MUTE to OFF. |
| | The wiring of speaker lines are not correct, or a break or poor contact arises. → Check the wiring in accordance with the wiring diagram. (Installation Instructions) |
| Noise | There is an electromagnetic-wave generator such as a cellular phone near the unit or its electrical lines. → Keep an electromagnetic-wave generator such as a cellular phone away from the unit and the wiring of the unit. In case that noise cannot be eliminated due to the wiring harness of the car, consult your dealer. |
| | The contact of the ground lead is poor. → Make sure that the ground lead is connected to an unpainted part of the chassis securely. |
| Noise is made in step with engine revolutions. | Alternator noise comes from the car. → Change the wiring position of the ground lead. → Mount a noise filter on the power supply. |

Common

Common (continued)

| Problem | Possible cause → Possible solution |
|--|--|
| Some operations are not executable. | Some operations are not executable in particular modes such as menu mode. → Read the operating instructions carefully and cancel the mode. If the unit is still out of order, consult your dealer. |
| No sound from speaker(s) | BALANCE/FADER setting is not appropriate. → Readjust BALANCE/FADER. There is a break, a short circuit, poor contact or wrong wiring regarding the speaker wiring. → Check the speaker wiring. |
| The speaker channels are reversed between right and left. | The speaker wiring is confused between right and left. → Perform the speaker wiring in accordance with the wiring diagram. |
| The sound field is not clear in the stereo mode. Central sound does not settled. | The plus and minus terminals at right and left channels of speakers are connected reversely. → Perform the speaker wiring in accordance with the wiring diagram. |
| The power fails unintentionally. | The safety device works. → Consult your dealer, or your nearest Panasonic Service Center. |

Radio

| | |
|--|---|
| Poor reception or noise | Antenna installation or wiring of antenna cable is faulty. → Check whether the antenna mounting position and its wiring are correct. In addition, check to see whether the antenna ground is securely connected to the chassis. No power is supplied to the antenna amplifier (when using a film antenna, etc.). → Check the wiring of the antenna battery lead. |
| The number of auto preset stations is less than 6. | The number of receivable stations is less than 6. → Move to an area where receivable stations number is maximum, and try pre-setting. |
| Preset stations cannot be stored. | The contact of the battery lead is poor, or the battery lead is not always powered. → Make sure that the battery lead is connected securely, and preset stations again. |

Troubleshooting (continued)

| | Problem | Possible cause → Possible solution |
|---|---|---|
| CD | No playback or disc ejected | The disc is inserted upside down. → Insert a disc correctly. |
| | | There is a flaw or foreign material on the disc. → Remove the foreign material, or use a flawless disc. |
| | Sound skipping or noise | There is a flaw or foreign material on the disc. → Remove the foreign material, or use a flawless disc. |
| | Sound skipping due to vibration | The unit is not sufficiently secured. → Secure the unit to the console box. |
| The unit is tilted at over 30° in the front-to-end direction. → Make the angle 30° or less. | | |
| Disc unejectable | Something such as a peeled label obstructs the disc coming out. → Press and hold the [▲ OPEN] for more than 2 seconds when the face plate is open (disc forced ejection). In case that the disc forced ejection does not work, consult your dealer. | |
| | The microcontroller in the unit operates abnormally due to noise or other factors. → Unplug the power cord and plug it again. In case the unit is still out of order, consult your dealer. | |
| Compressed audio | No playback or disc ejected | The disc has unplayable formatted data. → Check the file format. |
| | The CD-R/RWs that are playable on other devices are not playable on this unit. | The playability of some CD-R/RWs may depend on the combination of media, recording software and recorder to be used even if these CD-R/RWs are playable on other devices such as a PC. → Make CD-R/RWs in different combination of media, recording software and recorder after referring to the description about the compressed audio player. |
| | Sound skipping or noise | There is a flaw or foreign material on the disc. → Remove the foreign material, or use a flawless disc. |
| | | Playing VBR (Variable Bit Rate) files may cause sound skipping. → Play Non-VBR files. |
| Noise is heard with "RE-MASTER" at "ON" | With some CDs, noise may be heard in the treble range when playing compressed audio files into which the CD tracks were encoded with "RE-MASTER" enabled. → If noise is heard, set "RE-MASTER" to "OFF". | |
| Remote control unit | No response to pressing buttons | The battery is inserted in the wrong direction. A wrong battery is inserted. → Insert a correct battery in the correct direction. |
| | | The battery is weak. → Replace the battery with new one. |
| | | The aiming direction of the remote control unit is wrong. → Aim the remote control unit at the sensor of the unit and press buttons. |
| | | The sensor is exposed to direct sunlight. (The remote control unit may not be operable when the sensor is exposed to direct sunlight. In such a case, the system is not faulty.) → Block off sunlight to the sensor. |

Error Display Messages

| Display | Possible cause → Possible solution |
|--|---|
| <p>CD E1</p> | <p>The disc is dirty, or is upside down. → Check the disc.</p> <p>The disc has scratches. → Check the disc.</p> |
| <p>CD E3</p> | <p>No operation by some cause. → Unplug the power cord and plug it again. In case the unit is still out of order, consult your dealer. (⇒ Installation Instructions)</p> |
| <p>CD E4</p> | <p>The player for some reason cannot read the file you are trying to play. (File recorded in an unsupported file system, compression scheme, data format, file name extension, damaged data, etc.) → Select a file that the player can read. Check the type of data recorded on the disc. Create a new disc if necessary.</p> |
| <p>PROTECTED (After 5 seconds) ↓ To next file automatically</p> | <p>A WMA file can be copyrighted. → The file protected by copyright is not playable.</p> |
| <p>NO DISC</p> | <p>No disc.</p> |

Note: Refer to the **System Upgrade Guidebook** for error messages regarding optional products.

Notes on Discs

Notes on CD/CD Media (CD-ROM, CD-R, CD-RW)

If you use commercial CDs, they must have either of these labels shown at right. Some copy-protected music CDs are not playable.



How to hold the disc

- Do not touch the underside of the disc.
- Do not scratch on the disc.
- Do not bend the disc.
- When not in use, keep the disc in a case.

Do not leave discs in the following places:

- In direct sunlight
- Near car heaters
- Dirty, dusty and damp areas
- On seats and dashboards

Disc cleaning

Use a dry, soft cloth to wipe from the center outward.



<Correct>



<Wrong>

Do not write on the disc label with a ballpoint pen or other hard-point pens.

Printed side



Labels created by a printer,
Protective films or sheets



Irregularly shaped discs



Disc with adhered stickers
or tape



Discs with cracks, scratches
or parts missing

Notes on CD-Rs/RWs

- You may have trouble playing back some CD-R/RW discs recorded on CD recorders (CD-R/RW drives), either due to their recording characteristics or dirt, fingerprints, scratches, etc. on the disc surface.
- CD-R/RW discs are less resistant to high temperatures and high humidity than ordinary music CDs. Leaving them inside a car for extended periods may damage them and make playback impossible.
- Some CD-R/RWs can not be played back successfully thanks to incompatibility among writing software, a CD recorder (CD-R/RW drive) and the discs.
- This player cannot play the CD-R/RW discs if the session is not closed.
- This player cannot play the CD-R/RW discs which contains other than CD-DA or compressed audio data.
- Be sure to observe the instructions of CD-R/RW disc for handling it.

Maintenance/Fuse

Cleaning the Unit

Your product is designed and manufactured to ensure the minimum of maintenance. Use a soft cloth for routine exterior cleaning. Never use benzine, thinner, or other solvents.

Fuse

If the fuse blows out, consult your dealer, or your nearest authorized Panasonic Service Center.

Warning

- Use fuses of the same specified rating (**15 A**). Using substitutes or fuses with higher ratings, or connecting the unit directly without a fuse could cause fire or damage to the unit. **If the replaced fuse fails, contact your nearest authorized Panasonic Service Center.**

Specifications

| | | |
|---------------------------|------------------------------------|---|
| General | Power Supply | DC 12 V (11 V – 16 V), Test Voltage 14.4 V, Negative Ground |
| | Tone Controls (Bass/Treble) | Bass; ± 12 dB at 60 Hz, Treble; ± 12 dB at 16 kHz |
| | Equalizer Center Frequency | 60, 160, 400, 1 k, 3 k, 6 k, 16 k Hz |
| | Variable Range of Equalizer | -12 dB to 12 dB (2 dB step) |
| | Current Consumption | Less than 2.2 A (CD mode, 0.5 W 4-Speaker) |
| | Maximum Power Output | 50 W x 4 (at 1 kHz) |
| | Power Output | 18 W x 4 CH (1 kHz, 1 %, 4 Ω) |
| | Speaker Impedance | 4 – 8 Ω |
| | Pre-amp output voltage | 5 V (CD mode, 1 kHz, 0 dB) |
| | Subwoofer-output voltage | 5 V (CD mode, 1 kHz, 0 dB) |
| | Pre-amp output impedance | 60 Ω |
| | Subwoofer-output impedance | 60 Ω |
| | Dimensions (Main Unit) | 178(W) x 50(H) x 155(D) mm |
| Weight (Main Unit) | 1.6 kg | |
| CD Player | Sampling Frequency | 8 times oversampling |
| | DA Converter | 4 DAC System |
| | Pick-Up Type | Astigma 3-beam |
| | Light Source | Semiconductor laser |
| | Wavelength | 790 nm |
| | Frequency Response | 20 Hz – 20 kHz (± 1 dB) |
| | Signal to Noise Ratio | 96 dB |
| | Total Harmonic Distortion | 0.01 % (1 kHz) |
| | Wow and Flutter | Below measurable limits |
| Channel Separation | 85 dB | |
| Radio | FM | |
| | Frequency Range | 87.50 MHz – 108.00 MHz |
| | Usable Sensitivity | 6 dB/ μ V(S/N 30 dB) |
| | Stereo Separation | 30 dB (at 1 kHz) |
| | AM | |
| | Frequency Range | 531 kHz – 1 602 kHz |
| Usable Sensitivity | 28 dB/ μ V (S/N 20 dB) | |

Notes:

- Specifications and design are subject to modification without notice due to improvements.
- Some figures and illustrations in this manual may be different from your product.

■ 보증서

| | | | |
|---------------------------------|---------------------------------|---------|------|
| 모델명 | CQ-C7405W | | |
| 고객란 | 고객 성명: | _____ 님 | |
| | 고객 주소 : 우편번호 | _____ | |
| | 시 | 구(읍, 면) | 동(리) |
| 전화 번호 : (_____) _____ - _____ | | | |
| 구입 년월일 | 판매점 명, 주소, 전화 번호 : | | |
| 년 월 일 | | | |
| 보증 기간 (구입일부터) | 전화 번호 : (_____) _____ - _____ | | |
| | 제품의 시리얼 번호 : | | |
| 1 년간 | | | |

※ 구입일과 구입처(판매점)를 분명히 기재하여, 고객에게 전달하시기 바랍니다. 차후의 A/S수리와 관련하여 매우 중요하오니 반드시 보관하시기 바랍니다.

※ 당사는 제품의 시리얼 번호를 전산 처리하여 관리하고 있습니다. 보증서에 시리얼 번호를 기록 하여 두시기 바랍니다.

제조년월

Panasonic Car Audio 세풍전자공업주식회사

한국총대리점 본사 ; 서울특별시 영등포구 양평동5가 56-2

전화 : (02)2633-0856(대표전화)

고객상담실 : (02)2633-0878

홈페이지 : www.sepung.co.kr

Matsushita Electric Industrial Co., Ltd.

Web Site : <http://panasonic.net>

YFM284C664CA

NY1006-1116



Printed in China

AAC WMA MP3 CD Player/Receiver
AAC WMA MP3 CD-плеер/ресивер
AAC WMA MP3 CD 플레이어/라디오

Model: **CQ-C7405W**

Before Installation/Перед монтажом/설치하기 전에

Consult a professional for installation.
●Verify the radio using the antenna and speakers before installation.
●Перед монтажом проверяют радиоприемник с помощью антенны и громкоговорителей.
설치에 관해서는 전문가에게 상담해 주십시오.
●설치하기 전에 안테나 및 스피커를 사용하여 라디오를 확인해 주십시오.

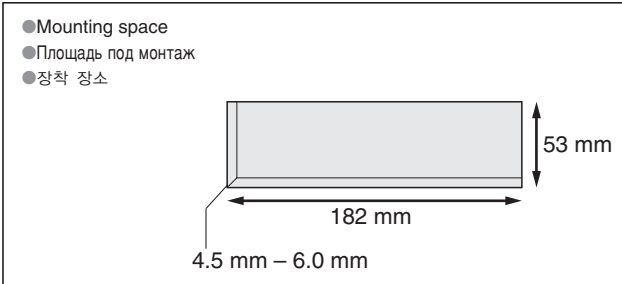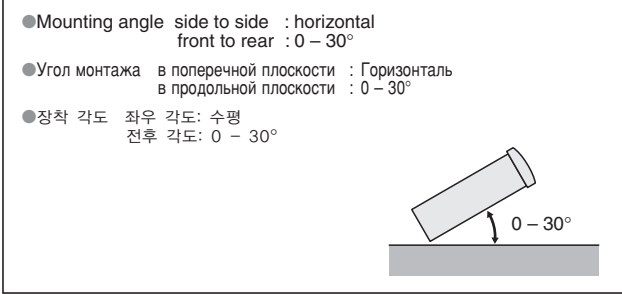


Remove mounting collar ① and trim plate ⑦ from the main unit temporarily, which are already mounted at shipment.
Временно снимают с главного блока прибора монтажную раму ① и обрамление ⑦, смонтированные при отгрузке.
발송시에 장착되어 있는 장착 칼라 ① 및 트림 플레이트 ⑦를 임시로 본체로부터 탈착해 주십시오.

Before Wiring/Перед монтажом электропроводок/배선을 하기 전에

Exclusively operated with 12 V battery with negative (-) ground.
Connect the power lead (red) last.
Connect the battery lead (yellow) to the positive (+) terminal of the battery or fuse block terminal (BAT).
Strip about 5 mm of the lead ends for connection.
Apply insulating tape to bare leads.
Secure loosened leads.

Работает только с питанием от 12 V [B] батареи с отрицательной (-) землей.
Подсоединяют силовой выводной провод (красный) последним.
Подсоединяют выводной провод (желтый) к положительному (+) выводу батареи или клемме блока плавких предохранителей (BAT).
С концов выводных проводов снимают изоляцию на длине около 5 мм (мм) для соединения.
На обнаженные выводные провода накладывают изоляционную ленту.
Фиксируют ослабленные выводные провода.

음극 (-) 접지의 12볼트 배터리로만 작동됩니다.
전원 리드선 (적색)을 마지막으로 접속합니다.
배터리 리드선 (황색)을 배터리의 양극(+) 단자 또는 퓨즈 블록 단자 (BAT)에 접속합니다.
접속시에는 리드선 끝부분을 약 5 mm 벗겨냅니다.
드러난 리드선에는 절연 테이프를 감아 주십시오.
느슨한 리드선을 고정합니다.

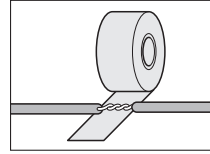

Installation Instructions Инструкция по монтажу 설치 설명서

Supplied Hardware/Детали, входящие в комплектацию поставки/부속품의 하드웨어

| No. | Item | Diagram | Q'ty | No. | Item | Diagram | Q'ty |
|-----|---|---------|------|-----|--|---------|------|
| ① | Mounting collar Монтажная рама 장착 칼라 FX0214C384ZB | | 1 | ⑤ | Hex. Nut (5 mm ø) Шестигранная гайка (5 мм (мм) ø) 육각 너트 (5 mmø) | | 1 |
| ② | Mounting bolt (5 mm ø) Монтажный болт (5 мм (мм) ø) 장착 볼트 (5 mmø) | | 1 | ⑥ | Power connector Силовой разъем 전원 커넥터 YGAJ021011 | | 1 |
| ③ | Lock cancel plate Пластина снятия стопорения 로크 캔슬 플레이트 | | 2 | ⑦ | Trim plate Обрамление 트림 플레이트 YEFC051013 | | 1 |
| ④ | Tapping Screw (5 mm ø x 16 mm) Самонарезающий винт (5 мм (мм) ø x 16 mm) 태핑 나사 (5 mmø x 16mm) | | 1 | ⑧ | Rear support strap Задняя опорная планка 후부 서포트 스트랩 YFG044C002ZA | | 1 |

* ②, ③, ④ and ⑤ consist of a set. (YEP0FZ5739) * ②, ③, ④ и ⑤ составляют комплект. (YEP0FZ5739)
* ②, ③, ④ 및 ⑤ 은 세트입니다. (YEP0FZ5739)



●Please read these instructions carefully before using this product and keep this manual for future reference.
●Перед началом эксплуатации просим прочитать настоящую инструкцию внимательно и хранить ее на пользование на будущее.
●본 제품의 바른 사용을 위해, 이 사용설명서를 잘 읽어 주십시오.
●잘 보관하시어 필요하실 때마다 읽어주시기 바랍니다.

Matsushita Electric Industrial Co., Ltd.
Web Site: <http://panasonic.net>

YFM294C092CA NY1006-1116 Printed in China

Installation/Монтаж/설치

How to install the unit/Как смонтировать прибор/장치를 설치하는 방법

Caution

- Wear gloves for safety.
- Make sure that wiring is completed before installation.

Внимание

- Следует надеть перчатки для безопасности.
- Следует убедиться, что монтаж электропроводок завершен до монтажа прибора.

주의

- 안전상 장갑을 착용해 주십시오.
- 배선을 끝마친 후에 설치해 주십시오.

- Remove the cable from the battery negative terminal.**
Отсоединяют кабель от отрицательного вывода батареи.
배터리의 음극 단자로부터 케이블을 탈착합니다.
- Mounting collar ① insertion. Bend mounting tabs.**
Вставление монтажной рамы ①. Загибают монтажные лапки.
장착 칼라 ① 삽입. 장착 태브를 구부립니다.
- Connection of power connector ⑥**
Подсоединение силового разъема ⑥
전원 커넥터 ⑥의 접속
- Main unit securing**
Крепление главного блока
본체의 고정
- Trim plate ⑦ mounting**
Установка обрамления ⑦
트림 플레이트 ⑦ 장착
- Battery cable reconnection**
Повторное подсоединение кабеля к батарее
배터리 케이블을 재접속

Securing to fire wall
Крепление к теплоизоляционной панели
방화벽에의 고정

Using the rubber bushing (Option)
С помощью резиновой втулки (по опции)
고무 부싱 (옵션품)의 사용

Using the rear support strap ⑧
С помощью задней опорной планки ⑧
후부 서포트 스트랩 ⑧의 사용

Rubber Bushing (Option)
Резиновая втулка (по опции)
고무 부싱 (옵션품)

Mounting Bolt ②
Монтажный болт ②

Rear support bracket (supplied with car)
Задний опорный кронштейн (поставляемый с автомобилем)
후부 서포트 브래킷 (자동차에 부속됨)

Hexagonal nut ⑤
Шестигранная гайка ⑤
육각 너트 ⑤

Mounting Bolt ②
Монтажный болт ②

Clank!

Snapping point
Моментальный снимок
끼우는 위치

Bend appropriate tabs to secure the unit without backlash.
Загибаем соответствующих лапок фиксируют прибор без зазор.
장착 태브를 적당한 만큼 구부려 장치가 헐겁지 않도록 고정시킵니다.

- Screw the mounting bolt ② into the main unit.
- Secure to the fire wall.
- Snap the right and left springs into each hole.

① Завертывают монтажный болт ② в главный блок.
② Крепление к теплоизоляционной панели.
③ Вводят правую и левую пружины в отверстия под них.

① 장착 볼트 ②를 돌려 본체에 고정시킵니다.
② 방화벽에 고정시킵니다.
③ 좌우 스프링을 각 구멍에 끼웁니다.

Caution
When this unit is installed in dashboard, ensure that there is sufficient air flow around the unit to prevent damage from overheating, do not block any ventilation holes on the unit.

Внимание
При монтаже настоящего устройства на панель приборов следует обеспечить достаточный поток воздуха вокруг него во избежание его повреждения из-за перегрева, причем не следует закрывать вентиляционные отверстия устройства.

주의
본 제품을 계기판에 설치할 경우에는 과열에 의한 손상을 방지하기 위하여 공기의 흐름이 가능한 충분한 공간을 장치 주위에 확보하고 장치의 환기부를 차단하지 않도록 주의해 주십시오.

How to remove the unit/Как снять прибор/장치를 탈착하는 방법





- Remove the face plate.**
Снимают лицевую панель прибора.
페이스 플레이트를 탈착합니다.
- Remove the trim plate ⑦.**
Снимают обрамление ⑦.
트림 플레이트 ⑦를 탈착합니다.
- Lock release**
① Insert the lock cancel plate ③ until you hear a click.
② Pull the main unit.
Снятие стопорения
① Вставляют пластину снятия стопорения ③ до щелчка.
② Тяните главную единицу.
로크를 릴리스합니다.
① 소리가 날 때까지 로크 캔슬 플레이트 ③를 삽입합니다.
② 본체를 잡아 당깁니다.
- Pull out the unit with both hands.**
Вытаскивают обеими руками прибор.
양손으로 장치를 잡아 당깁니다.

Wiring/Монтаж электропроводок/배선

⚠ Caution
To prevent damage to the unit, do not connect the power connector until the whole wiring is completed.

⚠ Внимание
Во избежание повреждения прибора не следует подсоединять силовой разъем до полного завершения монтажа электропроводок.

⚠ 주의
장치의 손상을 방지하기 위하여 전 배선이 종료된 후에 전원 커넥터를 접속해 주십시오.

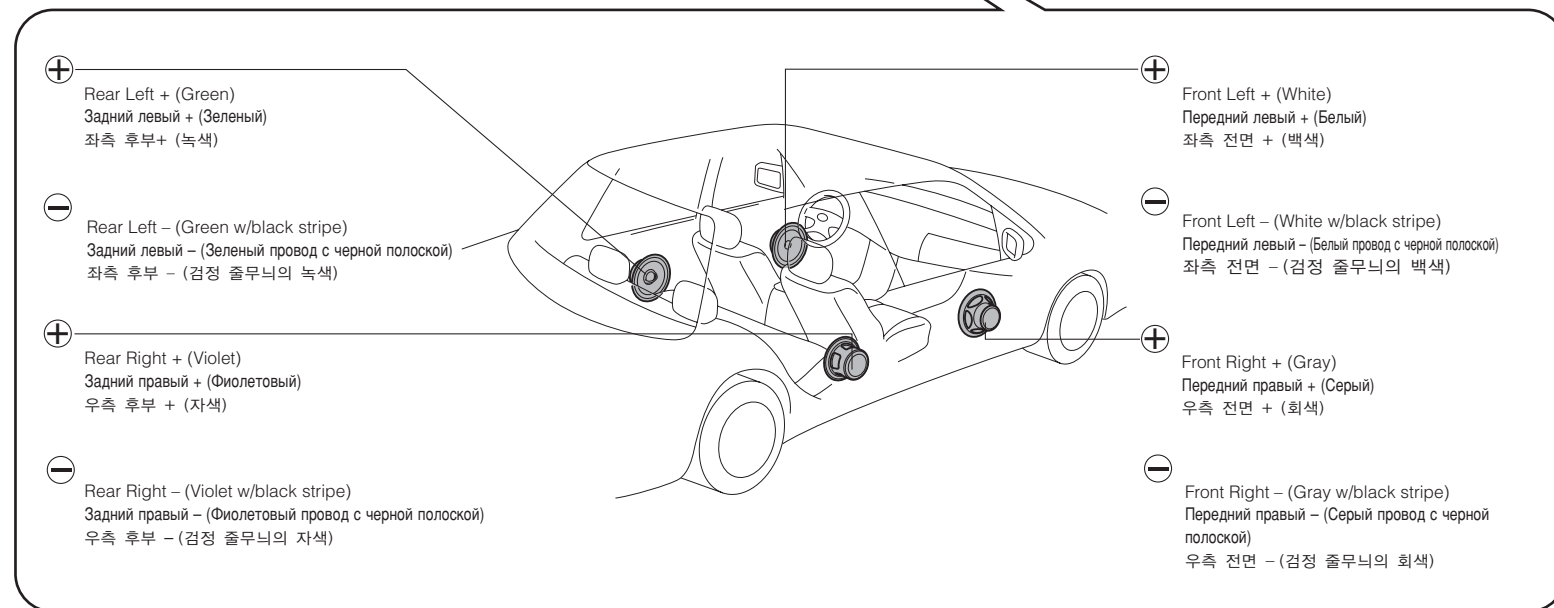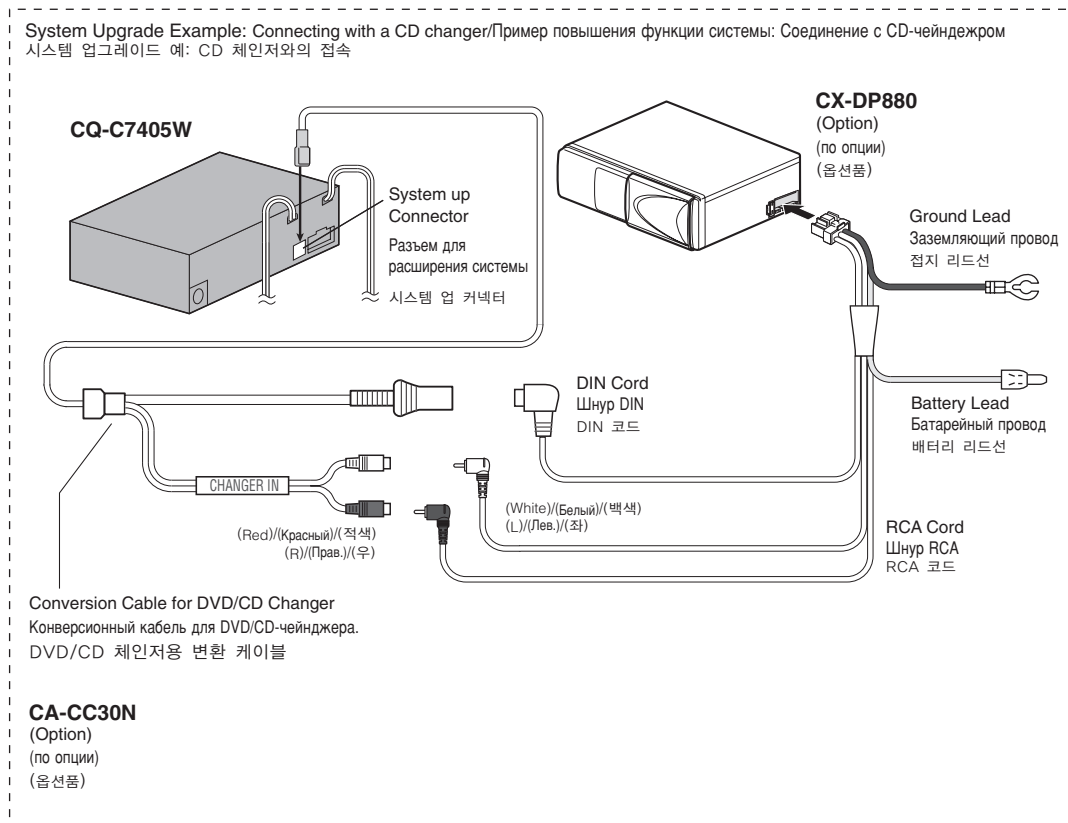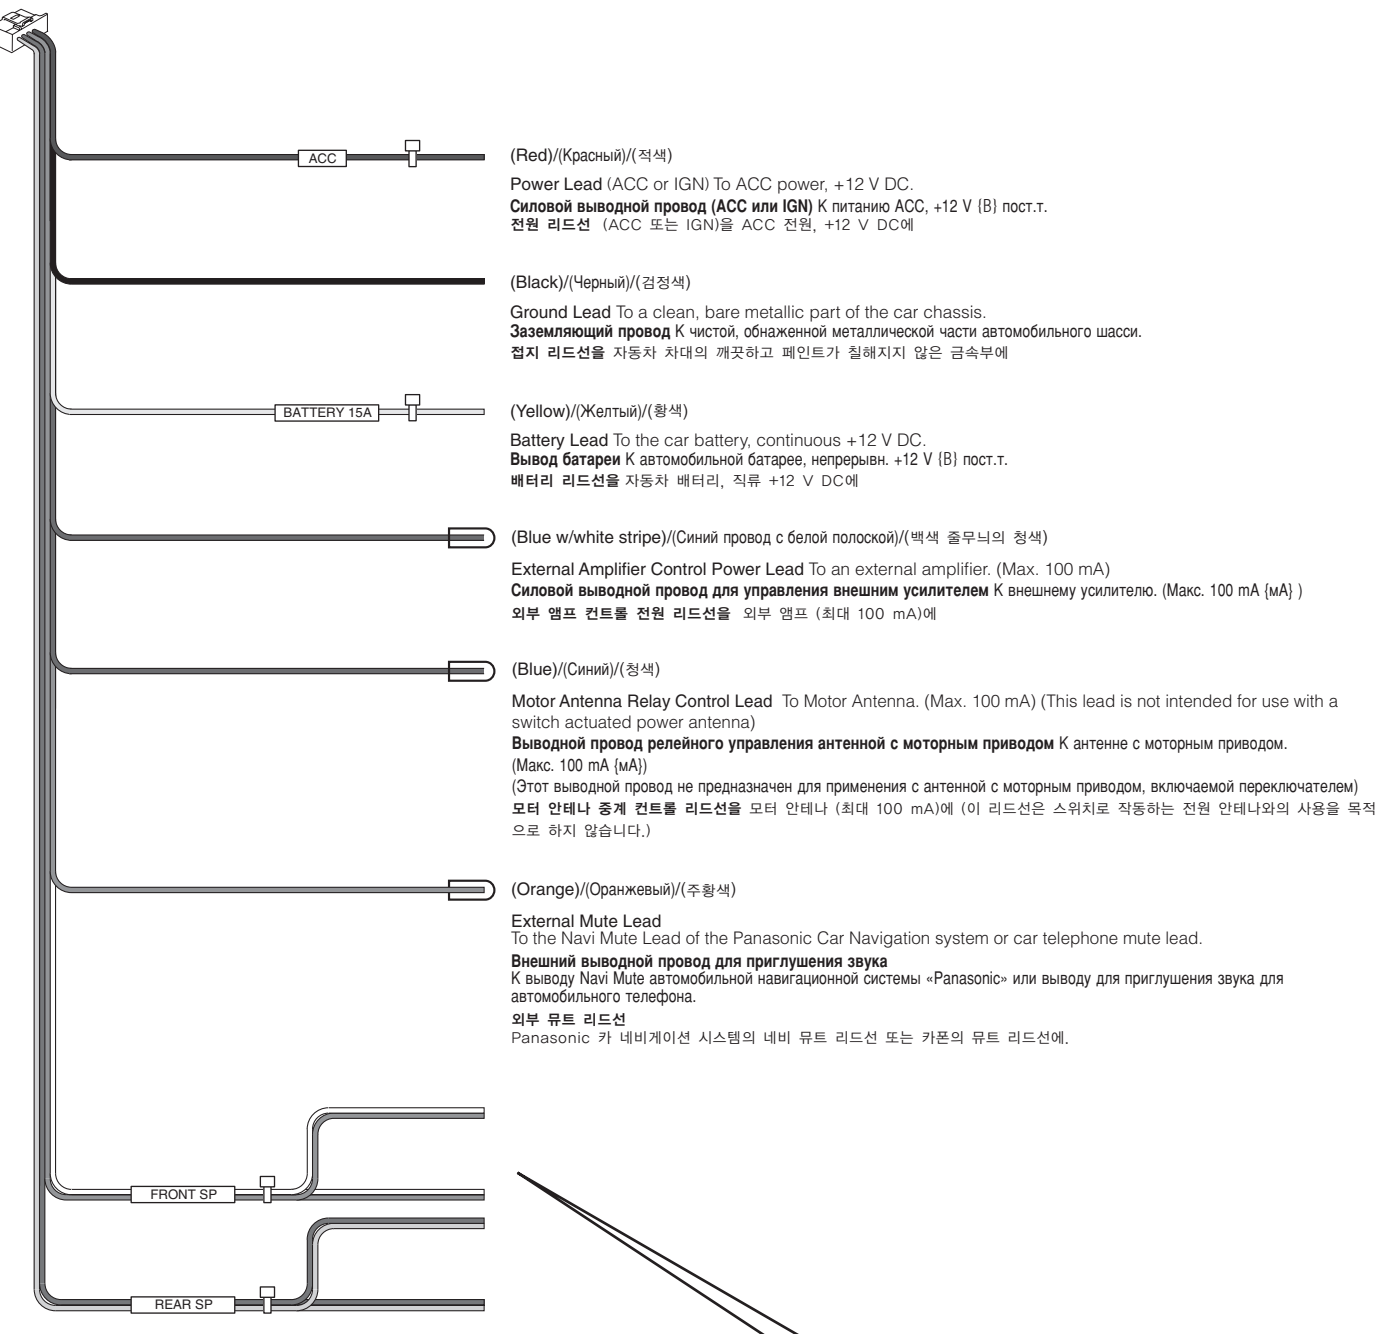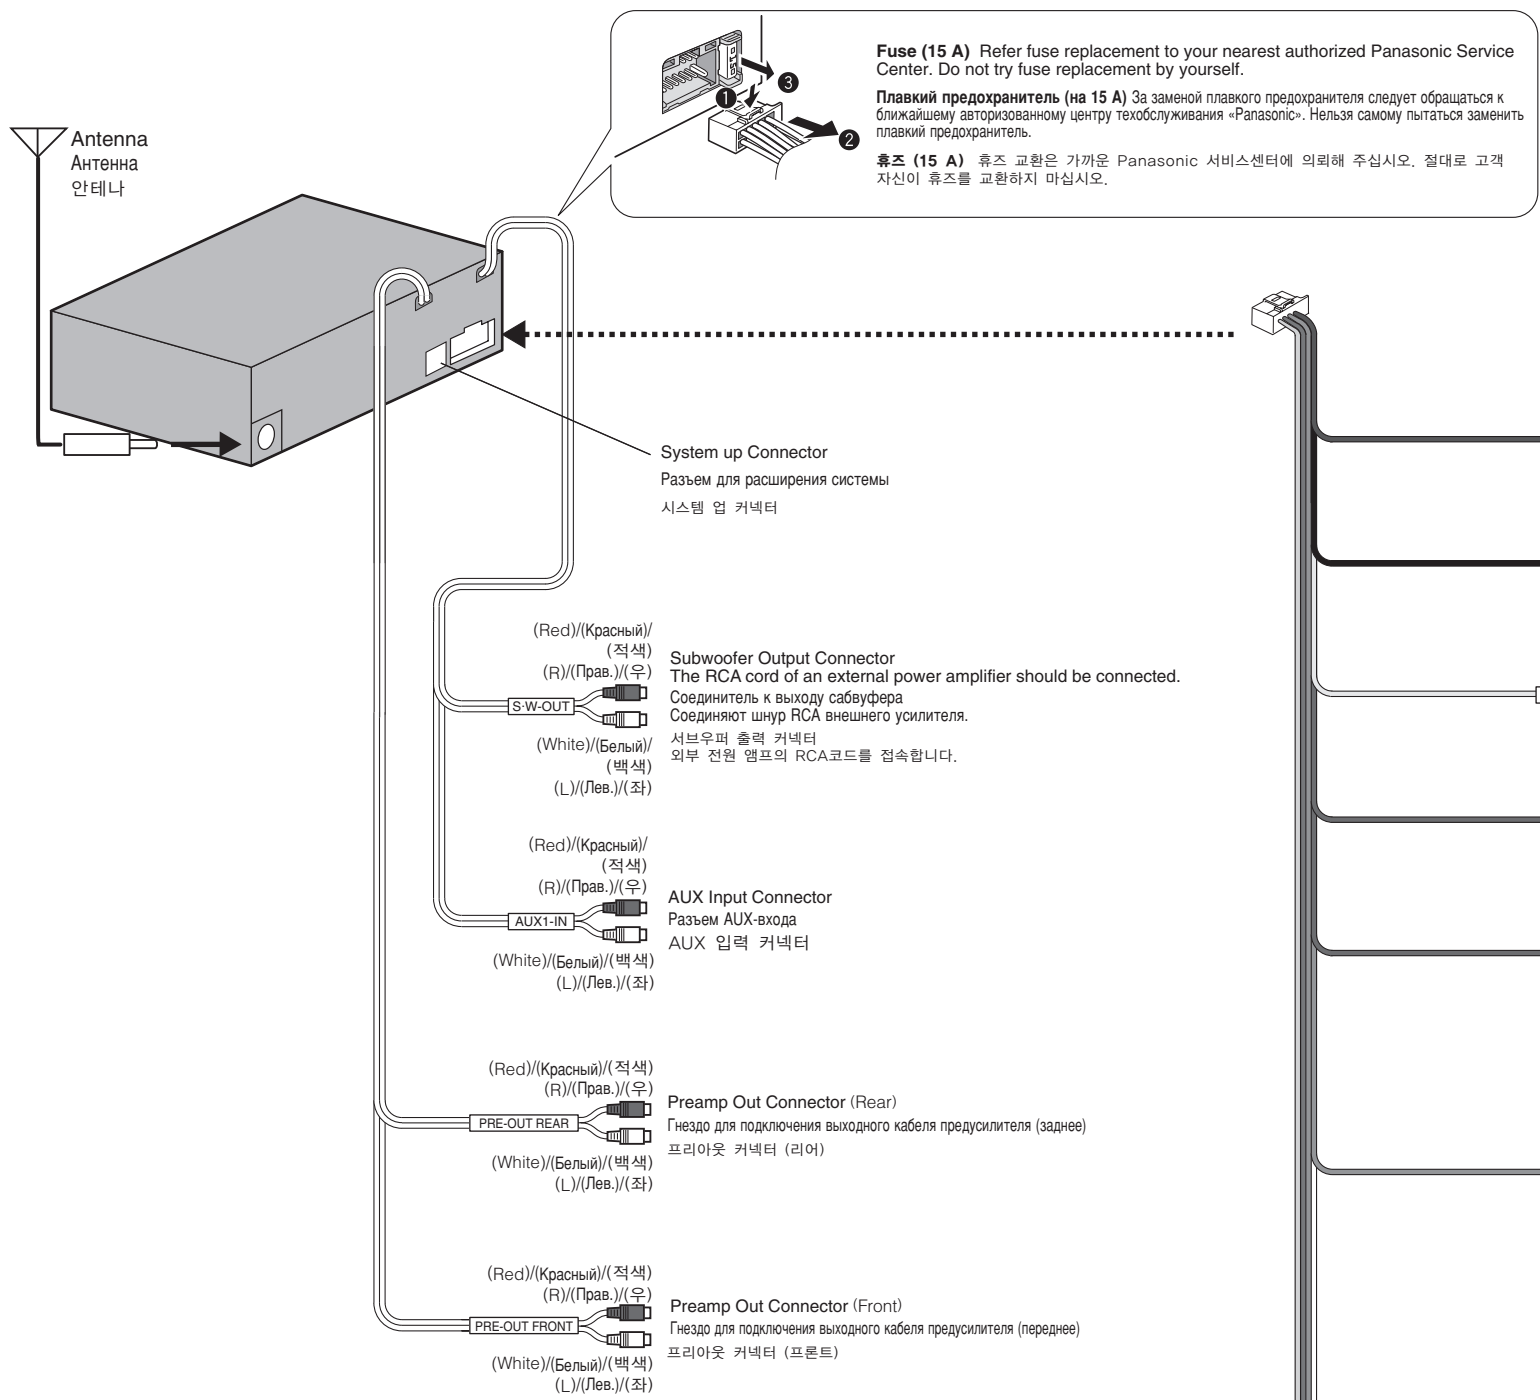

Final Installation/Окончательный монтаж/최종 설치

Lead Connections
 Connect all wires, making sure that each connection is insulated and secure. Bundle all loose wires and fasten them with tape so they will not fall down later. Now insert the unit into the mounting collar. Congratulations! After making a few final checks, you're ready to enjoy your new auto stereo system.

Прокладка электропроводки
 Подтверждая изоляцию и надежность всех соединений, соединяют все провода. Обязывают все свободные провода лентой для предотвращения их отпадения. Вставляют аппарат в монтажную раму.

리드선 접속
 모든 배선을 접속한 다음 접속부는 절연하고 고정시킵니다. 또한 느슨한 배선을 모아 테이프로 감싸서 떨어지지 않도록 한 후에 장치를 장착 칼라에 삽입합니다. 축하합니다! 몇가지 최종 확인을 한 후에 카 스테레오 시스템을 즐기실 수 있습니다.

Final Check/Окончательная проверка/최종 확인

1. Make sure that all wires are properly connected and insulated.
2. Make sure that the main unit is securely held in the mounting collar.
3. Turn on the ignition to check the unit for proper operation.

If you have difficulties, consult your nearest authorized professional installer for assistance.

1. Убедитесь, что все провода правильно соединены и изолированы.
2. Убедитесь, что аппарат надежно зафиксирован на монтажной раме.
3. Включают выключатель зажигания для проверки нормальной работы аппарата.


При возникновении проблем следует обратиться к авторизованному профессиональному монтажнику за помощью.

1. 모든 배선이 올바르게 접속되고 절연되었는지를 확인합니다.
2. 본체가 장착 칼라에 확실히 장착되었는지를 확인합니다.
3. 점화 스위치를 켜고 장치가 올바르게 동작하는지를 확인합니다.

문제가 있을 경우에는 가까운 설치 전문업자에 상담해 주십시오.

Speaker Connection/Монтаж электропроводок громкоговорителей/스피커 접속


Connect as follows.
 Монтируют проводки так, как показано на рис. ниже.
 하기와 같이 접속합니다.

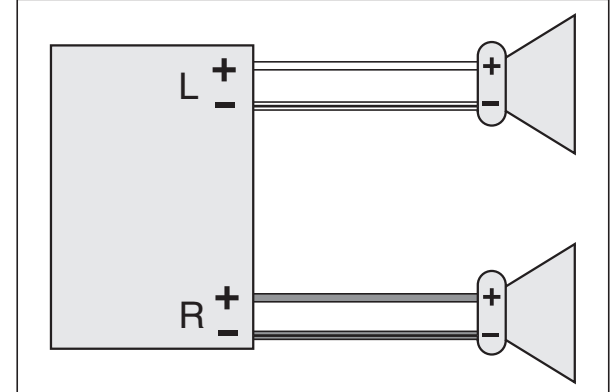

- Use ungrounded speakers only. Allowable input : 50 W or more Impedance : 4 - 8 Ω
- Use of speakers which do not match the specifications can cause burning, smoking or damage of the speakers.
- Distance between speaker and amplifier: 30 cm or more

- Следует применять только незаземленные громкоговорители. Допускаемый вход: 50 W (Вт) или более Импеданс: От 4 - 8 Ω (Ом)
- Использование громкоговорителей с неподходящими техническими характеристиками может привести к обгоранию, возникновению дыма или повреждению громкоговорителей.
- Расстояние между громкоговорителями и усилителем: 30 см или более

- 비접지 스피커만을 사용합니다. 허용 입력: 50 W 이상 임피던스: 4 - 8 Ω
- 사양이 다른 스피커를 사용하면 화재, 발연 또는 스피커 손상의 원인이 됩니다.
- 스피커와 앰프의 거리: 30 cm 이상

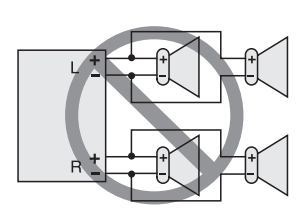

⚠ Caution
 ● Do not connect more than one speaker to one set of speaker leads. (except for connecting to a tweeter)

⚠ Внимание
 ● Нельзя подсоединять два и более громкоговорителя к одному набору выводных проводов громкоговорителя (за исключением случая подсоединения к громкоговорителю для воспроизведения верхних частот)

⚠ 주의
 ● 한 세트의 스피커 리드선에 스피커를 하나 이상 접속하지 마십시오. (고음용 확성기 접속을 제외하고)

- Do not use a 3-wire type speaker system having a common earth lead.
- Не следует применять трехпроводную громкоговорительную систему, имеющую общий заземляющий провод.
- 공통의 접지선을 사용하는 3-배선식의 스피커 시스템을 사용하지 마십시오.

Panasonic

System Upgrade Guidebook Инструкция по расширению системы 시스템 업그레이드 가이드북

Model: **CQ-C7405W**



- For upgrading your system, read this manual carefully before use. This manual should be retained for future reference after read.
- Для расширения Вашей системы просим тщательно читать данную инструкцию перед использованием аппарата. Данную инструкцию следует хранить для дальнейшего пользования.
- 시스템의 업그레이드를 하기 전에 본 설명서를 숙독하시고 읽으신 후에는 잘 보관하셔서 필요시에 참고하시기 바랍니다.

Safety Information

- Read the operating instructions for the unit and all other components of your car audio system carefully before using the system. They contain instructions about how to use the system in a safe and effective manner. Panasonic assumes no responsibility for any problems resulting from failure to observe the instructions given in this manual.

- This manual uses pictographs to show you how to use the product safely and to alert you to potential dangers resulting from improper connections and operations. The meanings of the pictographs are explained below. It is important that you fully understand the meanings of the pictographs in order to use this manual and the system properly.



This pictograph intends to alert you to the presence of important operating instructions and installation instructions. Failure to heed the instructions may result in severe injury or death.



Caution

This pictograph intends to alert you to the presence of important operating instructions and installation instructions. Failure to heed the instructions may result in injury or material damage.

Warning

Observe the following warnings when using this unit.

- ❑ **The driver should neither watch the display nor operate the system while driving.**

Watching the display or operating the system will distract the driver from looking ahead of the vehicle and can cause accidents. Always stop the vehicle in a safe location and use the parking brake before watching the display or operating the system.

- ❑ **Use the proper power supply.**

This product is designed for operation with a negative grounded 12 V DC battery system. Never operate this product with other battery systems, especially a 24 V DC battery system.

- ❑ **Keep batteries and insulation film out of reach of infants.**

Batteries and insulation film can be ingested, so keep them out of the reach of infants. If an infant ingests a battery or insulation film, please seek immediate medical attention.

- ❑ **Protect the Deck Mechanism.**

Do not insert any foreign objects into the slot of this unit.

- ❑ **Do not disassemble or modify the unit.**

Do not disassemble, modify the unit or attempt to repair the product yourself. If the product needs to be repaired, consult your dealer or an authorized Panasonic Service Center.

- ❑ **Do not use the unit when it is out of order.**

If the unit is out of order (no power, no sound) or in an abnormal state (has foreign objects in it, is exposed to water, is smoking, or smells), turn it off immediately and consult your dealer.

- ❑ **The remote control unit should not lie about in the car.**

If the remote control unit lies about, it could fall on the floor while driving, get wedged under the brake pedal, and lead to a traffic accident.

- ❑ **Refer fuse replacement to qualified service personnel.**

When the fuse blows out, eliminate the cause and have it replaced with the fuse prescribed for this unit by a qualified service engineer. Incorrect replacement of the fuse may lead to smoke, fire, and damage to the product.

Observe the following warnings when installing.

- ❑ **Disconnect the lead from the negative (-) battery terminal before installation.**

Wiring and installation with the negative (-) battery terminal connected may cause electrical shock and injury due to a short circuit.

Some cars equipped with the electrical safety system have specific procedures of battery terminal disconnection.

FAILURE TO FOLLOW THE PROCEDURE MAY LEAD TO THE UNINTENDED ACTIVATION OF THE ELECTRICAL SAFETY SYSTEM RESULTING IN DAMAGE TO THE VEHICLE AND PERSONAL INJURY OR DEATH.

- ❑ **Never use safety-related components for installation, grounding, and other such functions.**

Do not use safety-related vehicle components (fuel tank, brake, suspension, steering wheel, pedals, airbag, etc.) for wiring or fixing the product or its accessories.

- ❑ **Installing the product on the air bag cover or in a location where it interferes with airbag operation is prohibited.**

- ❑ **Check for piping, gasoline tank, electric wiring, and other items before installing the product.**

If you need to open a hole in the vehicle chassis to attach or wire the product, first check where the wire harness, gasoline tank, and electric wiring are located. Then open the hole from outside if possible.

- ❑ **Never install the product in a location where it interferes with your field of vision.**

- ❑ **Never have the power cord branched to supply other equipment with power.**

- ❑ **After installation and wiring, you should check the normal operation of other electrical equipment.**

The continuation of their using in abnormal conditions may cause fire, electrical shock or a traffic accident.

- ❑ **In the case of installation to an airbag equipped car, confirm warnings and cautions of the vehicle manufacturer before installation.**

- ❑ **Make sure the leads do not interfere with driving or getting in and out of the vehicle.**

- ❑ **Insulate all exposed wires to prevent short circuiting.**

Caution

Observe the following cautions when using this unit.

- Keep the sound volume at an appropriate level.**
Keep the volume level low enough to be aware of road and traffic conditions while driving.
- Do not insert or allow your hand or fingers to be caught in the unit.**
To prevent injury, do not get your hand or fingers caught in moving parts or in the disc slot. Especially watch out for infants.
- This unit is designed for use exclusively in automobiles.**
- Do not operate the unit for a prolonged period with the engine turned off.**
Operating the audio system for a long period of time with the engine turned off will drain the battery.
- Do not expose the unit to direct sunlight or excessive heat.**
Otherwise these will raise the interior temperature of the unit, and it may lead to smoke, fire, or other damage to the unit.
- Do not use the product where it is exposed to water, moisture, or dust.**
Exposure of the unit to water, moisture, or dust may lead to smoke, fire, or other damage to the unit. Make especially sure that the unit does not get wet in car washes or on rainy days.

Observe the following cautions when installing.

- Refer wiring and installation to qualified service personnel.**
Installation of this unit requires special skills and experience. For maximum safety, have it installed by your dealer. Panasonic is not liable for any problems resulting from your own installation of the unit.
- Follow the instructions to install and wire the product.**
Not following the instructions to properly install and wire the product could cause an accident or fire.
- Take care not to damage the leads.**
When wiring, take care not to damage the leads. Prevent them from getting caught in the vehicle chassis, screws, and moving parts such as seat rails. Do not scratch, pull, bend or twist the leads. Do not run them near heat sources or place heavy objects on them. If leads must be run over sharp metal edges, protect the leads by winding them with vinyl tape or similar protection.
- Use the designated parts and tools for installation.**
Use the supplied or designated parts and appropriate tools to install the product. The use of parts other than those supplied or designated may result in internal damage to the unit. Faulty installation may lead to an accident, a malfunction or fire.

- Do not block the air vent or the cooling plate of the unit.**
Blocking these parts will cause the interior of the unit to overheat and will result in fire or other damage.
- Do not install the product where it is exposed to strong vibrations or is unstable.**
Avoid slanted or strongly curved surfaces for installation. If the installation is not stable, the unit may fall down while driving and this can lead to an accident or injury.
- Installation Angle**
The product should be installed in a horizontal position with the front end up at a convenient angle, but not more than 30°.
The user should bear in mind that in some areas there may be restrictions on how and where this unit can be installed. Consult your dealer for further details.
- Wear gloves for safety. Make sure that wiring is completed before installation.**
- To prevent damage to the unit, do not connect the power connector until the whole wiring is completed.**
- Do not connect more than one speaker to one set of speaker leads. (except for connecting to a tweeter)**

Observe the following cautions when handling the battery for the remote control unit.

- Use only specified battery (CR2025).
- Match the polarity of the battery with the (+) and (-) marks in the battery case.
- Replace dead battery as soon as possible.
- Remove the battery from the remote control unit when not using it for an extended period of time.
- Insulate the battery (by placing them in a plastic bag or covering them with vinyl tape) before disposal or storage.
- Dispose of the battery according to the local regulations.
- Do not disassemble, recharge, heat or short the battery. Do not throw a battery into a fire or water.

In case of battery leakage

- Thoroughly wipe the battery liquid off the battery case and insert new battery.
- If any part of your body or clothing comes into contact with battery liquid, wash it with plenty of water.
- If battery liquid comes into contact with your eyes, wash them with plenty of water and get immediate medical attention.


Refer to safety information of optional devices as well.

Before Reading These Instructions

About this Book


This book is an instruction manual that explains how to operate your purchased head unit and its remote control as an accessory when the head unit is connected to optional devices.

(Remote Control Unit → Operating Instructions)

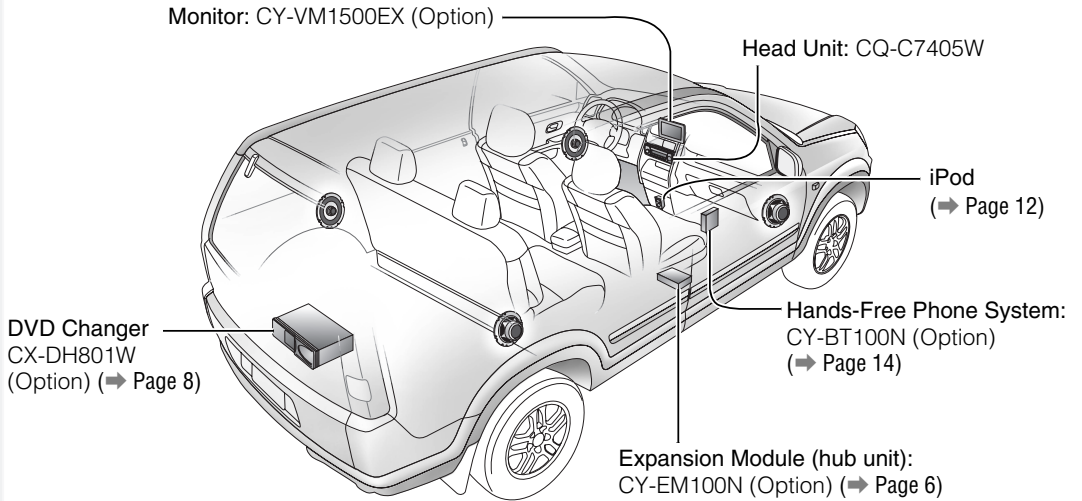

System Upgrade Sample

Head Unit CQ-C7405W

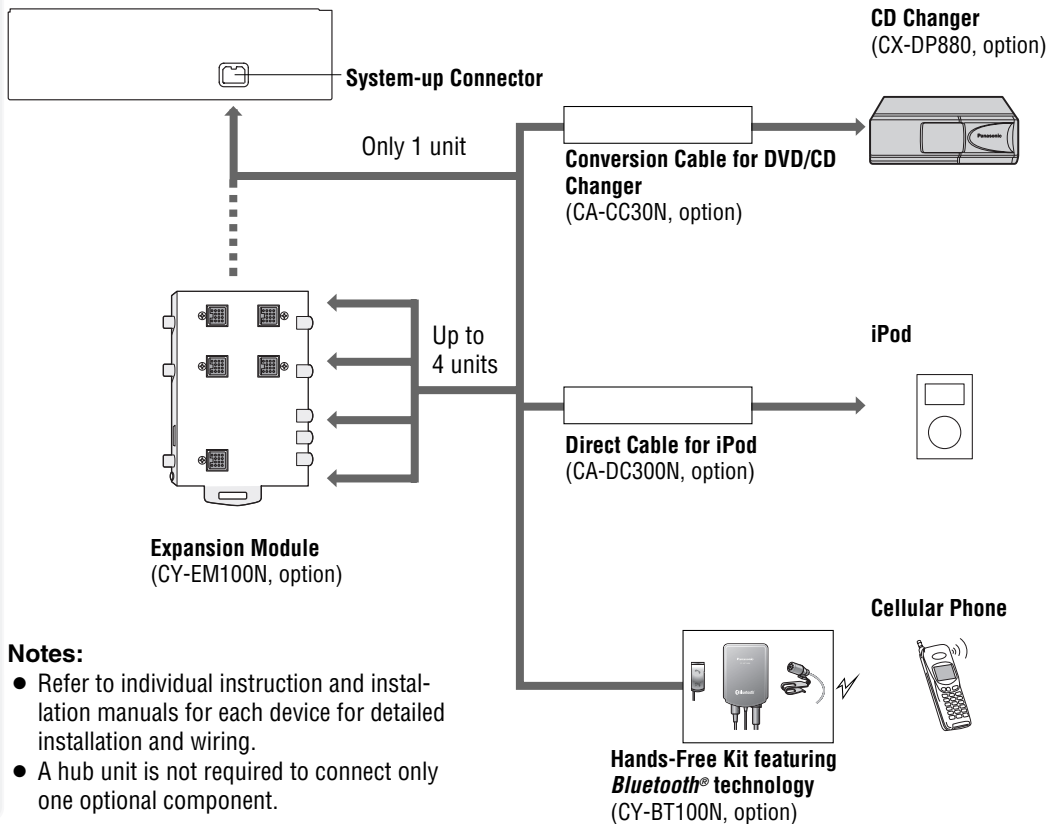

Notes:

- Refer to individual instruction and installation manuals for each device for detailed installation and wiring.
- A hub unit is not required to connect only one optional component.

Contents

| | |
|----------------|----------|
| English | 2 |
| Русский | 18 |
| 한국어 | 34 |

Common

| | |
|--|----------|
| ● Safety Information | 2 |
| ● Before Reading These Instructions | 4 |

Each Source

| | |
|----------------------------------|-----------|
| ● General | 6 |
| ● Disc Changer | 8 |
| ● iPod Control | 12 |
| ● Hands-Free Phone System | 14 |

As Needed

| | |
|--------------------------|-----------|
| ● Troubleshooting | 16 |
|--------------------------|-----------|

DVD Changer

The optional adapter (Conversion Cable for DVD/CD Changer: CA-CC30N) allows you to connect the optional Panasonic DVD changer unit (CX-DH801W). For details, refer to the operating instructions for the DVD changer unit. (⇒ page 8, 10)

CD Changer

The optional adapter (Conversion Cable for DVD/CD Changer: CA-CC30N) allows you to connect the optional Panasonic CD changer unit (CX-DP880). For details, refer to the operating instructions for the CD changer unit. (⇒ page 8)

iPod®

The optional adapter (Direct Cable for iPod: CA-DC300N) allows you to connect the optional iPod series. (⇒ page 12)

The iPod equipped with a dock connector is exclusively connectable. Further information about the controllable iPod is described below.

Controllable iPod/software version

- 3rd generation iPod/ver. 2.3
- 4th generation iPod/ver. 3.1.1
- 5th generation iPod/ver. 1.1.2 (Video playback is not supported.)
- iPod Photo/ver. 1.2.1
- iPod mini/ver. 1.4.1
- iPod nano/ver. 1.2

* Operation check has been completed with software available at the end of October, 2006. We do not guarantee the operation with our future products or upgraded software.

iPod is a trademark of Apple Computer, Inc., registered in the U.S. and other countries.

Hands-Free Phone System

You can connect the optional Hands-Free Phone System (Hands-Free Kit featuring *Bluetooth*® technology: CY-BT100N). For details, refer to the operating instructions for the Hands-Free Phone System. (⇒ page 14)

Note: This unit is designed **only for receiving calls**. It cannot send calls.

Bluetooth®

The Bluetooth word mark and logo are owned by the Bluetooth SIG, Inc. and any use of such marks by Matsushita Electric Industrial Co.,Ltd. is under license. Other trademarks and trade name are those of their respective owners.

Expansion Module (hub unit)


You can connect the optional Expansion Module (hub unit) (CY-EM100N). Connection of the Expansion Module allows you to simultaneously connect optional devices mentioned before as well as other AV devices. For details, refer to the operating instructions for the Expansion Module.

Connectable devices

- CD changer (max. 1)
- iPod (max. 2)
- Hands-Free Phone System (max. 1)


Note: Market conditions regarding optional devices vary with countries and regions. For further information, consult your dealer.

The source changes as follows every time [SOURCE] is pressed.

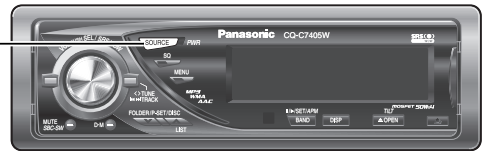

Radio

FM1, FM2, FM3, AM (⇒ Operating Instructions)

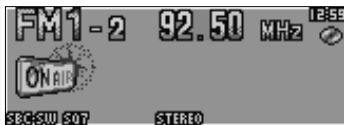

Player

When loading CD (⇒ Operating Instructions)



When loading a disc containing compressed audio files (⇒ Operating Instructions)



AUX 1

Device connected to the AUX terminal of the this unit



System-up Connector

Device connected to the System-up Connector of this unit

When optional devices are connected:

Shift to connected devices

When an expansion module is connected:


The devices connected to the ports 1 to 4 are activated in sequence after shifting to AUX2 (devices connected to the AUX terminal of the expansion module).




When connecting DVD Changer (⇒ page 8, 10)



When connecting CD Changer (⇒ page 8)

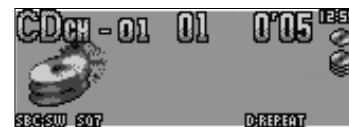

When connecting iPod (⇒ page 12)

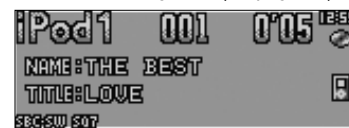

When connecting Expansion Module




Disc Changer (When CDs or MP3 discs are loaded)

Connected an optional CD changer or an optional DVD changer can be controlled by this unit.

1 Load a magazine (discs).

When a magazine is already loaded, press **[SOURCE]** to select the CD changer mode.

The unit recognizes the magazine and starts playing automatically.

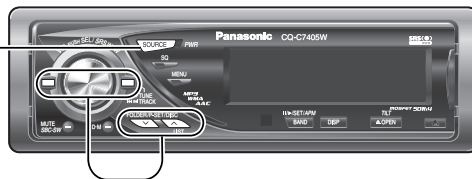

2 Select a desired portion.

Disc selection

[^] (DISC): Next disc

[v] (DISC): Preceding disc

Folder up/Down

Only for DVD Changer

Hold down for 2 sec. or more.

[^] (FOLDER): Next folder

[v] (FOLDER): Preceding folder

Track/File selection

[▶▶]: Next track/file

[◀◀]: Preceding track/file (press twice)

Note: Hold down for fast forward/reverse.

Pause

Press **[BAND]** (|| ▶).

Press again to cancel.

Track/file ————— Time

Disc number —————

Changer indicator —————

CDch (CD changer)

DVDch (DVD changer)



Play Mode indicators

lights when each mode is activated.

lights when the changer is connected.

RANDOM

REPEAT

SCAN

O-RANDOM (Disc Random, Only for CD changer)

D-REPEAT (Disc Repeat)

D-SCAN (Disc Scan, Only for CD changer)

F-REPEAT (Folder Repeat, Only for MP3 files)

Notes:

- When CX-DP880 or CX-DH801W is connected, a CD-RW disc is playable.
- Trouble may occur while playing CD-Rs. Refer to the section on "Notes on CD/CD Media (CD-ROM, CD-R, CD-RW)". (→ Operating Instructions)
- This unit does not support the following through the CD changer.
 - **MP3 playback.**



Random, Repeat Play (Disc Changer Menu Display)

(RANDOM, REPEAT)

Random and Repeat play can be set.

- 1 Press **[MENU]** to display the menu display.

For using the remote control, hold down **[SEL] (MENU)** for 2 sec. or more.

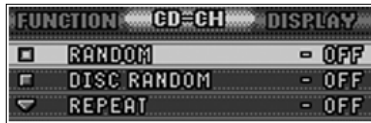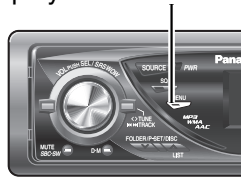

- 2 Turn **[VOL]** to select a function to be adjusted.


For using the remote control, use **[^]** or **[v]**.

- 3 Press **[PUSH SEL]** to adjust.

For using the remote control, use **[BAND] (SET)**.

- 4 Press **[MENU]** to close the menu screen.

For using the remote control, hold down **[SEL] (MENU)** for 2 sec. or more.

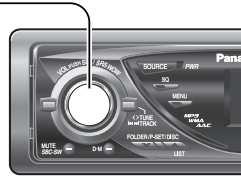**RANDOM**

- **CD-DA**
RANDOM playback of the selected disc (DVD changer)
RANDOM playback of all discs in the magazine (CD changer)
- **MP3 disc**
RANDOM playback of the selected folders

OFF: Off (default)

ON: Random playback

DISC RANDOM (Only for CD changer)

OFF: Off (default)

ON: Random playback (from selected disc)

REPEAT

OFF: Off (default)

ON: Playing the current track/file repeatedly

DISC REPEAT (Only for CD-DA disc)

OFF: Off (default)

ON: Playing the current disc repeatedly

FOLDER REPEAT (Only for MP3 disc)

OFF: Off (default)

ON: Playing the current folder repeatedly

Play Mode Selection

One-touch operation is available for selecting a track playing style by use of **[RANDOM]** or **[REPEAT]**.

RANDOM, REPEAT

Press the button. Press again to cancel.

DISC RANDOM, DISC REPEAT, FOLDER REPEAT

Hold down the button for 2 sec. or more.

Hold down again to cancel.

SCAN play

You can find your favorite file by playing first 10-sec. of each file.

SCAN (CD changer: All tracks, DVD changer: from selected disc)

Press **[SCAN]**. Press again to cancel.

DISC SCAN (1st file in each disc, only for CD changer)

Hold down **[SCAN]** for 2 sec. or more. Hold down again to cancel.

Direct Access

A disc can be directly selected.

Example: disc number 5

1 Press **[#] (NUMBER)**.

2 Press **[5]**.

3 Press **[SET]**.



Note: To suspend direct selection, press **[DISP] (DISPLAY)**.

Functions Only by Remote Control Unit

Disc Changer (when DVDs or VCDs are loaded)

Connected an optional DVD changer (CX-DH801W) can be controlled by this unit.


1 Load a magazine (discs).

When a magazine is already loaded, press **[SOURCE]** to select the DVD changer mode.

The unit recognizes the magazine and starts playing automatically.

Notes:

- For DVD operations other than the above (i.e. DVD menu, closed caption, etc.), use the remote control unit supplied with the DVD changer.
- The remote control unit supplied with the DVD changer does not work properly when you aim it at this unit.
- When using the remote control unit supplied with the DVD changer, aim it at the monitor display (CY-VM1500EX).

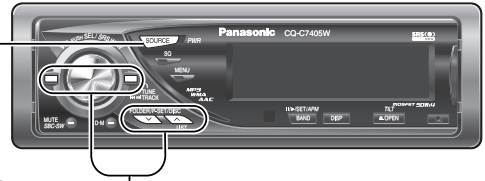

2 Select a desired portion.

Disc selection

[^] (DISC): Next disc

[v] (DISC): Preceding disc

Chapter/Track selection

[▶▶]: Next chapter/Next track


[◀◀]: Preceding chapter/ Preceding track
(press twice)

Note: Hold down for fast forward/reverse.

Pause

Press **[BAND] (|| ▶)**.


Press again to cancel.

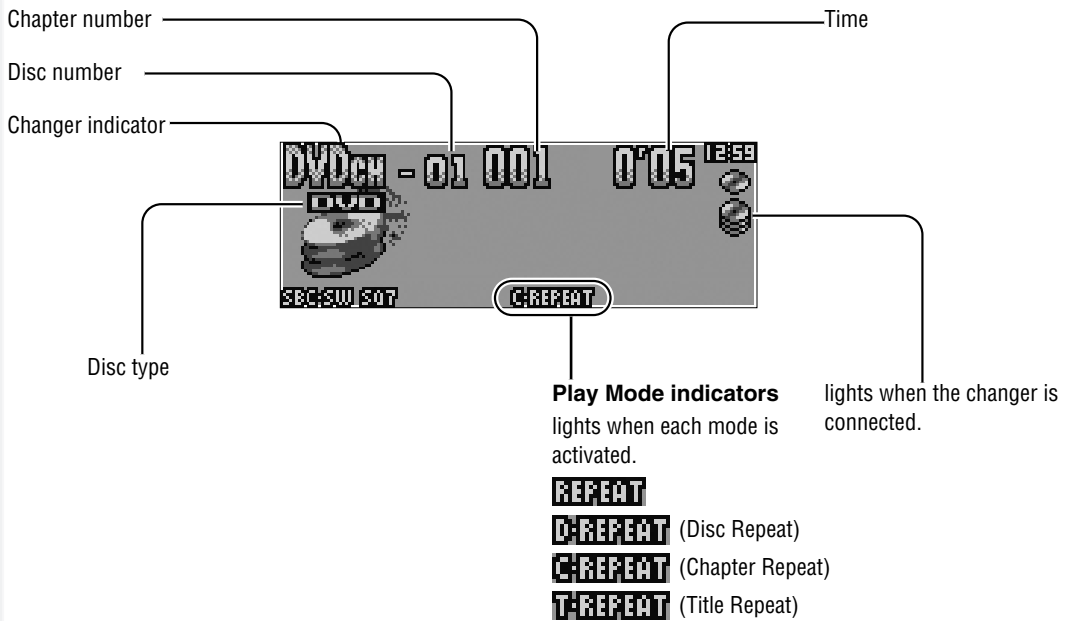

Repeat play can be set.


- 1 Press **[MENU]** to display the menu display.

For using the remote control, hold down **[SEL] (MENU)** for 2 sec. or more.

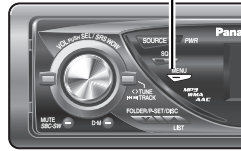

- 2 Turn **[VOL]** to select a function to be adjusted.

For using the remote control, use **[^]** or **[v]**.

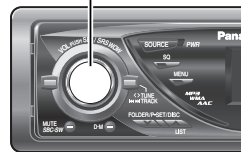

- 3 Press **[PUSH SEL]** to adjust.

For using the remote control, use **[BAND] (SET)**.

- 4 Press **[MENU]** to close the menu screen.

For using the remote control, hold down **[SEL] (MENU)** for 2 sec. or more.

● For a DVD insertion

CHAPTER REPEAT

OFF: Off (default)

ON: Playing the current chapter repeatedly.

TITLE REPEAT

OFF: Off (default)

ON: Playing the current title repeatedly.

Note: The unit may not operate for some DVDs.

● For a VCD insertion

REPEAT

OFF: Off (default)

ON: Playing the current track repeatedly

DISC REPEAT

OFF: Off (default)

ON: Playing the current disc repeatedly

Notes:

- The unit may not operate for some VCDs.
- The unit may not operate for a disc with the play back function activated.

Play Mode Selection

One-touch operation is available for selecting a chapter playing style by use of **[REPEAT]**.

CHAPTER REPEAT, REPEAT

Press the button. Press again to cancel.

TITLE REPEAT, DISC REPEAT

Hold down the button for 2 sec. or more. Hold down again to cancel.

Direct Access

A disc can be directly selected.

Example: disc number 5

- 1 Press **[#] (NUMBER)**.
- 2 Press **[5]**.
- 3 Press **[SET]**.



Note: To suspend direct selection, press **[DISP]** (DISPLAY).

iPod Control

Connection of the optional iPod adapter (Direct cable for iPod) (CA-DC300N) allows users to operate the iPod including file selection and file sequence change with the buttons on this unit.

Operation Flow

- 1 Connect the iPod.
- 2 Press **[SOURCE]** to select the iPod mode. Playback starts.

Note: If playback does not start, press **[BAND]** (|| / ▶).

- 3 Select a desired portion.



File Selection

- ▶▶▶: Next file
- ◀◀◀: Beginning of the current file
For the previous file, press twice.

Note: Hold down for fast forward/reverse.

Pause

- Press **[BAND]** (|| / ▶).
- Press again to cancel.

Playing Mode selection

The type with which playback data is classified is selectable.

- 1 Press **[Λ]** (**LIST**) to call up the play mode selection screen.
- 2 Turn **[VOL]** to select the play mode.


- PLAYLIST**: Playback by playlist
- ARTIST**: Playback by artist
- ALBUM**: Playback by album

For using the remote control, use **[Λ]** or **[V]**.

Note: When the **[<]** button is pressed, the regular screen appears.

- 3 Press **[PUSH SEL]** to determine the selection.

For using the remote control, use **[BAND]** (**SET**).

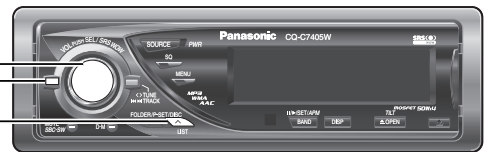

- 4 Turn **[VOL]** to select the portion to play.

Notes:

- For selecting **ARTIST**, the **ALBUM** selection screen appears after selecting an artist name.
- When the **[<]** button is pressed, the previous screen appears.

- 5 Press **[PUSH SEL]** to determine the selection.

For using the remote control, use **[BAND]** (**SET**).

Notes: Files without an album name or an artist name are not playable in the playing mode of the album or artist display respectively.

iPod Mode Display

Current file

iPod number

iPod1 (iPod 1)

iPod2 (iPod 2)



Play Mode indicators

lights when each mode is activated.

RANDOM (Random)

A-RANDOM (Album Random)

REPEAT (Repeat)

Time

lights when the direct cable for iPod (CA-DC300N) is connected.

*Even when the iPod itself is not connected, this indicator will also light. This indicates that the main unit normally operates.

Notes:

- The iPod equipped with a dock connector is exclusively connectable. Further information about the controllable iPod is described below.
- The shuffle function of iPod corresponds to the RANDOM function of this unit.
- Please make sure to detach the iPod after turning off the car engine (turning the ACC to OFF). The iPod may not shut down while still connected, which may result in battery depletion.
- Please do not connect iPod accessories such as an iPod remote control or headphones while connecting iPod with the unit. The unit may not operate correctly.
- Connect this unit after turning down the volume of the iPod.
- "NO iPod" appears until the iPod is recognized after connecting the iPod, turning on the power of the main unit, or performing source selection on the main unit side. This indicates there is nothing wrong with the main unit.
- We do not guarantee all the operations of connectable devices.

Controllable iPod/software version

- 3rd generation iPod/ver. 2.3
- 4th generation iPod/ver. 3.1.1
- 5th generation iPod/ver. 1.1.2 (Video playback is not supported.)
- iPod Photo/ver. 1.2.1
- iPod mini/ver. 1.4.1
- iPod nano/ver. 1.2

* Operation check has been completed with software available at the end of October, 2006. We do not guarantee the operation with our future products or upgraded software.


Random, Repeat Play (iPod Menu Display)

(RANDOM, REPEAT)

Random and Repeat play can be set.


- 1 Press **[MENU]** to display the menu display.

For using the remote control, hold down **[SEL] (MENU)** for 2 sec. or more.

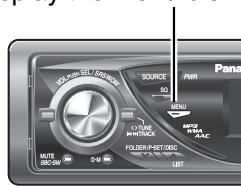

- 2 Turn **[VOL]** to select a function to be adjusted.

For using the remote control, use **[^]** or **[v]**.

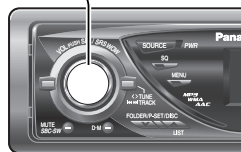

- 3 Press **[PUSH SEL]** to adjust.

For using the remote control, use **[BAND] (SET)**.

- 4 Press **[MENU]** to close the menu screen.

For using the remote control, hold down **[SEL] (MENU)** for 2 sec. or more.

RANDOM (Shuffle)

OFF: Off

ON: From all available files

ALBUM RANDOM

OFF: Off

ON: From files in the selected album

REPEAT

OFF: Off

ON: Playing the current file repeatedly

Note: All files are played back even at REPEAT-off setting. (ALL REPEAT)

TEXT

Text display

NAME/TITLE: Name/Title (default)

ALBUM/TITLE: Album/Title

OFF: Disabled

Note: The title may not be displayed correctly if it is longer than 250 alphanumeric characters.

Functions Only by Remote Control Unit**Play Mode Selection**

One-touch operation is available for selecting a track playing style by use of **[RANDOM]** or **[REPEAT]**.

RANDOM, REPEAT

Press the button. Press again to cancel.

ALBUM RANDOM

Hold down the button for 2 sec. or more. Hold down again to cancel.

Hands-Free Phone System

Be sure to read "Safety Information" in the Operating Instructions for the Hands-Free Phone System before use.


Preparation

Connecting Hands-Free Phone System

Connect the Hands-Free Phone System (CY-BT100N) and establish the pairing. Refer to the operating instructions for the Hands-Free Phone System for further information.

Note: This unit is designed **only for receiving calls**. It cannot send calls.

Switch unit

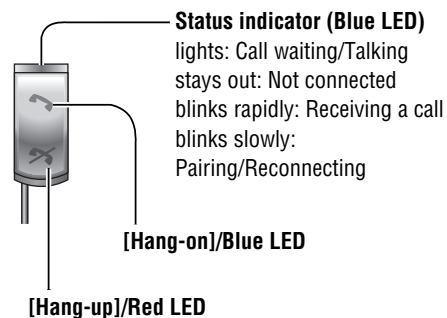


Operation Flow

- 1 Press **[Hang-on]** on Hands-Free Phone System and pick up the phone.
The phone is in the incoming state.

- 2 Adjust the volume if necessary.

- 3 Press **[Hang-up]** on the Hands-Free Phone System and hung up the phone.

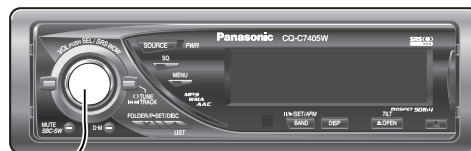

Adjust the ring volume

The ring volume is adjustable from this unit.
(Setting range: OFF/LOW/MID/HIGH, Default: MID)

[^]: up

[v]: down

Notes:

- The ring volume is adjustable only when receiving calls.
- The ring volume is adjustable only when the phone ring comes out of the main unit.
- The ring volume is also adjustable by turning **[VOL]**.

Reject calls

Pressing **[Hang-up]** allows users to reject a call when the call is coming in.

Bluetooth disconnection/reconnection

Pressing **[Hang-up]** allows users to temporarily disconnect when the phone is in the waiting state.

Pressing **[Hang-up]** allows users to reconnect when the Bluetooth unit is temporarily disconnected.

Notes:

- This item is not selectable by pressing [SOURCE], but activated by receiving an incoming call.
- Only outline is described here. Refer to the operating instructions for the Hands-Free Phone System for further information.
- The mute function is automatically canceled when receiving a call even at mute-on setting.
- This unit is not operable when receiving a call at power-off setting.
- We do not guarantee all the operations of connectable devices.

Note: Speaker output is adjustable only when receiving calls.

- 1** Press [PUSH SEL: Select] to display the AUDIO menu display.




For using the remote control, use [BAND] (SET).

- 2** Press [PUSH SEL: Select] to select a mode to be adjusted.

For using the remote control, use [BAND] (SET).

- 3** Turn [VOL] clockwise or counterclockwise to adjust.

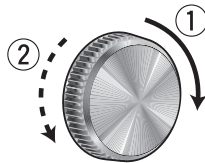

For using the remote control, use [^] or [v].

Note: If no operation takes place for more than 10 seconds in the audio menu (2 sec. in Main volume adjustment), the display returns to the regular mode.



Hands-Free SPEAKER

Speaker selection

BOTH : Sound from both speakers (default)

LEFT : Sound from left speaker

RIGHT : Sound from right speaker

Note: Sound comes only from the front speakers.

Troubleshooting

If You Suspect Something Wrong

Check and take steps as described below.

If the described suggestions do not solve the problem, it is recommended to take the unit to your nearest authorized Panasonic Service Center. The product should be serviced only by qualified personnel. Please refer the checking and the repair to professionals. Panasonic shall not be liable for any accidents arising out of neglect of checking the unit or your own repair after your checking.

Never take measures especially for those other than indicated by *italic* letters in "Possible Solution" described below because those are too dangerous for users to handle themselves.

Warning

- Do not use the unit in an irregular condition, for example, without sound, or with smoke or a foul smell, which can cause ignition or electric shock. Immediately stop using the unit and consult your dealer.
- Never try to repair the unit by yourself because it is dangerous to do so.

| Display | Possible cause → Possible solution |
|---|--|
| <div style="border: 1px solid black; padding: 5px; margin-bottom: 5px;">CHANGER E 1</div> <div style="border: 1px solid black; padding: 5px; margin-bottom: 5px;">CHANGER E 2</div> <p style="text-align: center;">↓ (After 5 seconds) To next disc automatically</p> | <p>The disc is dirty, or is upside down.</p> <p>The disc has scratches. → <i>Eject the magazine.</i></p> <ul style="list-style-type: none"> • Check the disc. • Load the disc again. |
| <div style="border: 1px solid black; padding: 5px; margin-bottom: 5px;">CHANGER E 3</div> | <p>No operation by some cause. → <i>Eject the magazine. If failure persists, press the reset switch on the disc changer. If normal operation is not restored, consult your dealer or the nearest Panasonic Service Center to ask for repairs.</i></p> |
| <div style="border: 1px solid black; padding: 5px; margin-bottom: 5px;">CHANGER E 6</div> | <p>An error arises in the DVD changer. → <i>Check the DVD changer. ("REGION ERROR" etc.)</i></p> |
| <div style="border: 1px solid black; padding: 5px; margin-bottom: 5px;">NO DISC</div> | <p>No disc is in the CD Changer (magazine). → <i>Insert discs into the changer (magazine).</i></p> |
| <div style="border: 1px solid black; padding: 5px; margin-bottom: 5px;">NOT CONNECTED</div> | <p>The changer has become disconnected from the unit in the changer mode. → <i>Verify the wiring.</i></p> |

DISC Changer

Note: Messages in the action and display sections of the error chart vary with changers. Refer to the operating instructions for the Disc changer for details.

Display

Possible cause → Possible solution

NO iPod

The iPod cable was disconnected in the iPod mode.
→ **Reconnect the iPod cable.**

NO SONGS

Your iPod has no playable music.
→ **Download playable music to your iPod.**

Memorandum

Matsushita Electric Industrial Co., Ltd.

Web Site: <http://panasonic.net>

YFM284C665CA

NY1006-1116

Printed in China

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>