


Panasonic

CD Player/Receiver with Full Dot Matrix
Display and CD Changer Control

CQ-DFX602N Operating Instructions

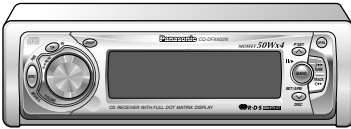

Bedienungsanleitung Manuel d'instructions Gebruiksaanwijzing Bruksanvisning Manuale di istruzioni Manual de Instruccion



COMPACT
disc
DIGITAL AUDIO



- Please read these instructions carefully before using this product and keep this manual for future reference.
- Bitte lesen Sie diese Bedienungsanleitung vor der Verwendung dieses Produktes aufmerksam durch und bewahren Sie sie danach für spätere Nachschlagzwecke sorgfältig auf.
- Prière de lire ces instructions attentivement avant d'utiliser le produit et garder ce manuel pour l'utilisation ultérieure.
- Leest u deze instructie alstublieft zorgvuldig door voor u dit product in gebruik neemt en bewaar deze handleiding voor later gebruik.
- Läs igenom denna bruksanvisning noga innan produkten tas i bruk. Spara bruksanvisningen för framtida behov.
- Si prega di leggere attentamente queste istruzioni prima di usare questo prodotto e di conservare questo manuale per usi futuri.
- Lea con atención estas instrucciones antes de utilizar el producto y guarde este manual para poderlo consultar en el futuro.

Contents	Page
Precautions	4
Components	5
General	6
Radio	8
Radio Data System (RDS)	10
CD Player	16
CD Changer Control	18

Inhaltsverzeichnis	Seite
Vorsichtsmaßnahmen	42
Komponenten	43
Allgemeines	44
Radio	46
Radio-Daten-System (RDS)-Empfang	48
CD-Spieler	54
Steuerung des CD-Wechsler	56

Table des matières	Page
Mesures de précaution	80
Éléments constitutifs	81
Généralités	82
Autoradio	84
Réception radio RDS	86
Lecteur de CD	92
Commande de changeur de CD	94

Inhoudsopgave	Bladzijde
Voorzorgen	118
Componenten	119
Algemeen	120
Radio	122
Radio Data Systeem (RDS)	124
CD-speler	130
Bediening van de CD-wisselaar	132

Innehåll	Sida
Observera	156
Medföljande delar	157
Allmänt	158
Radiomottagning	160
RDS (Radio Data System)	162
CD-spelare	168
CD-växlarstyrning	170

Contenuto	Pag.
Precauzioni	194
Componenti	195
Generali	196
Radio	198
RDS (Radio Data System)	200
Lettore CD	206
Controllo del cambia CD	208

Indice	Pag.
Precauciones	232
Componentes	233
Generalidades	234
Radio	236
Sistema de datos radiofónicos (RDS)	238
Reproductor de CD	244

Audio Setting-AUDIO MENU	20
Display Setting-PICTURE MENU	22
Function Setting-FUNCTION MENU	24
Installation	26
Anti-Theft System	29
Electrical Connections	30
Speaker Connections	34

Fuse	34
Maintenance	35
Troubleshooting	36
Specifications	41

Audio Einstellung <AUDIO-Menü>	58
Bildeinstellung <PICTURE-Menü>	60
Funktionseinstellung <FUNCTION-Menü>	62
Einbau	64
Diebstahlschutz	67
Elektrischer Anschluß	68
Anschluß der Lautsprecher	72

Sicherung	72
Pflege	73
Störungsbeseitigung	74
Technische Daten	79

Définition de sortie audio-Menu AUDIO	96
Définition d'image-Menu PICTURE	98
Définition de fonction-Menu FUNCTION... ..	100
Installation	102
Système antivol	105
Branchements électriques	106
Branchment des haut-parleurs	110

Fusible	110
Entretien	111
En cas de difficulté	112
Données techniques	117

Geluidinstelling - AUDIO Menu	134
Beeldinstelling - PICTURE Menu	136
Funcctie-instelling - FUNCTION Menu	138
Installatie	140
Anti-diefstal systeem	143
Elektrische aansluitingen	144
Aansluitingen luidsprekers	148

Zekering	148
Verhoud	149
Verhelpen van storingen	150
Technische gegevens	155

Ljudinställningar-ljudmeny	172
Bildskärmsinställningar-bildmeny	174
Visning av funktionsmeny	176
Montering	178
Stölskyddsanordning	181
Elektriska anslutningar	182
Anslutning av högtalare	186

Säkring	186
Underhåll	187
Felsökning	188
Tekniska data	193

Impostazione dell'audio-Menu AUDIO	210
Impostazione dell'immagine -Menu PICTURE	212
Impostazione della funzione -Menu FUNCTION	214
Installazione	216
Sistema antifurto	219

Collegamenti elettrici	220
Collegamenti degli altoparlanti	224
Fusibile	224
Manutenzione	225
Correzione dei difetti di funzionamento	226
Dati tecnici	231

Control del cambiador de discos CD	246
Ajuste de audio-Menú de AUDIO	248
Ajuste de la imagen-Menú de PICTURE ..	250
Ajuste de la función-Menú de FUNCTION..	252
Instalación	254
Sistema antirrobo	257
Conexiones eléctricas	258

Conexiones de los altavoces	262
Fusible	262
Mantenimiento	263
Solución de problemas	264
Especificaciones	269

Panasonic welcomes you to their constantly growing family of electronic products owners. We endeavor to give you the advantages of precise electronic and mechanical engineering, manufactured with carefully selected components, and assembled by people who are proud of the reputation their work has built for our company. We know this product will bring you many hours of enjoyment, and after you discover the quality, value and reliability we have built into it, you too will be proud to be a member of our family.

Precautions

Volume Level

For your driving safety, keep the volume level low enough to be aware of road and traffic conditions.

Car Washing

To avoid electrical shorts which may cause fire, or other damage, do not expose this product (including the speakers and CDs) to water or excessive moisture.

Car Ventilation

If your car is parked for several hours in direct sunlight, the temperature inside the car may become very high. It is advisable to drive the car and give the interior a chance to cool down before switching the unit on.

Power Supply

This product is designed to be used in a car having a 12-Volt negative ground battery system.

Disc Mechanism

Do not insert coins or any small objects. Keep screwdrivers and other metallic objects away from the disc mechanism and disc.

Service

This product is made of precision parts. Do not attempt to disassemble or adjust any parts. For repair, please consult your nearest authorized Panasonic Service Center.


Note: The preset memory is cleared to return to the original factory setting when the power connector or battery is disconnected.

Laser Product

Label Indications and Their Locations

DANGER!

Invisible laser radiation when open. Avoid direct exposure to beam.

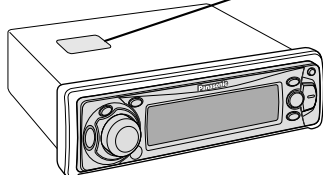

CLASS 1 LASER PRODUCT

- APPREIL À LASER DE CLASSE
- KLASS 1 LASER APPARAT
- LUOKAN 1 LASERPLAITE

Caution Label

DANGER! Invisible laser radiation when open. Avoid direct exposure to beam.

ADVARSEL! Usynligt laserlys udstråles ved åbning. Undgå direkte bestråling.

VARO! Avattaessa ja suojalukitus ohitettaessa olet alttiina näkymättömälle lasersäteilylle. Älä katso säteeseen.

WARNING! Osynlig laserstråling när denna del är öppnad och spärren är urkopplad. Betrakta ej strålen.

ADVERSEL! Usynlig laserstråling når deksel åpnes og sikkerhedslås brytes. Unngå eksponering for strålen.

Caution: This product utilizes a laser.

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Laser products:


Wave Length 780 nm

Laser Power No hazardous radiation is emitted with safety protection.

Do not take apart this unit or attempt to make any changes yourself.

This unit is a very intricate device that uses a laser pickup to retrieve information from the surface of compact discs. The laser is carefully shielded so that its rays remain inside the cabinet.

Therefore, never try to disassemble the player or alter any of its parts since you may be exposed to laser rays and dangerous voltages.

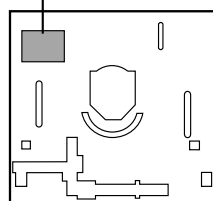

Deck Ass'y
(Upper Side)

VORSICHT! UNSICHTBARE LASERSTRAHLUNG!
WENN ABDECKUNG GEÖFFNET IST, NICHT DEM LASERSTRAHL AUSSETZEN.


Components

• Operating Instructions	1
• Supplied Hardware	1 set (→ Page 26)
• Remote Control Unit	1
• Lithium Battery (CR2025)	1
• Warranty Card	1

Remote Control Preparation

Battery Installation

1. Remove the battery holder.
Pull the holder out at position B while pushing position A as indicated.
2. Install the battery on the battery holder.
Place the battery in the holder with its (+) side upwards as shown.
3. Insert the battery holder.
Push in the battery holder back into its original position.

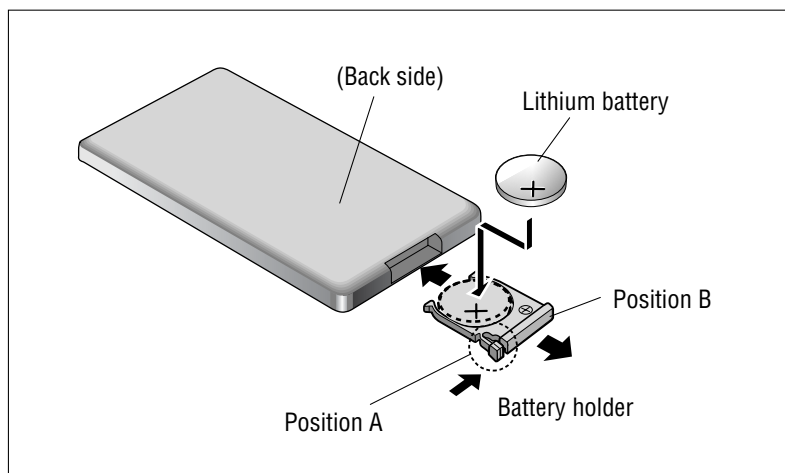

Battery Notes

Remove and dispose of an old battery immediately.


Battery Information:

- Battery Type: Panasonic lithium battery (CR2025) (Included)
- Battery Life: Approximately 6 months under normal use (at room temperature)

Caution: Improper use of batteries may cause overheating, an explosion or ignition, resulting in injury or a fire. Battery leakage may damage the unit.

- Do not disassemble or short the battery. Do not throw a battery into a fire.
- Keep batteries away from children to avoid the risk of accidents.
- Follow local regulations when disposing of batteries.

General

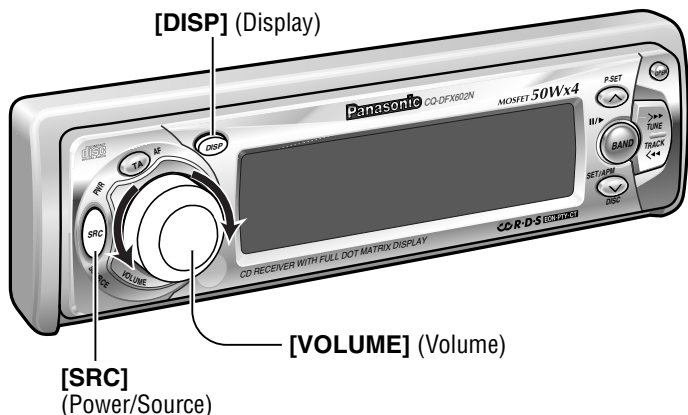

Demonstration Message

When you use this unit for the first time, a demonstration message appears on the display.

Press [DISP] to change to regular mode.



Note: To display the message again, press [SRC] / [SOURCE] for 4 seconds or more when turning power on. (**ACC ON**)

Turn your car's ignition key to ACC or ON position.

Power

ON : Press [SRC] / [SOURCE].



OFF : Press [SRC] / [SOURCE] again and hold for more than 1 second.


Note: If the security function is set to ON, the security message is shown with a warning alarm. (→ Page 24 about Security Function setting)

ACC Selection

If your car has the ACC position on the ignition switch, set the ACC selection to ON. (**Default: ACC OFF**) (→ Page 24)

ACC ON is attached to the functional descriptions under the ACC selection ON condition.

[SOURCE]
(Power/Source)

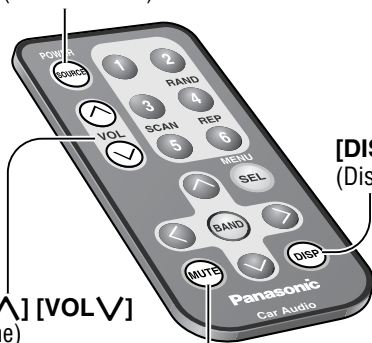

[DISP]
(Display)

 
[VOL ^] [VOL V]
(Volume)

[MUTE]
(Mute/Attenuation)

Source


Press [SRC] / [SOURCE] to change the source.

Radio



(→ Page 8)

 CD Player




(CD is in the player. → Page 16)

Auxiliary



Note: Connect to external devices.

 CD Changer



(Optional CD changer is connected and magazine is in the changer. → Page 18)

Volume

[VOLUME] (Clockwise) / [VOL▲] : Up
 [VOLUME] (Counterclockwise) / [VOL▼] : Down



Setting Range : 0 to 40

Note: The sound level for each source is stored in memory. (For radio, one volume setting for AM, one volume setting for all FMs)

Mute / Attenuation

(Only for remote control)

ON : Press [MUTE].

OFF : Press again.

Decreasing volume range depends on setting.
 (Mute / Attenuation setting → Page 24)



: No sound




: Decrease the volume to 1/10 of previous level.

Display Change

When Power is ON...

Press [DISP].

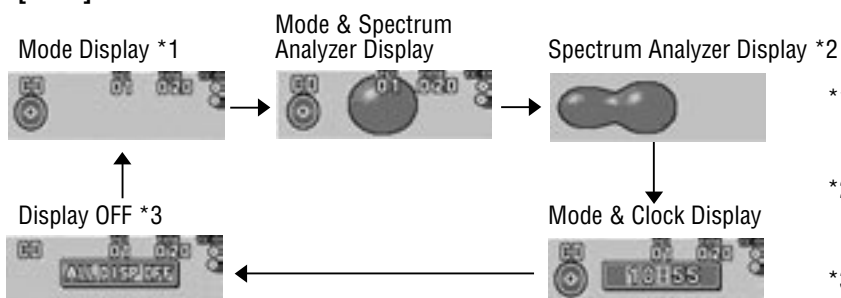

*1 The title information can be displayed in the CD changer mode. (→ Page 19)

*2 If you press a button, the Mode & Spectrum Analyzer Display appears for 5 seconds.

*3 If you press a button, the light is turned on, the Mode Display appears, and the light is turned off approximately 5 seconds later.

Notes:

- If title display is set to ON in CD changer mode, mode display is automatically selected. (→ Page 19)
- Set the Spectrum Analyzer pattern in a separate procedure. (→ Page 22)
- When RDS's Clock Time (CT) service is not received, "NO CT" is displayed. Adjust the clock. (→ Page 22)
- Do not watch moving images or title scroll on the LCD while driving.

Press and hold [DISP] for more than 2 seconds.
 Indicators which are not displayed on Mode Display are displayed.
 (Audio setting information, etc.)

AUDIO Indicator



Press [DISP] again to cancel.

When Power is Off... (ACC ON)

Press [DISP].

Clock Display



(Back light is on)


Display OFF



(Back light is off)

Note: When RDS's Clock Time (CT) service is not received, "NO CT" is displayed. Adjust the clock. (→ Page 22)


Radio

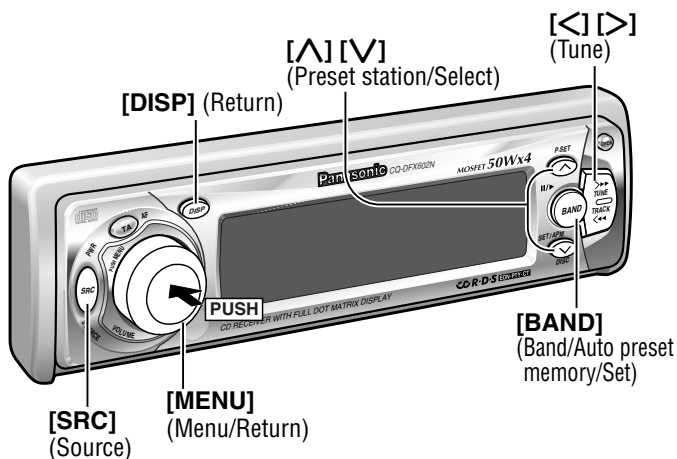

1 Radio Mode

Press [SRC] / [SOURCE] to select the radio mode.



Radio Mode Display

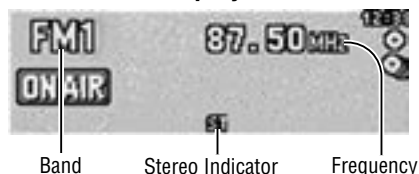

Note: The stereo indicator lights during reception of an FM stereo broadcast.

2 Band

Press [BAND].

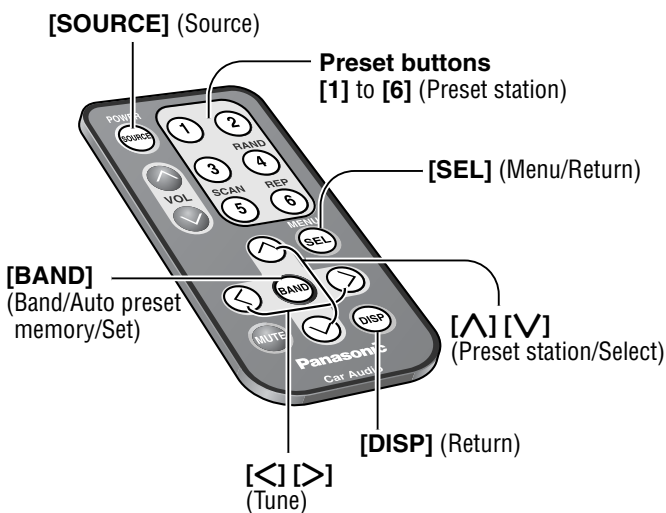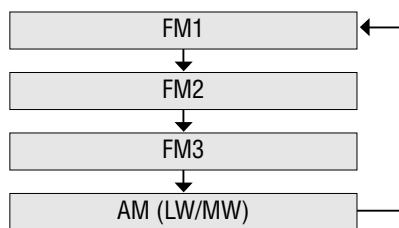

3 Tuning

[>] : Higher frequency
 [<] : Lower frequency
 Press and hold [>] or [<] for more than 0.5 seconds, then release. Seeking will start.

Mono / Local Selection (Menu Setting)

- Press [MENU] / [SEL] during radio (FM or AM) mode.
- Press [^] or [v] to select MONO or LOCAL.
(In AM mode, only LOCAL can be selected.)
- Press [BAND] to switch on or off in turn.


MONO ON : Noise is significantly decreased when weak signals are received from an FM broadcast station.

LOCAL ON : In seek tuning, only strong stations are detected.

LOCAL OFF : Relatively weak stations are picked up.

Note: Press [MENU] / [SEL] or [DISP] to return to the regular mode.

FM Menu Display

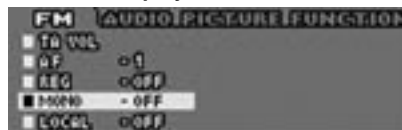

AM Menu Display



Station Preset

Up to 6 stations can be stored in each of the FM1, FM2, FM3 and AM (LW/MW) band selections.


Manual Preset Memory

Manually save a station in the preset memory.

Select a band and frequency. (step ② and ③ on the previous page)

- ① Press and hold [^] or [v] for more than 2 seconds until the preset number blinks.
- ② Press [^] or [v] to select a preset number.
- ③ Press and hold [^] or [v] for more than 2 seconds to memorize.

The display blinks once, and a receiving station is saved in the memory.



Notes:

- Frequency setting can be performed even after selecting a preset number.
- To suspend preset write, press [DISP].

Entering numbers directly from the remote control


Select a band and frequency (step ② and ③ on the previous page)
Press and hold one of the preset button from [1] to [6] on the remote control for more than 2 seconds.

Auto Preset Memory


Automatically save stations with good reception in the preset memory.

Select a band. (step ② on the previous page)

Press and hold [BAND] for more than 2 seconds.



Searching

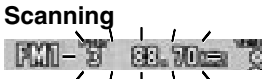

Scanning

- The 6 stations with good reception will be automatically saved in the memory under preset numbers 1 to 6.
- Once set, the preset stations are sequentially scanned for 5 seconds each.
- To stop the scanning, press [^] or [v].
(Pressing one of the preset button from [1] to [6] on the remote control also can stop the scanning.)

Note: Only RDS stations will be saved at default setting (AF ON). To select non RDS stations too, set AF OFF. (→ Page 11)

Note: New stations are overwritten on existing saved stations after following this procedure.

Preset Station Calling

Select a band. (step ② on the previous page)

Press [^] or [v] to select the preset number for tuning in the preset station.

Entering numbers directly from the remote control

Press one of the preset button from [1] to [6] on the remote control.

Radio Data System (RDS)

RDS Basics


Some FM stations are broadcasting added data compatible with RDS. This radio set offers convenient functions using such data.

RDS service availability varies with areas. Please understand if RDS service is not available in your area, the following service is not available, either. This chapter explains the summary and operation regarding RDS.

The following functions are available when receiving RDS stations.

Program Service Name (PS) Display

The name of station is displayed.

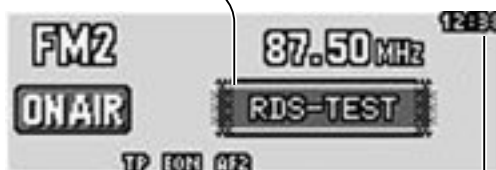

Alternative Frequency (AF)

When reception is poor, an RDS station broadcasting the same program is tuned in automatically.

Clock Time (CT) Service

When receiving an RDS station, the CT service automatically adjusts the time.

“--:--” is displayed in areas where CT service is not available. (⇒ Page 22 for Clock Adjustment)

Traffic Program (TP)

Some RDS FM stations periodically provide traffic announcement.

The station which broadcast the traffic announcement is called Traffic Program (TP).

Traffic Announcement (TA)


 
Radio announcements on traffic conditions.

Program Type (PTY) Display

RDS FM stations provide a program type identification signal.

Example: news, rock, classical music, etc. (⇒ Page 13)

Note: If Mode & Clock display is selected by pressing [DISP], the frequency disappears and the following display appears. (⇒ Page 7 for Display Change)

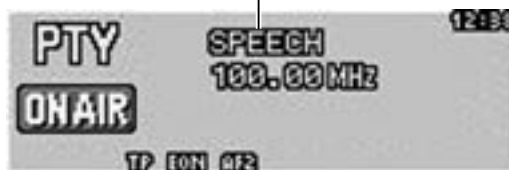

Alternative Frequency (AF)

Alternative Frequency (AF) Mode

Default : AF mode is active.


(Press and hold [TA] on the main unit for more than 2 seconds to switch the AF mode on or off.)

AF ON : AF, Best Station and PI Seek function are active.



Auto Preset Memory
When AF ON is selected, only RDS stations will be memorized automatically.
(→ Page 9 for auto preset memory)

Note: When AF is set to OFF, stations other than RDS stations will also be saved in the memory.

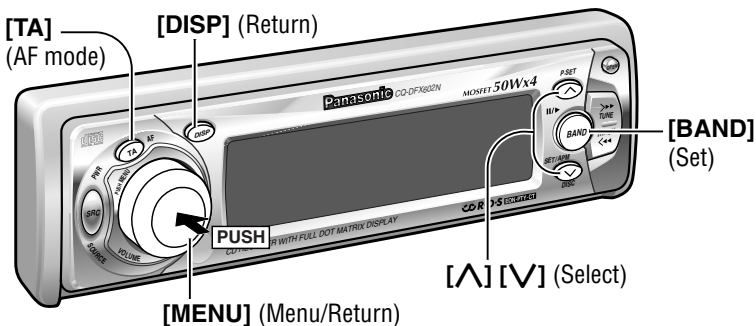

AF Level and Region (REG) Mode (Menu Setting)


- 1 Press [MENU] / [SEL] to display the menu.
- 2 Press [∧] or [∨] to select an item.

FM Menu Display




AF Level

Press [BAND] to change the AF level.

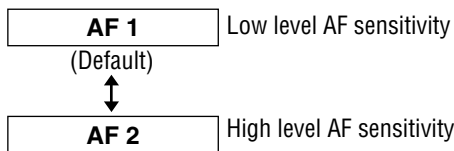

REG Mode

Changes the selection range of AF and PI Seek.
Press [BAND] to switch on or off in turn.

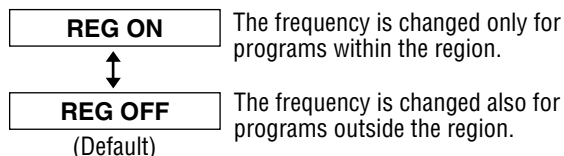

Notes:

- When REG mode is switched from OFF to ON or vice versa, AF mode turns on automatically.
- Press [MENU] / [SEL] or [DISP] to return to the regular mode.

Preset Memory (AF ON Setting)


Preset Station Calling (Best Station)

AF self-tuning selects a station with good reception when the preset tuning is activated.

For Poor Sound Quality (PI Seek) (Only for remote control)

If reception is poor when tuning in a preset station, press the same preset number button. The same station with better reception will be searched for.

Press the same preset number button again to cancel.

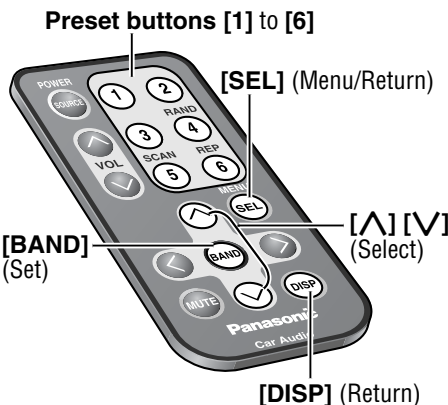


Radio Data System (RDS) (continued)

Traffic Announcement (TA)


Traffic Announcement (TA) Mode

Press **[TA]** on the main unit to switch the TA mode on.
(Press again to switch the TA mode off.)


TA ON : If the station received is not a TP station, the unit automatically searches for a TP station to tune in to it. When the TP station received begins a traffic announcement, you can hear it from the unit.

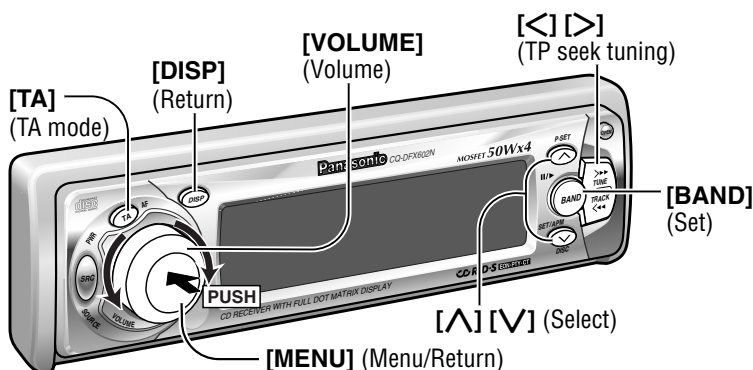

TA Mode

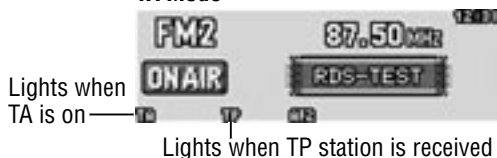

Traffic Announcement receiving display

 

TP Seek Tuning

When TA ON is selected, only TP station will be searched. Press and hold **[>]** or **[<]** for more than 0.5 seconds, then release. Seeking will start.

TP Auto Preset Memory

When TA ON is selected, only TP stations will be memorized automatically. (→ Page 9 for auto preset memory)

TP Auto Search

 
When reception of a TP station is poor, TP Auto Search will automatically search for a TP station with better reception. (Enabled only in the Muting in TA mode.)

TA Volume Set (Menu Setting)

Traffic announcements are broadcast at the TA volume level.

- 1 Press **[MENU]** / **[SEL]** to display the menu.
- 2 Press **[^]** or **[V]** to select TA VOL.
- 3 Press **[BAND]** to set the current volume level as the TA volume level.

FM Menu Display



Note: Press **[MENU]** / **[SEL]** or **[DISP]** to return to the regular mode.

Muting in TA Mode


To listen to only traffic announcements. While listening to an FM station which is not currently broadcasting traffic announcement, turn the **[VOLUME]** counterclockwise or press **[VOLV]** (remote control) to set the volume to 0. The traffic announcement will be output at the TA volume level.

TA Standby Mode

When set to TA on with the unit in another mode (CD, CD changer, AUX), it will automatically switch to radio mode and output the traffic announcement.

When the traffic announcement has finished, the unit will return to the previous mode.


[VOL^] [VOLV] (Volume)

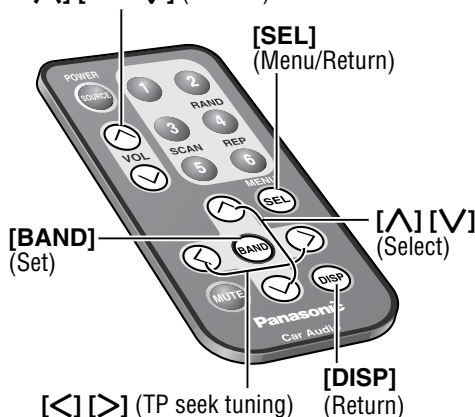

Program Type (PTY) Reception



Program Type (PTY) Mode

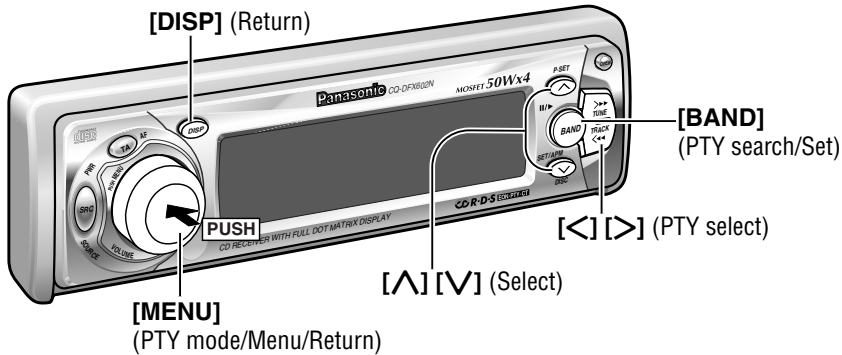Press and hold [MENU] / [SEL] for more than 2 seconds to switch the PTY display mode on. (Press and hold again to switch the PTY display mode off.)
PTY ON : The PTY function described below becomes enabled after selecting to the PTY mode.



PTY Language Selection (Menu Setting)

- Press [MENU] / [SEL] to display the RDS-PTY menu and press [BAND].
- Press [^] or [v] to select the language, and press [BAND] to set.

(Default : English)

Note: Press [MENU] / [SEL] or [DISP] to return to the regular mode.


PTY Selection

- Press [>] to change the program type as shown below. ([<]: opposite direction)
- Select the desired program type and press [BAND]. Seek will start to tune in to a station broadcasting the selected program type. Press [BAND] again to cancel.



SPEECH	MUSIC	NEWS	AFFAIRS
INFO	SPORT	EDUCATE	DRAMA
CULTURE	SCIENCE	VARIED	POP M
ROCK M	EASY M	LIGHT M	CLASSICS
OTHER M	WEATHER	FINANCE	CHILDREN
SOCIAL	RELIGION	PHONE IN	TRAVEL
LEISURE	JAZZ	COUNTRY	NATION M
OLDIES	FOLK M	DOCUMENT	

Note: When there is no corresponding program type station, "NONE" is displayed for 2 seconds.

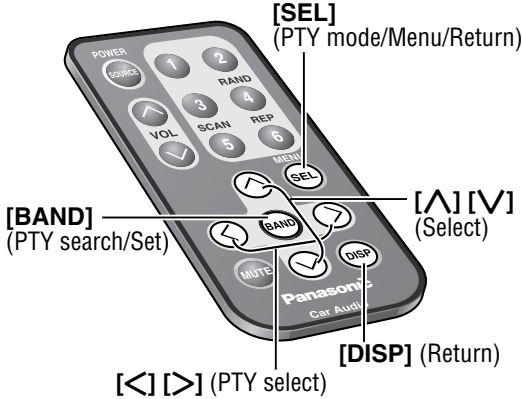


Radio Data System (RDS) (continued)

Program Type (PTY) Reception

PTY Preset Call


Program types are stored in memory under preset memory number 1 to 6 as shown in the table on the next page. To select the desired program type, press [^] or [v] or preset buttons on the remote control.

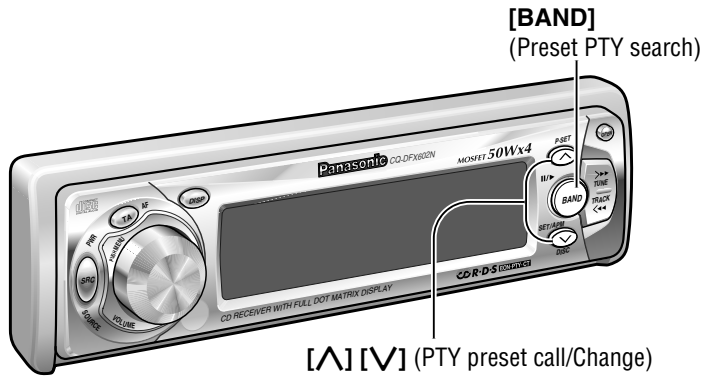

PTY Preset Change

- 1 Select the desired program type by using PTY Selection or PTY Preset Call.
- 2 Press and hold [^] or [v] for more than 2 seconds until the preset number blinks.
- 3 Press [^] or [v] to select the desired preset number.
- 4 Press and hold [^] or [v] for more than 2 seconds to memorize.

*On the remote control, select the program type and press and hold the preset button for more than 2 seconds.

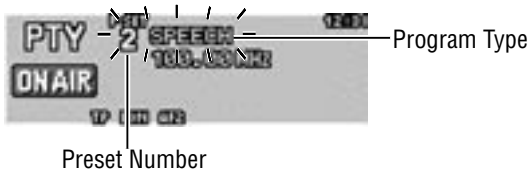

Note: To suspend preset write, press [DISP].


Preset PTY Search

- 1 Select a desired program type by PTY preset call.
- 2 Press [BAND] to tune in the same program type station.



Press [BAND] again to cancel.

Note: When there is no corresponding program type station, "NONE" is displayed for 2 seconds.

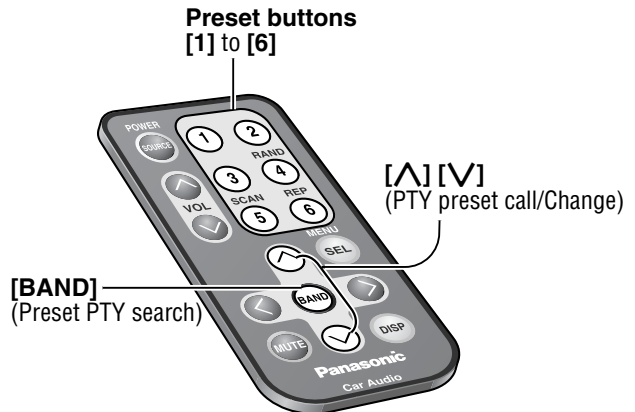

Program Type (PTY) Reception

PTY Preset (Default)

Preset No.	Program Type	When PTY search is activated, these program type is receivable.
1	NEWS	NEWS
2	SPEECH	AFFAIRS, INFO, EDUCATE, DRAMA, CULTURE, SCIENCE, VARIED, WEATHER, FINANCE, CHILDREN, SOCIAL, RELIGION, PHONE IN, TRAVEL, LEISURE, DOCUMENT
3	SPORT	SPORT
4	POP M	POP M
5	CLASSICS	CLASSICS
6	MUSIC	ROCK M, EASY M, LIGHT M, OTHER M, JAZZ, COUNTRY, NATION M, OLDIES, FOLK M

Other RDS functions

Enhanced Other Network (EON)

When EON data is received, the EON indicator lights the TA and AF functions are expanded as follows.

TA : Traffic information from the current and other network stations can be received.

AF : The frequency list of preset RDS stations is updated by EON data.

EON enables the radio to make fuller use of RDS information. It constantly updates the AF list of preset stations, including that currently tuned in to. For example, if you preset a station far from home, you will later be able to receive the same station at an alternative frequency, or any other station serving the same program. EON also keeps track of locally available TP stations for quick reception.


Emergency Announcement Reception

When an emergency announcement is broadcast, the unit is automatically switched to receiving that broadcast. (Even when in CD mode, CD changer mode and AUX mode.). During receiving the emergency announcement, "ALARM" blinks on the display.



Note: Emergency announcements are broadcast at the TA volume level. (→ Page12)

CD Player

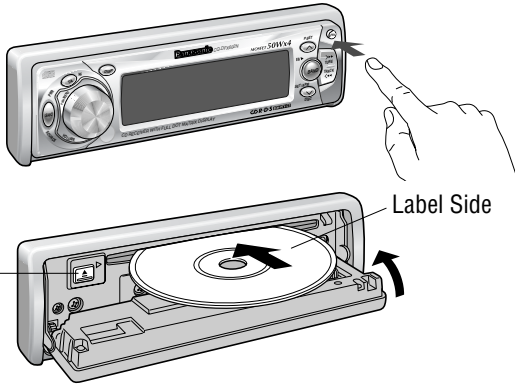

To Stop and Eject the Disc

Open the front panel and press [▲].

 
Note: The unit returns to the previous mode when the disc is ejected in the CD player mode.

1 Open the Front Panel

Press [OPEN] on the front panel.

2 Insert a Disc

Insert a disc and close the front panel. Playback starts.




Notes:

- Do not insert a disc when the disc indicator lights because a disc is already loaded.
- The power will be turned on automatically when a disc is loaded. (ACC ON)

When a disc is in the player...

Press [SRC] / [SOURCE] to select the CD player mode and playback starts.

CD Player Mode Display

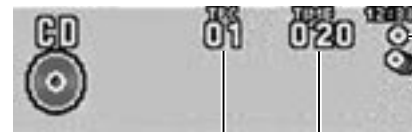

Track Number Play Time

Lights when a disc is in the player

Track Selection

[▶▶] / [>] : Next track

[◀◀] / [<] : Beginning of the current track
Previous track (Press twice.)

Fast Forward / Fast Reverse

Press and hold

[▶▶] / [>] : Fast forward

[◀◀] / [<] : Fast reverse



Release to resume the playback.

Pause

Press [BAND] to pause.



Press [BAND] again to resume the playback.

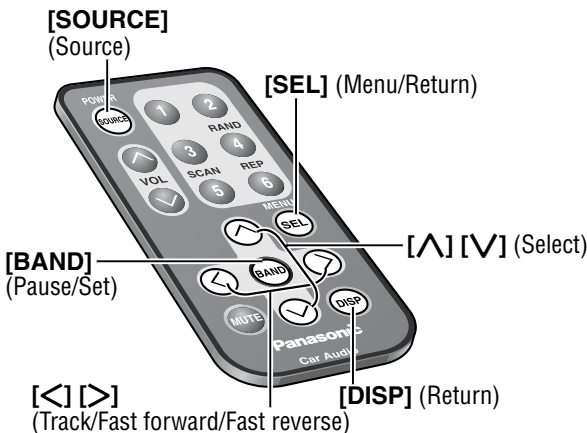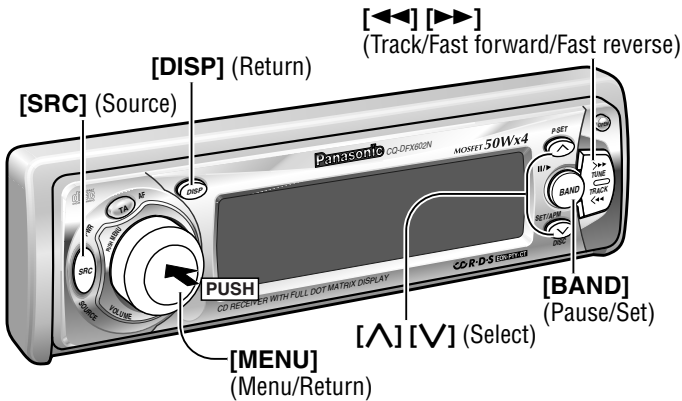

Cautions:

- Do not use irregularly shaped discs.
- Do not use discs that have a seal or label attached.
- Be sure to close the front panel while CD playback.
- To avoid damaging the front panel, do not push it down or place objects on it while it is open.
- Do not pinch your finger or hand in the front panel. Do not insert foreign matter into the disc slots.



Note: Refer to the section on “Notes on CD-Rs/RWs” (→ Page 35).

CD Menu Setting


- ① Press **[MENU]** / **[SEL]** during CD playing.
- ② Press **[^]** or **[v]** to select an item.
- ③ Press **[BAND]** to switch on or off in turn.

Note: Press **[MENU]** / **[SEL]** or **[DISP]** to return to the regular mode.

CD Menu Display



Random Play	▶	Select RAND	<div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"> <input type="checkbox"/> ON : All the available tracks are played in a random sequence. </div> <div style="border: 1px solid black; padding: 5px;"> <input type="checkbox"/> OFF : Cancel </div>
Repeat Play	▶	Select REP	<div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"> <input type="checkbox"/> ON : Repeat the current selection. </div> <div style="border: 1px solid black; padding: 5px;"> <input type="checkbox"/> OFF : Cancel </div>

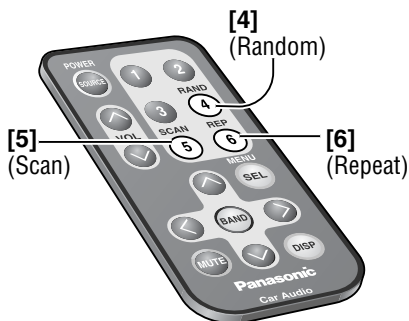

Scan Play (Only for remote control)

Press **[5]**. The first 10 seconds of each track play in sequence.
Press **[5]** again to cancel.

Random and Repeat Play (Setting with Remote Control)
 Press **[4]** (Random) / **[6]** (Repeat).
 Press again to cancel.

CD Changer Control

CD changer functions are designed for optional Panasonic CD changer unit. (→ Page 32 and 33 for connection)

Insert the Magazine

Playback starts.

Notes:


- The power will be turned on automatically when a magazine is loaded. (**ACC ON**)
- The unit returns to previous mode when the magazine is ejected in the CD changer mode.

When the magazine is in the changer...

Press **[SRC]** / **[SOURCE]** to select the CD changer mode and playback starts.

Note: Load a magazine with CDs when "NO DISC" is displayed.

CD Changer Mode Display

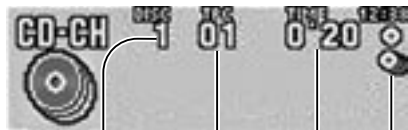

Disc Number Track Number Play Time
Lights when a CD changer is connected

Disc Selection

- [^] : Next disc
- [v] : Previous disc

Track Selection

- [>>] / [>] : Next track
- [<<<] / [<] : Beginning of the current track
Previous track (Press twice.)



Fast Forward / Fast Reverse

Press and hold

[>>>] / [>>] : Fast forward

[<<<<] / [<<] : Fast reverse

Release to resume the playback.

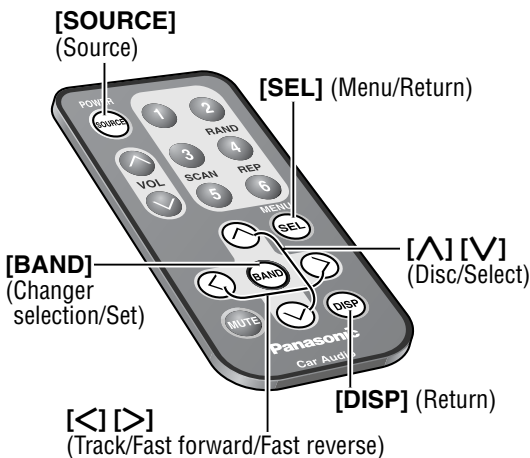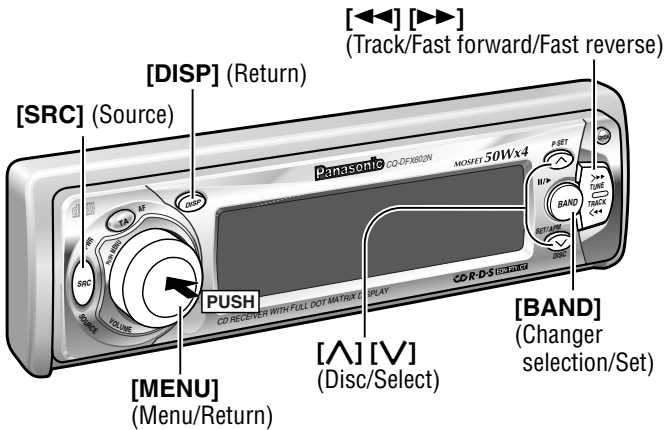

CD Changer Selection

Preparation: Connect another CD changer by using an optional dual CD changer selector (CA-CD55EN).

Press **[BAND]** to select CD changer 1 or CD changer 2.



Example: CD changer 2 is selected.

Note: This selection is not possible when there is no magazine in the CD changer.

 


Note: CD text is displayed when the unit is connected to a CD changer capable of recognizing CD text (CX-DP9061EN, for example).

CD Changer Menu Setting


- ① Press **[MENU]** / **[SEL]** during CD changer playing.
- ② Press **[^]** or **[V]** to select an item.
- ③ Press **[BAND]** to switch on or off in turn.

CD Changer Menu Display



Note: Press **[MENU]** / **[SEL]** or **[DISP]** to return to the regular mode.

Random Play	Select	<input type="checkbox"/> ON : All the available tracks on all discs in the magazine are played in a random sequence.
	<input type="checkbox"/> RAND	<input type="checkbox"/> OFF : Cancel
	Select	<input type="checkbox"/> ON : All the available tracks on current disc are played in a random sequence.
	<input type="checkbox"/> D. RAND (Disc)	<input type="checkbox"/> OFF : Cancel
Repeat Play	Select	<input type="checkbox"/> ON : Repeat the current track selection.
	<input type="checkbox"/> REP	<input type="checkbox"/> OFF : Cancel
	Select	<input type="checkbox"/> ON : Repeat the current disc selection.
	<input type="checkbox"/> D. REP (Disc)	<input type="checkbox"/> OFF : Cancel
Title Display Default : ON	Select	<input type="checkbox"/> ON : Display
	<input type="checkbox"/> TITLE	<input type="checkbox"/> OFF : No display
		● "NO TITLE" is displayed when there is no information. Note: Use a CD having CD text information. (Up to 62 letters can be displayed in scroll mode.)
Title Scroll Default : ON	Select	<input type="checkbox"/> ON : Continuous scroll
	<input type="checkbox"/> TITLE SCROLL	<input type="checkbox"/> OFF : Scroll stops after a circle scroll Press and hold [BAND] for more than 2 seconds to have another circle scroll.

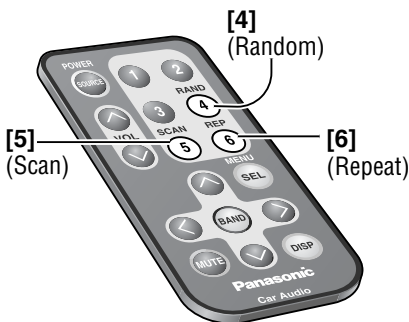

Scan Play (Only for remote control)

Press **[5]**. The first 10 seconds of each track on all discs are played in sequence. Press **[5]** again to cancel.



Press and hold **[5]** for more than 2 seconds. From the next disc, the beginning 10 seconds of the first track on each discs are played in sequence. Press and hold **[5]** again to cancel.

Random and Repeat Play (Setting with Remote Control)

Press **[4]** (Random) / **[6]** (Repeat).
Press again to cancel.

Press and hold **[4]** (Disc Random) / **[6]** (Disc Repeat) for more than 2 seconds.
Press and hold again to cancel.

Audio Setting - AUDIO Menu

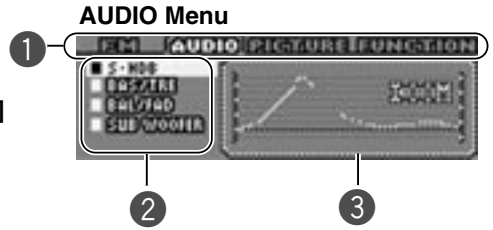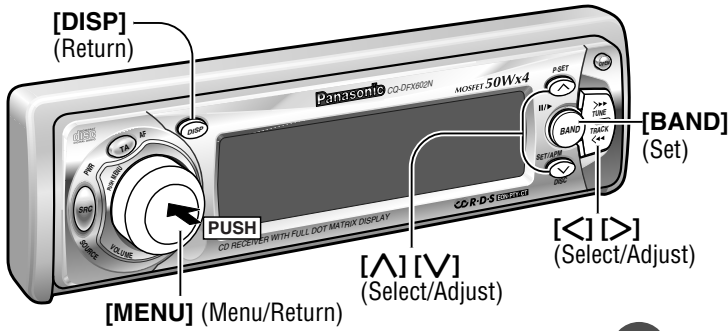

Super High Definition Bass (S-HDB)

Especially for rock music, the bass-sound will be more powerful.

Default : S-HDB OFF

Bass and Treble

Turn the bass/treble level up and down.

Default : (BAS) 0 (TRE) 0
Setting range : -12 to +12 dB (in 2 dB step)

Balance and Fader

You can adjust the sound balance among the front, rear, right and left speakers.

Default : (BAL) Center (FAD) Center
Setting range : 15 levels each

Sub-Woofer Volume

Default : 0
Setting range : Mute (-∞), -6 to +6 dB (in 2 dB step)

1

Press [MENU] / [SEL] to open the menu.

Press [>] or [<] to select AUDIO

Current Source
 ↑↓
AUDIO
 ↑↓
PICTURE
 ↑↓
FUNCTION

2

Press [^] or [V] to select

S-HDB

Press [BAND] to set.

Press [^] or [V] to select

BAS/TRE

Press [BAND] to set.

Press [^] or [V] to select


BAL/FAD

Press [BAND] to set.

Press [^] or [V] to select

SUB WOOFER

Press [BAND] to set.

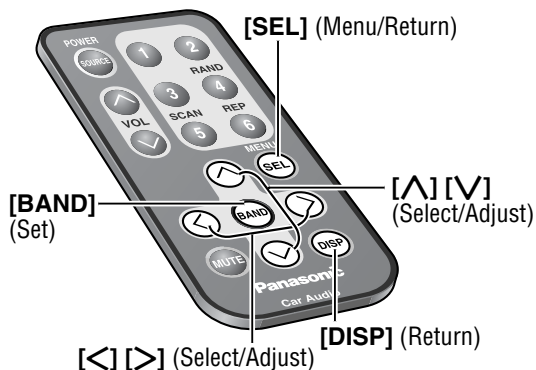

Note: Press [MENU] / [SEL] or [DISP] to return to the regular mode.

3 [<] [>] (Select/Adjust) [DISP] (Return)

[^] or [v] to change.

- [S-HDB OFF] : S-HDB off
- [BOOM] : The bass sound of the speakers are strongly emphasized.
- [TIGHT] : The bass sounds of the speakers are moderately emphasized. (The sound of the Sub-Woofers can be heard clearly.)



- ① Press [>] or [<] to select "BAS" (Bass) or "TRE" (Treble).
- ② [^] : Enhanced
[v] : Decrease




- [>] : Right enhanced
- [<] : Left enhanced
- [^] : Front enhanced
- [v] : Rear enhanced




- [>] : Up
- [<] : Down



Display Setting - PICTURE Menu

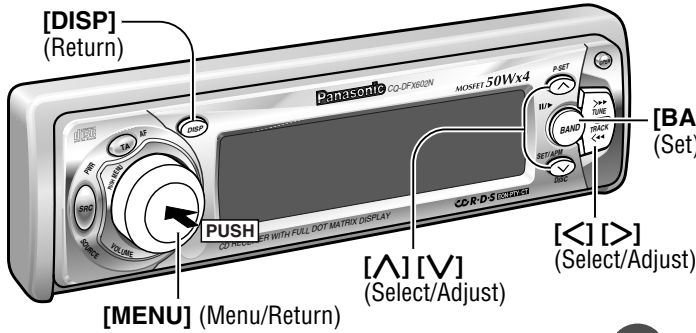

PICTURE (Display) Menu

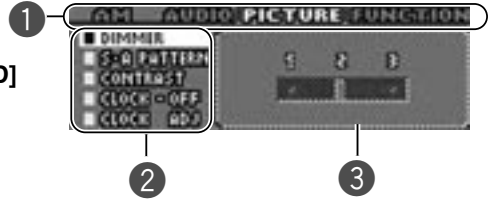

Dimmer

Default : DIMMER 3

Spectrum Analyzer Display Pattern

Default : Pattern A
Variety : 6 types

Contrast


Default : Level 3
Setting range : Level 1 to Level 5

Small Clock Display

Default : ON (Not adjusted. "-- : --" will appear.)

Clock Adjustment

When receiving an RDS station, the Clock Time (CT) service automatically adjusts the time. (→ Page 10) If CT service is not available, adjust the clock.

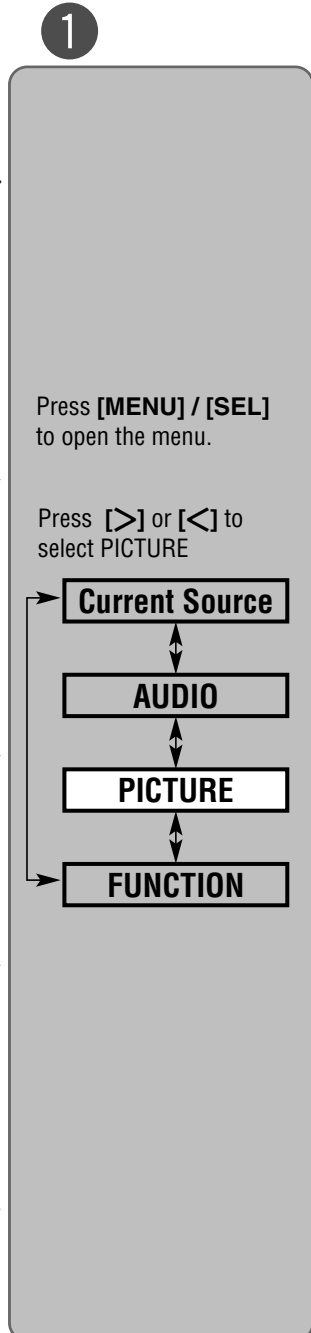

2

Press [^] or [v] to select

DIMMER

Press [BAND] to set.

Press [^] or [v] to select

S-A PATTERN

Press [BAND] to set.

Press [^] or [v] to select

CONTRAST

Press [BAND] to set.


Press [^] or [v] to select

CLOCK

Press [^] or [v] to select

CLOCK ADJ

Press [BAND] to set.

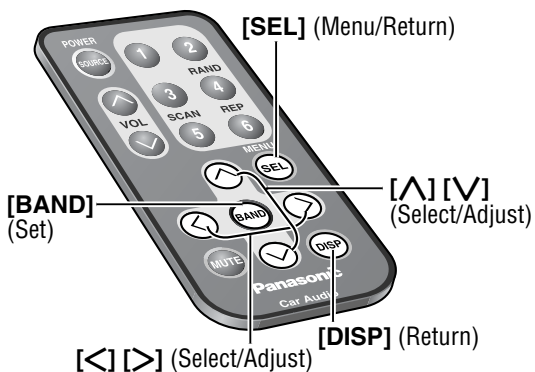

Note: Press [MENU] / [SEL] or [DISP] to return to the regular mode.

3 [**<**] [**>**] (Select/Adjust) [**DISP**] (Return)

[**>**] or [**<**] to change.

- 3 : Brighter
- 2 : Medium
- 1 : Darker



[**>**] or [**<**] to change.

- A : Display showing a cube that continues to change.
- B : Display showing a globe that continues to change.
- C : Display showing the image of a soccer.
- D : Display showing a text.
- E : Display showing the image of a circuit.
- STD : Standard spectrum analyzer display (9 band).



Note: Switch the screen display to have the Spectrum Analyzer Display. (→ Page 7)


[**>**] : Decrease the contrast.
[**<**] : Increase the contrast.



Increase Decrease

Press [**BAND**] to switch on or off in turn.

- ON : Small clock display is on.
- OFF : Small clock display is off.


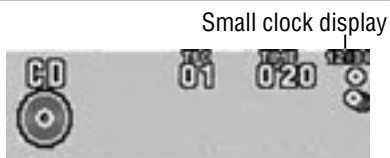


- ① Press [**>**] or [**<**] to select hour or minute display.
- ② [**^**] : Put forward hour/minute.
[**v**] : Put back hour/minute.
- ③ Press [**BAND**] to set.



(24 hour system)

Function Setting - FUNCTION Menu

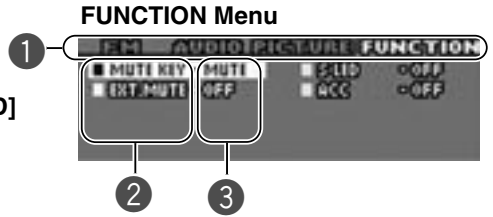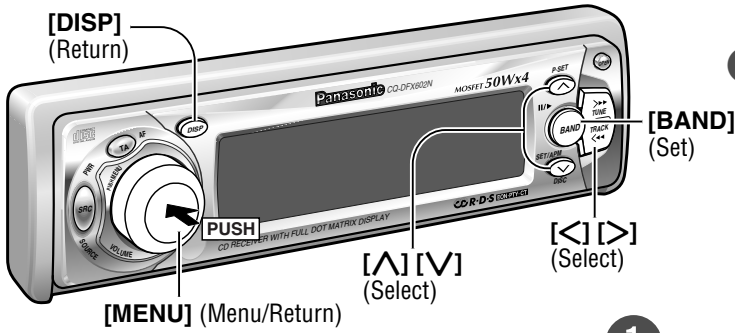


Mute / Attenuation
Decreasing range by pressing [MUTE] button can be selected. (→ Page 7)
Default : MUTE


External Mute
Allows you to mute the current source while your navigation system provides voice guidance or car telephone conversation is in progress. (→ Page 31 about External Mute Lead connection)
Default : LV 0

Security Function
Allows you to activate the anti-theft function when leaving your car.
Default : ON

ACC Selection
Default : OFF

Caution: Be sure to select OFF when your car has no ACC position in the ignition switch. Failure to do this could cause the battery to go dead.

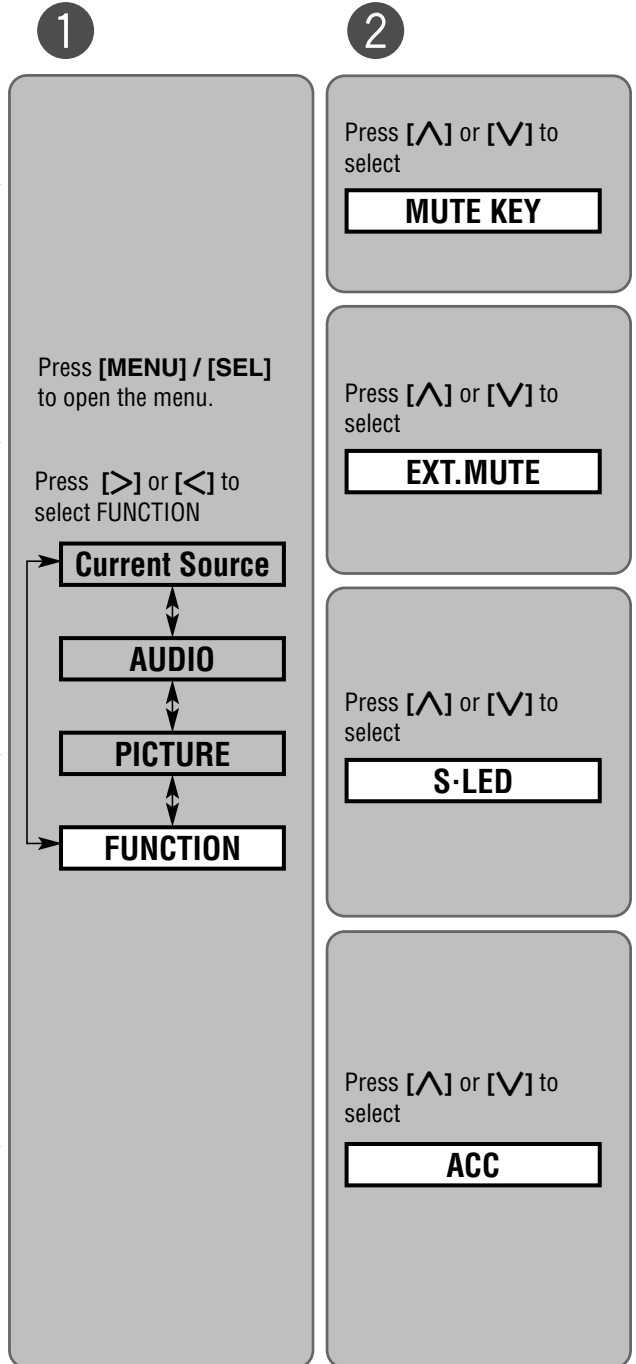

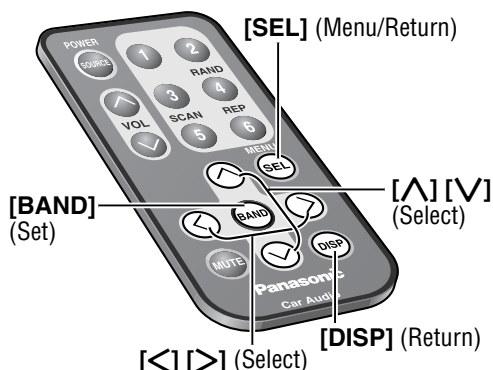

Note: Press [MENU] / [SEL] or [DISP] to return to the regular mode.

3

Press [BAND] to switch between mute or attenuation in turn.

- MUTE : No sound
- ATT : Decrease to 1/10

Press [BAND] to change the volume level of the sound source as shown.

- LV0 : No sound
- LV1 : Decrease 15 levels
- LV2 : Decrease 5 levels
- OFF : Unchanged

Note: The setting state of the External Mute is displayed when the voice guidance or car telephone is used (except when the setting state is OFF).



Press [BAND] to activate the function or inactivate it in turn.

- ON : Security function is activate.
- OFF : Security function is not activate.

Security Function

When the power of this unit is turned OFF...
When the key in the ignition is turned OFF... (**ACC ON**)

- Security message will be displayed.
- The panel removal alarm will be active. (⇒ Page 29)

When the front panel is removed...

- The security indicator blinks. (⇒ Page 29)



(Security message)

Press [BAND] to switch the ACC on or off in turn.

- ON : Set to ON if your car has ACC position.
- OFF : Set to OFF if your car has no ACC position.

ACC ON

- The demonstration message is shown when [SRC] / [SOURCE] is pressed for 4 seconds or more to turn on the power.
- The ending is shown when power is switched off.
- Power is turned on when a disc or magazine is inserted while power is off.
- The Clock Time can be displayed while power is off.
- When the ignition key is turned to OFF, the security message is shown and the panel removal alarm sounds (at Security Function ON setting).


ACC OFF

- When power is turned off, the security message is shown and the panel removal alarm sounds (at Security Function ON setting).

Installation

Preparation

- Before installation, check the radio operation with antenna and speakers.
- Disconnect the cable from the negative (-) battery terminal (see caution below).
- Unit should be installed in a horizontal position with the front end up at a convenient angle, but not more than 30°.

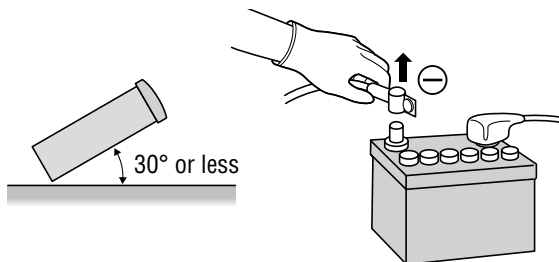


Caution: Do not disconnect the battery terminals of a car with trip or navigational computer since all user settings stored in memory will be lost. Instead take extra care with installing the unit to prevent shorts.

Dashboard Installation

Installation Opening

The unit can be installed in any dashboard having an opening as shown at right. The dashboard should be 4.5 mm - 6 mm thick in order to be able to support the unit.

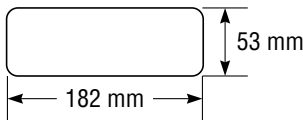

Installation Precautions

This product should be installed by a professional installer, if possible.

In case of difficulty, please consult your nearest authorized Panasonic Service Center.


1. This system is to be used only in a 12-volt, DC battery system (car) with negative ground.
2. Follow the electrical connections carefully (➔ Page 30). Failure to do so may result in damage to the unit.
3. Connect the power lead (red) after all other connections are made.
4. Be sure to connect the battery lead (yellow) to the positive terminal (+) of the battery or fuse block (BAT) terminal.
5. Insulate all exposed wires to prevent short circuiting.
6. Secure all loose wires after installing the unit.
7. Please carefully read the operating and installation instructions of the respective equipment before connecting it to this unit.

Supplied Hardware


No.	Item	Diagram	Q'ty
①	Mounting Collar		1
②	Mounting Bolt (5 mmø)		1
③	Power Connector		1
④	Removable Face Plate Case		1
⑤	Trim Plate		1
⑥	ISO Antenna Adapter		1
⑦	Lock Cancel Plate		2

Methods for Fixing the Rear of the Unit

(a) Using the Rear Support Strap (Option)

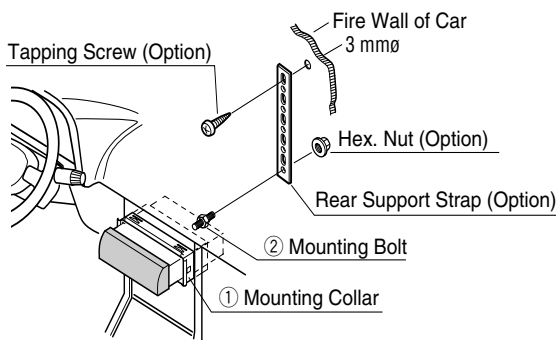


(b) Using the Rubber Cushion (Option)

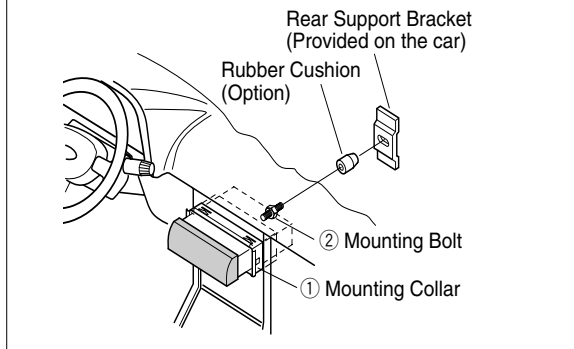

Cautions:

- We strongly recommend that you wear gloves for installation work to protect yourself from injuries.
- When bending the mounting tab of the mounting collar with a screwdriver, be careful not to injure your hands and fingers.

First complete the electrical connections, and then check them for correctness. (➔ Page 30)
The included Mounting Collar ① is designed specially for this unit. Do not use it to attach any other model.

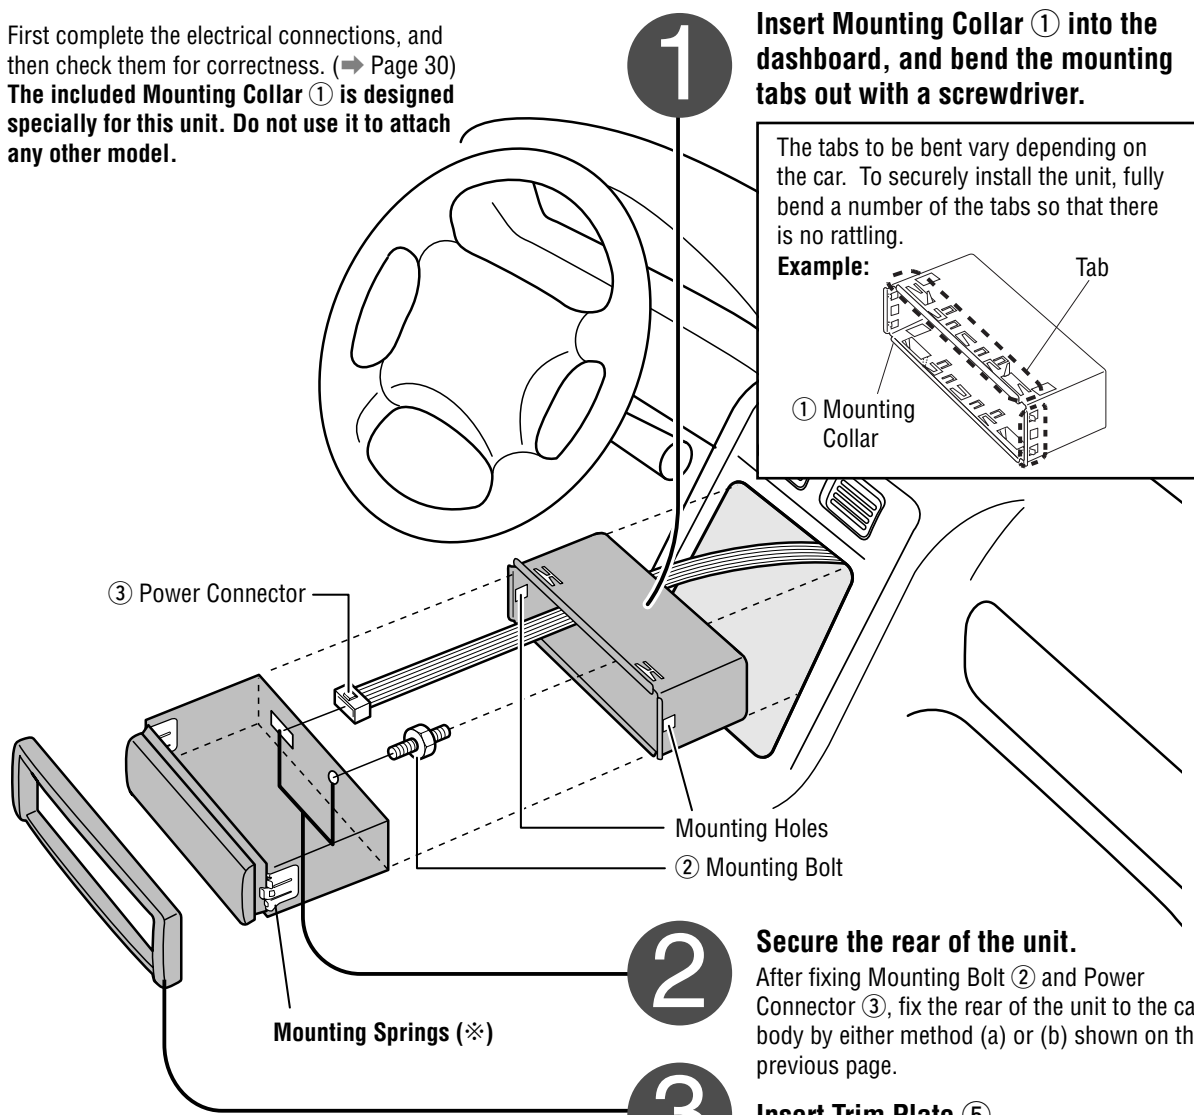


1

Insert Mounting Collar ① into the dashboard, and bend the mounting tabs out with a screwdriver.

The tabs to be bent vary depending on the car. To securely install the unit, fully bend a number of the tabs so that there is no rattling.

Example:

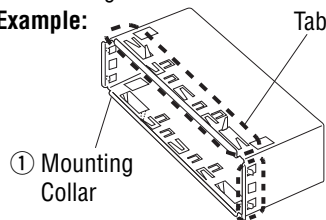

2

Secure the rear of the unit.


After fixing Mounting Bolt ② and Power Connector ③, fix the rear of the unit to the car body by either method (a) or (b) shown on the previous page.

3


Insert Trim Plate ⑤.

4

After installation reconnect the negative (-) battery terminal.

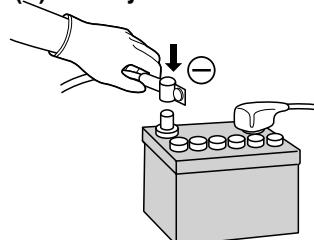

Engage the Mounting Springs (*) in the mounting holes of the Mounting Collar ① firmly.


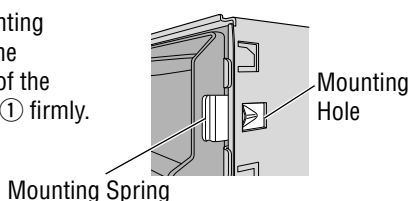


Installation (continued)


To Remove the Unit

Switch off the power of the unit.


- 1 Remove the removable face plate.
 - 1 Press **[OPEN]**. The removable face plate will be opened.
 - 2 Push the face plate to either the right or left.
 - 3 Pull it out toward you.

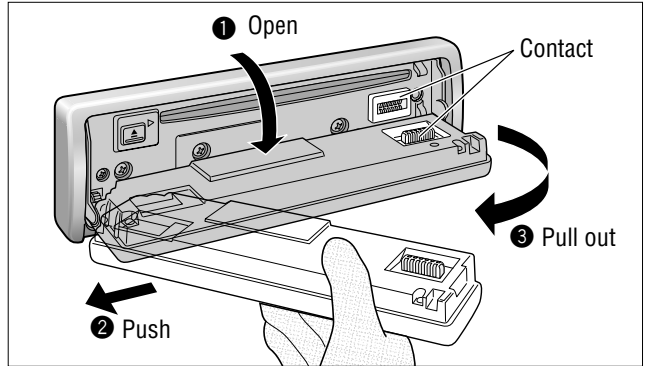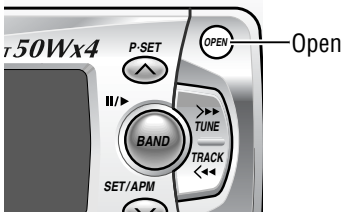


- 2 Remove the Trim Plate 5 with a screwdriver.

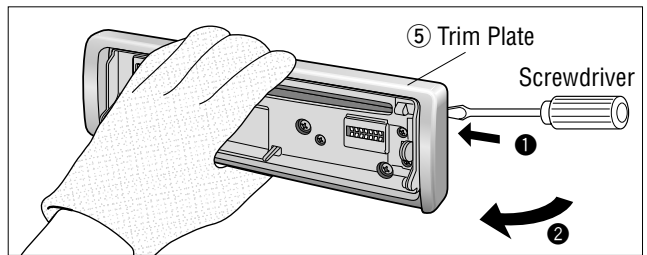

- 3
 - 1 Insert the Lock Cancel Plates 7 along the grooves on both sides of the main unit until "click" is heard.
 - 2 Pull out the unit while pushing the plates further inside.

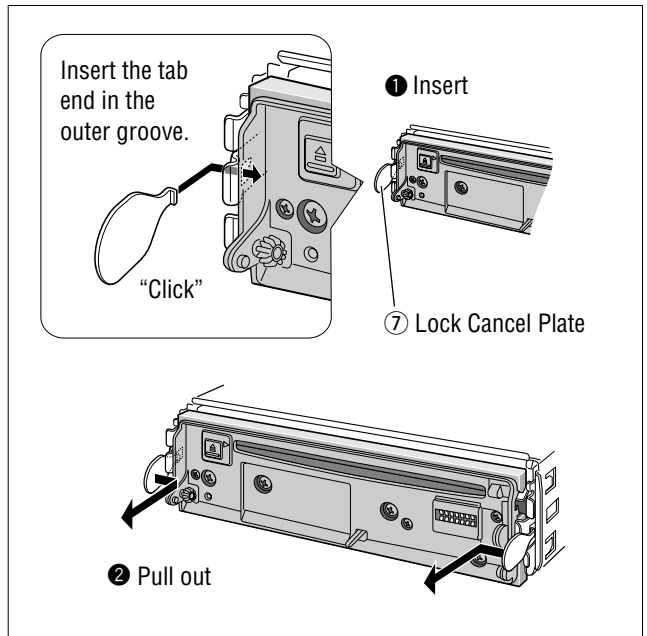

- 4 Remove the unit pulling with both hands.

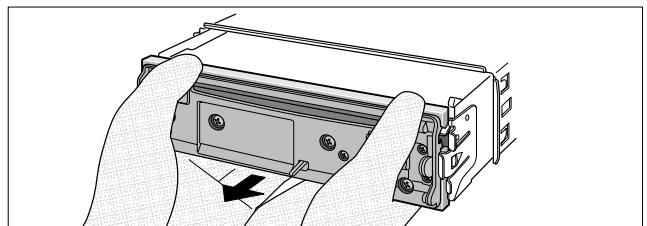


Anti-Theft System

This unit is equipped with a removable face plate. Removing this face plate makes the radio totally inoperable. The security indicator will blink.


Place Removable Face Plate into Case

- 1 Switch off the power of the unit.
- 2 Remove the removable face plate.
(⇒ Page 28)
- 3 Gently press the bottom of the case and open the cover. Place the face plate into the case and take it with you when you leave the car.

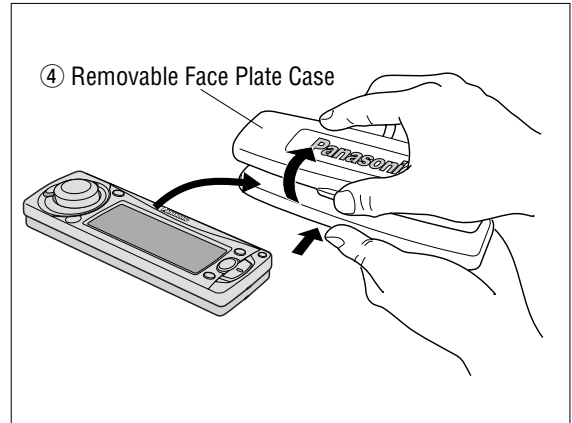

Install Removable Face Plate

- 1 Fit the face plate with its right or left hole on one of the pins provided on the main unit.
- 2 Fit the other hold on the other pin applying slight pressure.
- 3 Move the face plate up and down a few times to make sure it is secure. Then close the front panel and press down the right side of the face plate until it clicks into place.

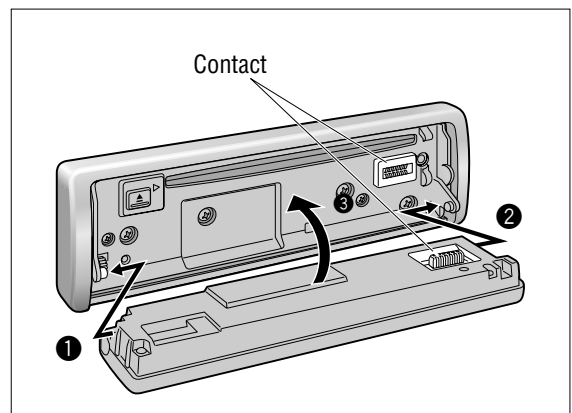

Security Indicator


The security indicator blinks when the removable face plate is removed from the unit.

This function is activated when the Security Function is ON.
(⇒ Page 24)

Panel Removal Alarm

This alarm sounds to warn you not to forget to remove the panel before leaving your car.

This function is activated when the Security Function is ON.
(⇒ Page 24)

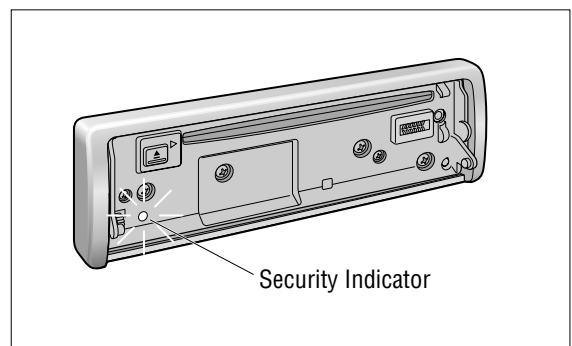

Cautions:

- This face plate is not waterproof. Do not expose it to water or excessive moisture.
- Do not remove the face plate while driving your car.
- Do not place the face plate on the dashboard or nearby areas where the temperature rises to high levels.
- Do not touch the contacts on the face plate or on the main unit, since this may result in poor electrical contacts.
- If dirt or other foreign substances get on the contacts, wipe them off with clean and dry cloth.
- To avoid damaging the front panel, do not push it down or place objects on it while it is open.

Electrical Connections

 
Precautions (ISO Connector)

- The pin arrangement of the power connector conforms to ISO standard.
- The pin arrangement of ISO connectors in some cars may differ from the ISO standard.
- Please check that the pin arrangement of the connector in your car conforms to ISO standard.
- For car types A and B, change the wiring of the red and yellow leads as shown at below.
- After connection, insulate the portions marked (※) with insulating tape.

Note: For cars other than types A and B, please consult your local car shop.

Standard ISO


A7: IGN or ACC switched 12 V supply



A4: +12 V Battery (Permanent supply)

Car Type A

 
A7: +12 V Battery (Permanent supply)



A4: IGN or ACC switched 12 V supply


Car Type B

 A7: +12 V Battery (Permanent supply)







A4: No connection

Wiring Diagram

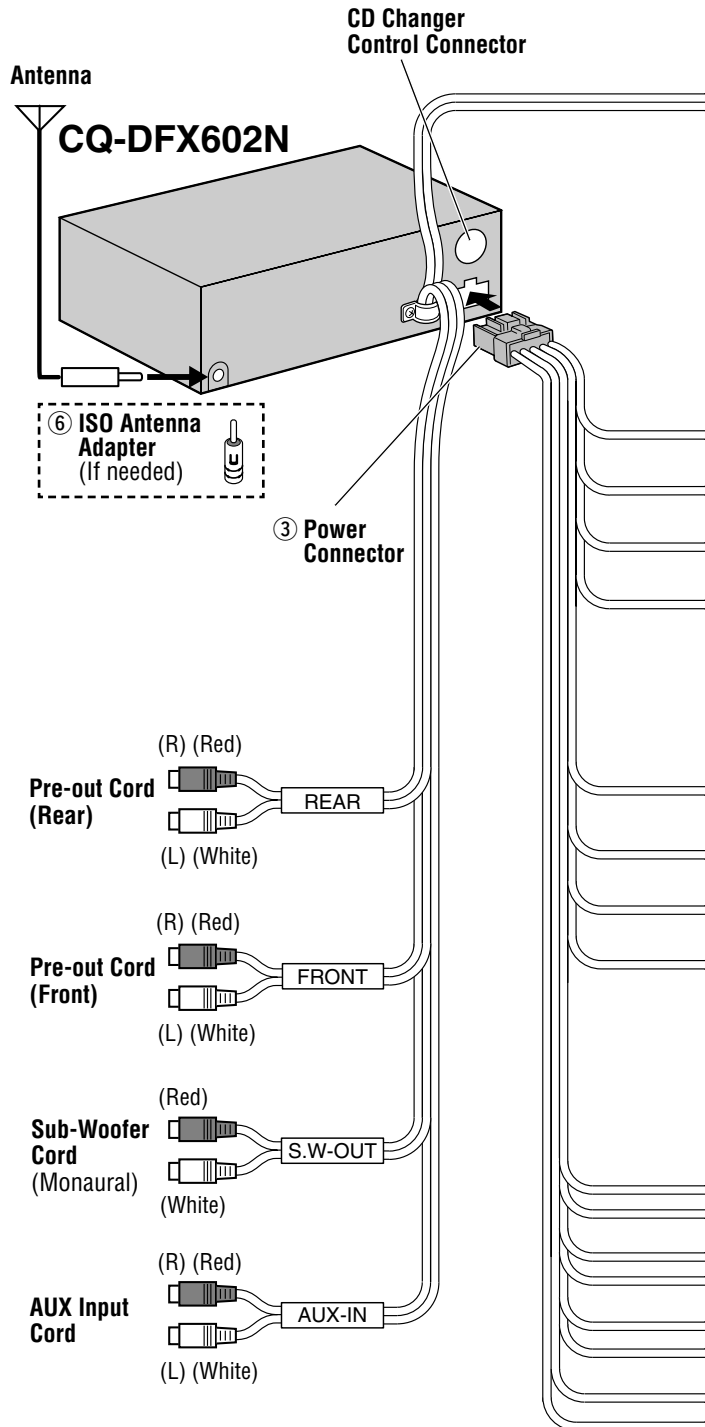

Cautions:

- Check the connectors provided on your car (see precaution below) before connecting the system.
- This unit is designed for use in a car having a 12-volt negative ground battery system.
- To prevent damage to the unit, be sure to follow the connection diagram.
- Strip about 5 mm of the lead ends for connection (only non-ISO connector cords).
- Do not insert the power connector into the unit until the wiring is completed.
- Be sure to insulate any exposed wires to prevent short circuiting with the car chassis. Bundle all cables, and prevent cable terminals from touching any metal parts.

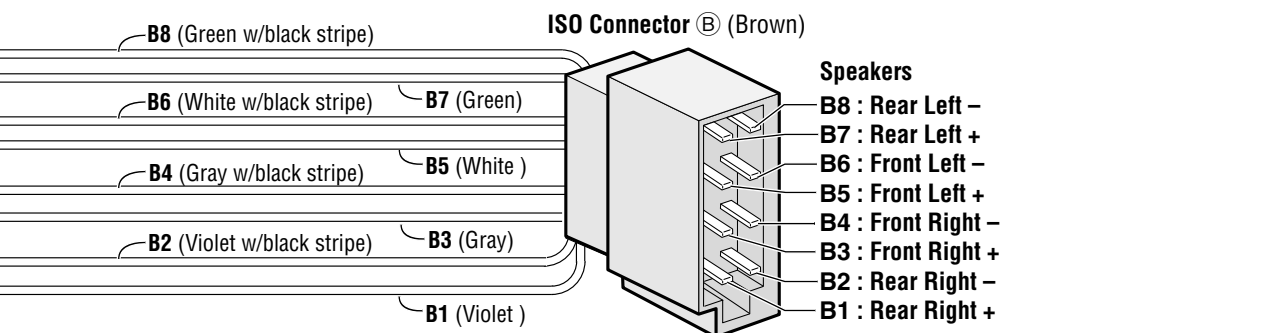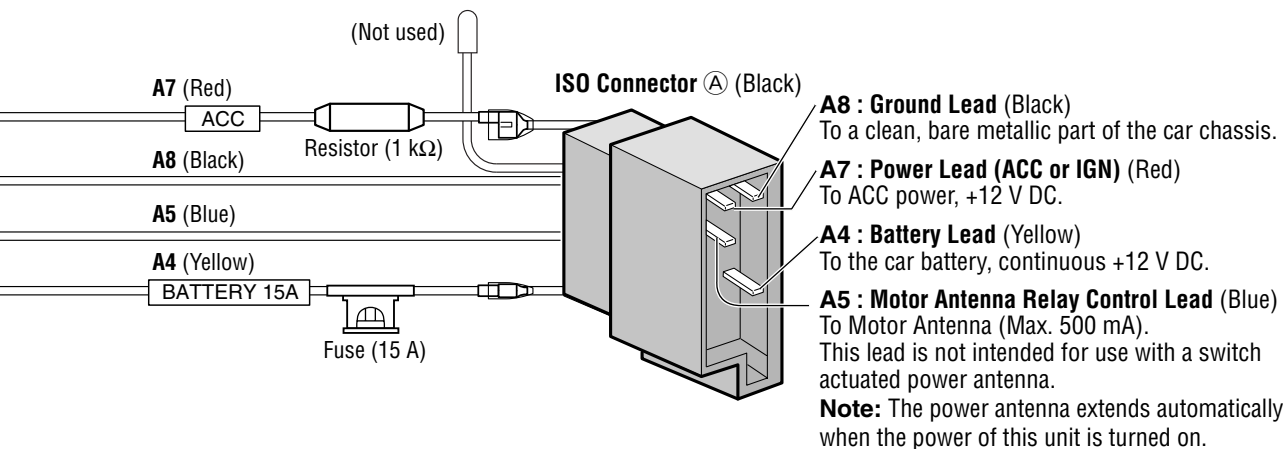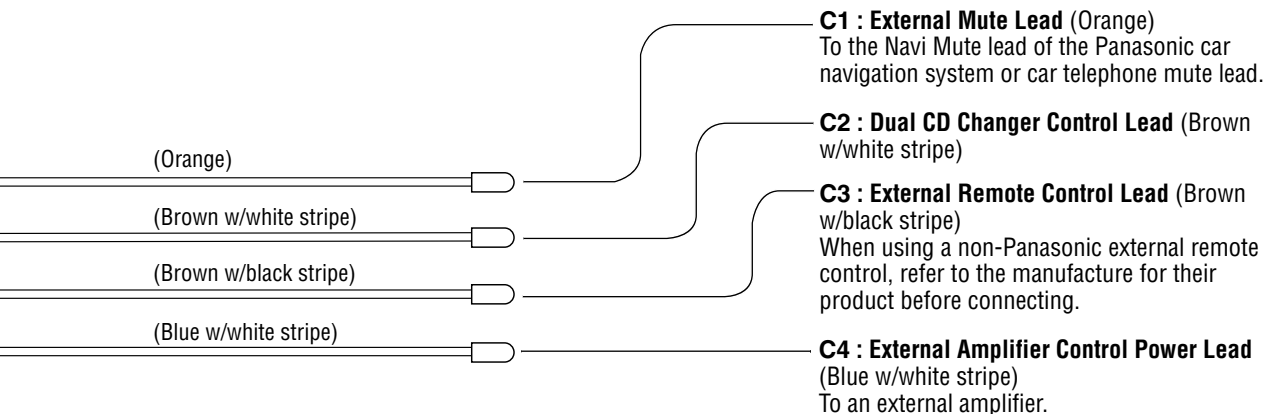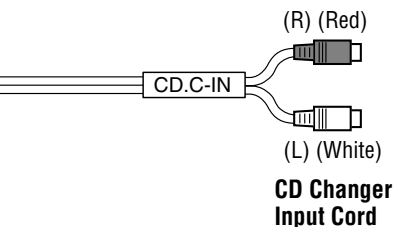


Electrical Connections (continued)

System Upgrade Example 1 : Nine Speakers and CD Changer

Combination: CD Changer (CX-DP9061EN),
4 Channel Power Amplifier (CY-M9054EN) and
Stereo/Mono Power Amplifier (CY-M7052EN)

CD text recognizable
CD changer
CX-DP9061EN

- This unit can be connected to an optional CD changer (CX-DP9061/DP9060EN, CX-DP88N, CX-DP801/DP803EN or CX-DP601EN) and optional extension cord.
- For details consult your nearest authorized Panasonic Dealer.
- For connection to a CD changer, refer to the operating instructions of the CD changer (CX-DP9061/DP9060EN, CX-DP88N, CX-DP801/DP803EN or CX-DP601EN).

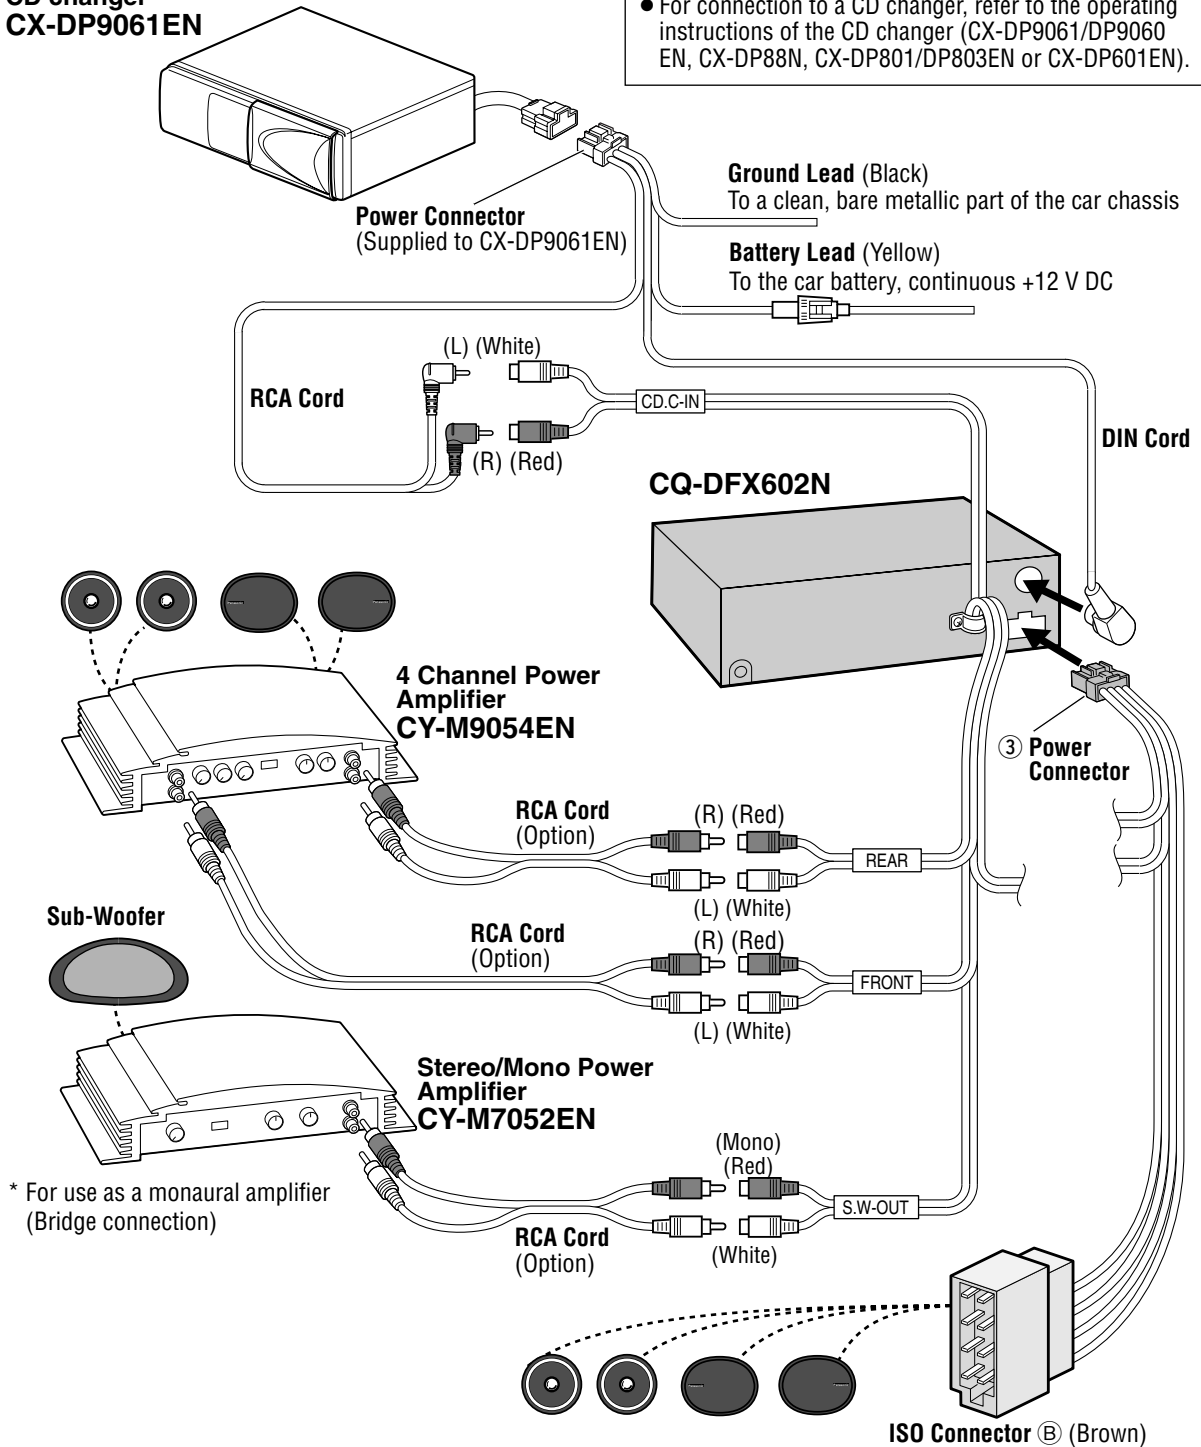


* For use as a monaural amplifier
(Bridge connection)

System Upgrade Example 2 : Connecting Two CD Changers

Combination: Two CD Changer (CX-DP9061EN)


Note: To connect two CD changers, the optional dual CD changer selector (CA-CD55EN) is necessary.

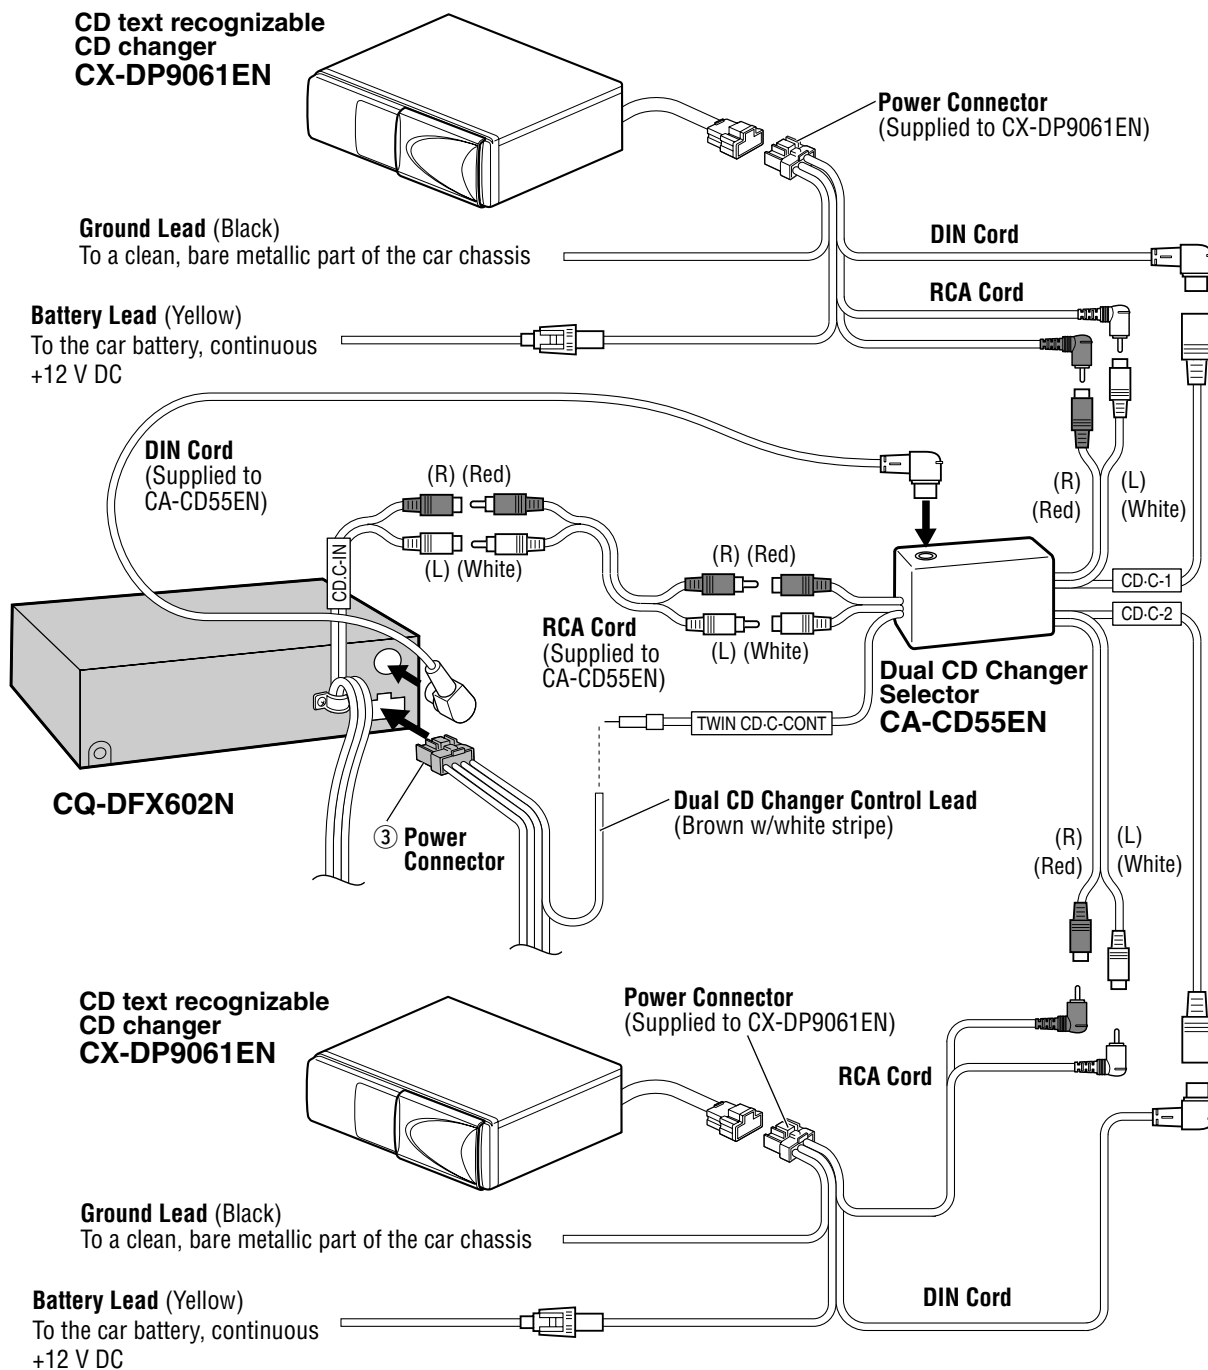

Speaker Connections


Caution: Please follow the instructions given below. Failure to do so will cause damage to the unit and speakers.

<Right>

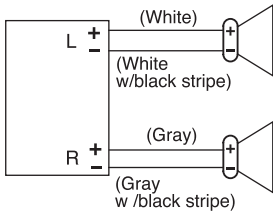


- Use ungrounded speaker only.
- The maximum speaker output should be 50 W or more. (If used with the optional power amplifier, the speaker output should be higher than the maximum amplifier output.)
- The speaker impedance should be 4 - 8 Ω .
- This unit uses the BTCL circuit, so each speaker should be connected separately using parallel vinyl insulated cords.
- The speaker cords and the power amplifier unit should be kept away (about 30 cm apart) from the antenna and antenna extension cord.


<Wrong>

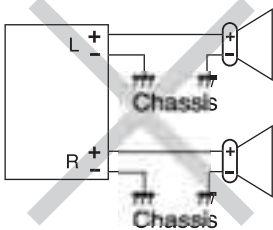

- Never connect the speaker cord to the body of the car.

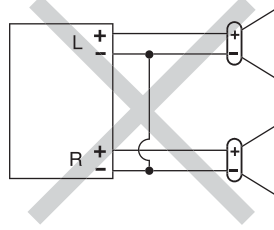

- Do not use a 3-wire type speaker system having a common earth lead.

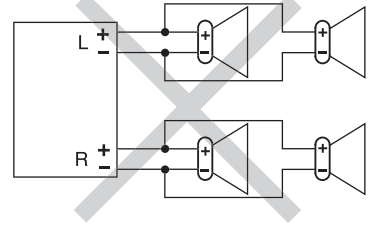

- Do not connect more than one speaker to one set of speaker leads.

Fuse

Use fuses of the same specified rating (15 A). Using different substitutes or fuses with higher ratings, or connecting the unit directly without a fuse, could cause fire or damage to the unit.

If the replacement fuse fails, contact your nearest authorized Panasonic Service Center.

Your product is designed and manufactured to ensure the minimum of maintenance. Use a soft cloth for routine exterior cleaning. Never use benzine, thinner, or other solvents.

Notes on CD / CD Media (CD-R, CD-RW)

If you use commercial CDs, they must have this label shown at right.



How to hold the disc

- Do not touch the underside of the disc.
- Do not scratch on the disc.
- Do not bend disc.
- When not in use, keep disc in the case.

Label side



Do not use irregularly shaped discs.

Do not leave discs in the following places:

 
- Direct sunlight
- Near car heaters
- Dirty, dusty and damp areas
- Seats and dashboards



Do not use irregularly shaped discs.

Disc cleaning


Use a dry, soft cloth to wipe from the center outward.



Caution on new discs

A new disc may have rough edges on its inner and outer perimeter. These may cause malfunction.

Remove the rough edges using a pencil, etc.

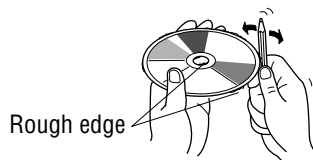

Do not attach any seals or labels to your discs.

Do not write on the disc label in a heavy pen or ballpoint pen.

Notes on CD-Rs/RWs

- You may have trouble playing back some CD-R/RW discs recorded on CD recorders (CD-R/RW drives), either due to their recording characteristics or dirt, fingerprints, scratches, etc. on the disc surface.
- CD-R/RW discs are less resistant to high temperatures and high humidity than ordinary music CDs. Leaving them inside a car for extended periods may damage and make playback impossible.
- Some CD-R/RWs cannot be played back successfully thanks to incompatibility among writing software, a CD recorder (CD-R/RW drive) and the discs.
- This player cannot play the CD-R/RW discs if the session is not closed.
- This player cannot play the CD-R/RW discs which contains other than CD-DA data (MP3, Video CD, etc.).
- Be sure to observe the instructions of CD-R/RW disc for handling it.

Troubleshooting

Preliminary Steps

Check and take steps as described in the tables below.

If You Suspect Something Wrong

Immediately switch power off.

Disconnect the power cable and check that there is neither smoke nor heat from the unit before asking for repairs. Never try to repair the unit yourself because it is dangerous to do so.

Cautions:

- Do not use the unit if it malfunctions or something is wrong.
- Do not use the unit in an irregular condition, for example, without sound, or with smoke or foul smell, which can cause ignition or electric shock. Immediately stop using the unit and call the store where you purchased it.

Product Service

If the suggestions in the charts do not solve the problem, we recommend that you take it to your nearest authorized Panasonic Service Center. The product should be serviced only by a qualified technician.

Common

Problem	Possible cause / Possible solution
No power.	<p>Car's engine switch is not on. → Turn your car's ignition switch to ACC or ON.</p> <p>Cables are not correctly connected. → Connect cables correctly. Battery cable: Connect the battery cable to the terminal that is always live. Accessory cable: Connect the accessory cable to your car's ACC source. Grounding wire: Connect the grounding wire to a metal part of your car.</p> <p>Fuse is burnt. → Call the store where you purchased the unit, or your nearest Panasonic Service Center and ask for replacement fuse.</p>
No sound.	<p>Mute is set to ON. → Set it to OFF.</p> <p>Cables are not correctly connected. → Connect cables correctly.</p> <p>External Mute lead is not correctly connected. → Connect the External Mute lead correctly.</p> <p>Condensation (dew). → Wait for a while before use.</p>

■ Common (Continued)

Problem	Possible cause / Possible solution
Only sound, no display.	The display is set to the Display OFF. → Press [DISP] to change the display. (→ Page 7)
Noise.	A mobile phone is used near the unit. → Keep the mobile phone away from the unit.
Buttons unusable (each source operation).	Menu is displayed. → Press [MENU] / [SEL] or [DISP] to return to the regular mode.
Audio sound is output but the display shows demonstration message.	Demonstration mode is ON. → Press [DISP] to cancel the demonstration mode.

■ Radio

Problem	Possible cause / Possible solution
Poor reception of FM stereo and monaural broadcasts.	Station is too far, or signals are too weak. → Select other stations of higher signal level.
	The radio antenna is not extended enough. → Extend the radio antenna enough.
	The motor antenna relay control lead is not connected correctly. → If there is a motor antenna in the car, connect the motor antenna relay control lead to the motor antenna lead that is installed in the car correctly.
Preset station is reset.	Battery cable is not correctly connected. → Connect the battery cable to the terminal that is always live.

Troubleshooting (continued)

CD

Problem	Possible cause / Possible solution
<p>Disc is in the CD compartment but no sound is made, or disc is ejected automatically.</p>	<p>Disc is upside down. → Place disc in the correct direction with the label side up.</p> <p>Disc is dirty. → Clean disc, referring to the section on “Notes on CD / CD Media (CD-R, CD-RW)” (→ Page 35).</p> <p>A disc that has data other than CD-DA type is loaded. → Discs that have CD-DA type data should be used.</p> <p>→ Some CD-R/RWs cannot be played back successfully thanks to incompatibility among writing software, a CD recorder (CD-R/RW drive) and the discs. Refer to instructions for the concerned devices for details.</p>
<p>Sound skips, bad sound quality. (e.g. caused by noise)</p>	<p>Disc is dirty. → Clean disc, referring to the section on “Notes on CD / CD Media (CD-R, CD-RW)” (→ Page 35).</p> <p>→ Some CD-R/RWs cannot be played back successfully thanks to incompatibility among writing software, a CD recorder (CD-R/RW drive) and the discs. Refer to instructions for the concerned devices for details.</p>
<p>Sound skip due to vibration.</p>	<p>Mounting angle is over 30 degrees. → Adjust mounting angle to less than 30 degrees.</p> <p>Unstable mounting. → Mount the unit securely with the mounting parts, referring to the section on Installation.</p>
<p>Disc is not ejected.</p>	<ul style="list-style-type: none"> ● Disc is defective. ● Mechanical trouble. <p>→ Open the panel and press [▲]. If normal operation is not restored, call the store where you purchased the unit or the nearest Panasonic Service Center to ask for repairs.</p>
<p>Time is counted but no sound comes out.</p>	<p>The 1st track of a mix mode disc was reproduced. (Mix mode is a format in which data except music is recorded on the 1st track and music data is recorded on other than the 1st track in a session.) → Playback music data recorded on other than the 1st track.</p>

■ Sound Setting

Problem	Possible cause / Possible solution
<p>No sound from left, right, front, or rear speaker.</p>	<p>Left and right balance, or front and rear balance is off on one side. → Adjust BAL/FAD as appropriate (→ Page 20).</p> <p>Cables are not correctly connected. → Connect the cables correctly.</p>
<p>Left and right sounds are reversed.</p>	<p>The speaker leads are connected in reverse between right and left. → Connect the speaker leads to the correct one.</p>

■ Remote Control

Problem	Possible cause / Possible solution
<p>Buttons are invalid for operation.</p>	<p>Battery polarities (+) (–) are reversed. → Insert the battery correctly.</p> <p>Wrong battery. → Check the battery.</p> <p>Battery has run down. → Replace the battery.</p> <p>Remote control is in the wrong direction. → Direct the remote controller at REMOTE (sensor) on the panel.</p>

Troubleshooting (continued)

Error Display Messages

■ CD

Display	Possible cause / Possible solution
	<p>Disc is dirty, or is upside down. A disc that has data other than CD-DA type is loaded.</p> <p>Disc has scratches.</p> <p>No operation by some cause.</p> <p>→ Open the panel and press [▲].</p> <ul style="list-style-type: none"> • Check disc. • Load the disc again.

■ CD Changer

Display	Possible cause / Possible solution
	<p>Disc is dirty, or is upside down. A disc that has data other than CD-DA type is loaded.</p> <p>Disc has scratches.</p> <p>→ Eject the magazine.</p> <ul style="list-style-type: none"> • Check disc. • Load the disc again.
	<p>No operation by some cause.</p> <p>→ Eject the magazine. If failure persists, press the reset switch on the CD changer. If normal operation is not restored, call the store where you purchased the unit or the nearest Panasonic Service Center to ask for repairs.</p> <p>The display continues if the power is not turned off automatically.</p>
	<p>No disc is in the CD Changer (magazine).</p> <p>→ Insert discs into the changer (magazine).</p>

Note: Displays and the steps to be taken for errors vary in part from changer to changer. For details, refer to the Operating Instructions for the changer used.

Specifications

General		MW Radio	
Power Supply	: DC 12 V (11 V - 16 V), Test Voltage 14.4 V, Negative Ground	Frequency Range	: 531 - 1,602 kHz
Current Consumption	: Less than 2.5 A (CD mode, 0.5 W 4-Speaker)	Usable Sensitivity	: 29 dB/μV (S/N 20 dB)
Maximum Power Output	: 50 W x 4 (at 4 Ω)	LW Radio	
Power Output	: 22 W x 4 (DIN45 324, at 4 Ω)	Frequency Range	: 153 - 279 kHz
Speaker Impedance	: 4 - 8 Ω	Usable Sensitivity	: 34 dB/μV (S/N 20 dB)
External Input Impedance	: 10 kΩ (AUX IN)	CD Player	
External Input Sensitivity	: Max. 2 V (AUX IN)	Sampling Frequency	: 8 times oversampling
Pre-Amp Output Voltage	: 2.5 V (CD mode)	DA Converter	: MASH•1 bit/4 DAC System
Pre-Amp Output Impedance	: 200 Ω	Error Correction System	: Panasonic Super Decoding Algorithm
Sub-Woofer Output Voltage	: 2.5 V	Pick-Up Type	: Astigma 3-beam
Dimensions	: 178 (W) x 50 (H) x 150 (D) mm	Light Source	: Semiconductor laser
Weight	: 1.6 kg	Wavelength	: 780 nm
FM Stereo Radio		Frequency Response	: 5 Hz - 20 kHz (±1 dB)
Frequency Range	: 87.5 - 108 MHz	Signal to Noise Ratio	: 90 dB
Usable Sensitivity	: 7 dB/μV (S/N 30 dB)	Total Harmonic Distortion	: 0.01 % (1 kHz)
Stereo Separation	: 35 dB (at 1 kHz)	Wow and Flutter	: Below measurable limits
		Channel Separation	: 70 dB

Note: Specifications and design are subject to modification without notice due to improvements.

Matsushita Electric Industrial Co., Ltd.

Central P.O. Box 288, Osaka 542-8588, Japan

Dalian Matsushita Communication Industrial Co., Ltd.

Daxinzhaizi, Ganjingzi District, Dalian, China P.C. 116033

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>