

Panasonic®

AAC WMA MP3 CD Player/Receiver
Récepteur/lecteur CD avec lecture AAC/WMA/MP3
Reproductor de CD, AAC, WMA y MP3/receptor

Model: **CQ-C7205U/C7105U**



(CQ-C7205U)

Operating Instructions Manuel d'instructions Manual de Instrucciones



AAC

WMA


MP3


- Please read these instructions (including "Limited Warranty" and "Customer Services Directory") carefully before using this product and keep this manual for future reference.
- Prière de lire attentivement ces instructions (y compris la "Garantie limitée" et le "Répertoire des services à la clientèle") avant d'utiliser ce produit et conserver ce manuel d'utilisation pour s'y référer ultérieurement.
- Lea con atención estas instrucciones antes de utilizar el producto y guarde este manual para poderlo consultar en el futuro.

Safety Information

- Read the operating instructions for the unit and all other components of your car audio system carefully before using the system. They contain instructions about how to use the system in a safe and effective manner. Panasonic assumes no responsibility for any problems resulting from failure to observe the instructions given in this manual.

- This manual uses pictographs to show you how to use the product safely and to alert you to potential dangers resulting from improper connections and operations. The meanings of the pictographs are explained below. It is important that you fully understand the meanings of the pictographs in order to use this manual and the system properly.

 **Warning** This pictograph intends to alert you to the presence of important operating instructions and installation instructions. Failure to heed the instructions may result in severe injury or death.

 **Caution** This pictograph intends to alert you to the presence of important operating instructions and installation instructions. Failure to heed the instructions may result in injury or material damage.

Warning

Observe the following warnings when using this unit.

- ❑ **The driver should neither watch the display nor operate the system while driving.**
Watching the display or operating the system will distract the driver from looking ahead of the vehicle and can cause accidents. Always stop the vehicle in a safe location and use the parking brake before watching the display or operating the system.
- ❑ **Use the proper power supply.**
This product is designed for operation with a negative grounded 12 V DC battery system. Never operate this product with other battery systems, especially a 24 V DC battery system.
- ❑ **Keep batteries and insulation film out of reach of infants.**
Batteries and insulation film can be ingested, so keep them out of the reach of infants. If an infant ingests a battery or insulation film, please seek immediate medical attention.
- ❑ **Protect the Deck Mechanism.**
Do not insert any foreign objects into the slot of this unit.
- ❑ **Do not disassemble or modify the unit.**
Do not disassemble, modify the unit or attempt to repair the product yourself. If the product needs to be repaired, consult your dealer or an authorized Panasonic Servicenter.
- ❑ **Do not use the unit when it is out of order.**
If the unit is out of order (no power, no sound) or in an abnormal state (has foreign objects in it, is exposed to water, is smoking, or smells), turn it off immediately and consult your dealer.
- ❑ **The remote control unit should not lie about in the car.**
If the remote control unit lies about, it could fall on the floor while driving, get wedged under the brake pedal, and lead to a traffic accident.
- ❑ **Refer fuse replacement to qualified service personnel.**
When the fuse blows out, eliminate the cause and have it replaced with the fuse prescribed for this unit by a qualified service engineer. Incorrect replacement of the fuse may lead to smoke, fire, and damage to the product.

Observe the following warnings when installing.

- ❑ **Disconnect the lead from the negative (–) battery terminal before installation.**
Wiring and installation with the negative (–) battery terminal connected may cause electrical shock and injury due to a short circuit.
Some cars equipped with the electrical safety system have specific procedures of battery terminal disconnection.
FAILURE TO FOLLOW THE PROCEDURE MAY LEAD TO THE UNINTENDED ACTIVATION OF THE ELECTRICAL SAFETY SYSTEM RESULTING IN DAMAGE TO THE VEHICLE AND PERSONAL INJURY OR DEATH.
- ❑ **Never use safety-related components for installation, grounding, and other such functions.**
Do not use safety-related vehicle components (fuel tank, brake, suspension, steering wheel, pedals, airbag, etc.) for wiring or fixing the product or its accessories.
- ❑ **Installing the product on the air bag cover or in a location where it interferes with airbag operation is prohibited.**
- ❑ **Check for piping, gasoline tank, electric wiring, and other items before installing the product.**
If you need to open a hole in the vehicle chassis to attach or wire the product, first check where the wire harness, gasoline tank, and electric wiring are located. Then open the hole from outside if possible.
- ❑ **Never install the product in a location where it interferes with your field of vision.**
- ❑ **Never have the power cord branched to supply other equipment with power.**
- ❑ **After installation and wiring, you should check the normal operation of other electrical equipment.**
The continuation of their using in abnormal conditions may cause fire, electrical shock or a traffic accident.
- ❑ **In the case of installation to an airbag equipped car, confirm warnings and cautions of the vehicle manufacturer before installation.**
- ❑ **Make sure the leads do not interfere with driving or getting in and out of the vehicle.**
- ❑ **Insulate all exposed wires to prevent short circuiting.**

Caution

Observe the following cautions when using this unit.

- ❑ **Keep the sound volume at an appropriate level.**
Keep the volume level low enough to be aware of road and traffic conditions while driving.
- ❑ **Do not insert or allow your hand or fingers to be caught in the unit.**
To prevent injury, do not get your hand or fingers caught in moving parts or in the disc slot. Especially watch out for infants.
- ❑ **This unit is designed for use exclusively in automobiles.**
- ❑ **Do not operate the unit for a prolonged period with the engine turned off.**
Operating the audio system for a long period of time with the engine turned off will drain the battery.
- ❑ **Do not expose the unit to direct sunlight or excessive heat.**
Otherwise these will raise the interior temperature of the unit, and it may lead to smoke, fire, or other damage to the unit.
- ❑ **Do not use the product where it is exposed to water, moisture, or dust.**
Exposure of the unit to water, moisture, or dust may lead to smoke, fire, or other damage to the unit. Make especially sure that the unit does not get wet in car washes or on rainy days.

Observe the following cautions when installing.

- ❑ **Refer wiring and installation to qualified service personnel.**
Installation of this unit requires special skills and experience. For maximum safety, have it installed by your dealer. Panasonic is not liable for any problems resulting from your own installation of the unit.
- ❑ **Follow the instructions to install and wire the product.**
Not following the instructions to properly install and wire the product could cause an accident or fire.
- ❑ **Take care not to damage the leads.**
When wiring, take care not to damage the leads. Prevent them from getting caught in the vehicle chassis, screws, and moving parts such as seat rails. Do not scratch, pull, bend or twist the leads. Do not run them near heat sources or place heavy objects on them. If leads must be run over sharp metal edges, protect the leads by winding them with vinyl tape or similar protection.
- ❑ **Use the designated parts and tools for installation.**
Use the supplied or designated parts and appropriate tools to install the product. The use of parts other than those supplied or designated may result in internal damage to the unit. Faulty installation may lead to an accident, a malfunction or fire.
- ❑ **Do not block the air vent or the cooling plate of the unit.**
Blocking these parts will cause the interior of the unit to overheat and will result in fire or other damage.

- ❑ **Do not install the product where it is exposed to strong vibrations or is unstable.**
Avoid slanted or strongly curved surfaces for installation. If the installation is not stable, the unit may fall down while driving and this can lead to an accident or injury.
- ❑ **Installation Angle**
The product should be installed in a horizontal position with the front end up at a convenient angle, but not more than 30°.
The user should bear in mind that in some areas there may be restrictions on how and where this unit must be installed. Consult your dealer for further details.
- ❑ **Wear gloves for safety. Make sure that wiring is completed before installation.**
- ❑ **To prevent damage to the unit, do not connect the power connector until the whole wiring is completed.**
- ❑ **Do not connect more than one speaker to one set of speaker leads. (except for connecting to a tweeter)**

Observe the following cautions when handling the battery for the remote control unit.

- Use only specified battery (CR2025).
- Match the polarity of the battery with the (+) and (-) marks in the battery case.
- Replace dead battery as soon as possible.
- Remove the battery from the remote control unit when not using it for an extended period of time.
- Insulate the battery (by placing them in a plastic bag or covering them with vinyl tape) before disposal or storage.
- Dispose of the battery according to the local regulations.
- Do not disassemble, recharge, heat or short the battery. Do not throw a battery into a fire or water.

In case of battery leakage

- Thoroughly wipe the battery liquid off the battery case and insert new battery.
- If any part of your body or clothing comes into contact with battery liquid, wash it with plenty of water.
- If battery liquid comes into contact with your eyes, wash them with plenty of water and get immediate medical attention.

Safety Information (continued)

Caution

THIS PRODUCT IS A CLASS I LASER PRODUCT.
USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE
OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN
MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.
DO NOT OPEN COVERS AND DO NOT REPAIR BY YOURSELF.
REFER SERVICING TO QUALIFIED PERSONNEL.

The following applies only in the U.S.A.

Part 15 of the FCC Rules

FCC Warning:

Any unauthorized changes or modifications to this equipment would void the user's authority to operate this device.

Notice

This product contains a CR Coin Cell Lithium Battery which contains Perchlorate Material – special handling may apply.

See www.dtsc.ca.gov/hazardouswaste/perchlorate.

Before Reading These Instructions

Panasonic welcomes you to our constantly growing family of electronic products owners. We endeavor to give you the advantages of precise electronic and mechanical engineering, manufactured with carefully selected components, and assembled by people who are proud of the reputation their work has built for our company. We know this product will bring you many hours of enjoyment, and after you discover the quality, value and reliability we have built into it, you too will be proud to be a member of our family.

This operating instruction manual is for 2 models CQ-C7205U and CQ-C7105U.

The difference between these models' are mentioned below.

All screens and main body illustrations in this book represent CQ-C7205U unless otherwise specified.

Features	Models	CQ-C7205U	CQ-C7105U
Subwoofer-output		5 V (60 Ω)	2.5 V (200 Ω)
Preout		5 V (60 Ω)	2.5 V (200 Ω)

The instruction manual consists of 2 books. One is "Operating Instructions" describing the operations of the main unit. The other is "System Upgrade Guidebook" describing the optional devices such as CD changer.

Differences between 2 Models

Before Reading These Instructions (continued)

English



Operating Instructions

(YFM284C662CA)



System Upgrade Guidebook

(YFM284C663CA)



Installation Instructions

(YFM294C091CA)



Owners Information Card

Instruction kit


Q'ty: 1 set



Remote Control Unit (including a battery)
(CR2025)

(EUR7641010)

 
Q'ty: 1



Power Connector

(YGAJ021009)


Q'ty: 1

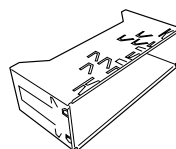

Mounting Collar

(FX0214C384ZB)

 
Q'ty: 1



Trim Plate

(YEFC051013)

 Q'ty: 1



Lock Cancel Plate



Mounting Bolt



Tapping Screw
(5 mmø x 16 mm)



Hex. Nut
(5 mmø)

(YEP0FZ5739)

Q'ty: 1 set



Rear Support Strap

(YFG044C002ZA)

Q'ty: 1



Removable Face Plate Case

(YFC054C089CA)

Q'ty: 1

Notes:

- The number in parenthesis underneath each accessory part name is the part number for maintenance and service.
- Accessories and their parts numbers are subject to modification without prior notice due to improvements.
- Mounting Collar and Trim Plate are mounted on the main unit at shipment.

Safety Information, Before Reading These Instructions

Accessories

Before Reading These Instructions (continued)

U.S.A.

Obtain Product Information and Operating Assistance; locate your nearest Dealer or Servicenter; purchase Parts and Accessories; or make Customer Service and Literature requests by visiting our Web Site at:

<http://www.panasonic.com/support>

or, contact us via the web at:

<http://www.panasonic.com/contactinfo>

You may also contact us directly at:

1-800-211-PANA (7262),

Monday-Friday 9 am-9 pm; Saturday-Sunday 10 am-7 pm, EST.

For hearing or speech impaired TTY users,
TTY : 1-877-833-8855

Accessory Purchases:

Purchase Parts, Accessories and Instruction Books online for all Panasonic Products by visiting our Web Site at:

<http://www.pasc.panasonic.com>

or, send your request by E-mail to:

npcparts@panasonic.com

You may also contact us directly at:

1-800-332-5368 (Phone) 1-800-237-9080 (Fax Only)

(Monday-Friday 9 am to 8 pm, EST.)

Panasonic Services Company

20421 84th Avenue South, Kent, WA 98032

(We accept Visa, MasterCard, Discover Card, American Express, and Personal Checks)

For hearing or speech impaired TTY users,
TTY : 1-866-605-1277

Service in Puerto Rico

Matsushita Electric of Puerto Rico, Inc.

Panasonic Sales Company

Factory Servicenter:

Ave. 65 de Infantería, Km. 9.5, San Gabriel Industrial

Park,

Carolina, Puerto Rico 00985

Phone (787) 750-4300, Fax (787) 768-2910

CANADA

WARRANTY SERVICE

FOR PRODUCT OPERATION ASSISTANCE, please contact:

Our Customer Care Centre:

Telephone #: (905) 624-5505

1-800 #: 1-800-561-5505

Fax #: (905) 238-2360

Email link: "Contact Us" on
www.panasonic.ca

FOR PRODUCT REPAIRS, please locate your nearest Authorized Servicentre at www.panasonic.ca:

Link : "Servicentres™ locator" under "Customer support"

IF YOU SHIP THE PRODUCT TO A SERVICENTRE

Carefully pack and send prepaid, adequately insured and preferably in the original carton.

Include details of the defect claimed, and proof of date of original purchase.

U.S.A.

PANASONIC CONSUMER ELECTRONICS COMPANY,
DIVISION OF MATSUSHITA ELECTRIC CORPORATION OF AMERICA
One Panasonic Way, Secaucus, New Jersey 07094

PANASONIC SALES COMPANY,
DIVISION OF MATSUSHITA ELECTRIC OF PUERTO RICO, INC.
Ave. 65 de infantería, Km. 9.5, San Gabriel Industrial Park
Carolina, Puerto Rico 00985

PANASONIC AUTO PRODUCTS LIMITED WARRANTY

LIMITED WARRANTY COVERAGE

If your product does not work properly because of defects in materials and workmanship.

Panasonic Consumer Electronics Company or Panasonic Sales Company (collectively referred to as "the warrantor") will, for the length of the period indicated in the chart below, which starts with the date of original purchase ("warranty period"), at its option either (a) repair your product with new or refurbished parts, or (b) replace it with a new or refurbished product. The decision to repair or replace will be made by the warrantor.

Categories	Parts	Labor
Audio Components (except items listed below)	One (1) Year	One (1) Year
MXE Series Audio Components (except items listed below)	Two (2) Years	Two (2) Years
Speakers Defective Car Audio Speakers under warranty must be exchanged at the place of purchase. Contact your Dealer for details.	One (1) Year	Not Applicable
Accessories (in exchange for defective items)	Ninety (90) Days	Not Applicable

During the "Labor" warranty period, there will be no charge for labor. During the "Parts" warranty period, there will be no charge for parts. You must carry in or mail in your product prepaid during the warranty period. If non rechargeable batteries are included, they are not warranted. This warranty only applies to products purchased and serviced in the United States or Puerto Rico. This warranty is extended only to the original purchaser of a new product which was not sold "as is". A purchase receipt or other proof of the original purchase date is required for warranty service.

CARRY-IN OR MAIL-IN SERVICE

For Carry-In or Mail-In Service in the United States, call 1-800-211-PANA (7262) or visit
Panasonic Web Site: <http://www.panasonic.com>
For assistance in Puerto Rico, call Panasonic Sales Company (787)-750-4300 or fax (787)-768-2910.

LIMITED WARRANTY LIMITS AND EXCLUSIONS

This warranty ONLY COVERS failures due to defects in materials and workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage. The warranty ALSO DOES NOT COVER damages which occurred during shipment, failures which are caused by products not supplied by the warrantor, failures which result from accident, misuse, abuse, neglect, bug infection, mishandling, misapplication, alteration, faulty installation, set-up adjustment, maladjustment of consumer control, improper maintenance, improper antenna, inadequate signal reception or pickup, power line surge, improper voltage supply, lightning, modification, commercial use (such as use in hotels, offices, restaurants, or other business uses) or rental use of the product, or service by anyone other than the technician from Factory Servicenter or other authorized service centers, or damage that is attributable to acts of God.

THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED UNDER "LIMITED WARRANTY COVERAGE". THE WARRANTOR IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. (As examples, this excludes damages for lost time, cost of having someone remove or re-install an installed unit if applicable, travel to and from the sevicer, and loss

of media, data or other memory contents. The items listed are not exclusive, but are for illustration only.) **ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.**

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the exclusions may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. If a problem with this product develops during or after the warranty period, you may contact your dealer or Servicenter. If the problem is not handled to your satisfaction, then write to warrantor's Consumer Affairs Department at the addresses of the warrantor.

PARTS AND SERVICE WHICH ARE NOT COVERED BY THIS LIMITED WARRANTY ARE YOUR RESPONSIBILITY.

Customer's Record

Model

No. _____

Serial

No. _____

Dealer's

No. _____

Code

No. _____

Dealer's

Address _____

Date of

Purchase _____

CANADA

Panasonic Canada Inc.
5770 Ambler Drive, Mississauga Ontario L4W 2T3

PANASONIC PRODUCT LIMITED WARRANTY

Panasonic Canada Inc. warrants this product to be free from defects in materials and workmanship and agrees to remedy any such defect for a period as stated below from the date of original purchase.

CAR AUDIO PRODUCT – ONE (1) YEAR, PARTS AND LABOUR

(The labour to install or remove the product is not warranted)
ACCESSORIES - NINETY (90) DAYS, (IN EXCHANGE FOR DEFECTIVE ITEMS)

LIMITATIONS AND EXCLUSIONS

This warranty does not apply to products purchased outside Canada or to any product which has been improperly installed, subjected to usage for which the product was not designed, misused or abused, damaged during shipping, or which has been altered or repaired in any way that affects the reliability or detracts from the performance, nor does it cover any product which is used commercially. Dry cell batteries are also excluded from coverage under this warranty. This warranty is extended to the original end user purchaser only. A purchase receipt or other proof of the original purchase date is required before warranty service is performed.

THIS EXPRESS, LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

IN NO EVENT WILL PANASONIC CANADA INC. BE LIABLE FOR ANY SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES.

In certain instances, some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or the exclusion of implied warranties, so the above limitations and exclusions may not be applicable.

Features

Compatible with the AAC format

This unit has newly become compatible with AAC-formatted files in addition to the existing MP3 and WMA files.

Note: Some of AAC files (such as SD-Jukebox type) are not playable.

Hands-Free Phone System

Connection of the optional Hands-Free Phone System (Hands-Free Kit featuring *Bluetooth*[®] technology: CY-BT100U) allows users to talk on a handsfree cellular phone if the phone supports Bluetooth.

Note: This unit is designed **only for receiving calls**. It cannot send calls.

Bluetooth[®]

The Bluetooth word mark and logo are owned by the Bluetooth SIG, Inc. and any use of such marks by Matsushita Electric Industrial Co., Ltd. is under license. Other trademarks and trade name are those of their respective owners.

Expansion Module (hub unit)

Connection of the Expansion Module (hub unit, CY-EM100U) allows users to connect up to 4 optional devices shown below. Even simultaneous connection of the Sirius Satellite Radio and XM Satellite Radio is feasible.

Note: A hub unit is not required to connect only one optional component.

Wide array of components for system upgrade

Various optional components allow users to obtain availability of wide range of system upgrade. Upgrading the system delivers relaxed AV space in a car. For further information, refer to the separate **System Upgrade Guidebook**.

- **DVD Changer**
The optional adapter (Conversion Cable for DVD/CD Changer: CA-CC30U) allows you to connect the optional Panasonic DVD changer unit (CX-DH801U).
- **CD Changer**
The optional adapter (Conversion Cable for DVD/CD Changer: CA-CC30U) allows you to connect the optional Panasonic CD changer unit (CX-DP880U).
- **iPod[®]**
The optional adapter (Direct Cable for iPod: CA-DC300U) allows you to connect the optional iPod series.
iPod is a trademark of Apple Computer, Inc., registered in the U.S. and other countries.
- **XM Satellite Radio**
You can connect the optional XM receiver (XMD-1000) with optional Digital Adapter. For details, refer to the operating instructions for the XM receiver.
- **Sirius Satellite Radio**
You can connect the optional Sirius Satellite radio receiver (SIR-PAN1).

Sound Control

SQ (Sound Quality)

You have six preset modes (FLAT, ROCK, POP, VOCAL, JAZZ, CLUB). You can customize your settings for these and save them for instant recall.

SQ7

This is 7-band equalizer with 60, 160, 400, 1 k, 3 k, 6 k, and 16 kHz. Each band is adjustable between -12 dB and 12 dB in steps of 2 dB.

D-M (Direct Memory)

You can assign your favorite broadcasting station to the **[D-M]** button. As the result of doing that, your favorite broadcasting station can be received even if the unit is in the CD mode or other modes. (→ page 20)

Customize

Initially stored moving images and still images are editable to taste. IMAGE STUDIO* allows you to process images from a digital camera or other devices without difficulty. (→ page 31)

* This software is downloadable from Panasonic Web site (<http://panasonic.co.jp/pas/en/software/customize/index.html>)



Contents

English	2
Français	40
Español	78

Common

● Safety Information	2
● Before Reading These Instructions	4
● Features	8
● Controls Layout	10
● Preparation (Clock adjustment etc.)	12
● General	14
● Sound Control	18

Each Source

● Radio	20
● CD Player	22
● MP3/WMA/AAC Player	24


As Needed

● Audio Setting	28
● Function Setting (Security Function Setting etc.)	29
● Display Setting	30
● Customize the Display (Customize Function)	31
● Troubleshooting	33
● Error Display Messages	37
● Notes on Discs	38
● Maintenance/Fuse	38
● Specifications	39


Controls Layout

Note: This instruction manual explains operations for use with the buttons on the main unit. (Different operations excluded)

Main Unit

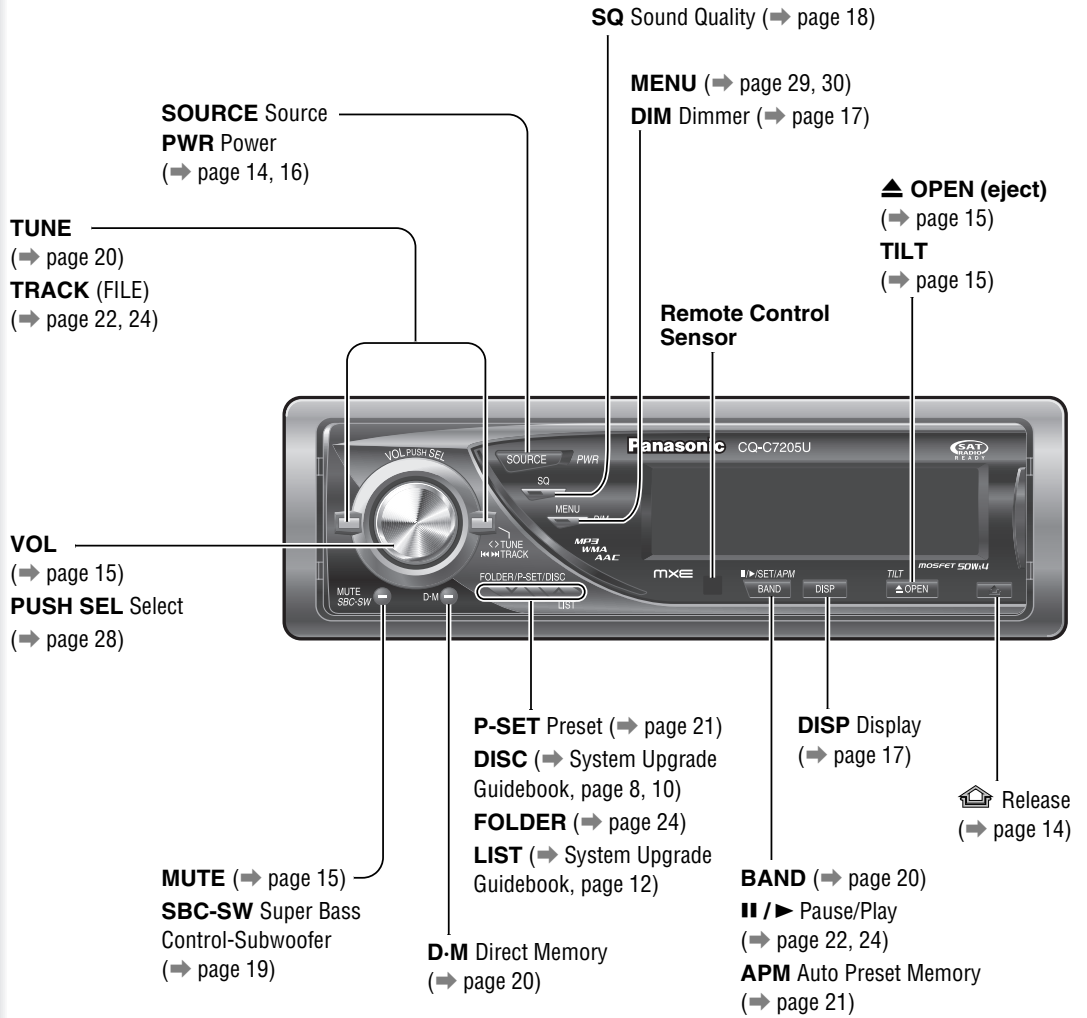

When Face Plate Opens

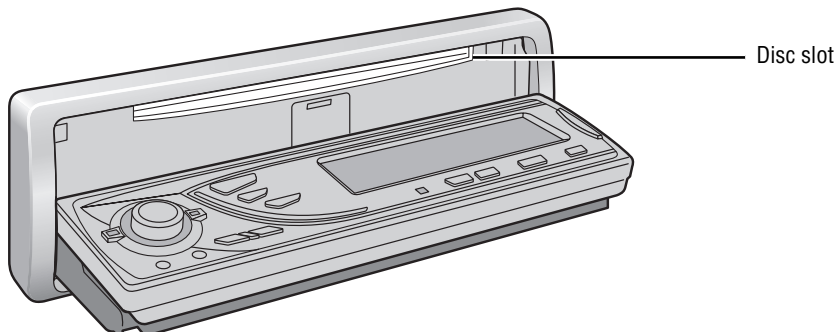

Number Buttons

0 — 9 > 0 to 9

NUMBER

RANDOM 4

SCAN 5


REPEAT 6

7 9 >

TUNE TRACK (FILE)

8 0

P-SET (Preset)
DISC (FOLDER)

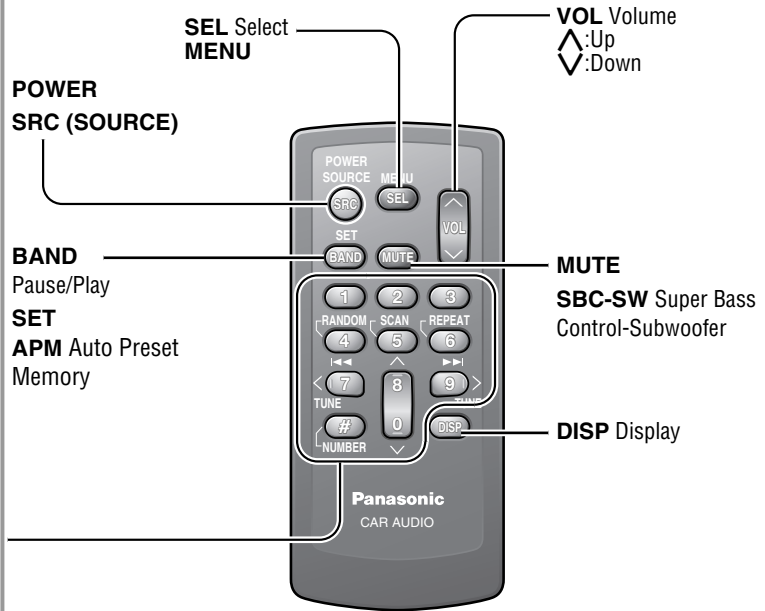

Although most of the functions of this unit are executable with both the main unit and remote control, the following functions are excluded.

Operations executable only with main unit

- Face panel's opening, closing, tilting, and removal actions (⇒ page 15)
- Disc ejection (⇒ page 15)
- Dimmer (⇒ page 17)
- SQ on, off, and adjustment (⇒ page 18)
- Direct memory setting and calling (⇒ page 20)

Operations executable only with remote control

- Preset station calling with one-touch operation (⇒ page 21)
- Direct access to tracks on CDs (⇒ page 23, 25)
- Random and repeat play with one-touch operation (⇒ page 23, 25)
- Scan playback (⇒ page 23, 25)

Preparation

Cancellation of demonstration screen

For the first use, the following screen may appear repeatedly.

- 1 Set your car's ignition switch to the ACC or On position.

The demonstration screen appears.



- 2 Press [SOURCE] (PWR: POWER).

- 3 Press [MENU] to display the menu display.

For using the remote control, hold down [SEL] (MENU) for 2 sec. or more.

- 4 Press [<] or [>] to display the DISPLAY menu.

- 5 Turn [VOL] to select "DEMONSTRATION".

For using the remote control, use [^] or [v].



- 6 Press [PUSH SEL] to select "OFF".

For using the remote control, use [BAND] (SET).

- 7 Press [MENU] to close the menu screen.


For using the remote control, hold down [SEL] (MENU) for 2 sec. or more.

Note: This unit is operable as usual even if the demonstration screen is activated. The demonstration screen automatically appears if no operation is executed for 1 minute.

Remote Control Preparation

Preparation Before Initial Use

Pull the insulation film out from the backside of remote control gently.

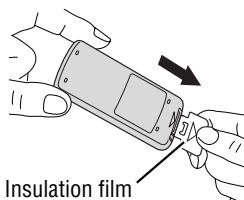


Battery Replacement

- 1 Remove the battery holder with the remote control unit placed on a flat surface.

- 1 Stick your thumbnail into the groove, and push the holder in the direction of the arrow, and at the same time.

- 2 Pull it out in the direction of the arrow using a tough pointed object.


Tough pointed object

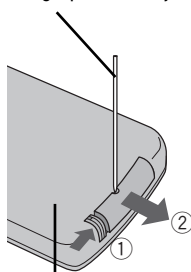

Back side

- 2 Put a battery in the case with (+) side facing up.

- 3 Put the case back.

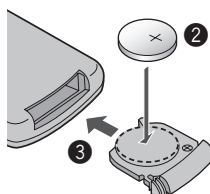

Warning

Keep batteries and insulation film out of reach of infants. If an infant ingests a battery, please seek immediate medical attention.

Cautions

- Remove and dispose of an old battery immediately.
- Do not disassemble, heat or short a battery. Do not throw a battery into a fire or water.
- Follow local regulations when disposing of a battery.
- Improper use of a battery may cause overheating, an explosion or ignition, resulting in injury or a fire.

Notice

This product contains a CR Coin Cell Lithium Battery which contains Perchlorate Material – special handling may apply.
See www.dtsc.ca.gov/hazardouswaste/perchlorate.


Note: Battery Information:

Battery Type: Panasonic lithium battery (CR2025)
(Included in the remote control)

Battery Life: Approximately 6 months under normal use
(at room temperature)

The following functions are activated when the Security Function is ON. (→ page 29)

- The security indicator lights up when removing the face plate.

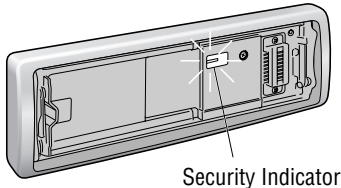

- The alarm sounds and the message appears on the screen to warn you to remove the face plate at ACC off.



You may need to set the following depending on the devices to be connected.

Using Subwoofer

- Subwoofer level adjustment (→ page 28)
- Subwoofer low pass filter (→ page 28)

Note: Other settings are required when a Sirius receiver, an XM receiver, or a Hands-Free Phone System is connected. (→ System Upgrade Guidebook)

Note: Adjust the clock when "ADJUST" appears on the display.

- 1 Press **[MENU]** to display the menu display.
For using the remote control, hold down **[SEL] (MENU)** for 2 sec. or more.
- 2 Press **[<]** or **[>]** to display the DISPLAY menu.
- 3 Turn **[VOL]** to select "CLOCK ADJ".
For using the remote control, use **[^]** or **[v]**.
- 4 Press **[PUSH SEL]**, and the clock adjustment screen appears.
For using the remote control, use **[BAND] (SET)**.

5 Adjust the setting value.

 


[>] : Adjusting minutes

[<] : Adjusting hours

① : Forward

② : Backward



6 Press **[PUSH SEL]**, and the menu screen resumes.

For using the remote control, use **[BAND] (SET)**.

7 Press **[MENU]** to close the menu screen.

For using the remote control, hold down **[SEL] (MENU)** for 2 sec. or more.

General

This chapter explains how to turn on or off the power, how to adjust the volume, etc.

Power On/off (PWR: POWER)

Power on

Press [**SOURCE**] (**PWR: POWER**).



Power off


Hold down [**SOURCE**] (**PWR: POWER**) until you hear a beep, then release it.

You can remove the face plate to prevent it from being stolen.



Removing

1 Turn off the power (→ page 14)


2 Press [] (Release).
(The face plate disengages with a click when it is removed.)



The face plate automatically closes after a lapse of 5 seconds while it is open.


The power is automatically turned off while the unit is active.

3 Put the face plate in the case.

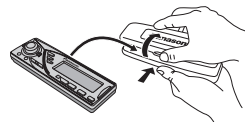

Mounting

1 Slide the left side of the face plate in place.

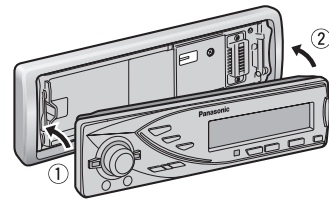

2 Press the right end of the face plate until “click” is heard.

Face Plate Removing/Mounting (ANTI-THEFT SYSTEM)


⚠ Cautions

- It is recommended to remove or mount the face plate when the plate is at the closed position. Do not remove or mount the face plate when the plate is in motion.
- This face plate is not waterproof. Do not expose it to water or excessive moisture.
- Do not remove the face plate while driving your car.
- Do not place the face plate on the dashboard or nearby areas where the temperature rises to high levels.
- Do not touch the contacts on the face plate or on the main unit, since this may result in poor electrical contacts.
- If dirt or other foreign substances get on the contacts, wipe them off with clean and dry cloth.
- To avoid damaging the face plate, do not push it down or place objects on it while it is open.

Open/Eject

Press [**▲OPEN**].

When a disc is already loaded, the disc will automatically be ejected.

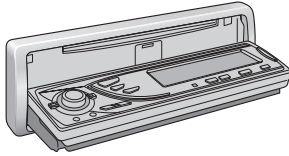

⚠ Cautions


- To avoid damaging the face plate, do not push it down or place objects on it while it is open.
- Do not pinch your finger or hand in the face plate.
- Do not insert foreign objects into the disc slots.
- For the following cases, the face plate automatically closes. Use caution not to catch your finger.
 - After a lapse of 20 seconds
 - When a disc is inserted
 - When the face plate is removed (→ page 14)
 - When ACC is set to off

Close


Press [**▲OPEN**].

Tilt

The display angle changes among 4 levels as follows every time you hold down [**▲OPEN**] (TILT) for 1 sec. or more and release.


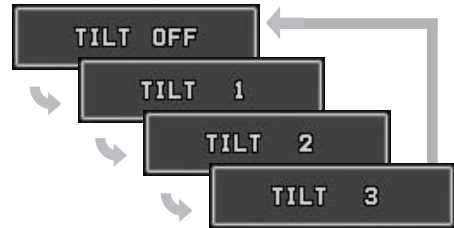


Note: The last selected angle is memorized even after turning off the power.

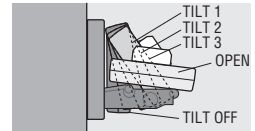

- ① Up
- ② Down

 Setting Range: 0 to 40
Default: 18

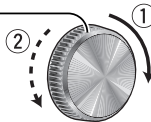

Notes:

- The volume level can be set independently for each source. (For radio, one volume setting for AM, one volume setting for all FMs)
- The volume is not adjustable while an error or the menu screen is present on the monitor.
- This unit memorizes individual volume levels for each source. Make volume adjustments of each source appropriately to prevent large volume fluctuation when the source is changed.

Volume off (down)

Press [**MUTE**].



Cancel

Press [**MUTE**] again.

Note: Volume-down range can be specified. (→ page 29)



The source changes as follows every time [SOURCE] is pressed.



Radio

FM1, FM2, FM3, AM (→ page 20)



Player

When loading CD (→ page 22)



When loading a disc containing compressed audio files (→ page 24)



AUX 1

Device connected to the AUX terminal of the this unit



System-up Connector

Device connected to the System-up Connector of this unit

When optional devices are connected:

Shift to connected devices

When an expansion module is connected:

The devices connected to the ports 1 to 4 are activated in sequence after shifting to AUX2 (devices connected to the AUX terminal of the expansion module).

When connecting DVD Changer



When connecting CD Changer



When connecting iPod



When connecting XM Receiver



When connecting Sirius Receiver



When connecting Expansion Module



Note: For information about connectable devices, refer to the **System Upgrade Guidebook** or the instruction manual for each device.

The display changes as follows every time [DISP: DISPLAY] is pressed.

Note: The graphic pattern and still image are selectable. (→ page 30)




At power-on:



Display OFF
All displays disappear in 5 seconds.



Folder hierarchy (Compressed Audio Player mode only.)

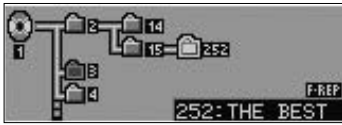

Ordinary display + clock



Display Change
(DISP: DISPLAY)

Ordinary display + graphic pattern



Only still image



 
Only graphic pattern



Ordinary display + still image



Note: The graphic equalizer of 19 bands (S.A.) is selectable when selecting a graphic pattern.



At power-off:

Clock display (default)



Off



The dimmer level changes as follows every time you hold down [MENU] (DIM: DIMMER) for 2 sec. or more.

Brighter (default)



Medium



Darker



Note: This setting is not adjustable with the remote control.

Dimmer Control
(DIM: DIMMER)

Sound Control

SQ Selection Based on Genre (SQ: SOUND QUALITY)

The equalizer curve is selectable from among preset 6 types (FLAT, ROCK, POP, VOCAL, JAZZ, and CLUB) depending on your listening category.

SQ changeover

The SQ category is changed every time **[SQ]** (Sound Quality) is pressed.

Note: Setting of SQ, bass/treble and volume are influenced one another. If the influence mentioned above causes distortion to the audio signal, readjust bass/treble or volume. (→ page 28)



Lights when SQ is activated.

SQ is adjustable in accordance with your taste.

1 Hold down **[SQ]** (Sound Quality) for 2 sec. or more to display “SOUND QUALITY MENU”.

2 Press **[PUSH SEL]**.

The targeted SQ preset appears.

For using the remote control, use **[BAND]** (**SET**).

 
3 Adjust each band.

Band: 60, 160, 400, 1 k, 3 k, 6 k, 16 k (Hz)



[<] [>] : Band selection

① ② : Level up/down



“USER” appears in the category name after adjustment.

Note: If **[PUSH SEL]** is held down for 2 sec. or more on the “SQ ADJUSTMENT” display, the preset data that is called up can be turned into the default.

4 Press **[PUSH SEL]**.

The screen of Step 1 appears again.

For using the remote control, use **[BAND]** (**SET**).

5 Press **[DISP: DISPLAY]**.

The regular screen appears again.



SQ adjustment (USER)

Substitutional Subwoofer

(SBC-SW: SUPER BASS CONTROL-SUBWOOFER)

The rear speaker can be used as a substitutional subwoofer when a subwoofer is not connected.

Holding down **[SBC-SW]** for 2 sec. or more toggles SBC-SW on and off.



Off (default)



On

Lights when SBC-SW is activated.



Notes:

- If ON is selected, the settings of subwoofer level adjustment and subwoofer low pass filter are activated. (→ page 28)

Radio

This chapter explains how to listen to the radio.


Operation Flow

1 Press **[SOURCE]** to select the radio mode.

2 Press **[BAND]** to select a band.



3 Select a station.

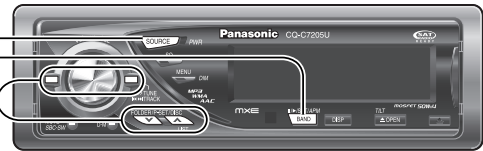

Frequency adjustment

[<] (TUNE): Lower

[>] (TUNE): Higher

Note: Hold down for 0.5 sec. or more and release for station search.

Preset station selection


[∨] (P-SET: Preset): Lower preset number

[∧] (P-SET: Preset): Higher preset number

Notes:

- Direct selection can be executed with **[1]** to **[6]** buttons on remote control.
- A preset station is selectable by turning **[VOL.]** while the preset list screen is present on the monitor.
- The volume is not adjustable while the preset list screen is present on the monitor.

Radio Mode Display

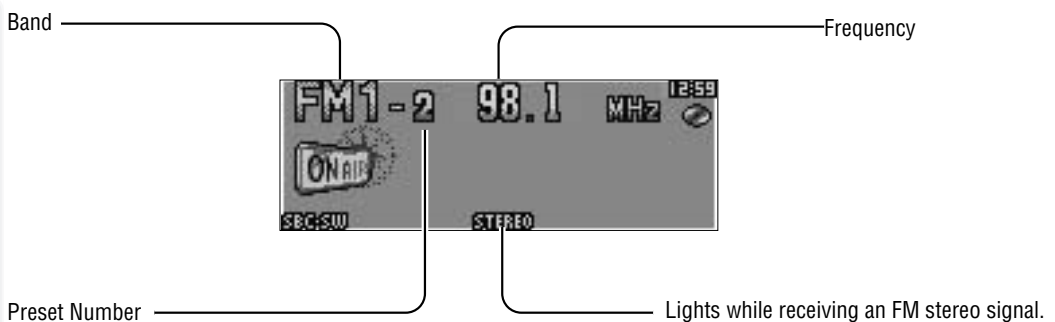

Direct Memory

You can assign your favorite broadcasting station to the **[D-M]** button. As the result of doing that, your favorite broadcasting station can be received even if the unit is in the CD mode or other modes. (Default: FM 87.9 MHz)


Note: For the use of an FM transmitter, it is useful for users to register applicable frequencies on D-M (Direct Memory).

D-M station Calling

Press **[D-M]** (DIRECT MEMORY).

D-M station Setting

- 1 Select a station you would like to preset.
- 2 Hold down **[D-M]** (DIRECT MEMORY) for 2 sec. or more.

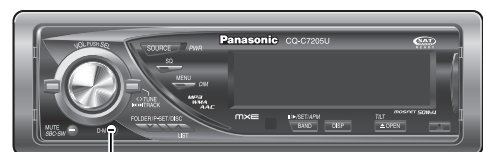

Note: If the unit is turned off during receiving a broadcasting station via D-M, the unit starts again receiving the broadcasting station via D-M by turning on the unit.

Up to 6 stations can be preset in AM, FM1, FM2, and FM3 respectively.

Preset stations can be simply called up by pressing [**^**] (P-SET) or [**v**] (P-SET).


Notes:

- Direct selection can be executed with [**1**] to [**6**] buttons on remote control.
- You can switch between 6 and 18 for FM presetting stations. (EACH BAND/ALL BAND)
- Preset stations are changeable. (Preset Swap)

Auto Preset Memory (APM)

Stations with good receiving conditions automatically preset.

- 1 Select a band.
- 2 Hold down [**BAND**] (APM) for 2 sec. or more.

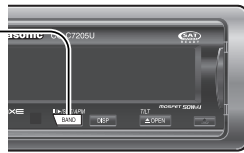

The preset stations under best receiving conditions are received for 5 sec. each after presetting the stations (SCAN). To stop scanning, press [**^**] or [**v**].

Note: New stations overwrite existing saved stations.

Manual station preset


- 1 Tune in to a station.
- 2 Hold down [**^**] or [**v**] for 2 sec. or more.
- 3 Turn [**VOL**] to select a preset number.
- 4 Hold down [**PUSH SEL**] for 2 sec. or more, and the frequency is stored at the selected preset number.

Notes:

- In step 2, a station can be registered by holding down the numeric button [**1**] to [**6**] for 2 sec. or more.
- To stop presetting stations, press [**DISP**] (DISPLAY).
- The operation above allows users to replace the current station with the station preset in the selected number while selecting a preset station. (Preset Swap)


- 1 Press [**MENU**] to display the menu display.

For using the remote control, hold down [**SEL**] (MENU) for 2 sec. or more.

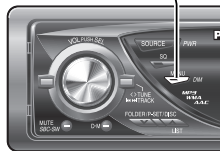

- 2 Press [**PUSH SEL**] to adjust.

For using the remote control, use [**BAND**] (SET).

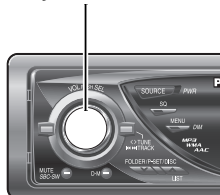

- 3 Press [**MENU**] to close the menu screen.

For using the remote control, hold down [**SEL**] (MENU) for 2 sec. or more.

PRESET

Preset range for FM bands

EACH BAND: Individual setting for FM1-3 each (default)

ALL BAND: Setting of FM1-3 together

CD Player

⚠ Cautions

- This unit does not support 8 cm (3") discs.
- Do not use irregularly shaped discs. (➔ page 38)
- Do not use discs that have a seal or label attached.
- To avoid damaging the face plate, do not push it down or place objects on it while it is open.
- Do not pinch your finger or hand in the face plate when the face plate is in motion.
- Do not insert foreign matter into the disc slots.
- Refer to the section on "Notes on CD/CD Media (CD-ROM, CD-R, CD-RW)" (➔ page 38).
- This unit does not support a MIX mode CD (a CD containing both CD-DA and compressed audio data). In case of using such a CD, problems may occur such as anacoustic playback.



When a disc is already loaded, press [SOURCE] to select the CD mode.

1 Press [▲OPEN] to open the face plate.

When a disc is already loaded (💡 lights), the disc will automatically be ejected.

2 Load a disc with the printed side facing up.

The face plate closes automatically, and the unit recognizes the disc and starts playing automatically, too.

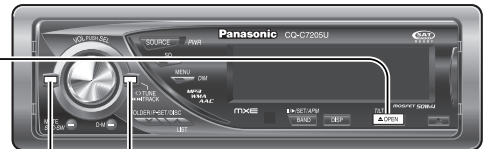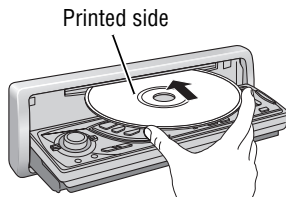

3 Select a desired portion.

Track selection

[▶▶] (TRACK): Next track

[◀◀] (TRACK): Preceding track (press twice)

Note: Hold down for fast forward/reverse.

Pause

Press [BAND] (||▶).

Press again to cancel.

4 Press [▲OPEN] to eject the disc.

Note: The panel automatically closes after 20 seconds.

Operation Flow

CD Mode Display

Track number

Time



CD-TEXT display

Notes:

- For scrolling text, hold down [DISP: DISPLAY] for 2 sec. or more.
- "NO TEXT" is displayed when there is no information on the disc.

Play Mode indicators

Lights when each mode is activated.

RANDOM
REPEAT
SCAN


Lights when the disc is loaded.

(RANDOM, REPEAT)

Random and Repeat play can be set.


- 1 Press **[MENU]** to display the menu display.

For using the remote control, hold down **[SEL] (MENU)** for 2 sec. or more.

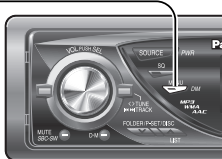

- 2 Turn **[VOL]** to select a function to be adjusted.

For using the remote control, use **[^]** or **[v]**.

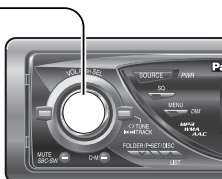

- 3 Press **[PUSH SEL]** to adjust.

For using the remote control, use **[BAND] (SET)**.

- 4 Press **[MENU]** to close the menu screen.

For using the remote control, hold down **[SEL] (MENU)** for 2 sec. or more.



RANDOM

OFF: Off (default)

ON: Random playback

REPEAT

OFF: Off (default)

ON: Playing the current track repeatedly

TEXT (CD-TEXT)

ON: Enabled (default)

OFF: Disabled

Play Mode Selection

One-touch operation is available for selecting a track playing style by use of **[RANDOM]** or **[REPEAT]**.

RANDOM

Press **[RANDOM]**.

Press again to cancel.

REPEAT

Press **[REPEAT]**.

Press again to cancel.

SCAN play

You can find your favorite track by playing first 10-sec. of each track.

Press **[SCAN]**.

Press again to cancel.

Direct Access

A track can be directly selected.

Example: track number 5

1 Press **[#] (NUMBER)**.

2 Press **[5]**.

3 Press **[SET]**.

Note: To suspend direct selection, press **[DISP]** (DISPLAY).



MP3/WMA/AAC Player

This unit can play MP3, WMA, and AAC files.

Operation Flow



When a disc is already loaded, press **[SOURCE]** to select the compressed audio mode.

1 Press **[▲OPEN]** to open the face plate.

When a disc is already loaded (⦿ lights), the disc will automatically be ejected.

2 Load a disc with the printed side facing up

The face plate closes automatically, and the unit recognizes the disc and starts playing automatically, too. (It may take several minutes to start for a disc that has a lot of files.)

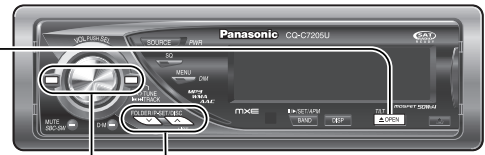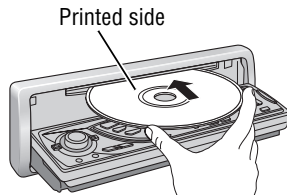

3 Select a desired portion.

Folder selection

[^] (FOLDER): Next folder

[v] (FOLDER): Preceding folder

File selection

[▶▶] (TRACK): Next file

[◀◀] (TRACK): Preceding file (press twice)

Note: Hold down for fast forward/reverse.

Pause


Press **[BAND]** (|| / ▶).

Press again to cancel.

4 Press **[▲OPEN]** to eject the disc.

Note: The panel automatically closes after 20 seconds.

Compressed Audio Player Mode Display

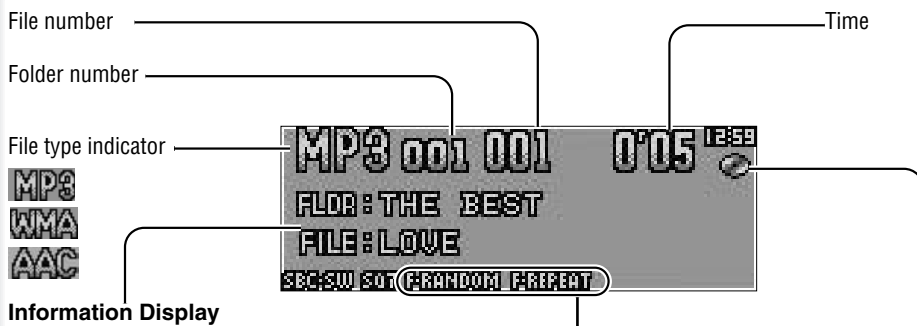

Notes:

- For scrolling text, hold down **[DISP: DISPLAY]** for 2 sec. or more.
- "NO TEXT" is displayed when there is no information on the disc.

Play Mode indicators

Lights when each mode is activated.

RANDOM

REPEAT

SCAN

F-RANDOM (Folder Random)

F-REPEAT (Folder Repeat)

F-SCAN (Folder Scan)

Notes:


- Refer to the pages 26 and 27 for cautions.
- This unit does not support a MIX mode CD (a CD containing both CD-DA and compressed audio files). In case of using such a CD, problems may occur such as anacoustic playback.

Random, Repeat Play (Compressed Audio Player Menu Display)
 (RANDOM, REPEAT)

Random and Repeat play can be set.


- 1 Press **[MENU]** to display the menu display.

For using the remote control, hold down **[SEL] (MENU)** for 2 sec. or more.

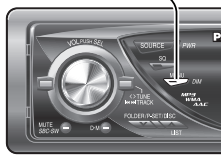

- 2 Turn **[VOL]** to select a function to be adjusted.

For using the remote control, use **[^]** or **[v]**.

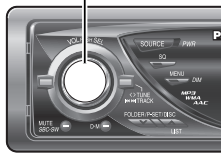

- 3 Press **[PUSH SEL]** to adjust.

For using the remote control, use **[BAND] (SET)**.

- 4 Press **[MENU]** to close the menu screen.

For using the remote control, hold down **[SEL] (MENU)** for 2 sec. or more.

**RANDOM**

OFF: Off (default)

ON: Random playback (disc)

FOLDER RANDOM

OFF: Off (default)

ON: Random playback (folder)

REPEAT

OFF: Off (default)

ON: Playing the current file repeatedly

FOLDER REPEAT

OFF: Off (default)

ON: Playing the current folder repeatedly.

TEXT

FOLDER/FILE: Folder name/File name (default)

ALBUM/TITLE: Album/Title/Artist (tag information)

OFF: No display

RE-MASTER

The high-range signal lost through MP3/WMA/AAC compression is reproduced to more closely recreate the pre-compressed sound.

Notes:

- At high bit rates, the Re-master function may have little effect.
- The Re-master function is only effective for playback of MP3/WMA/AAC data.

ON: Digital sound enhancer activated (default)

OFF: Digital sound enhancer inactivated

Play Mode Selection

One-touch operation is available for selecting a file playing style by use of **[RANDOM]** or **[REPEAT]**.

RANDOM, REPEAT

Press the button. Press again to cancel.

FOLDER RANDOM, FOLDER REPEAT

Hold down the button for 2 sec. or more. Hold down again to cancel.

SCAN play

You can find your favorite file by playing first 10-sec. of each file.

SCAN (All files)

Press **[SCAN]**. Press again to cancel.

FOLDER SCAN (1st file in each folder)

Hold down **[SCAN]** for 2 sec. or more. Hold down again to cancel.

Direct Access

A file in the current folder can be directly selected.

Example: file number 5

1 Press **[#] (NUMBER)**.

2 Press **[5]**.

3 Press **[SET]**.

**Notes:**

- For folder selection, enter a number after pressing **[#] (NUMBER)** twice.
- To suspend direct selection, press **[DISP] (DISPLAY)**.

Functions Only by Remote Control Unit

Each of MP3 (MPEG Audio Layer-3), WMA (Windows Media™ Audio), and AAC (Advanced Audio Coding) is a format for compressed audio file. These formats allow users to save all the files contained in approximately 10 pieces of existing CDs on one piece of CD-R/RW.

Note: Each of encoding software is not included with this unit.

Setting at file making

Common

- High bit rate and high sampling frequency are recommended for high quality sounds.
- Selecting VBR (Variable Bit Rate) is not recommended because playing time is not displayed properly and sound may be skipped.
- The playback sound quality differs depending on the encoding circumstances. For details, refer to the user manual of your own encoding software and writing software.
- Be sure to put an extension compatible with the format.

MP3

- It is recommended to set the bit rate to “128 kbps or more” and “fixed”.

WMA

- It is recommended to set the bit rate to “64 kbps or more” and “fixed”.
- Do not set the copy protect attribute on the WMA file to enable this unit to play back.

AAC

- It is recommended to set the bit rate to “128 kbps or more” and “Stereo”.
- Files with the extension of “.m4a” encoded using iTunes version 6 are playable on this unit. Some of the files using other encoders are not playable.
- Files encoded using Apple Lossless Encoder are not playable.
- Files with copyright protection are not playable.

Compression formats

Compression method	Bit rate	VBR	Sampling frequency
MPEG 1 audio layer 3 (MP3)	32 k – 320 kbps	Yes	32, 44.1, 48 kHz
MPEG 2 audio layer 3 (MP3)	8 k – 160 kbps	Yes	16, 22.05, 24 kHz
MPEG 2.5 audio layer 3 (MP3)	8 k – 160 kbps	Yes	12, 11.205, 8 kHz
Windows Media Audio Ver. 2, 7, 8, 9*	32 k – 192 kbps	Yes	32, 44.1, 48 kHz
MPEG 4 AAC LC	24 k – 320 kbps	Yes	8, 11.205, 12, 16, 22.05, 24, 32, 44.1, 48 kHz

* WMA 9 Professional/LossLess/Voice are not supported.



Caution

Never put an extension indicating compressed audio (such as “.mp3”, “.wma”, and “.m4a”) to files other than compressed audio files. This may not only produce noise from the speaker damage, but also damage your hearing.

Display Information

- **Common**
Folder name,
File name
- **MP3**
Album name,
Title name/artist name
(ID3 tag)
- **WMA**
Album name,
Title name/artist name
(WMA tag)
- **AAC**
Album name,
Title name/artist name
(AAC tag)

dard of each file system. Refer to the instructions of writing software for details.

- ASCII character set and special characters in each language can be displayed.

ASCII character set

A to Z, a to z, digits 0 to 9, and the following symbols:

(space) ! " # \$ % & ' () * + , - . / : ; < = > ? @ [\] ^ _ ` { | } ~

Displayable characters

- Displayable length of file name/folder name: within 64 characters. (Unicode file and folder names are reduced by half in the number of displayable characters.)
- Name files and folders in accordance with the stan-

Notes:

- Characters may be garbled depending on encoding software to be used.
- Undisplayable characters and symbols will be converted into an asterisk (*).

Compressed audio file writing

- Do not save an audio file (CD-DA file) and a compressed audio file on the same disc. Failure to observe this may result in difficulty in playing.
- If compressed audio files formatted with two or more types are saved on the same disc, each format shall have a different folder.
- Do not write files other than compressed audio files.
- Playability may depend on the combination of writing software and disc writer to be used.
- This unit does not support the play list function.
- Write files in a disc-at-once manner unless otherwise needed.
- You can shorten the duration between data read and playback by decreasing the quantity of files or folders, or the depth of the hierarchy.

Supported file systems


ISO 9660 Level 1/Level 2/Level 3, Joliet, Romeo

Note: Apple HFS, UDF 1.50, Mix CD and CD Extra are not supported.

Folder selection order/file playback order

Maximum number of files/folders

- Maximum number of files: 511 (files + folders)
- Maximum number of files in one folder: 255
- Maximum depth of trees: 8
- Maximum number of folders: 255 (Root folder is included.)

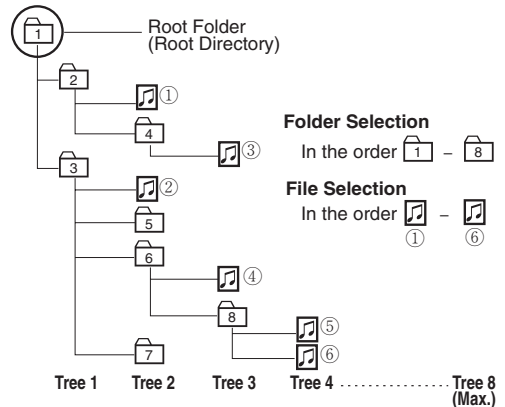

Notes:

- This unit counts the number of folders irrespective of the presence or absence of a compressed audio file.
- If the selected folder does not contain any compressed audio file, the nearest compressed audio file in the order of playback will play.
- Playback order of this unit may be different from that of other compressed audio players even if the same disc is used
- "ROOT" appears when displaying the root folder name.

Copyright

It is prohibited by copyright laws to copy, distribute and deliver copyrighted materials such as music without the approval of copyright holder except enjoying yourself personally.

No warranty

Above description complies with our investigations as of October 2006. It has no warranty for reproducibility and displayability of MP3/WMA/AAC.

iTunes is a trademark of Apple Computer, Inc., registered in the U.S. and other countries/regions.

Windows Media, and the Windows logo are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries/regions.



MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson.

Audio Setting

Adjustment to each speaker and an optional subwoofer

- 1 Press **[PUSH SEL: SELECT]** to display the AUDIO menu display.

For using the remote control, use **[SEL] (MENU)**.




- 2 Press **[PUSH SEL: SELECT]** to select a mode to be adjusted.

For using the remote control, use **[SEL] (MENU)**.

- 3 Turn **[VOL]** clockwise or counterclockwise to adjust.

For using the remote control, use **[VOL ^]** or **[VOL v]**.

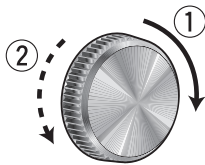


VOLUME

Main volume adjustment

(Setting range: 0 to 40, Default: 18)

 - ① : Up
- ② : Down



BASS/TREBLE

Bass adjustment

(Setting range: -12 dB to +12 dB, 2 dB Step, Default: Bass 0 dB)

- ① : Up
- ② : Down

 


BASS/TREBLE

Treble adjustment

(Setting range: -12 dB to +12 dB, 2 dB Step, Default: Treble 0 dB)

- ① : Up
- ② : Down



Note: Do not activate SQ and Bass/Treble at same time to avoid causing sound distortion.

BALANCE/FADER

Balance adjustment

(Setting range: L (left) 15 to R (right) 15 and Center, Default: Center)

- ① : Right enhanced
- ② : Left enhanced



BALANCE/FADER

Fader adjustment

(Setting range: R (rear) 15 to F (front) 15 and Center, Default: Center)

- ① : Front enhanced
- ② : Rear enhanced



SUB WOOFER

Subwoofer level adjustment

(Setting range : mute (-∞), -6 dB to +6 dB, 2 dB Step, Default: 0 dB)

- ① : Up
- ② : Down

 


LPF

Subwoofer Low Pass Filter

(Setting range: 80 Hz, 120 Hz, 160 Hz, Default: 80 Hz)

- ① : Up
- ② : Down



Subwoofer output range

Other speakers output ranges

HPF

High Pass Filter

(Setting range: Filter OFF, 90 Hz, 135 Hz, 180 Hz, 225 Hz, Default: Filter OFF)

- ① : Up
- ② : Down




Function Setting


Adjustment to display on the FUNCTION menu

- 1 Press **[MENU]** to display the menu display.

For using the remote control, hold down **[SEL] (MENU)** for 2 sec. or more.

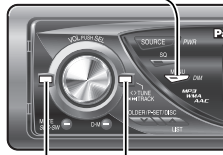


- 2 Press **[<]** or **[>]** to display the FUNCTION menu.

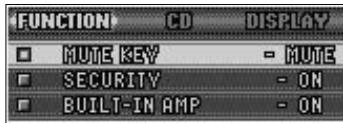

- 3 Turn **[VOL]** to select a function to be adjusted.

For using the remote control, use **[^]** or **[v]**.

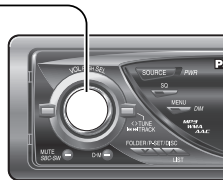

- 4 Press **[PUSH SEL]** to adjust.

For using the remote control, use **[BAND] (SET)**.

- 5 Press **[MENU]** to close the menu screen.

For using the remote control, hold down **[SEL] (MENU)** for 2 sec. or more.

MUTE KEY

Setting **[MUTE]** buttons' functions

- MUTE** : Volume off (Default)
- BTT LW 1** : Volume down by 10 steps
- BTT LW 2** : Volume down by 5 steps

SECURITY

Setting the security function (→ page 13)

- ON** : ON (Default)
- OFF** : OFF

BUILT-IN AMP

You can toggle the integrated amplifier on and off.

- ON** : Amplifier on (Default)
- OFF** : Amplifier off (when the external amplifier is used)




Lights when deactivated.

Display Setting

Adjustment to display on the DISPLAY menu

- 1 Press **[MENU]** to display the menu display.

For using the remote control, hold down **[SEL] (MENU)** for 2 sec. or more.

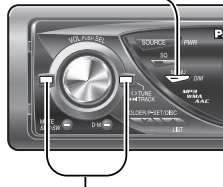


- 2 Press **[<]** or **[>]** to display the DISPLAY menu.



- 3 Turn **[VOL]** to select a function to be adjusted.

For using the remote control, use **[^]** or **[v]**.

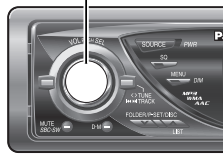

- 4 Press **[PUSH SEL]** to adjust.

For using the remote control, use **[BAND] (SET)**.

- 5 Adjust the setting value.

- 6 Press **[PUSH SEL]**.

For using the remote control, use **[BAND] (SET)**.

- 7 Press **[MENU]** to close the menu screen.

For using the remote control, hold down **[SEL] (MENU)** for 2 sec. or more.

DEMONSTRATION

Switching by **[PUSH SEL]**.

- ON:** Demonstration screen at no operation (default)
- OFF:** Regular screen

GRAPHIC PATTERN

(Default: All)

Turn **[VOL]** to make a selection.

All: Sequential display from pattern A to C.

Pattern A-C

S.A.: 19-band display (Spectrum analyzer)



STILL IMAGE PATTERN

(Default: All)

Turn **[VOL]** to make a selection.

All: Sequential display from pattern 1 to 10

No.1-10

 


CONTRAST

(Setting range: 1 to 5, Default: Contrast 3)

① : Tilting up view angle

② : Tilting down view angle



CLOCK ADJ


 
Note: Adjust the clock when "ADJUST" appears on the display.

[>] : Adjusting minutes

[<] : Adjusting hours

① : Forward

② : Backward

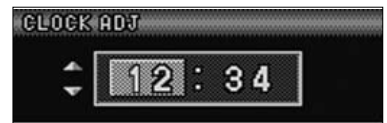

Notes:

- The graphic pattern and still image are changeable. (→ page 31)
- If corrupted data is selected, "DISPLAY FILE INCOMPLETE" appears. (→ page 32)

Customize the Display (Customize Function)

You can edit the moving images and still images that are initially stored in the unit. You also can use the data that is downloaded from the Panasonic Web site and the data that is stored with a digital camera or other devices and processed with exclusive software, IMAGE STUDIO. See "Notes on Customize Function" (→ page 32) as well.

Note: Visit Panasonic Web site (<http://panasonic.co.jp/pas/en/software/customize/index.html>) for details.

Preparation:

Put the CD-R/RW that contains data to be customized in hand.

1 If there is a disc inside, take out the disc.

2 Press **[SOURCE]** to select the CD mode.



3 Hold down **[PUSH SEL]** for 4 sec. or more to display the menu screen.

CUSTOMIZE MENU

4 Load a CD-R/RW that contains data.

Notes:

- It may take time for the unit to identify the CD-R/RW.
- Discs recorded by the packet writing software are not supported.

5 Select an item to be customized.



1 **2** : Select
[PUSH SEL]: Confirm



Note: To exit the customize menu, hold down **[PUSH SEL]** for 4 sec. or more.

GRAPHIC PATTERN

Moving image (graphic pattern) data (→ page 30)

STILL IMAGE

Still image data (→ page 30)


OPENING MESSAGE

Moving image at power on


CLOSING MESSAGE

Moving image at power off

6 Select a file.

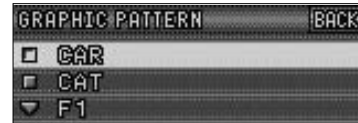

 1 **2** **[<II>]**: Select
[PUSH SEL]: Confirm




Notes:

- Files are automatically identified by their extensions, and target files are displayed.
- If "BACK" is selected, the screen of step 5 appears.

7 For a moving image file or still image file, select where to save the file.



 
1 **2** **[^][V]**: Select
[PUSH SEL]: Confirm



Notes:

- New data overwrites existing data.
- If "BACK" is selected, the screen of step 6 appears.

8 Confirm the changed item.

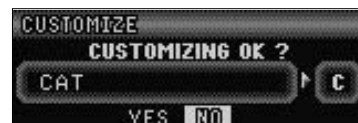

1 **2** : Select
[PUSH SEL]: Confirm



CUSTOMIZING COMPLETE

Customization is performed. Do not turn off the power in mid-operation. (It takes approx. 1 minutes to complete this operation for a 168 kB moving image.) After completion of this operation, the screen of step 5 appears.

Note: If "NO" is selected, the screen of step 5 appears.

9 Press **[▲OPEN]** to eject the disc.

10 Hold down **[PUSH SEL]** for 4 sec. or more.

The CD mode comes back.

Customize the Display (Customize Function) (continued)

Note on Download Service

The download service may be suspended or stopped without advance notice. The download service is not available in some areas. Please visit the site below for further information.

Panasonic Web site:
(<http://panasonic.net>)

Notes on IMAGE STUDIO

- This download service is not available in some areas. For details, please access the Panasonic website.
- IMAGE STUDIO is available only by downloading from the address below. It is not bundled with this unit.
- Refer to the downloaded operating manual for how to use IMAGE STUDIO.

Notes on File

- The customize-specific file is downloadable from the URL below. You can create exclusive files stored with a digital camera or other devices by using exclusive software, IMAGE STUDIO that can be accessed from the same URL.
- Do not change the extension. Otherwise, the data cannot be recognized.

At Disc Making

- Save only customize-specific data.
- Save all data in the root directory. Files contained in a folder cannot be recognized.
- Follow the table below with regard to the number of files that are saved to a disc. Files beyond the specified capacity are not readable.
- Discs recorded by the packet writing software are not supported.

Type	Extension	Max. number
GRAPHIC PATTERN	.pfm	10
STILL IMAGE	.pfs	15
OPENING MESSAGE	.pfo	5
CLOSING MESSAGE	.pfe	5

At Customizing

- If customizing is interrupted on account of turning off the power, stopping the engine, removing the face plate or other reasons, you may lose the data. In such a case, try customizing again.
- The default image exists on the Panasonic Web site. If you would like to restore it, download the image from the site.

Download site:

<http://panasonic.co.jp/pas/en/software/customize/index.html>

Error Display Messages

NO FILES DETECTED

No customize-specific data on the disc

- ➔ **Load a disc that contains customize-specific data.**

CUSTOMIZING FAILED

Customize failed

- ➔ **Check to see whether or not the extension is correct and file contents are appropriate.**

DISPLAY FILE INCOMPLETE

Intended moving image or still image is damaged.

- ➔ **Customize it again and overwrite the file with new one.**

Troubleshooting

If You Suspect Something Wrong

Check and take steps as described below.

If the described suggestions do not solve the problem, it is recommended to take the unit to your nearest authorized Panasonic Servicenter. The product should be serviced only by qualified personnel. Please refer the checking and the repair to professionals. Panasonic shall not be liable for any accidents arising out of neglect of checking the unit or your own repair after your checking.

Never take measures especially for those other than indicated by *italic* letters in "Possible Solution" described below because those are too dangerous for users to handle themselves.

Warning

- Do not use the unit in an irregular condition, for example, without sound, or with smoke or a foul smell, which can cause ignition or electric shock. Immediately stop using the unit and consult your dealer.
- Never try to repair the unit by yourself because it is dangerous to do so.

English

Customize the Display, Troubleshooting

Problem	Possible cause → Possible solution
No power to the unit	The power cord (battery, power and ground) is connected in the wrong way. → Check the wiring.
	Fuse blows out. → Eliminate the cause of fuse blowout and replace the fuse with new one. Consult your dealer.
Sound is not generated.	MUTE is set to ON. → Set MUTE to OFF.
	The wiring of speaker lines are not correct, or a break or poor contact arises. → Check the wiring in accordance with the wiring diagram. (Installation Instructions)
Noise	There is an electromagnetic-wave generator such as a cellular phone near the unit or its electrical lines. → Keep an electromagnetic-wave generator such as a cellular phone away from the unit and the wiring of the unit. In case that noise cannot be eliminated due to the wiring harness of the car, consult your dealer.
	The contact of the ground lead is poor. → Make sure that the ground lead is connected to an unpainted part of the chassis securely.
Noise is made in step with engine revolutions.	Alternator noise comes from the car. → Change the wiring position of the ground lead. → Mount a noise filter on the power supply.

Common

Troubleshooting (continued)

Common (continued)

Problem	Possible cause → Possible solution
Some operations are not executable.	Some operations are not executable in particular modes such as menu mode. → Read the operating instructions carefully and cancel the mode. If the unit is still out of order, consult your dealer.
No sound from speaker(s)	BALANCE/FADER setting is not appropriate. → Readjust BALANCE/FADER. There is a break, a short circuit, poor contact or wrong wiring regarding the speaker wiring. → Check the speaker wiring.
The speaker channels are reversed between right and left.	The speaker wiring is confused between right and left. → Perform the speaker wiring in accordance with the wiring diagram.
The sound field is not clear in the stereo mode. Central sound does not settled.	The plus and minus terminals at right and left channels of speakers are connected reversely. → Perform the speaker wiring in accordance with the wiring diagram.
The power fails unintentionally.	The safety device works. → Consult your dealer, or your nearest Panasonic Servicenter.

Radio

Poor reception or noise	Antenna installation or wiring of antenna cable is faulty. → Check whether the antenna mounting position and its wiring are correct. In addition, check to see whether the antenna ground is securely connected to the chassis. No power is supplied to the antenna amplifier (when using a film antenna, etc.). → Check the wiring of the antenna battery lead.
The number of auto preset stations is less than 6.	The number of receivable stations is less than 6. → Move to an area where receivable stations number is maximum, and try pre-setting.
Preset stations cannot be stored.	The contact of the battery lead is poor, or the battery lead is not always powered. → Make sure that the battery lead is connected securely, and preset stations again.

CD

Problem	Possible cause → Possible solution
<p>No playback or disc ejected</p>	<p>The disc is inserted upside down. → Insert a disc correctly.</p>
	<p>There is a flaw or foreign material on the disc. → Remove the foreign material, or use a flawless disc.</p>
<p>Sound skipping or noise</p>	<p>There is a flaw or foreign material on the disc. → Remove the foreign material, or use a flawless disc.</p>
<p>Sound skipping due to vibration</p>	<p>The unit is not sufficiently secured. → Secure the unit to the console box.</p>
	<p>The unit is tilted at over 30° in the front-to-end direction. → Make the angle 30° or less.</p>
<p>Disc unejectable</p>	<p>Something such as a peeled label obstructs the disc coming out. → Press and hold the [▲OPEN] for more than 2 seconds when the face plate is open (disc forced ejection). In case that the disc forced ejection does not work, consult your dealer.</p>
	<p>The microcontroller in the unit operates abnormally due to noise or other factors. → Unplug the power cord and plug it again. In case the unit is still out of order, consult your dealer.</p>

Compressed audio

<p>No playback or disc ejected</p>	<p>The disc has unplayable formatted data. → Check the file format.</p>
<p>The CD-R/RWs that are playable on other devices are not playable on this unit.</p>	<p>The playability of some CD-R/RWs may depend on the combination of media, recording software and recorder to be used even if these CD-R/RWs are playable on other devices such as a PC. → Make CD-R/RWs in different combination of media, recording software and recorder after referring to the description about the compressed audio player.</p>
<p>Sound skipping or noise</p>	<p>There is a flaw or foreign material on the disc. → Remove the foreign material, or use a flawless disc.</p>
	<p>Playing VBR (Variable Bit Rate) files may cause sound skipping. → Play Non-VBR files.</p>
<p>Noise is heard with "RE-MASTER" at "ON"</p>	<p>With some CDs, noise may be heard in the treble range when playing compressed audio files into which the CD tracks were encoded with "RE-MASTER" enabled. → If noise is heard, set "RE-MASTER" to "OFF".</p>

		Problem	Possible cause → Possible solution
Remote control unit	▶	No response to pressing buttons	The battery is inserted in the wrong direction. A wrong battery is inserted. → <i>Insert a correct battery in the correct direction.</i>
			The battery is weak. → <i>Replace the battery with new one.</i>
			The aiming direction of the remote control unit is wrong. → <i>Aim the remote control unit at the sensor of the unit and press buttons.</i>
			The sensor is exposed to direct sunlight. (The remote control unit may not be operable when the sensor is exposed to direct sunlight. In such a case, the system is not faulty.) → <i>Block off sunlight to the sensor.</i>

Error Display Messages

		Display	Possible cause → Possible solution
CD/Compressed Audio		CD E 1	<p>The disc is dirty, or is upside down. → Check the disc.</p> <p>The disc has scratches. → Check the disc.</p>
		CD E 3	<p>No operation by some cause. → Unplug the power cord and plug it again. In case the unit is still out of order, consult your dealer. (→ Installation Instructions)</p>
		CD E 4	<p>The player for some reason cannot read the file you are trying to play. (File recorded in an unsupported file system, compression scheme, data format, file name extension, damaged data, etc.) → Select a file that the player can read. Check the type of data recorded on the disc. Create a new disc if necessary.</p>
		PROTECTED (After 5 seconds) ↓ To next file automatically	<p>A WMA file can be copyrighted. → The file protected by copyright is not playable.</p>
		NO DISC	No disc.

Note: Refer to the **System Upgrade Guidebook** for error messages regarding optional products.

Notes on Discs

Notes on CD/CD Media (CD-ROM, CD-R, CD-RW)

If you use commercial CDs, they must have either of these labels shown at right. Some copy-protected music CDs are not playable.



How to hold the disc

- Do not touch the underside of the disc.
- Do not scratch on the disc.
- Do not bend the disc.
- When not in use, keep the disc in a case.

Do not leave discs in the following places:

- In direct sunlight
- Near car heaters
- Dirty, dusty and damp areas
- On seats and dashboards

Disc cleaning

Use a dry, soft cloth to wipe from the center outward.



Do not write on the disc label with a ballpoint pen or other hard-point pens.



 
Labels created by a printer, Protective films or sheets



Irregularly shaped discs



Disc with adhered stickers or tape



Discs with cracks, scratches or parts missing

Notes on CD-Rs/RWs

- You may have trouble playing back some CD-R/RW discs recorded on CD recorders (CD-R/RW drives), either due to their recording characteristics or dirt, fingerprints, scratches, etc. on the disc surface.
- CD-R/RW discs are less resistant to high temperatures and high humidity than ordinary music CDs. Leaving them inside a car for extended periods may damage them and make playback impossible.
- Some CD-R/RWs can not be played back successfully thanks to incompatibility among writing software, a CD recorder (CD-R/RW drive) and the discs.
- This player cannot play the CD-R/RW discs if the session is not closed.
- This player cannot play the CD-R/RW discs which contains other than CD-DA or compressed audio data.
- Be sure to observe the instructions of CD-R/RW disc for handling it.

Maintenance/Fuse

Cleaning the Unit

Your product is designed and manufactured to ensure the minimum of maintenance. Use a soft cloth for routine exterior cleaning. Never use benzine, thinner, or other solvents.

Fuse

If the fuse blows out, consult your dealer, or your nearest authorized Panasonic Servicenter.

Warning

- Use fuses of the same specified rating (**15 A**). Using substitutes or fuses with higher ratings, or connecting the unit directly without a fuse could cause fire or damage to the unit. **If the replaced fuse fails, contact your nearest authorized Panasonic Servicenter.**

Specifications

General

Power Supply	DC 12 V (11 V – 16 V), Test Voltage 14.4 V, Negative Ground
Tone Controls (Bass/Treble)	Bass; ± 12 dB at 60 Hz, Treble; ± 12 dB at 16 kHz
Equalizer Center Frequency	60, 160, 400, 1 k, 3 k, 6 k, 16 k Hz
Variable Range of Equalizer	-12 dB to 12 dB (2 dB step)
Current Consumption	Less than 2.2 A (CD mode, 0.5 W 4-Speaker)
Maximum Power Output	50 W x 4 (at 1 kHz)
Speaker Impedance	4 – 8 Ω
Pre-amp output voltage	5 V (CQ-C7205U), 2.5 V (CQ-C7105U) (CD mode, 1 kHz, 0 dB)
Subwoofer-output voltage	5 V (CQ-C7205U), 2.5 V (CQ-C7105U) (CD mode, 1 kHz, 0 dB)
Pre-amp output impedance	60 Ω (CQ-C7205U), 200 Ω (CQ-C7105U)
Subwoofer-output impedance	60 Ω (CQ-C7205U), 200 Ω (CQ-C7105U)
Dimensions (Main Unit)	178(W) x 50(H) x 155(D) mm {7" x 1 ¹⁵ / ₁₆ " x 6 ¹ / ₈ "}
Weight (Main Unit)	1.6 kg {3 lbs. 8 oz}

CD Player

Sampling Frequency	8 times oversampling
DA Converter	4 DAC System
Pick-Up Type	Astigma 3-beam
Light Source	Semiconductor laser
Wavelength	790 nm
Frequency Response	20 Hz – 20 kHz (± 1 dB)
Signal to Noise Ratio	96 dB
Total Harmonic Distortion	0.01 % (1 kHz)
Wow and Flutter	Below measurable limits
Channel Separation	85 dB

Stereo Radio

FM	
Frequency Range	87.9 MHz – 107.9 MHz
Usable Sensitivity	10.2 dBf (0.9 μ V, 75 Ω)
50 dB quieting Sensitivity	15.2 dBf (1.6 μ V, 75 Ω)
Frequency Response	30 Hz – 15 kHz (± 3 dB)
Alternate channel selectivity	75 dB
Stereo Separation	30 dB (at 1 kHz)
Image response ratio	55 dB
IF response ratio	100 dB
Signal to noise ratio	62 dB
AM	
Frequency Range	530 kHz – 1 710 kHz
Usable Sensitivity	27 dB/ μ V (S/N 20 dB)

Power Output:
18 W RMS x 4 Channels at 4 Ω and $\leq 1\%$
THD+N
Signal to Noise Ratio:
85 dBA (reference: 1 W into 4 Ω)



Above Specifications comply with EIA standards.

Notes:

- Specifications and design are subject to modification without notice due to improvements.
- Some figures and illustrations in this manual may be different from your product.

**Panasonic Consumer
Electronics Company,
Division of Panasonic
Corporation of North America**
One Panasonic Way, Secaucus,
New Jersey 07094
<http://www.panasonic.com>

**Panasonic Sales Company,
Division of Panasonic Puerto
Rico, Inc. ("PSC")**
Ave. 65 de Infanteria, Km. 9.5
San Gabriel Industrial Park,
Carolina, Puerto Rico 00985
<http://www.panasonic.com>

Panasonic Canada Inc.
5770 Ambler Drive,
Mississauga, Ontario
L4W 2T3
<http://www.panasonic.ca>

YFM284C662CA

NY1006-1116

Printed in China
Imprimé en Chine
Impreso en China

© 2006 Matsushita Electric Industrial Co., Ltd. All Rights Reserved



(CQ-C7205U)

Installation Instructions
Instructions d'installation
Instrucciones de instalación



AAC WMA MP3

⚠ This installation information is designed for professional installers with knowledge of automobile electrical safety systems and is not intended for non-technical, do-it-yourself individuals. It does not contain instructions on the electrical installation and avoidance of potential harm to air bag, anti-theft and ABS braking or other systems necessary to install this product. Any attempt to install this product in a motor vehicle by anyone other than a professional installer could cause damage to the electrical safety system and could result in serious personal injury or death.

⚠ If your car is equipped with air bag and/or anti-theft systems, specific procedures may be required for connection and disconnection of the battery to install this product. Before attempting installation of this electronic component against the manufacturer's recommendation, you must contact your car dealer or manufacturer to determine the required procedure and strictly follow their instructions.

FAILURE TO FOLLOW THE PROCEDURE MAY RESULT IN THE UNINTENDED DEPLOYMENT OF AIR BAGS OR ACTIVATION OF THE ANTI-THEFT SYSTEM RESULTING IN DAMAGE TO THE VEHICLE AND PERSONAL INJURY OR DEATH.

⚠ Les informations concernant cette installation sont destinées aux techniciens professionnels, compétents dans le domaine des systèmes de sécurité électrique pour automobiles et ne sont pas destinées aux bricoleurs ou aux personnes non professionnelles. Elles ne contiennent pas d'instructions sur les installations électriques ni d'avertissements sur les dangers potentiels des coussins gonflables, du système antivol et du système de freinage ABS ou autres systèmes d'avertissement qui sont indispensables pour installer cet appareil. Toute tentative d'installer cet appareil dans un véhicule par une personne autre qu'un installateur professionnel pourrait endommager le système de sécurité électrique, et pourrait provoquer des blessures physiques graves, voire la mort.

⚠ Si votre voiture est équipée de coussins gonflables et/ou du système antivol, des procédures spécifiques sont parfois requises pour la connexion et la déconnexion de la batterie pour installer cet appareil. Avant de tenter malgré tout l'installation de ce composant électronique contrairement aux recommandations du fabricant, vous devez entrer en contact avec votre concessionnaire ou votre fabricant automobile pour déterminer la procédure requise et vous conformer strictement à leurs instructions.

LE FAIT DE NE PAS SUIVRE CETTE PROCÉDURE PEUT PROVOQUER UN DÉPLOIEMENT DES COUSSINS GONFLABLES OU L'ACTIVATION DU SYSTÈME ANTIVOL POUVANT ENDOMMAGER LE VÉHICULE OU PROVOQUER DES BLESSURES PHYSIQUES, VOIRE LA MORT.

⚠ La información de instalación va dirigida a instaladores profesionales con conocimientos de los sistemas de seguridad eléctricos de los automóviles y no se ha preparado para individuos sin conocimientos técnicos. No contiene instrucciones sobre la instalación eléctrica ni advertencias relacionadas con los posibles daños en los airbag, sistema antirrobo y de frenos ABS, ni otros sistemas, que pueden causarse al intentar instalar este producto. Cualquier intento de instalar este producto en un vehículo motorizado por parte de una persona que no sea un instalador cualificado podrá causar daños en los sistemas eléctricos de seguridad, pudiendo causar heridas graves o incluso la muerte.

⚠ Si su automóvil está provisto de sistemas de airbags y/o antirrobo, pueden resultar necesarios unos procedimientos específicos para conectar y desconectar la batería a fin de instalar este producto. Antes de intentar instalar este componente electrónico en contra a las recomendaciones del fabricante, deberá ponerse en contacto con el concesionario o fabricante de su automóvil para determinar el procedimiento requerido y deberá seguir estrictamente sus instrucciones.

SI NO SIGUE EL PROCEDIMIENTO INDICADO PUEDE RESULTAR EN QUE SE INFLAN ACCIDENTALMENTE LOS AIRBAG O SE ACTIVE EL SISTEMA ANTIRROBO, RESULTANDO EN DAÑOS EN EL VEHÍCULO Y HACIÉNDOLE CORRER EL PELIGRO DE HERIDAS PERSONALES O DE MUERTE.

Before Installation/Avant l'installation/ Antes de la instalación

Consult a professional for installation.

● Verify the radio using the antenna and speakers before installation.

Prenez contact avec un spécialiste pour le montage.

● Vérifiez l'autoradio avant de procéder au montage.

Para realizar la instalación consulte a un profesional.

● Verifique el funcionamiento de la radio empleando la antena y los altavoces antes de realizar la instalación.

Before Wiring/Avant le câblage/ Antes de realizar las conexiones

Please refer to the "WARNING" statement above.

Exclusively operated with 12 V battery with negative (-) ground.


Connect the power lead (red) last. Connect the battery lead (yellow) to the positive (+) terminal of the battery or fuse block terminal (BAT). Strip about 5 mm {1/4"} of the lead ends for connection. Apply insulating tape to bare leads.

Reportez-vous à l' "AVERTISSEMENT" ci-dessus.

Alimentez l'appareil exclusivement avec une batterie de 12 V avec sa polarité négative (-) mise à la masse. Raccordez le fil d'alimentation (rouge) en dernier. Connectez le fil (jaune) à la borne positive (+) de la batterie ou à la borne (BAT) de la boîte à fusibles. Dénudez les extrémités de fil de 5 mm {1/4 po} environ pour la connexion. Recouvrez les fils nus d'un ruban isolant.



Consulte el apartado "ADVERTENCIA" arriba mencionado.

Conecte exclusivamente una alimentación de batería de 12 V con el negativo (-) a tierra. Conecte el cable de la alimentación (rojo) en último lugar. Conecte el cable de la batería (amarillo) al terminal positivo (+) de la batería o al terminal (BAT) del bloque de fusibles. Pele unos 5 mm {1/4"} de los extremos del cable para efectuar la conexión. Ponga cinta aislante en los cables desnudos.

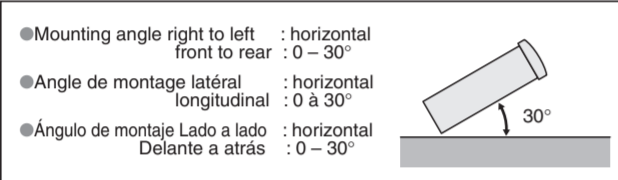

Dashboard/Tableau de bord/Tablero de instrument

THICKNESS/ÉPAISSEUR/GROSOR
MIN. 4.75 mm (3/16") (3/16 po) (3/16")
MAX. 5.56 mm (7/32") (7/32 po) (7/32")

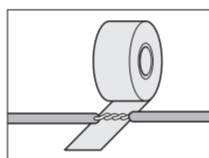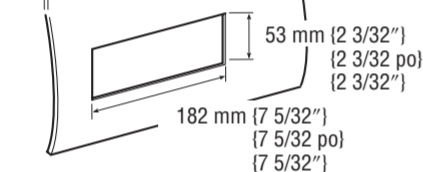

- Please read these instructions carefully before using this product and keep this manual for future reference.
- Prière de lire ces instructions attentivement avant d'utiliser l'appareil et garder ce manuel pour l'utilisation ultérieure.
- Lea con atención estas instrucciones antes de utilizar el producto y guarde este manual para poderlo consultar en el futuro.

Supplied Hardware/Matériel d'installation/Accesorios suministrados

No.	Item	Diagram	Qty	No.	Item	Diagram	Qty
①	Mounting Collar Cadre de montage Collar de montaje FX0214C384ZB		1	⑤	Hex. Nut (5 mm ø) Écrou hexagonal (5 mm ø) Tuerca hexagonal (5 mm ø)		1
②	Mounting Bolt (5 mm ø) Boulon de fixation (5 mm ø) Perno de montaje (5 mm ø)		1	⑥	Power Connector Connecteur d'alimentation Conector de alimentación YGAJ021009		1
③	Lock Cancel Plate Plaque anti-blocage Placa de cancelación de bloqueo		2	⑦	Trim Plate Plaque de garniture Placa de guarnición YEF051013		1
④	Tapping Screw (5 mm ø x 16 mm) Vis taraudeuse (5 mm ø x 16 mm)		1	⑧	Rear Support Strap Plaque-support arrière Regleta de soporte trasera YFG044C002ZA		1

* ②, ③, ④ and ⑤ consist of a set. (YEP0FZ5739)
* ②, ③, ④ et ⑤ constituent un jeu. (YEP0FZ5739)
* ②, ③, ④ y ⑤ forman un juego. (YEP0FZ5739)

Panasonic Consumer Electronics Company, Division of Panasonic Corporation of North America
One Panasonic Way, Secaucus, New Jersey 07094
http://www.panasonic.com

Panasonic Sales Company, Division of Panasonic Puerto Rico, Inc. ("PSC")
Ave. 65 de Infantería, Km. 9.5 San Gabriel Industrial Park, Carolina, Puerto Rico 00985
http://www.panasonic.com

Panasonic Canada Inc.
5770 Ambler Drive, Mississauga, Ontario L4W 2T3
http://www.panasonic.ca

YFM294C091CA NY1206-1116

Printed in China
Imprimé en Chine
Impreso en China

© 2006 Matsushita Electric Industrial Co., Ltd. All Rights Reserved


Installation/Montage/Instalación

How to install the unit/Mode de montage de l'appareil/Instalación de la unidad


Caution
● Wear gloves for safety.
● Make sure that wiring is completed before installation.

Précaution
● Portez des gants à des fins de sécurité.
● Assurez-vous que le câblage est terminé avant l'installation.

Precaución
● Póngase guantes para mayor seguridad.
● Asegúrese de haber completado todas las conexiones eléctricas antes de realizar la instalación.

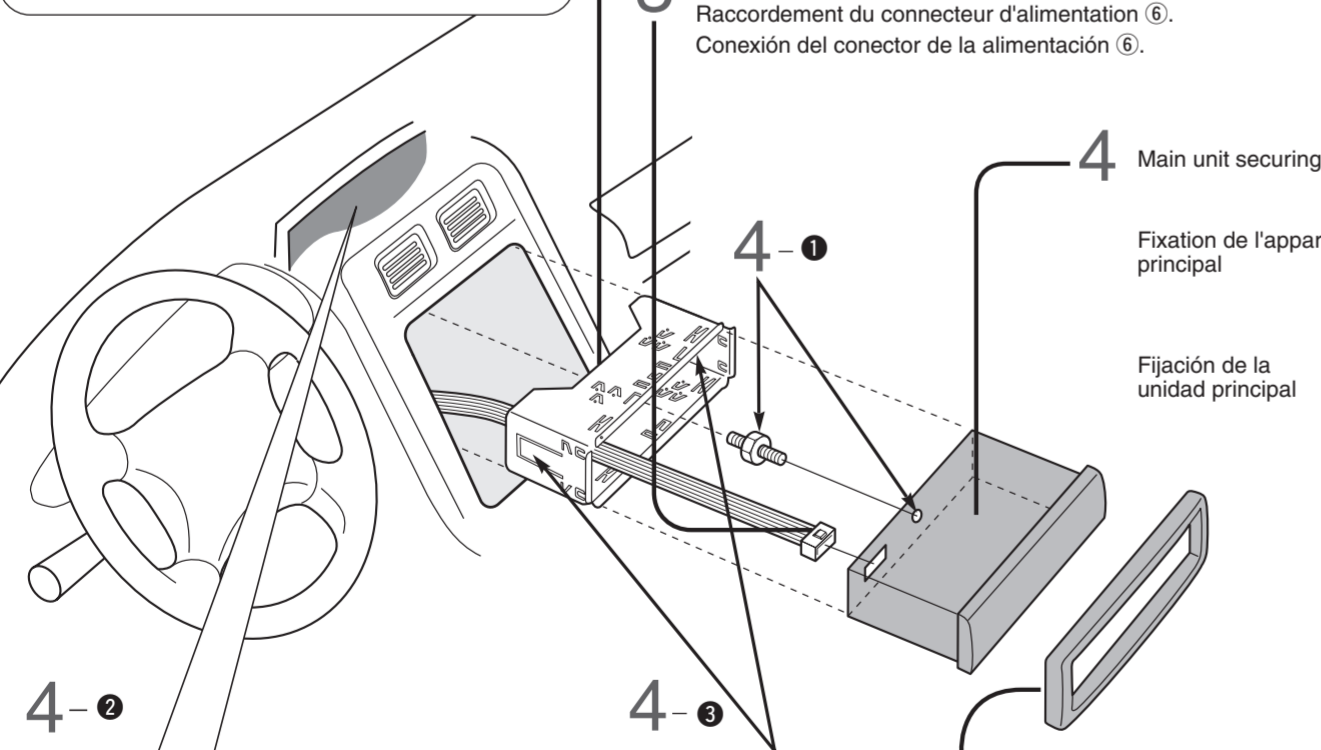

**Securing to fire wall
Fixation au tablier
Fijación a la pared cortafuegos**

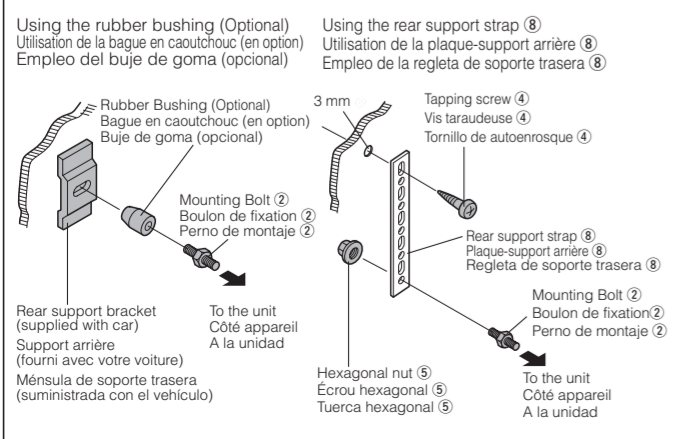

Bend appropriate tabs to secure the unit without backlash.
Repliez les languettes de fixation appropriées pour immobiliser l'appareil sans contrecoup.
Doble las lengüetas apropiadas para fijar la unidad sin contragolpe.


- 1 Screw the mounting bolt (2) into the main unit.
 - 2 Secure to the fire wall.
 - 3 Snap the right and left springs into each hole.
- 1 Vissez le boulon de fixation (2) dans l'appareil principal.
2 Fixez au tablier.
3 Engager les ressorts gauche et droit dans chaque trou.
- 1 Enrosque el perno de montaje (2) en la unidad principal.
 - 2 Fijelo a la pantalla cortafuegos.
 - 3 Acople los resortes derecho e izquierdo en cada orificio.

Caution
When this unit is installed in dashboard, ensure that there is sufficient air flow around the unit to prevent damage from overheating, do not block any ventilation holes on the unit.


Précaution
Lorsque cet appareil est installé dans le tableau de bord, assurez-vous qu'il y a une circulation d'air suffisante autour de l'appareil afin d'éviter tout endommagement provoqué par une surchauffe et qu'aucun trou d'aération de l'appareil n'est obturé.

Precaución
Cuando instale esta unidad en el tablero de instrumentos, asegúrese de que haya suficiente ventilación de aire en torno a la unidad para evitar daños debidos al sobrecalentamiento, y no obstruya ningún orificio de ventilación de la unidad.


How to remove the unit/Retrait de l'appareil/ Extracción de la unidad

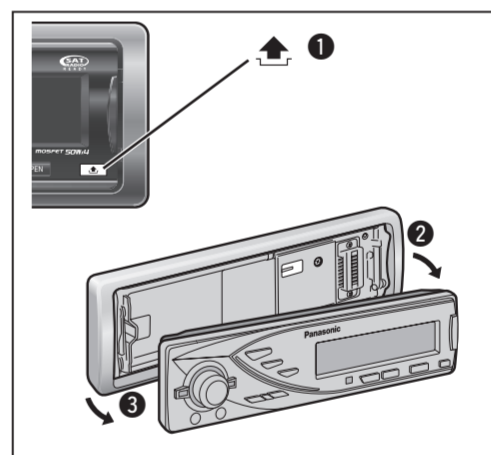


- 1 Remove the face plate.
Retirez le panneau avant.
Extraiga el panel frontal.

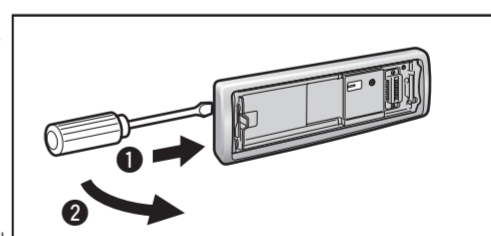

- 2 Remove the trim plate (7).
Enlevez la plaque de garniture (7).
Extraiga la placa de guarnición (7).

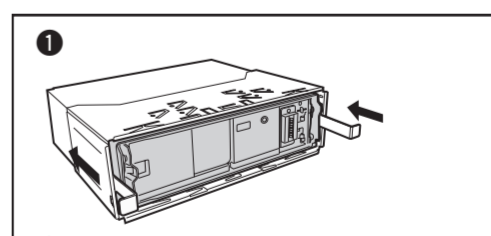

- 3 Lock release
1 Insert the lock cancel plate (3) until you hear a click.
2 Pull the main unit.
Libération du verrouillage
1 Introduisez la plaque anti-blocage (3) jusqu'à entendre un clic.
2 Dégagez l'appareil principal.
Desbloqueo
1 Inserte la placa de cancelación de bloqueo (3) hasta oír un sonido seco de confirmación.
2 Tire de la unidad principal.

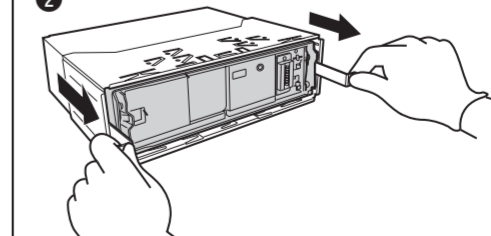




- 4 Pull out the unit with both hands.
Retirez l'appareil à deux mains.
Extraiga la unidad con ambas manos.

Wiring/Câblage/Conexiones eléctricas

⚠ Caution
To prevent damage to the unit, do not connect the power connector until the whole wiring is completed.

⚠ Précaution
Ne raccordez pas le connecteur d'alimentation à l'appareil avant d'avoir effectué tous les raccordements pour éviter d'endommager l'appareil.

⚠ Precaución
Para evitar daños en la unidad, no conecte el conector de alimentación hasta haber completado todas las conexiones.

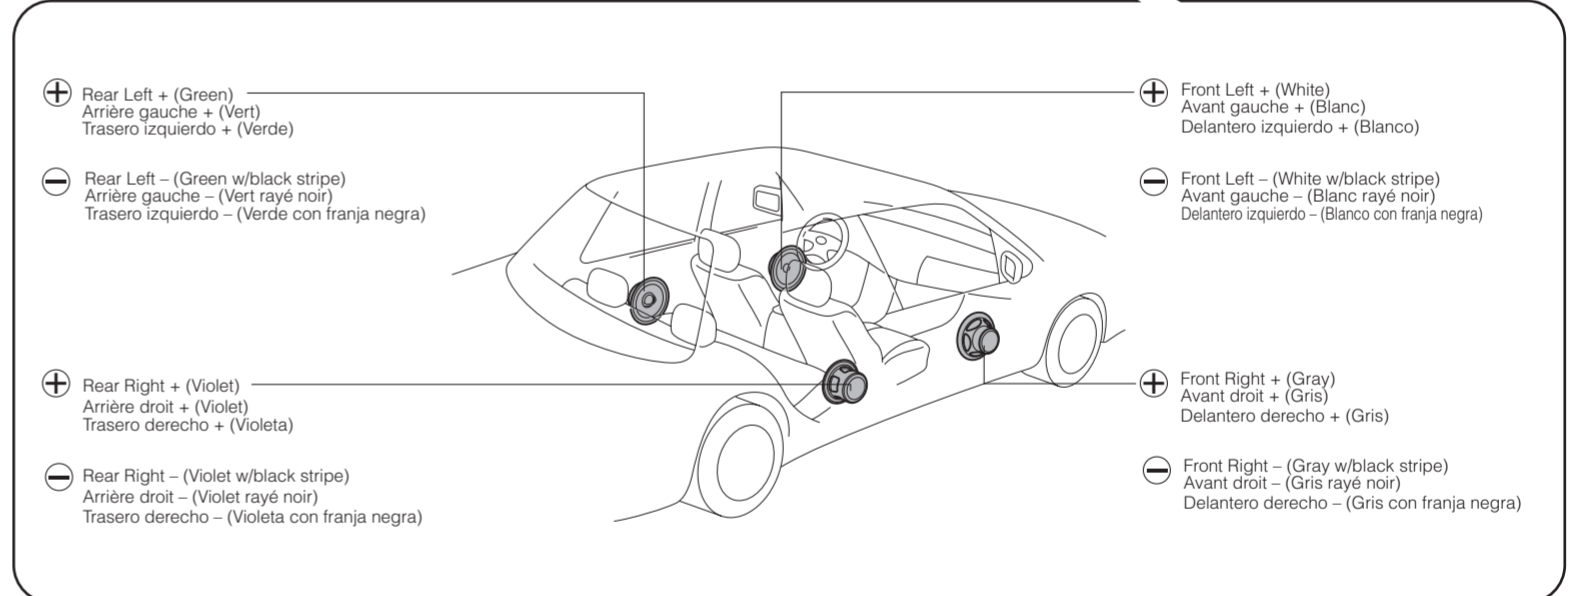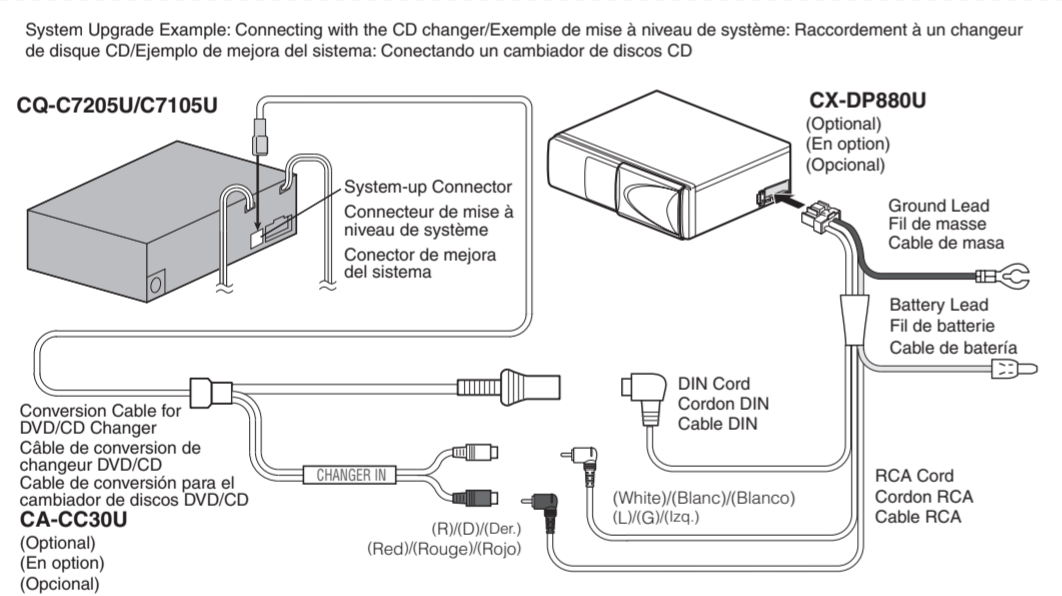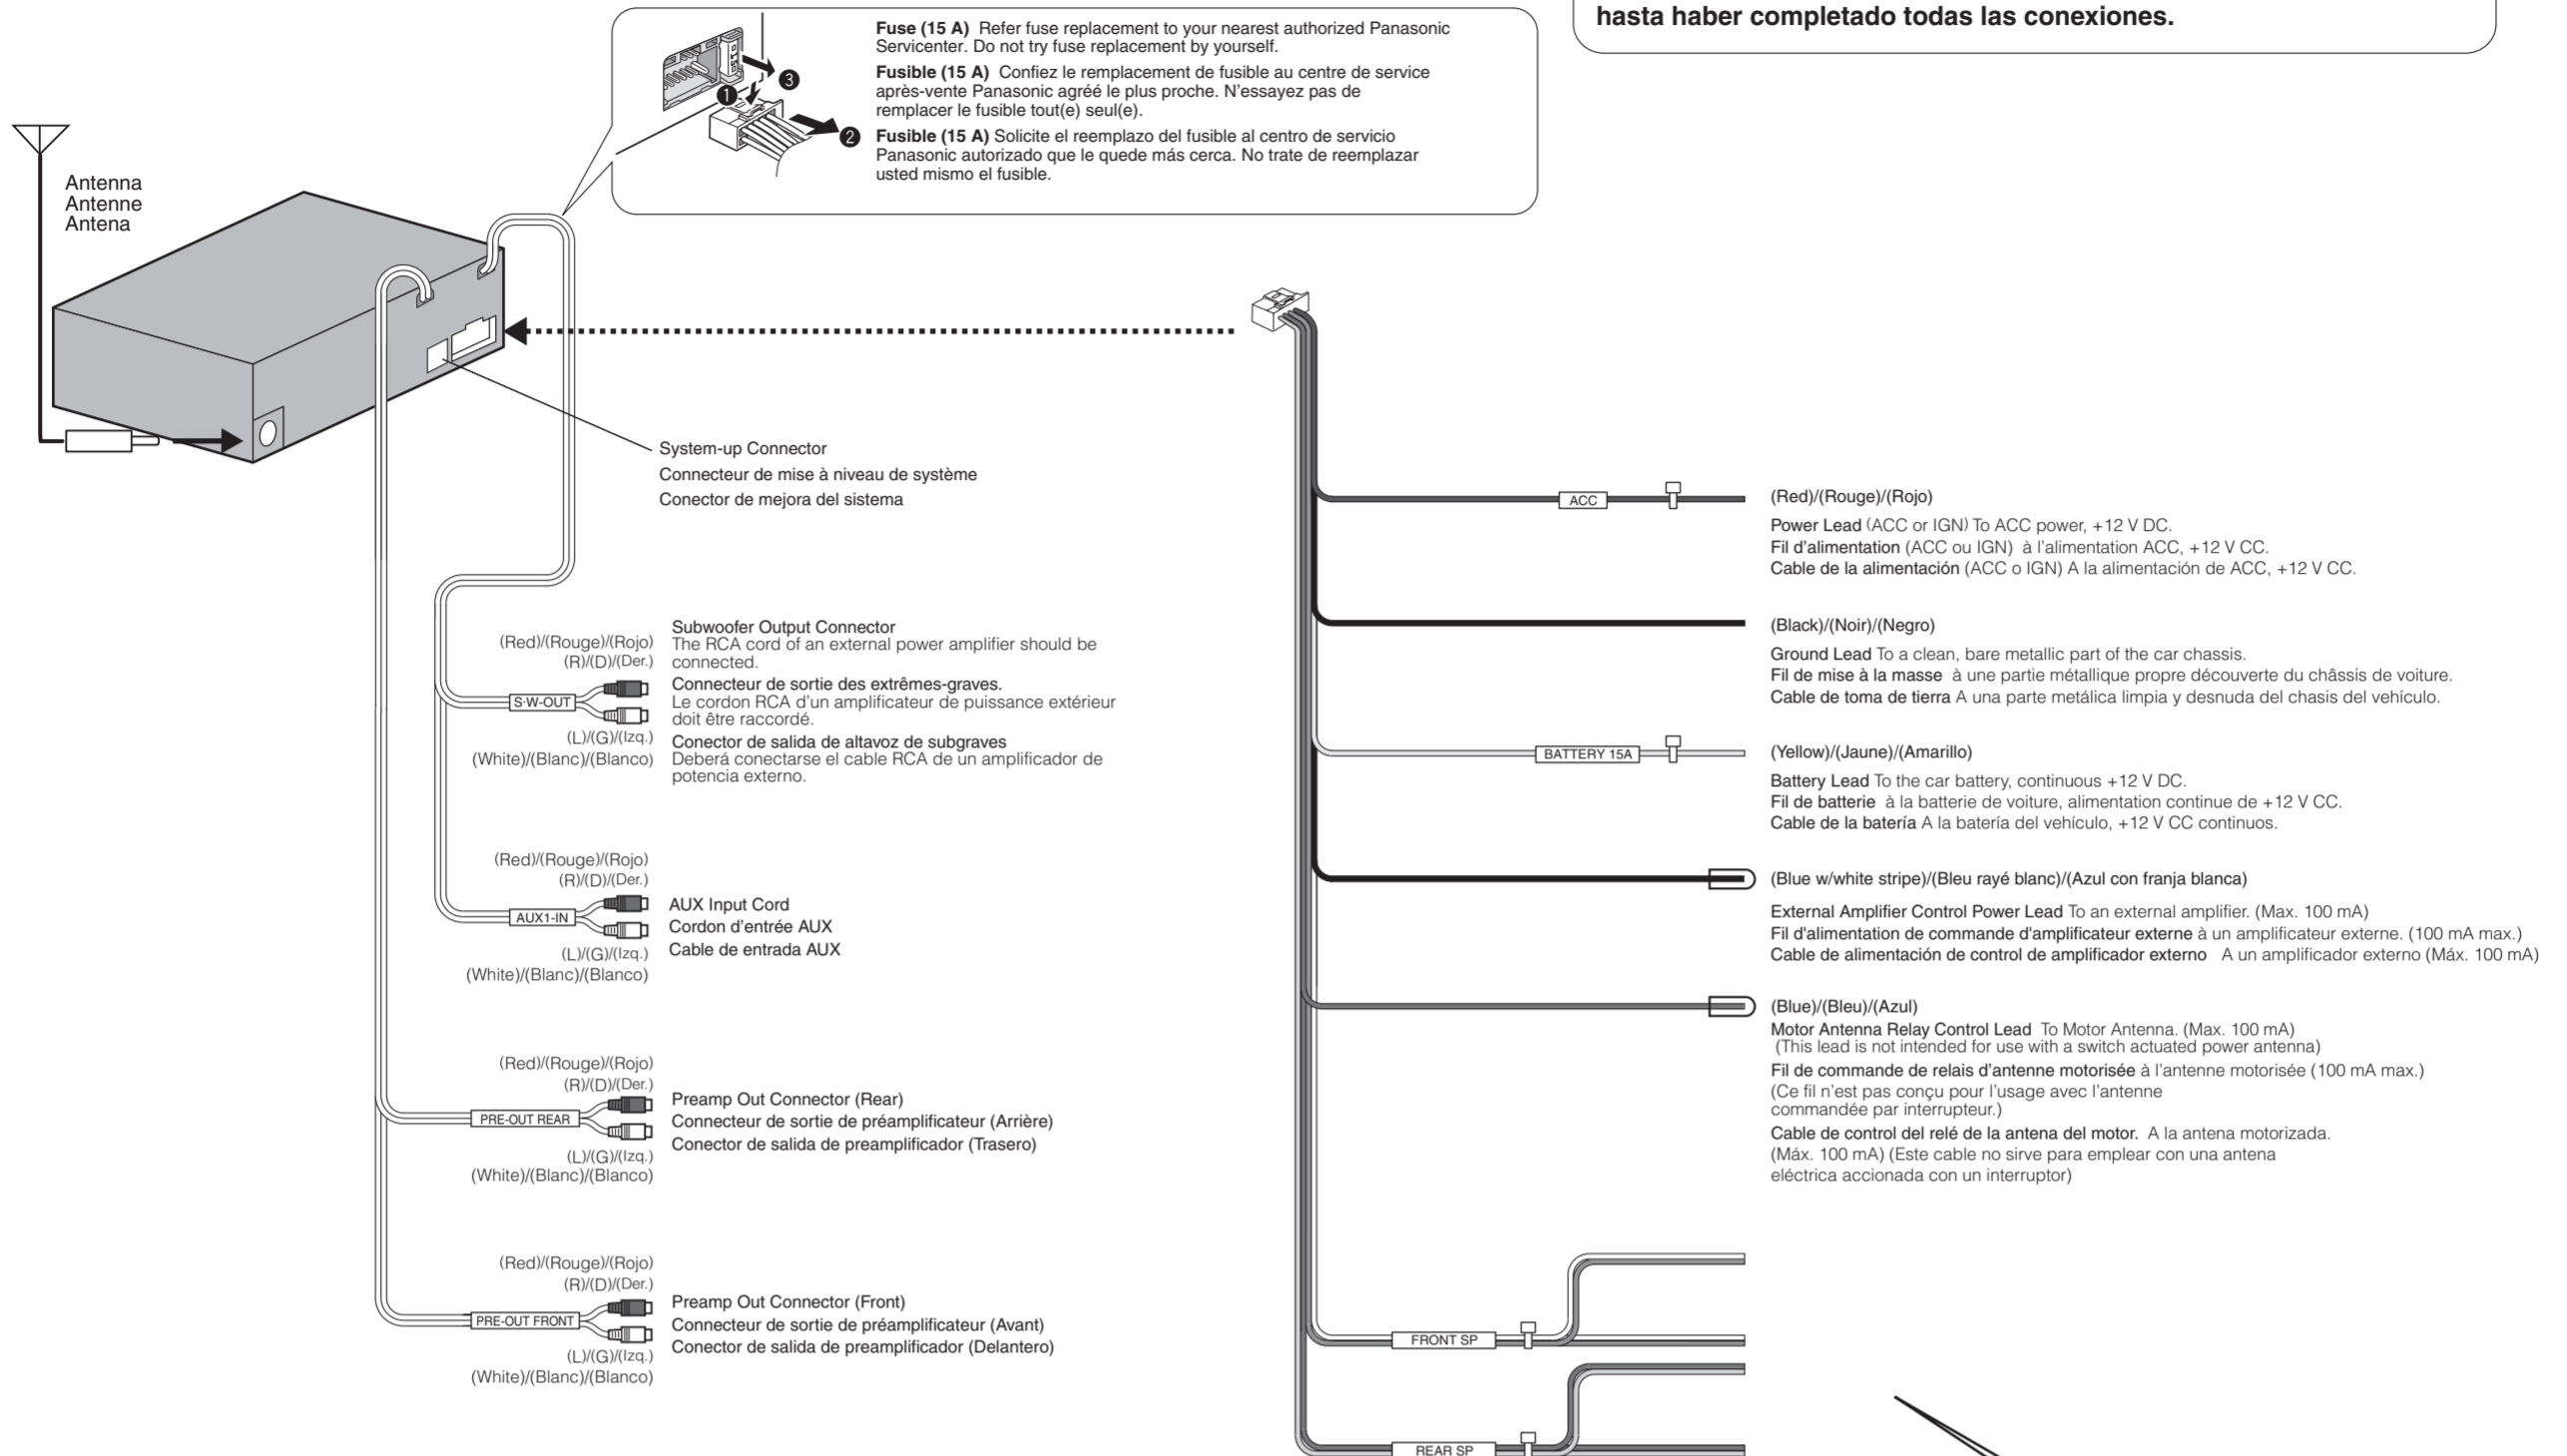

Final Installation/Installation finale/Instalación final

Lead Connections
Connect all wires, making sure that each connection is insulated and secure. Bundle all loose wires and fasten them with tape so they will not fall down later. Now insert the unit into the mounting collar. Congratulations! After making a few final checks, you're ready to enjoy your new auto stereo system.

Câblage
Raccordez tous les fils en prenant soin qu'ils soient tous bien isolés et solidement connectés. Enroulez toute longueur excédentaire de fil et fixez-la en place avec une bande adhésive. Installez l'appareil dans son cadre de montage. Félicitations! Après avoir effectué quelques vérifications finales, vous êtes prêt à profiter pleinement de votre nouveau système autoradio.

Conexiones de cables
Conecte todos los cables, asegurándose de que cada conexión queda aislada y segura. Agrupe todos los cables sueltos y fíjelos con cinta para que no queden colgando. Inserte entonces la unidad en el collar de montaje. ¡Enhorabuena! Después de realizar algunas comprobaciones finales, estará preparado para disfrutar de su nuevo sistema estereo para automóvil.

Final Check/Vérifications finales/Comprobación final

1. Make sure that all wires are properly connected and insulated.
2. Make sure that the main unit is securely held in the mounting collar.
3. Turn on the ignition to check the unit for proper operation.

If you have difficulties, consult your nearest authorized professional installer for assistance.

1. Assurez-vous que tous les fils sont bien raccordés et isolés.
2. Assurez-vous que l'appareil est solidement en place dans son collier de montage.
3. Faites démarrer la voiture et vérifiez le fonctionnement de l'appareil.


En cas de difficulté, consultez un installateur professionnel.

1. Asegúrese de que todos los cables estén correctamente conectados y aislados.
2. Asegúrese de que la unidad principal quede fijada con seguridad en el collar de montaje.
3. Conecte el encendido para comprobar el correcto funcionamiento de la unidad.


Si tiene alguna dificultad, consulte al instalador profesional que le quede más cerca para que le ayude.

Speaker Connection/Raccordement des haut-parleurs/Conexión de los altavoces

Connect as follows.
Raccordez les haut-parleurs comme suit.
Conecte de la forma siguiente.

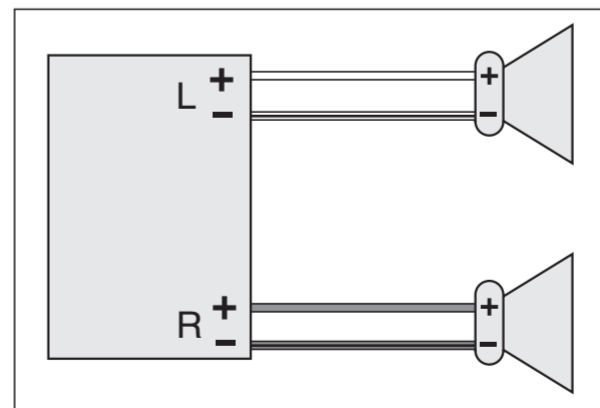

- Use ungrounded speakers only. Allowable input: 50 W or more. Impedance: 4 - 8 Ω
- Use of speakers which do not match the specifications can cause burning, smoking or damage of the speakers.
- Distance between speaker and amplifier: 30 cm {12"} or more
- Utilisez uniquement des haut-parleurs non reliés à la masse. Puissance d'entrée admissible: 50 W ou davantage. Impédance: 4 - 8 Ω
- L'utilisation de haut-parleurs non appariés aux spécifications peuvent engendrer une inflammation, de la fumée voire endommager les haut-parleurs.
- Distance entre le haut-parleur et l'amplificateur: 30 cm {12 po} ou davantage
- Emplee solamente altavoces sin toma de tierra. Entrada permisible: 50 W o más. Impedancia: 4 - 8 Ω
- El empleo de altavoces que no satisfacen las especificaciones puede causar quemaduras, humo, o daños en los altavoces.
- Distancia entre el altavoz y el amplificador: 30 cm {12"} o más

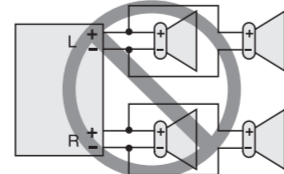

⚠ Caution
● Do not connect more than one speaker to one set of speaker leads. (except for connecting to a tweeter)

⚠ Précaution
● Ne raccordez pas plus d'un haut-parleur à un ensemble de fils de haut-parleur. (Sauf lors du raccordement à un haut-parleur des aigus)

⚠ Precaución
● No conecte más de un altavoz a un juego de cables de altavoz. (excepto para la conexión a un altavoz de agudos)

- Do not use a 3-wire type speaker system having a common earth lead.
- N'utilisez pas de système de haut-parleur de type à 3 fils ayant un fil de mise à la masse commun.
- No emplee sistemas de altavoz del tipo de 3 cables con cable de masa común.

Panasonic®

System Upgrade Guidebook Guide pratique de mise à niveau de système Guía de mejora del sistema

Model: **CQ-C7205U/C7105U**





- For upgrading your system, read this manual carefully before use. This manual should be retained for future reference after read.
- Veuillez lire attentivement ce mode d'emploi avant toute utilisation pour faire la mise à niveau du système. Conserver ce manuel dans un endroit sûr pour toute consultation ultérieure.
- Para efectuar la mejora de su sistema, lea detenidamente este manual antes de la utilización. Después de su lectura, deberá guardar este manual para poderlo consultar en el futuro.

Safety Information

- Read the operating instructions for the unit and all other components of your car audio system carefully before using the system. They contain instructions about how to use the system in a safe and effective manner. Panasonic assumes no responsibility for any problems resulting from failure to observe the instructions given in this manual.

- This manual uses pictographs to show you how to use the product safely and to alert you to potential dangers resulting from improper connections and operations. The meanings of the pictographs are explained below. It is important that you fully understand the meanings of the pictographs in order to use this manual and the system properly.

 **Warning** This pictograph intends to alert you to the presence of important operating instructions and installation instructions. Failure to heed the instructions may result in severe injury or death.

 **Caution** This pictograph intends to alert you to the presence of important operating instructions and installation instructions. Failure to heed the instructions may result in injury or material damage.

Warning

Observe the following warnings when using this unit.

- ❑ **The driver should neither watch the display nor operate the system while driving.**
Watching the display or operating the system will distract the driver from looking ahead of the vehicle and can cause accidents. Always stop the vehicle in a safe location and use the parking brake before watching the display or operating the system.
- ❑ **Use the proper power supply.**
This product is designed for operation with a negative grounded 12 V DC battery system. Never operate this product with other battery systems, especially a 24 V DC battery system.
- ❑ **Keep batteries and insulation film out of reach of infants.**
Batteries and insulation film can be ingested, so keep them out of the reach of infants. If an infant ingests a battery or insulation film, please seek immediate medical attention.
- ❑ **Protect the Deck Mechanism.**
Do not insert any foreign objects into the slot of this unit.
- ❑ **Do not disassemble or modify the unit.**
Do not disassemble, modify the unit or attempt to repair the product yourself. If the product needs to be repaired, consult your dealer or an authorized Panasonic Servicerenter.
- ❑ **Do not use the unit when it is out of order.**
If the unit is out of order (no power, no sound) or in an abnormal state (has foreign objects in it, is exposed to water, is smoking, or smells), turn it off immediately and consult your dealer.
- ❑ **The remote control unit should not lie about in the car.**
If the remote control unit lies about, it could fall on the floor while driving, get wedged under the brake pedal, and lead to a traffic accident.
- ❑ **Refer fuse replacement to qualified service personnel.**
When the fuse blows out, eliminate the cause and have it replaced with the fuse prescribed for this unit by a qualified service engineer. Incorrect replacement of the fuse may lead to smoke, fire, and damage to the product.

Observe the following warnings when installing.

- ❑ **Disconnect the lead from the negative (–) battery terminal before installation.**
Wiring and installation with the negative (–) battery terminal connected may cause electrical shock and injury due to a short circuit.
Some cars equipped with the electrical safety system have specific procedures of battery terminal disconnection.
FAILURE TO FOLLOW THE PROCEDURE MAY LEAD TO THE UNINTENDED ACTIVATION OF THE ELECTRICAL SAFETY SYSTEM RESULTING IN DAMAGE TO THE VEHICLE AND PERSONAL INJURY OR DEATH.
- ❑ **Never use safety-related components for installation, grounding, and other such functions.**
Do not use safety-related vehicle components (fuel tank, brake, suspension, steering wheel, pedals, airbag, etc.) for wiring or fixing the product or its accessories.
- ❑ **Installing the product on the air bag cover or in a location where it interferes with airbag operation is prohibited.**
- ❑ **Check for piping, gasoline tank, electric wiring, and other items before installing the product.**
If you need to open a hole in the vehicle chassis to attach or wire the product, first check where the wire harness, gasoline tank, and electric wiring are located. Then open the hole from outside if possible.
- ❑ **Never install the product in a location where it interferes with your field of vision.**
- ❑ **Never have the power cord branched to supply other equipment with power.**
- ❑ **After installation and wiring, you should check the normal operation of other electrical equipment.**
The continuation of their using in abnormal conditions may cause fire, electrical shock or a traffic accident.
- ❑ **In the case of installation to an airbag equipped car, confirm warnings and cautions of the vehicle manufacturer before installation.**
- ❑ **Make sure the leads do not interfere with driving or getting in and out of the vehicle.**
- ❑ **Insulate all exposed wires to prevent short circuiting.**

Caution

Observe the following cautions when using this unit.

- ❑ **Keep the sound volume at an appropriate level.**
Keep the volume level low enough to be aware of road and traffic conditions while driving.
- ❑ **Do not insert or allow your hand or fingers to be caught in the unit.**
To prevent injury, do not get your hand or fingers caught in moving parts or in the disc slot. Especially watch out for infants.
- ❑ **This unit is designed for use exclusively in automobiles.**
- ❑ **Do not operate the unit for a prolonged period with the engine turned off.**
Operating the audio system for a long period of time with the engine turned off will drain the battery.
- ❑ **Do not expose the unit to direct sunlight or excessive heat.**
Otherwise these will raise the interior temperature of the unit, and it may lead to smoke, fire, or other damage to the unit.
- ❑ **Do not use the product where it is exposed to water, moisture, or dust.**
Exposure of the unit to water, moisture, or dust may lead to smoke, fire, or other damage to the unit. Make especially sure that the unit does not get wet in car washes or on rainy days.

Observe the following cautions when installing.

- ❑ **Refer wiring and installation to qualified service personnel.**
Installation of this unit requires special skills and experience. For maximum safety, have it installed by your dealer. Panasonic is not liable for any problems resulting from your own installation of the unit.
- ❑ **Follow the instructions to install and wire the product.**
Not following the instructions to properly install and wire the product could cause an accident or fire.
- ❑ **Take care not to damage the leads.**
When wiring, take care not to damage the leads. Prevent them from getting caught in the vehicle chassis, screws, and moving parts such as seat rails. Do not scratch, pull, bend or twist the leads. Do not run them near heat sources or place heavy objects on them. If leads must be run over sharp metal edges, protect the leads by winding them with vinyl tape or similar protection.
- ❑ **Use the designated parts and tools for installation.**
Use the supplied or designated parts and appropriate tools to install the product. The use of parts other than those supplied or designated may result in internal damage to the unit. Faulty installation may lead to an accident, a malfunction or fire.

- ❑ **Do not block the air vent or the cooling plate of the unit.**

Blocking these parts will cause the interior of the unit to overheat and will result in fire or other damage.

- ❑ **Do not install the product where it is exposed to strong vibrations or is unstable.**
Avoid slanted or strongly curved surfaces for installation. If the installation is not stable, the unit may fall down while driving and this can lead to an accident or injury.
- ❑ **Installation Angle**
The product should be installed in a horizontal position with the front end up at a convenient angle, but not more than 30°.
The user should bear in mind that in some areas there may be restrictions on how and where this unit can be installed. Consult your dealer for further details.
- ❑ **Wear gloves for safety. Make sure that wiring is completed before installation.**
- ❑ **To prevent damage to the unit, do not connect the power connector until the whole wiring is completed.**
- ❑ **Do not connect more than one speaker to one set of speaker leads. (except for connecting to a tweeter)**

Observe the following cautions when handling the battery for the remote control unit.

- Use only specified battery (CR2025).
- Match the polarity of the battery with the (+) and (-) marks in the battery case.
- Replace dead battery as soon as possible.
- Remove the battery from the remote control unit when not using it for an extended period of time.
- Insulate the battery (by placing them in a plastic bag or covering them with vinyl tape) before disposal or storage.
- Dispose of the battery according to the local regulations.
- Do not disassemble, recharge, heat or short the battery. Do not throw a battery into a fire or water.

In case of battery leakage

- Thoroughly wipe the battery liquid off the battery case and insert new battery.
- If any part of your body or clothing comes into contact with battery liquid, wash it with plenty of water.
- If battery liquid comes into contact with your eyes, wash them with plenty of water and get immediate medical attention.

Refer to safety information of optional devices as well.

Before Reading These Instructions

About this Book


This book is an instruction manual that explains how to operate your purchased head unit and its remote control as an accessory when the head unit is connected to optional devices.

(Remote Control Unit → Operating Instructions)

Head units to be targeted


- CQ-C7205U/C7105U

All illustrations throughout this manual represent model CQ-C7205U unless otherwise specified.

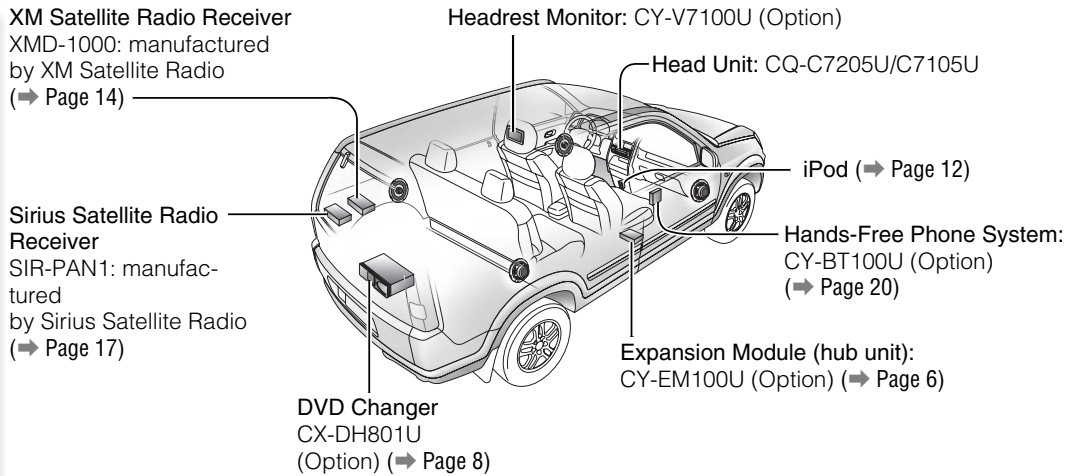

Head Unit

CQ-C7205U/C7105U

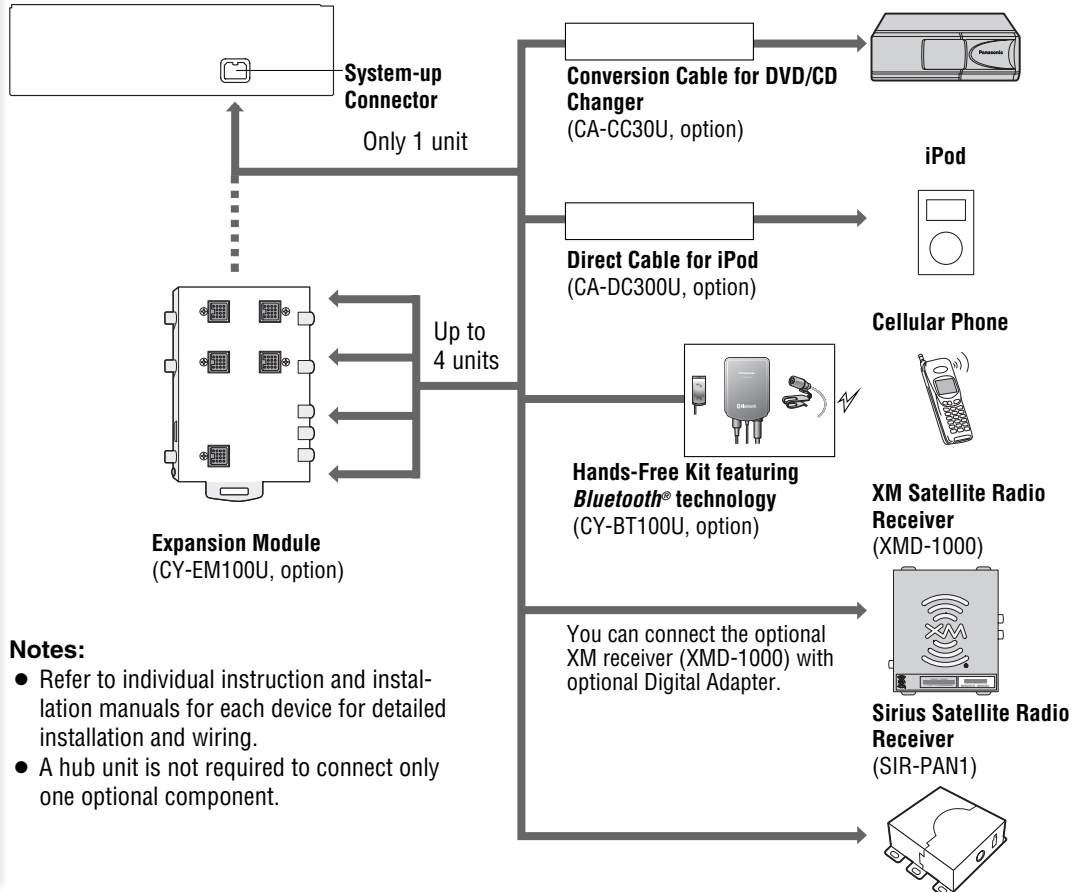

Notes:

- Refer to individual instruction and installation manuals for each device for detailed installation and wiring.
- A hub unit is not required to connect only one optional component.

System Upgrade Sample

Contents

English	2
Français	24
Español	46

Common

● Safety Information	2
● Before Reading These Instructions	4

Each Source

● General	6
● Disc Changer	8
● iPod Control	12
● XM Receiver	14
● Sirius Satellite Radio Receiver	17
● Hands-Free Phone System	20

As Needed

● Troubleshooting	22
--------------------------	-----------

DVD Changer

The optional adapter (Conversion Cable for DVD/CD Changer: CA-CC30U) allows you to connect the optional Panasonic DVD changer unit (CX-DH801U). For details, refer to the operating instructions for the DVD changer unit. (⇒ page 8, 10)

CD Changer

The optional adapter (Conversion Cable for DVD/CD Changer: CA-CC30U) allows you to connect the optional Panasonic CD changer unit (CX-DP880U). For details, refer to the operating instructions for the CD changer unit. (⇒ page 8)

iPod®

The optional adapter (Direct Cable for iPod: CA-DC300U) allows you to connect the optional iPod series. (⇒ page 12) The iPod equipped with a dock connector is exclusively connectable. Further information about the controllable iPod is described below.

Controllable iPod/software version

- 3rd generation iPod/ver. 2.3
- 4th generation iPod/ver. 3.1.1
- 5th generation iPod/ver. 1.1.2 (Video playback is not supported.)
- iPod Photo/ver. 1.2.1
- iPod mini/ver. 1.4.1
- iPod nano/ver. 1.2

* Operation check has been completed with software available at the end of October, 2006. We do not guarantee the operation with our future products or upgraded software.

iPod is a trademark of Apple Computer, Inc., registered in the U.S. and other countries.

XM Satellite Radio

You can connect the optional XM receiver (XMD-1000) with optional Digital Adapter. For details, refer to the operating instructions for the XM receiver. (⇒ page 14)

- Toll free number
XM Tuner P/N: XMD-1000
Call 1-800-XM-RADIO(96-72346)
Extension cord P/N:
Call 1-800-942-TERK(8375)
- Use the Panasonic-specific connecting cord (Digital Adapter). Please feel free to contact us at the above phone number or your dealer if you have any question.

About XM

The direct satellite-to-receiver broadcasting technology is used to provide listeners with crystal clear sound smoothly from coast to coast. XM is over 130 channels of sheer variety: digital-quality music, news, sports, comedy, traffic & weather, talk, children's programs, and more.

The XM name and related logos are trademarks of XM Satellite Radio Inc.

Sirius Satellite Radio

You can connect the optional Sirius Satellite radio receiver (SIR-PAN1). (⇒ page 17)

Sirius Satellite Broadcast service

The Sirius Satellite coverage is only for the United States except Hawaii and Alaska. There is no Sirius Satellite coverage in Canada. The instruction of Satellite Operation Controls in the Operating Instructions and Guide will not be applied.

Hands-Free Phone System

You can connect the optional Hands-Free Phone System (Hands-Free Kit featuring *Bluetooth*® technology: CY-BT100U). For details, refer to the operating instructions for the Hands-Free Phone System. (⇒ page 20)

Note: This unit is designed **only for receiving calls**. It cannot send calls.

Bluetooth®

The Bluetooth word mark and logo are owned by the Bluetooth SIG, Inc. and any use of such marks by Matsushita Electric Industrial Co.,Ltd. is under license. Other trademarks and trade name are those of their respective owners.

Expansion Module (hub unit)

You can connect the optional Expansion Module (hub unit) (CY-EM100U). Connection of the Expansion Module allows you to simultaneously connect optional devices mentioned before as well as other AV devices. For details, refer to the operating instructions for the Expansion Module.

Connectable devices

- CD changer (max. 1)
- iPod (max. 2)
- XM Satellite Radio (max. 1)
- Sirius Satellite Radio (max. 1)
- Hands-Free Phone System (max. 1)

Note: Market conditions regarding optional devices vary with countries and regions. For further information, consult your dealer.

The source changes as follows every time [SOURCE] is pressed.



Radio

FM1, FM2, FM3, AM (⇒ Operating Instructions)



Player

When loading CD (⇒ Operating Instructions)



When loading a disc containing compressed audio files (⇒ Operating Instructions)



AUX 1

Device connected to the AUX terminal of the this unit



System-up Connector

Device connected to the System-up Connector of this unit


- When optional devices are connected:
Shift to connected devices
- When an expansion module is connected:
The devices connected to the ports 1 to 4 are activated in sequence after shifting to AUX2 (devices connected to the AUX terminal of the expansion module).



When connecting DVD Changer (⇒ page 8, 10)



When connecting CD Changer (⇒ page 8)

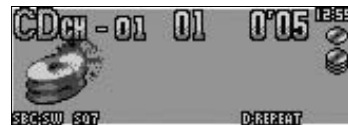

When connecting iPod (⇒ page 12)



When connecting XM Receiver (⇒ page 14)



When connecting Sirius receiver (⇒ page 17)



When connecting Expansion Module



Disc Changer (When CDs or MP3 discs are loaded)


Connected an optional CD changer or an optional DVD changer can be controlled by this unit.

Operation Flow

1 Load a magazine (discs).

When a magazine is already loaded, press **[SOURCE]** to select the CD changer mode.

The unit recognizes the magazine and starts playing automatically.

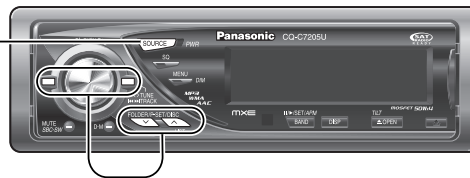

2 Select a desired portion.

Disc selection

[^] (DISC): Next disc

[v] (DISC): Preceding disc

Folder up/Down

Only for DVD Changer

Hold down for 2 sec. or more.

[^] (FOLDER): Next folder

[v] (FOLDER): Preceding folder

Track/File selection

[>>>]: Next track/file

[<<<]: Preceding track/file (press twice)

Note: Hold down for fast forward/reverse.

Pause

Press **[BAND]** (**|| / >**).

Press again to cancel.

CD Changer Mode Display

Track/file ————— Time

Disc number —————

Changer indicator

CDch (CD changer)

DVDch (DVD changer)



Play Mode indicators

lights when each mode is activated.

RANDOM

REPEAT

SCAN

D-RANDOM (Disc Random, Only for CD changer)

D-REPEAT (Disc Repeat)

D-SCAN (Disc Scan, Only for CD changer)

F-REPEAT (Folder Repeat, Only for MP3 files)

lights when the changer is connected.

Notes:

- When CX-DP880U or CX-DH801U is connected, a CD-RW disc is playable.
- Trouble may occur while playing CD-Rs. Refer to the section on "Notes on CD/CD Media (CD-ROM, CD-R, CD-RW)". (→ Operating Instructions)
- This unit does not support the following through the CD changer.
 - **MP3 playback.**


Random, Repeat Play (Disc Changer Menu Display)

(RANDOM, REPEAT)

Random and Repeat play can be set.


- 1 Press **[MENU]** to display the menu display.

For using the remote control, hold down **[SEL] (MENU)** for 2 sec. or more.

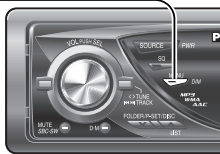

- 2 Turn **[VOL]** to select a function to be adjusted.

For using the remote control, use **[^]** or **[v]**.

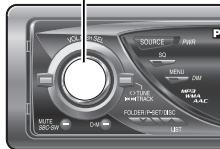

- 3 Press **[PUSH SEL]** to adjust.

For using the remote control, use **[BAND] (SET)**.

- 4 Press **[MENU]** to close the menu screen.

For using the remote control, hold down **[SEL] (MENU)** for 2 sec. or more.

RANDOM

- **CD-DA**
RANDOM playback of the selected disc (DVD changer)
RANDOM playback of all discs in the magazine (CD changer)
- **MP3 disc**
RANDOM playback of the selected folders

OFF: Off (default)

ON: Random playback

DISC RANDOM (Only for CD changer)

OFF: Off (default)

ON: Random playback (from selected disc)

REPEAT

OFF: Off (default)

ON: Playing the current track/file repeatedly

DISC REPEAT (Only for CD-DA disc)

OFF: Off (default)

ON: Playing the current disc repeatedly

FOLDER REPEAT (Only for MP3 disc)

OFF: Off (default)

ON: Playing the current folder repeatedly

Play Mode Selection

One-touch operation is available for selecting a track playing style by use of **[RANDOM]** or **[REPEAT]**.

RANDOM, REPEAT

Press the button. Press again to cancel.

DISC RANDOM, DISC REPEAT, FOLDER REPEAT

Hold down the button for 2 sec. or more.

Hold down again to cancel.

SCAN play

You can find your favorite file by playing first 10-sec. of each file.

SCAN (CD changer: All tracks, DVD changer: from selected disc)

Press **[SCAN]**. Press again to cancel.

DISC SCAN (1st file in each disc, only for CD changer)

Hold down **[SCAN]** for 2 sec. or more. Hold down again to cancel.

Direct Access

A disc can be directly selected.

Example: disc number 5

- 1 Press **[#] (NUMBER)**.
- 2 Press **[5]**.
- 3 Press **[SET]**.



Note: To suspend direct selection, press **[DISP]** (Display).

Functions Only by Remote Control Unit**Disc Changer (When CDs or MP3 discs are loaded)**

Disc Changer (When DVDs or VCDs are loaded)

Connected an optional DVD changer (CX-DH801U) can be controlled by this unit.

Operation Flow


1 Load a magazine (discs).

When a magazine is already loaded, press **[SOURCE]** to select the DVD changer mode.

The unit recognizes the magazine and starts playing automatically.

Notes:

- For DVD operations other than the above (i.e. DVD menu, closed caption, etc.), use the remote control unit supplied with the DVD changer.
- The remote control unit supplied with the DVD changer does not work properly when you aim it at this unit.
- When using the remote control unit supplied with the DVD changer, aim it at the monitor display (CY-V7100U).

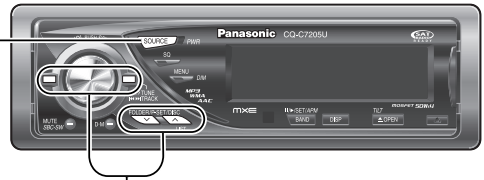

2 Select a desired portion.

Disc selection

[^] (DISC): Next disc

[v] (DISC): Preceding disc

Chapter/Track selection

[▶▶]: Next chapter/Next track

[◀◀]: Preceding chapter/ Preceding track
(press twice)

Note: Hold down for fast forward/reverse.

Pause

Press **[BAND]** (**||▶**).

Press again to cancel.

DVD Changer Mode Display

Chapter number —

Disc number —

Changer indicator —

Disc type —

Time —

Play Mode indicators lights when each mode is activated.

lights when the changer is connected.

REPEAT

D-REPEAT (Disc Repeat)

C-REPEAT (Chapter Repeat)


T-REPEAT (Title Repeat)

(RANDOM, REPEAT)

Repeat play can be set.


- 1 Press **[MENU]** to display the menu display.

For using the remote control, hold down **[SEL] (MENU)** for 2 sec. or more.

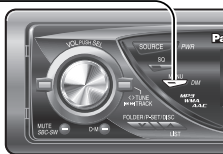

- 2 Turn **[VOL]** to select a function to be adjusted.

For using the remote control, use **[^]** or **[v]**.

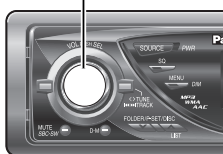

- 3 Press **[PUSH SEL]** to adjust.

For using the remote control, use **[BAND] (SET)**.

- 4 Press **[MENU]** to close the menu screen.

For using the remote control, hold down **[SEL] (MENU)** for 2 sec. or more.

● For a DVD insertion

CHAPTER REPEAT

OFF: Off (default)

ON: Playing the current chapter repeatedly

TITLE REPEAT

OFF: Off (default)

ON: Playing the current title repeatedly

Note: The unit may not operate for some DVDs.

● For a VCD insertion

REPEAT

OFF: Off (default)

ON: Playing the current track repeatedly

DISC REPEAT

OFF: Off (default)

ON: Playing the current disc repeatedly

Notes:

- The unit may not operate for some VCDs.
- The unit may not operate for a disc with the play back function activated.

Play Mode Selection

One-touch operation is available for selecting a chapter playing style by use of **[REPEAT]**.

CHAPTER REPEAT, REPEAT

Press the button. Press again to cancel.

TITLE REPEAT, DISC REPEAT

Hold down the button for 2 sec. or more. Hold down again to cancel.

Direct Access

A disc can be directly selected.

Example: disc number 5

- 1 Press **[#] (NUMBER)**.
- 2 Press **[5]**.
- 3 Press **[SET]**.



Note: To suspend direct selection, press **[DISP] (DISPLAY)**.

iPod Control

Connection of the optional direct cable for iPod (CA-DC300U) allows users to operate the iPod including file selection and file sequence change with the buttons on this unit.

Operation Flow

- 1 Connect the iPod.
- 2 Press **[SOURCE]** to select the iPod mode. Playback starts.

Note: If playback does not start, press **[BAND]** (II / ▶).

- 3 Select a desired portion.

File Selection

- ▶▶▶: Next file
- ◀◀◀: Beginning of the current file
For the previous file, press twice.

Note: Hold down for fast forward/reverse.



Pause

- Press **[BAND]** (II / ▶).
- Press again to cancel.

Playing Mode selection

The type with which playback data is classified is selectable.

- 1 Press **[^]** (LIST) to call up the play mode selection screen.
- 2 Turn **[VOL]** to select the play mode.

PLAYLIST: Playback by playlist

ARTIST: Playback by artist

ALBUM: Playback by album

For using the remote control, use **[^]** or **[V]**.

Note: When the **[<]** button is pressed, the regular screen appears.

- 3 Press **[PUSH SEL]** to determine the selection.

For using the remote control, use **[BAND]** (SET).

- 4 Turn **[VOL]** to select the portion to play.

Notes:

- For selecting ARTIST, the ALBUM selection screen appears after selecting an artist name.
- When the **[<]** button is pressed, the previous screen appears.



- 5 Press **[PUSH SEL]** to determine the selection.

For using the remote control, use **[BAND]** (SET).

Note: Files without an album name or an artist name are not playable in the playing mode of the album or artist display respectively.

iPod Mode Display

Current file

iPod number

iPod1 (iPod 1)

iPod2 (iPod 2)



Play Mode indicators

lights when each mode is activated.

RANDOM (Random)

ALBUM RANDOM (Album Random)

REPEAT (Repeat)

Time

lights when the direct cable for iPod (CA-DC300U) is connected.

*Even when the iPod itself is not connected, this indicator will also light. This indicates that the main unit normally operates.

Notes:

- The iPod equipped with a dock connector is exclusively connectable. Further information about the controllable iPod is described below.

Controllable iPod/software version

- 3rd generation iPod/ver. 2.3
- 4th generation iPod/ver. 3.1.1
- 5th generation iPod/ver. 1.1.2 (Video playback is not supported.)
- iPod Photo/ver. 1.2.1
- iPod mini/ver. 1.4.1
- iPod nano/ver. 1.2


* Operation check has been completed with software available at the end of October, 2006. We do not guarantee the operation with our future products or upgraded software.

- The shuffle function of iPod corresponds to the RANDOM function of this unit.
- Please make sure to detach the iPod after turning off the car engine (turning the ACC to OFF). The iPod may not shut down while still connected, which may result in battery depletion.
- Please do not connect iPod accessories such as an iPod remote control or headphones while connecting iPod with the unit. The unit may not operate correctly.
- Connect this unit after turning down the volume of the iPod.
- "NO iPod" appears until the iPod is recognized after connecting the iPod, turning on the power of the main unit, or performing source selection on the main unit side. This indicates there is nothing wrong with the main unit.
- We do not guarantee all the operations of connectable devices.

Random and Repeat play can be set.


- 1 Press **[MENU]** to display the menu display.

For using the remote control, hold down **[SEL] (MENU)** for 2 sec. or more.

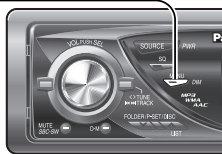

- 2 Turn **[VOL]** to select a function to be adjusted.

For using the remote control, use **[^]** or **[v]**.

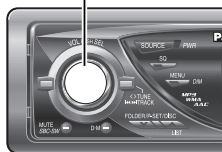

- 3 Press **[PUSH SEL]** to adjust.

For using the remote control, use **[BAND] (SET)**.

- 4 Press **[MENU]** to close the menu screen.

For using the remote control, hold down **[SEL] (MENU)** for 2 sec. or more.

RANDOM (Shuffle)

OFF: Off

ON: From all available files

ALBUM RANDOM

OFF: Off

ON: From files in the selected album

REPEAT

OFF: Off

ON: Playing the current file repeatedly

Note: All files are played back even at REPEAT-off setting. (ALL REPEAT)

TEXT

Text display

NAME/TITLE: Name/Title (default)

ALBUM/TITLE: Album/Title

OFF: Disabled

Note: The title may not be displayed correctly if it is longer than 250 alphanumeric characters.

Random, Repeat Play (iPod Menu Display)

(RANDOM, REPEAT)

Functions Only by Remote Control Unit**Play Mode Selection**

One-touch operation is available for selecting a track playing style by use of **[RANDOM]** or **[REPEAT]**.

RANDOM, REPEAT

Press the button. Press again to cancel.

ALBUM RANDOM

Hold down the button for 2 sec. or more. Hold down again to cancel.

XM Receiver

Connecting XM receiver


- Connect the optional XM receiver (XMD-1000) with optional Digital Adapter.

Getting Started

It is required to sign up to become an XM Satellite Radio subscriber. After checking your XM Satellite Radio ID, sign up on the XM's website or by calling them.

1 Check of XM Satellite Radio ID

- Write down the ID indicated on the lower right of your XM receiver (XMD-1000).

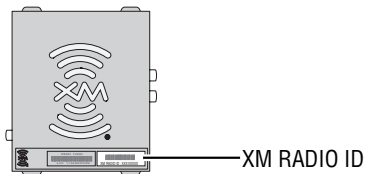

- Check the ID shown by tuning your XM Radio to channel 0. (Refer to "Channel Selection" on page 15.)

RADIO ID display




 
2 Activate the XM Satellite Radio

Select either of the below to sign up.

- Web site: <http://www.xmradio.com/activation>
- Phone number: 1-800-852-9696

1 Press **[SOURCE]** to select the XM Satellite Radio mode.

2 Press **[BAND]** to select a band.

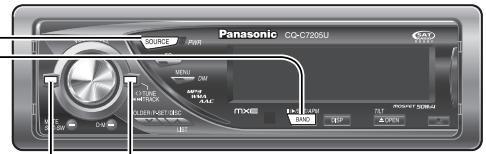

3 Select a channel.

Channel selection

[<] (TUNE): Preceding channel

[>] (TUNE): Next channel

Preset channel selection

[V] (P-SET: Preset): Lower preset channel

[^] (P-SET: Preset): Higher preset channel

Notes:

- Direct selection can be executed with **[1]** to **[6]** buttons on remote control.
- A preset station is selectable by turning **[VOL]** and pressing **[PUSH SEL]** while the preset list screen is present on the monitor.
- The volume is not adjustable while the preset list screen is present on the monitor.

Notes:

- Connect the optional XM receiver (XMD-1000).
- To connect the XM receiver (XMD-1000), it is required to use an optional extension cord that is produced by XM exclusively for Panasonic products.
- "RADIO ID" is displayed with channel 0.
- "UPDATING" is displayed during the update of the identification code.
- "LOADING" is displayed during the acquisition of audio data or information.



Up to 6 channels can be preset in XM1 to XM3 respectively.

Preset channels can be simply called up by pressing **[^] (P-SET)** or **[V] (P-SET)**.

Note: Direct selection can be executed with **[1]** to **[6]** buttons on remote control.

1 Tune into a channel.

2 Hold down **[^]** or **[V]** for 2 sec. or more.

3 Turn **[VOL]** to select a preset number.

4 Hold down **[PUSH SEL]** for 2 sec. or more, and the channel is written on the selected preset number.

Preset number/channel number blinks once.




Notes:

- In step 2, a channel can be registered by holding down the numeric button **[1]** to **[6]** for 2 sec. or more.
- To stop presetting channels, press **[DISP: DISPLAY]**.
- The operation above allows users to replace the current channel with the channel preset in the selected number while selecting a preset channel.
- The channel may be different between when the channel is preset and when the channel is called up because channel preset is performed using Service ID.

XM Receiver (continued)

Selection by Category

You can toggle the category on and off every time you hold down **[BAND]** for 2 sec. or more. If the category is set to on, the unit operates as follows for each button: Do not set Category to ON while receiving Channel 1. Failure to observe this disables channel change.

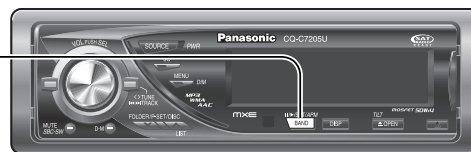

Channel selection

- [<] (**TUNE**): Preceding channel in current category
- [>] (**TUNE**): Next channel in current category

Category selection

- [∨] (**P-SET**: Preset): Preceding category
- [∧] (**P-SET**: Preset): Next category




lights when category is set to on.

TEXT Setting (XM Receiver Menu Display)

- 1 Press **[MENU]** to display the menu display.

For using the remote control, hold down **[SEL] (MENU)** for 2 sec. or more.

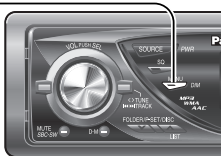

- 2 Press **[PUSH SEL]** to adjust.

For using the remote control, use **[BAND] (SET)**.



- 3 Press **[MENU]** to close the menu screen.

For using the remote control, hold down **[SEL] (MENU)** for 2 sec. or more.

TEXT

Text display

ON : Enabled (default)

OFF : Disabled

Functions Only by Remote Control Unit

Direct Access

A channel can be directly selected.

Example: channel number 5

- 1 Press **[#] (NUMBER)**.
- 2 Press **[5]**.
- 3 Press **[SET]**.

Note: To suspend direct selection, press **[DISP] (DISPLAY)**.



Sirius Satellite Radio Receiver

What is Sirius Satellite Radio?

Over 120 channels of the best entertainment and completely commercial-free music for your car, home or office.

Only SIRIUS has more than 65 original music channels, from today's hits to R&B oldies to classical masterpieces. From authentic Country and real Bluegrass to cool Jazz, hot Latin, Reggae, Rock and many more. Best of all, it's all completely commercial-free.

SIRIUS also has more than 55 channels of world-class sports, news and entertainment. Included as part of your subscription, you get up to 16 NFL games a week, up to 40 NBA games a week and up to 40 NHL games a week. (Games are broadcasted during their respective seasons.) Coupled with great sports news from ESPN, the SIRIUS sports offering is unrivaled. And don't forget a host of other great news and entertainment, like NPR, CNBC, Fox News, Radio Disney and E!Entertainment Radio.

With SIRIUS, the emphasis is on the music and entertainment you want. The music is hosted by SIRIUS Jockeys, who are true experts. They back-up the music with compelling information about the song being played, and they understand that sometimes it's best to just let the music speak for itself.

Rely on SIRIUS rocket science for superior coverage.

Only SIRIUS has three powerful satellites that fly directly over the U.S. ensuring coast-to-coast coverage with high elevation angles. This gives the satellites a "clear line of sight" to your car or home, with much less concern for buildings, trees or other objects that might block conventional satellite signals.

Once you experience more than 120 channels of digital entertainment, you'll never want to leave your car. For more information, visit www.sirius.com.

English

XM Receiver, Sirius Satellite Radio Receiver

Preparation

Connecting Sirius receiver

- Connect the optional Sirius receiver (SIR-PAN1).

Note: It is required to sign up to become a Sirius Satellite Radio subscriber. After checking your Sirius Satellite Radio ID, sign up on the Sirius's website or by calling them.

Getting Started

1 Check of Sirius Satellite Radio ID

- Check the ID shown by tuning your Sirius Satellite Radio to channel 0. (Refer to "Channel Selection" on next page.)

RADIO ID display



2 Activate the Sirius Satellite Radio

Select either of the below to sign up

- Web site: <http://home.sirius.com/webCUWI>
- Phone number: 1-888-539-SIRIUS (7474)

Sirius Receiver Mode Display

 


Sirius Satellite Radio Receiver (continued)

Operation Flow

1 Press **[SOURCE]** to select the Sirius Satellite Radio mode.

2 Press **[BAND]** to select a band.



Notes:

- “----” is displayed when there is no information.
- “UPDATING” is displayed when channel information is updated.

3 Select a channel.

Channel selection

[<] (TUNE): Preceding channel

[>] (TUNE): Next channel

Note: When you select a locked channel, hold down **[#]** on the remote control for 2 sec. or more. PASS-CODE entering display will appear.



Preset channel selection

[V] (P-SET: Preset): Lower preset channel

[^] (P-SET: Preset): Higher preset channel

Notes:

- Direct selection can be executed with **[1]** to **[6]** buttons on remote control.
- A preset station is selectable by turning **[VOL]** and pressing **[PUSH SEL]** while the preset list screen is present on the monitor.
- The volume is not adjustable while the preset list screen is present on the monitor.

Channel Preset (P-SET: PRESET)

Up to 6 channels can be preset in SR1 to SR3 respectively.

Preset channels can be simply called up by pressing **[^]** (P-SET) or **[V]** (P-SET).

Note: Direct selection can be executed with **[1]** to **[6]** buttons on remote control.

1 Tune into a channel.

2 Hold down **[^]** or **[V]** for 2 sec. or more.

3 Turn **[VOL]** to select a preset number.

4 Hold down **[PUSH SEL]** for 2 sec. or more, and the channel is written on the selected preset number.

Preset number/channel number blinks once.



Notes:

- In step 2, a channel can be registered by holding down the numeric button **[1]** to **[6]** for 2 sec. or more.
- To stop presetting channels, press **[DISP]** (DISPLAY).
- The operation above allows users to replace the current channel with the channel preset in the selected number while selecting a preset channel.

Selection by Category

You can toggle the category on and off every time you hold down **[BAND]** for 2 sec. or more. If the category is set to on, the unit operates as follows for each button:

Channel selection


[<] (TUNE): Preceding channel in current category

[>] (TUNE): Next channel in current category

Category selection

[V] (P-SET: Preset): Preceding category


[^] (P-SET: Preset): Next category

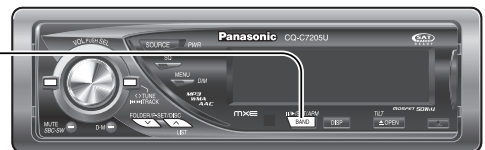

lights when activated.


- 1 Press **[MENU]** to display the menu display.

For using the remote control, hold down **[SEL] (MENU)** for 2 sec. or more.

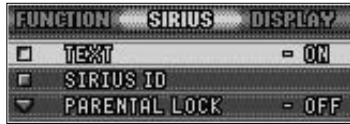

- 2 Turn **[VOL]** to select a function to be adjusted.

For using the remote control, use **[^]** or **[v]**.

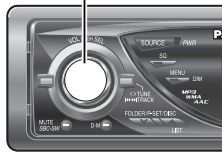

- 3 Press **[PUSH SEL]** to determine the selection.

For using the remote control, use **[BAND] (SET)**.

- 4 Adjust the setting value.

- 5 Press **[MENU]** to close the menu screen.

For using the remote control, hold down **[SEL] (MENU)** for 2 sec. or more.

Note: [0] - [9] on the remote control shall be used to enter a channel number and a pass code.

TEXT

Text display

ON: Enabled (default)

OFF: Disabled

SIRIUS ID

This shows the ID required for having contact with SIRIUS Satellite Radio.

PARENTAL LOCK

If this function is set to ON, the selected channel is locked and turns inaudible. If this function is set to OFF, all channels can be received but UNLOCK/LOCK settings for each channel can be still saved. (Default: On)

- 1 Enter the pass code.
- 2 Press **[PUSH SEL]** to toggle between ON and OFF.

LOCK/UNLOCK

Channels to be locked are selectable.

- 1 Enter the pass code.
- 2 Press **[PUSH SEL]**.
- 3 Turn **[VOL]** to select a channel to be set.
- 4 Press **[PUSH SEL]** to toggle between LOCK and UNLOCK.

PASSCODE

The pass code is changeable. (Default: 1111)

- 1 Enter the current pass code and press **[PUSH SEL]**.
- 2 Enter the new pass code and press **[PUSH SEL]**.
- 3 Enter the new pass code and press **[PUSH SEL]** again.

Note: When **[DISP]** is held down for 10 sec. or more, PASSCODE returns to "1111".

(PASSCODE BOX)

--	--	--	--

Direct Access

A channel can be directly selected.

Example: channel number 5

- 1 Press **[#] (NUMBER)**.
- 2 Press **[5]**.
- 3 Press **[SET]**.

Note: To suspend direct selection, press **[DISP] (DISPLAY)**.



Hands-Free Phone System

Be sure to read "Safety Information" in the Operating Instructions for the Hands-Free Phone System before use.


Preparation

Connecting Hands-Free Phone System

Connect the Hands-Free Phone System (CY-BT100U) and establish the pairing. Refer to the instruction manual for the Hands-Free Phone System for further information.

Note: This unit is designed **only for receiving calls**. It cannot send calls.

Switch Unit

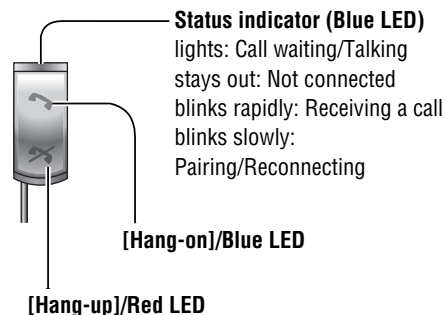

- 1 Press **[Hang-on]** on the Hands-Free Phone System and pick up the phone. The phone is in the incoming state.

- 2 Adjust the volume if necessary.

- 3 Press **[Hang-up]** on the Hands-Free Phone System and hung up the phone.



Operation Flow

Adjust the ring volume

The ring volume is adjustable from this unit. (Setting range: OFF/LOW/MID/HIGH, Default: MID)

[^]: up

[v]: down

Notes:

- The ring volume is adjustable only when receiving calls.
- The ring volume is adjustable only when the phone ring comes out of the main unit.
- The ring volume is also adjustable by turning **[VOL]**.

Reject calls

Pressing **[Hang-up]** allows users to reject a call when the call is coming in.

Bluetooth disconnection/reconnection

Pressing **[Hang-up]** allows users to temporarily disconnect when the phone is in the waiting state. Pressing **[Hang-up]** allows users to reconnect when the Bluetooth unit is temporarily disconnected.

Notes:

- This item is not selectable by pressing **[SOURCE]**, but activated by receiving an incoming call.
- Only outline is described here. Refer to the operating instructions for the Hands-Free Phone System for further information.
- The mute function is automatically canceled when receiving a call even at mute-on setting.
- This unit is not operable when receiving a call at power-off setting.
- We do not guarantee all the operations of connectable devices.

Note: Speaker output is adjustable only when receiving calls.

- 1** Press **[PUSH SEL: SELECT]** to display the AUDIO menu display.




For using the remote control, use **[BAND] (SET)**.

- 2** Press **[PUSH SEL: SELECT]** to select a mode to be adjusted.

For using the remote control, use **[BAND] (SET)**.

- 3** Turn **[VOL]** clockwise or counterclockwise to adjust.

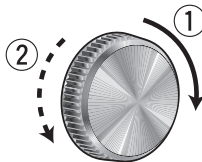

For using the remote control, use **[^]** or **[v]**.

Note: If no operation takes place for more than 10 seconds in the audio menu (2 sec. in Main volume adjustment), the display returns to the regular mode.



Hands-Free SPEAKER

Speaker selection

BOTH : Sound from both speakers (default)

LEFT : Sound from left speaker

RIGHT : Sound from right speaker

Note: Sound comes only from the front speakers.

Troubleshooting

If You Suspect Something Wrong

Check and take steps as described below.

If the described suggestions do not solve the problem, it is recommended to take the unit to your nearest authorized Panasonic Servicenter. The product should be serviced only by qualified personnel. Please refer the checking and the repair to professionals. Panasonic shall not be liable for any accidents arising out of neglect of checking the unit or your own repair after your checking.

Never take measures especially for those other than indicated by *italic* letters in "Possible Solution" described below because those are too dangerous for users to handle themselves.

Warning

- Do not use the unit in an irregular condition, for example, without sound, or with smoke or a foul smell, which can cause ignition or electric shock. Immediately stop using the unit and consult your dealer.
- Never try to repair the unit by yourself because it is dangerous to do so.

Display		Possible cause → Possible solution
DISC Changer	CHANGER E 1	The disc is dirty, or is upside down.
	CHANGER E 2	The disc has scratches. → Eject the magazine. <ul style="list-style-type: none"> • Check the disc. • Load the disc again.
	(After 5 seconds) To next disc automatically	
	CHANGER E 3	No operation by some cause. → Eject the magazine. If failure persists, press the reset switch on the disc changer. If normal operation is not restored, consult your dealer or the nearest Panasonic Servicenter to ask for repairs.
	CHANGER E 6	An error arises in the DVD changer. → Check the DVD changer. ("REGION ERROR" etc.)
	NO DISC	No disc is in the CD Changer (magazine). → Insert discs into the changer (magazine).
NOT CONNECTED	The changer has become disconnected from the unit in the changer mode. → Verify the wiring.	

Note: Messages in the action and display sections of the error chart vary with changers. Refer to the operating instructions for the Disc changer for details.

iPod Control	NO iPod	The iPod cable was disconnected in the iPod mode. → Reconnect the iPod cable.
	NO SONGS	Your iPod has no playable music. → Download playable music to your iPod.

Sirius Satellite Radio

Display	Possible cause → Possible solution
NO SIRIUS	Cannot receive Sirius Satellite Radio → Verify the wiring.
SIR-E-H	Hardware error messages. → Check the hardware.
ANTENNA ERROR	Sirius antenna unconnected. → Connect the Sirius antenna.
CALL 888-539-SIRI	User's registration has not been carried out. → Complete user's registration. A channel that is not included in the agreement was selected. → Select a channel that is included in the agreement. Refer to the operating instructions for Sirius receiver with regard to the agreement.
INVALID CHANNEL	The selected channel is invalid. → Select a channel which can be received instead.
LOCKED CHANNEL	The selected channel is locked. → Make certain that the channel is on parental lock.
UPDATING	The channel data is being updated. → Please wait for a while.
SUB UPDATED	The subscription information was updated. → Wait for 3 minutes in the Sirius mode.
ACQUIRING	Your location is out of receivable areas (e.g. in a tunnel), or the unit is decoding a selected broadcast. The display appears also while the connections are being checked after the power has been turned on. → Wait until getting out of the unreceivable area or completing the decoding.

XM Receiver

NO XM	Cannot receive XM satellite radio. → Verify the wiring.
ANTENNA	XM antenna unconnected. → Connect the XM antenna.
NO SIGNAL	XM broadcasts unreceivable because of poor receiving conditions. → Move to an area where XM broadcasts can be received well.
OFF AIR	Channel not in service → This channel is not currently in service. Tune to another channel.

Problem	Possible cause → Possible solution
Channel unselectable	No contact with XM Satellite radio Inc. → Refer to page 14 of this book and the XM's website to sign up for XM Radio service.

**Panasonic Consumer
Electronics Company,
Division of Panasonic
Corporation of North America**
One Panasonic Way, Secaucus,
New Jersey 07094
<http://www.panasonic.com>

**Panasonic Sales Company,
Division of Panasonic Puerto
Rico, Inc. ("PSC")**
Ave. 65 de Infanteria, Km. 9.5
San Gabriel Industrial Park,
Carolina, Puerto Rico 00985
<http://www.panasonic.com>

Panasonic Canada Inc.
5770 Ambler Drive,
Mississauga, Ontario
L4W 2T3
<http://www.panasonic.ca>

YFM284C663CA

NY1006-1116

Printed in China
Imprimé en Chine
Impreso en China

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>