

Panasonic®

Operating Instructions
Manuel d'utilisation

Portable DVD Car Kit Nécessaire de voiture pour Lecteur DVD Portatif

Model No./Modèle **DY-CB9**

If you have any questions contact
Pour toute demande de renseignements, appeler au
U.S.A.: 1-800-211-PANA(7262)
Canada: 1-800-561-5505

Applicable model
Pour les modèles
DVD-LS91/DVD-LX97/DVD-LX110

Portable DVD Player not included
Lecteur DVD Portatif non inclus



This manual was printed with soy based ink.
Ce manuel a été imprimé avec de l'encre à base de soja.

PP

Panasonic Consumer Electronics Company,
Division of Panasonic Corporation of North America
One Panasonic Way Secaucus,
New Jersey 07094
<http://www.panasonic.com>

Panasonic Canada Inc.
5770 Ambler Drive, Mississauga, Ontario L4W 2T3
www.panasonic.ca

© 2005 Matsushita Electric Industrial Co., Ltd.
Printed in China/Imprimé en Chine

Panasonic (En) (Cf)
Puerto Rico, Inc.
Ave. 65 de Infantería, Km. 9.5
San Gabriel Industrial Park,
Carolina,
Puerto Rico 00985

RQT8684-Y
F0206MG0

Specifications

(Headphone)
Driver units: 30 mm (1 3/16")
Impedance: 24 Ω
Sensitivity: 100 dB/mW
Power handling capacity: 1000 mW (IEC)
Frequency response: 16 Hz - 22 kHz
Cord: 1.3 m (4.5 ft.)
Plug: 3.5 mm (1/8")

Specifications are subject to change without notice.

Product Service

- 1. Damage requiring service**—The unit should be serviced by qualified service personnel if:
(a) The AC power supply cord or AC adaptor has been damaged; or
(b) Objects or liquids have gotten into the unit; or
(c) The unit has been exposed to rain; or
(d) The unit does not operate normally or exhibits a marked change in performance; or
(e) The unit has been dropped or the cabinet damaged.
- 2. Servicing**—Do not attempt to service the unit beyond that described in these operating instructions. Refer all other servicing to authorized servicing personnel.
- 3. Replacement parts**—When parts need replacing ensure the servicer uses parts specified by the manufacturer or parts that have the same characteristics as the original parts. Unauthorized substitutes may result in fire, electric shock, or other hazards.
- 4. Safety check**—After repairs or service, ask the servicer to perform safety checks to confirm that the unit is in proper working condition.

Product information

For product information or assistance with product operation:
In the U.S.A., refer to "Customer Services Directory" on the right.
In Canada, contact the Panasonic Canada Inc. Customer Care Centre at 1-800-561-5505, or visit the website (www.panasonic.ca), or an authorized Servicentre closest to you.

Specifications

(Headphone)
Driver units: 30 mm (1 3/16")
Impedance: 24 Ω
Sensitivity: 100 dB/mW
Power handling capacity: 1000 mW (IEC)
Frequency response: 16 Hz - 22 kHz
Cord: 1.3 m (4.5 ft.)
Plug: 3.5 mm (1/8")

Specifications are subject to change without notice.

Service après-vente

- 1. En cas de dommage**—Confier l'appareil à un technicien qualifié dans les cas suivants:
(a) lorsque le cordon d'alimentation ou l'adaptateur secteur a été endommagé;
(b) lorsqu'un objet est tombé dans l'appareil ou si ce dernier a été mouillé;
(c) lorsque l'appareil a été exposé à la pluie;
(d) lorsque l'appareil semble ne pas fonctionner normalement ou que son rendement laisse à désirer;
(e) lorsque l'appareil a subi un choc violent ou que son coffret a été endommagé.
- 2. Réparation**—Ne faire aucun réglage ni ajustement autres que ceux décrits dans le présent manuel. Confier toute réparation à un centre de service Panasonic agréé.
- 3. Pièces de rechange**—S'assurer que le technicien utilise des pièces de rechange recommandées par le fabricant ou dont les caractéristiques sont les mêmes. L'utilisation de pièces de rechange non autorisées peut causer un incendie, des chocs électriques ou d'autres dangers.
- 4. Vérification de sécurité**—Demander au technicien qui a réparé l'appareil de soumettre ce dernier à des vérifications pour s'assurer qu'il peut être utilisé en toute sécurité.

Demande d'informations

Pour toutes réparations, renseignements ou conseils sur le fonctionnement du produit: Veuillez contacter le service à la clientèle de Panasonic Canada Inc. au 1-800-561-5505, son site web (www.panasonic.ca) ou le centre de service agréé le plus proche.

Dear customer

Thank you for purchasing this product.
For optimum performance and safety, please read these instructions carefully.
Before connecting, operating or adjusting this product, please read the instructions completely. Please keep this manual for future reference.

- **Do not attach or detach the Headrest Mounting Bracket while driving, and do not attach in the following locations, otherwise it may result in injury or traffic accidents:**
—anywhere other than the back of the seat
—in a location that interferes with the driver's view or operation of the car
—in a location that interferes with the operation of an airbag
—in a location that interferes with the driving instruments
- **Make sure that the bracket belt is securely fastened, and check the lock on the unit.**
In the event of an accident, sudden acceleration, or braking, the unit could become loose and cause injury.

Cher client

Nous vous remercions d'avoir arrêté votre choix sur cet appareil. Pour en tirer un rendement optimal, lire attentivement le présent manuel.
Avant de raccorder, régler ou utiliser l'appareil, il est recommandé de lire attentivement le manuel d'utilisation. Conserver ce manuel.

- **Do not attach or detach the Headrest Mounting Bracket while driving, and do not attach in the following locations, otherwise it may result in injury or traffic accidents:**
—anywhere other than the back of the seat
—in a location that interferes with the driver's view or operation of the car
—in a location that interferes with the operation of an airbag
—in a location that interferes with the driving instruments
- **Make sure that the bracket belt is securely fastened, and check the lock on the unit.**
In the event of an accident, sudden acceleration, or braking, the unit could become loose and cause injury.



Listening caution



Do not play your headphones or earphones at a high volume. Hearing experts advise against continuous extended play.
If you experience a ringing in your ears, reduce volume or discontinue use.
Do not use while operating a motorized vehicle. It may create a traffic hazard and is illegal in many areas.
You should use extreme caution or temporarily discontinue use in potentially hazardous situations.
Even if your headphones or earphones are the open-air type designed to let you hear outside sounds, don't turn up the volume so high that you can't hear what's around you. Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing.
Guard against this by setting your equipment at a safe level BEFORE your hearing adapts. To establish a safe level:
• Start your volume control at a low setting.
• Slowly increase the sound until you can hear it comfortably and clearly, and without distortion.
Once you have established a comfortable sound level:
• Leave it there.



Protection de l'ouïe



Éviter l'écoute à volume élevé. Les spécialistes en otologie recommandent de ne pas prolonger l'écoute afin de ne pas endommager l'ouïe.
Si un bourdonnement se fait entendre, réduire le volume ou cesser l'écoute.
Ne pas utiliser au volant d'un véhicule motorisé. Cela peut être dangereux et est interdit dans plusieurs régions.
Démontrer une grande prudence ou interrompre l'écoute dans des situations potentiellement dangereuses.
Même si le casque d'écoute ou les écouteurs sont du type ouvert devant permettre d'entendre les bruits ambiants, ne pas trop élever le volume.
Le son peut être trompeur. Avec le temps, votre niveau de confort auditif s'adapte à des volumes plus élevés. Ainsi, un niveau qui semble normal peut en fait être trop élevé et être nuisible à l'oreille.
Protégez-vous en réglant le volume à un niveau sécuritaire avant que votre oreille ne s'adapte à un volume trop élevé.
Pour déterminer un niveau d'écoute sécuritaire:
• Régler le volume au minimum.
• Monter lentement le volume jusqu'au niveau d'écoute confortable avant qu'il n'y ait distorsion.
Après avoir identifié le niveau d'écoute confortable:
• Laisser l'appareil réglé à ce niveau.

-If you see this symbol-



Information on Disposal in other Countries outside the European Union

This symbol is only valid in the European Union.
If you wish to discard this product, please contact your local authorities or dealer and ask for the correct method of disposal.



Information sur la mise au rebut dans les pays n'appartenant pas à l'Union européenne

Ce symbole est uniquement valide dans l'Union européenne.
Si vous désirez mettre ce produit au rebut, contactez l'administration locale ou le revendeur et informez-vous de la bonne façon de procéder.

For U.S.A.

**Panasonic Consumer Electronics Company,
Division of Panasonic Corporation
of North America**
One Panasonic Way Secaucus,
New Jersey 07094

Panasonic Puerto Rico, Inc.
Ave. 65 de Infantería, Km. 9.5
San Gabriel Industrial Park, Carolina,
Puerto Rico 00985

Panasonic DVD Player Limited Warranty

Limited Warranty Coverage

If your product does not work properly because of a defect in materials or workmanship, Panasonic Consumer Electronics Company or Panasonic Puerto Rico, Inc. (collectively referred to as "the warrantor") will, for the length of the period indicated on the chart below, which starts with the date of original purchase ("Limited Warranty period"), at its option either (a) repair your product with new or refurbished parts, or (b) replace it with a new or a refurbished product. The decision to repair or replace will be made by the warrantor.

Product or Part Name	Parts	Labor
DVD Player	One (1) Year	Ninety (90) Days
Rechargeable Batteries (in exchange for defective item)	Ten (10) Days	Not Applicable
Headrest mounting bracket, Headphones, Accessories (in exchange for defective item)	Ninety (90) Days	Not Applicable

During the "Labor" Limited Warranty period there will be no charge for labor. During the "Parts" warranty period, there will be no charge for parts. You must mail-in your product during the warranty period. If non-rechargeable batteries are included, they are not warranted. This Limited Warranty only applies to products purchased and serviced in the United States or Puerto Rico. This Limited Warranty is extended only to the original purchaser and only covers product purchased as new. A purchase receipt or other proof of original purchase date is required for Limited Warranty service.

Mail-In Service

For assistance in the continental U.S.A. in obtaining repairs please ship the product to:

**Panasonic Services Company
Customer Servicenter
Suite B
4900 George McVay Drive
McAllen, TX 78503**

For assistance in Puerto Rico call Panasonic Puerto Rico, Inc. (787)-750-4300 or fax (787)-768-2910.

When shipping the unit carefully pack and send it prepaid, adequately insured and preferably in the original carton. Include a letter detailing the complaint and provide a day time phone and/or email address where you can be reached.

IF REPAIR IS NEEDED DURING THE LIMITED WARRANTY PERIOD THE PURCHASER WILL BE REQUIRED TO FURNISH A SALES RECEIPT/PROOF OF PURCHASE INDICATING DATE OF PURCHASE, AMOUNT PAID AND PLACE OF PURCHASE. CUSTOMER WILL BE CHARGED FOR THE REPAIR OF ANY UNIT RECEIVED WITHOUT SUCH PROOF OF PURCHASE.

Limited Warranty Limits And Exclusions

This Limited Warranty ONLY COVERS failures due to defects in materials or workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage. The Limited Warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accidents, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, set-up adjustments, misadjustment of consumer controls, improper maintenance, power line surge, lightning damage, modification, or commercial use (such as hotel, office, restaurant, or other business), rental use of the product, or service by anyone other than a Factory Servicenter or other Authorized Servicer, or damage that is attributable to acts of God.

THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED UNDER "LIMITED WARRANTY COVERAGE". THE WARRANTOR IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. (As examples, this excludes damages for lost time, cost of having someone remove or re-install an installed unit if applicable, travel to and from the servicer, loss of or damage to media or images, data or other recorded content. The items listed are not exclusive, but are for illustration only.)

ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied Limited Warranty lasts, so the exclusions may not apply to you.

This Limited Warranty gives you specific legal rights and you may also have other rights which vary from state to state. If a problem with this product develops during or after the Limited Warranty period, you may contact your dealer or Servicenter. If the problem is not handled to your satisfaction, then write to the warrantor's Consumer Affairs Department at the addresses listed for the warrantor.

PARTS AND SERVICE, WHICH ARE NOT COVERED BY THIS LIMITED WARRANTY, ARE YOUR RESPONSIBILITY.

12111 Riverside Way Richmond BC V6W 1K8 Tel: (604) 278-4211 Fax: (604) 278-5627	5770 Ambler Drive Mississauga ON L4W 2T3 Tel: (905) 624-8447 Fax: (905) 238-2418
--	---

IF YOU SHIP THE PRODUCT TO A SERVICENTRE

Carefully pack and send prepaid, adequately insured and preferably in the original carton. Include details of the defect claimed, and proof of date of original purchase.

Customer Services Directory

Obtain Product Information and Operating Assistance; locate your nearest Dealer or Servicenter; purchase Parts and Accessories; or make Customer Service and Literature requests by visiting our Web Site at:

<http://www.panasonic.com/consumersupport>

or, contact us via the web at:

<http://www.panasonic.com/contactinfo>

You may also contact us directly at:

1-800-211-PANA (7262),
Monday-Friday 9 am-9 pm; Saturday-Sunday 10 am-7 pm, EST.

For hearing or speech impaired TTY users, TTY: 1-877-833-8855

Accessory Purchases

Purchase Parts, Accessories and Instruction Books online for all Panasonic Products by visiting our Web Site at:

<http://www.pasc.panasonic.com>

or, send your request by E-mail to:

npcparts@us.panasonic.com

You may also contact us directly at:

1-800-332-5368 (Phone) 1-800-237-9080 (Fax Only) (Monday - Friday 9 am to 8 pm, EST.)

Panasonic Services Company

20421 84th Avenue South, Kent, WA 98032

(We Accept Visa, MasterCard, Discover Card, American Express, and Personal Checks)

For hearing or speech impaired TTY users, TTY : 1-866-605-1277

Service in Puerto Rico

Panasonic Puerto Rico, Inc.

Ave. 65 de Infantería, Km. 9.5, San Gabriel Industrial Park, Carolina, Puerto Rico 00985

Phone (787)750-4300, Fax (787)768-2910

F1104

For CANADA

Panasonic Canada Inc.

PANASONIC/TECHNICS PRODUCT - LIMITED WARRANTY

Panasonic Canada Inc. warrants this product to be free from defects in material and workmanship and agrees to remedy any such defect for a period as stated below from the date of original purchase.

Technics Audio Product	One (1) year, parts and labour
Panasonic Audio & DVD Product	One (1) year, parts and labour
Accessories including rechargeable batteries	Ninety (90) days

In-home Service will be carried out only to locations accessible by roads and within 50 km of an authorized Panasonic service facility.

LIMITATIONS AND EXCLUSIONS

This warranty does not apply to products purchased outside Canada or to any product which has been improperly installed, subjected to usage for which the product was not designed, misused or abused, damaged during shipping, or which has been altered or repaired in any way that affects the reliability or detracts from the performance, nor does it cover any product which is used commercially. Dry cell batteries are also excluded from coverage under this warranty.

This warranty is extended to the original end user purchaser only. A purchase receipt or other proof of date of original purchase is required before warranty service is performed.

THIS EXPRESS, LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

IN NO EVENT WILL PANASONIC CANADA INC. BE LIABLE FOR ANY SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES.

In certain instances, some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or the exclusion of implied warranties, so the above limitations and exclusions may not be applicable.

WARRANTY SERVICE

FOR PRODUCT OPERATION ASSISTANCE, please contact:

Our Customer Care Centre:	Telephone #: (905) 624-5505
	1-800 #: 1-800-561-5505
	Fax #: (905) 238-2360
	Email link: "Contact Us" on www.panasonic.ca

FOR PRODUCT REPAIRS, please locate your nearest Authorized Servicentre at www.panasonic.ca :

Link : "Servicentres™ locator" under "Customer support"

Panasonic Factory Service:

Richmond British Columbia Panasonic Canada Inc. 12111 Riverside Way Richmond BC V6W 1K8 Tel: (604) 278-4211 Fax: (604) 278-5627	Mississauga Ontario Panasonic Canada Inc. 5770 Ambler Drive Mississauga ON L4W 2T3 Tel: (905) 624-8447 Fax: (905) 238-2418
---	--

IF YOU SHIP THE PRODUCT TO A SERVICENTRE

Carefully pack and send prepaid, adequately insured and preferably in the original carton. Include details of the defect claimed, and proof of date of original purchase.

Panasonic Canada Inc.

Certificat de garantie limitée Panasonic/Technics

Panasonic Canada Inc. garantit cet appareil contre tout vice de fabrication et accepte, le cas échéant, de remédier à toute défectuosité pendant la période indiquée ci-dessous et commençant à partir de la date d'achat original.

Appareils audio Technics	—Un (1) an, pièces et main-d'œuvre
Appareils audio et DVD Panasonic	—Un (1) an, pièces et main-d'œuvre
Accessoires incluant les piles rechargeables	—Quatre-vingt-dix (90) jours

Le service à domicile ne sera offert que dans les régions accessibles par routes et situées dans un rayon de 50 km d'un centre de service agréé Panasonic.

LIMITATIONS ET EXCLUSIONS

Cette garantie n'est valide que pour les appareils achetés au Canada et ne couvre pas les dommages résultant d'une installation incorrecte, d'un usage abusif ou impropre ainsi que ceux découlant d'un accident en transit ou de manipulation. De plus, si l'appareil a été altéré ou transformé de façon à modifier l'usage pour lequel il a été conçu ou utilisé à des fins commerciales, cette garantie devient nulle et sans effet. Les piles sèches ne sont pas couvertes sous cette garantie.

Cette garantie est octroyée à l'utilisateur original seulement. La facture ou autre preuve de la date d'achat original sera exigée pour toute réparation sous le couvert de cette garantie.

CETTE GARANTIE LIMITÉE ET EXPRESSE REMPLACE TOUTE AUTRE GARANTIE, EXPRESSE OU IMPLICITE, INCLUANT LES GARANTIES IMPLICITES DU CARACTÈRE ADÉQUAT POUR LA COMMERCIALISATION ET UN USAGE PARTICULIER.

PANASONIC N'AURA D'OBLIGATION EN AUCUNE CIRCONSTANCE POUR TOUT DOMMAGE DIRECT, INDIRECT OU CONSÉCUTIF.

Certaines juridictions ne reconnaissent pas les exclusions ou limitations de dommages indirects ou consécutifs, ou les exclusions de garanties implicites. Dans de tels cas, les limitations stipulées ci-dessus peuvent ne pas être applicables.

RÉPARATION SOUS GARANTIE

Pour de l'aide sur le fonctionnement de l'appareil, veuillez contacter

notre service à la clientèle au :	N° de téléphone : (905) 624-5505
	Ligne sans frais : 1-800-561-5505
	N° de télécopieur : (905) 238-2360
	Lien courriel : « Contactez-nous » à www.panasonic.ca

Pour la réparation des appareils, veuillez consulter notre site www.panasonic.ca pour connaître le centre de service agréé le plus près de votre domicile :

Lien : « Centres de service » sous « support à la clientèle »

Centres de service Panasonic :

Richmond, Colombie-Britannique Panasonic Canada Inc. 12111 Riverside Way Richmond, BC V6W 1K8 Tél. : (604) 278-4211 Télé. : (604) 278-5627	Mississauga, Ontario Panasonic Canada Inc. 5770 Ambler Dr. Mississauga, ON L4W 2T3 Tél. : (905) 624-8447 Télé. : (905) 238-2418
--	---

Expédition de l'appareil à un centre de service

Emballer soigneusement l'appareil, de préférence dans le carton d'origine, et l'expédier port payé et assuré au centre de service.

Inclure la description détaillée de la panne et la preuve de la date d'achat original.

 
 
Accessories



Use numbers indicated in parentheses when asking for replacement parts.
(Product numbers correct as of January 2006. These may be subject to change.)

- 2 Stereo headphones (RP-HT40)
- 1 Headrest Mounting Bracket (RXQ1405A)
- 1 Monitor holder (RGQ0442-K)

How to connect the headphones

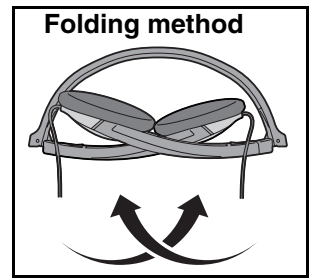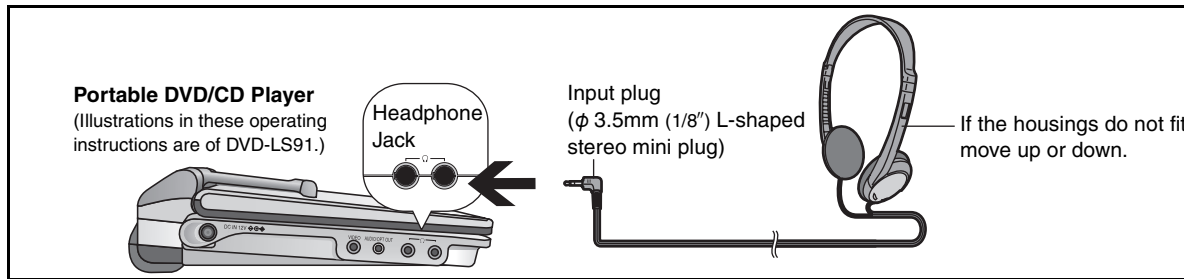


How to install the Headrest Mounting Bracket and the Portable DVD Player.

You can enjoy video in the back seat attaching the unit to the back of the front seat.

1 Attaching the Headrest Mounting Bracket to the front seat.

 
- ① Adjust the headrest so there is an open space of about 3 cm.

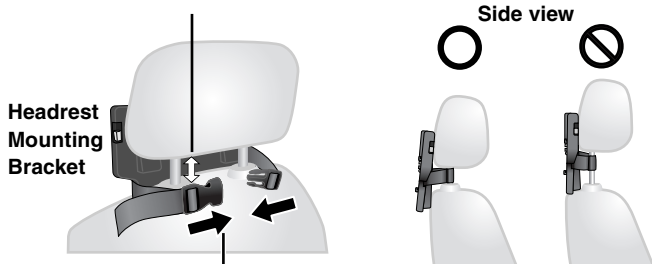


- ② Close the buckle and adjust the belt until it fits tightly around the headrest.

2 Attaching the monitor holder.

 - ① Fold the monitor down towards the front of the unit and attach the monitor holder

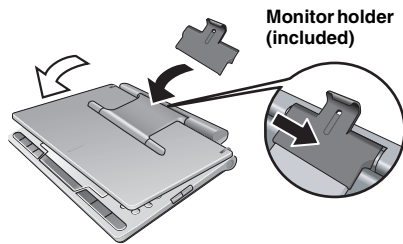

 - ② Rotate the monitor backwards so the screen is facing out, and lock into place with the monitor holder.

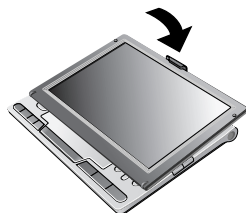


Check that the monitor is locked into position.


3 Attaching the unit to the bracket.

While holding the unit with both hands, line it up just below the protruding sections on the bracket as shown in the illustration on the left. Press the unit down about 4 to 5 mm until you hear a "click" as it locks into place. At this point, line the protruding sections up with the holes on the bottom of the player.

 Line up the protruding sections here.



 When correctly attached, you will hear a locking sound.

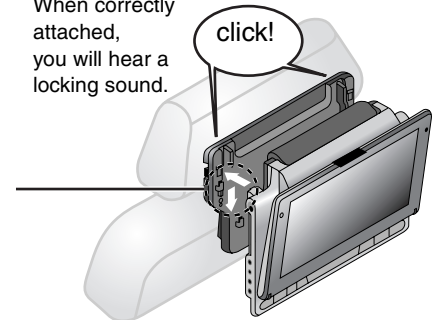

Refer to the following illustration for lining up the protruding sections on the bracket with the holes on the back of the unit.


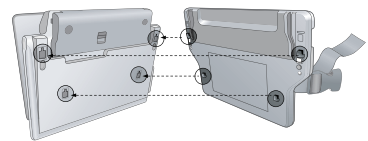 


Diagram of attached bracket

 


Use the monitor in the open position as shown in the illustration to the right to prevent abnormal audio or damage resulting from vibrations in the car. The angle of the monitor can be adjusted up to about 30 degrees.

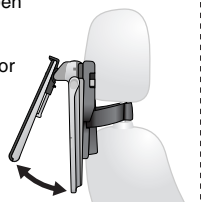


The angle of the monitor may shift while driving due to vibration, etc.

 Detaching the monitor

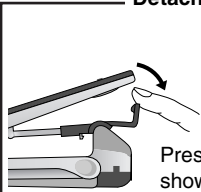


 Press the monitor holder as shown to detach it.



After use, detach the monitor holder from the unit. You can store it in the bracket.

 - Depending on the type of headrest, you may not be able to attach the bracket.

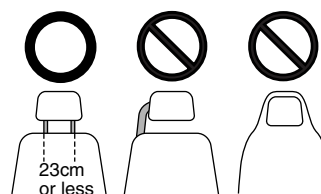

Releasing the unit from the bracket



- ① Press the release buttons (left and right) in towards the center of the bracket.
- ② Lift the unit up to release it. Press the release buttons only when detaching the unit.

 
 
Accessories



Use numbers indicated in parentheses when asking for replacement parts.
(Product numbers correct as of January 2006. These may be subject to change.)

- 2 Stereo headphones (RP-HT40)
- 1 Headrest Mounting Bracket (RXQ1405A)
- 1 Monitor holder (RGQ0442-K)

How to connect the headphones

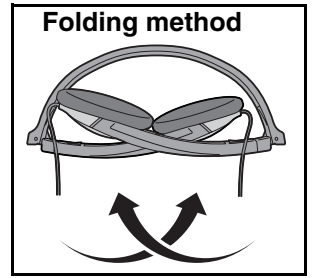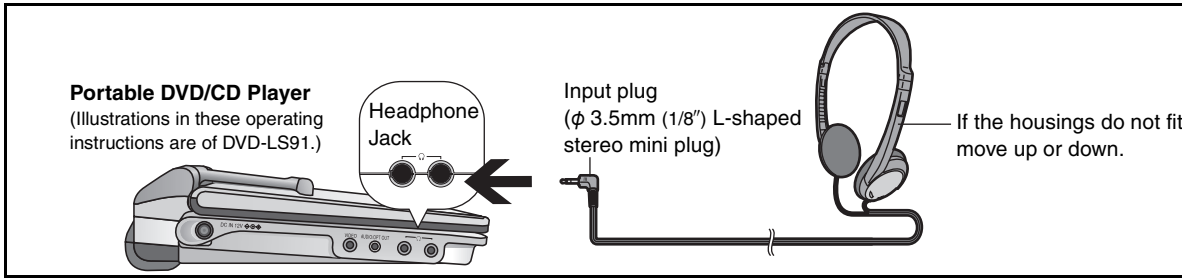


How to install the Headrest Mounting Bracket and the Portable DVD Player.

You can enjoy video in the back seat attaching the unit to the back of the front seat.

1 Attaching the Headrest Mounting Bracket to the front seat.

 
- ① Adjust the headrest so there is an open space of about 3 cm.

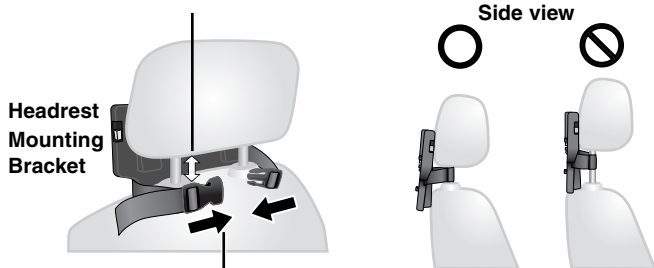

- ② Close the buckle and adjust the belt until it fits tightly around the headrest.

2 Attaching the monitor holder.

 - ① Fold the monitor down towards the front of the unit and attach the monitor holder

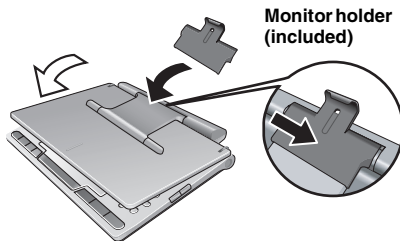

- ② Rotate the monitor backwards so the screen is facing out, and lock into place with the monitor holder.




Check that the monitor is locked into position.


3 Attaching the unit to the bracket.

While holding the unit with both hands, line it up just below the protruding sections on the bracket as shown in the illustration on the left. Press the unit down about 4 to 5 mm until you hear a "click" as it locks into place. At this point, line the protruding sections up with the holes on the bottom of the player.

 Line up the protruding sections here.



 When correctly attached, you will hear a locking sound.

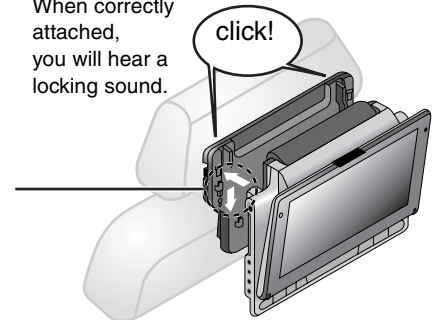

Refer to the following illustration for lining up the protruding sections on the bracket with the holes on the back of the unit.


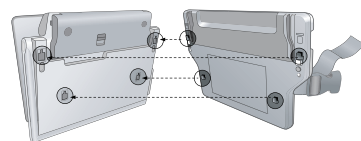 


Diagram of attached bracket

 


Use the monitor in the open position as shown in the illustration to the right to prevent abnormal audio or damage resulting from vibrations in the car. The angle of the monitor can be adjusted up to about 30 degrees.

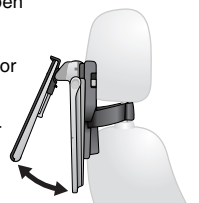


The angle of the monitor may shift while driving due to vibration, etc.

 Detaching the monitor

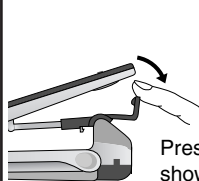


 Press the monitor holder as shown to detach it.



After use, detach the monitor holder from the unit. You can store it in the bracket.

 - Depending on the type of headrest, you may not be able to attach the bracket.

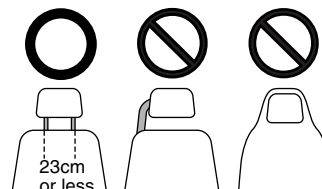

Releasing the unit from the bracket



- ① Press the release buttons (left and right) in towards the center of the bracket.
- ② Lift the unit up to release it. Press the release buttons only when detaching the unit.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>