



# Panasonic®

## Operating Instructions

### DVD/CD PLAYER

Model No. **DVD-S42**

#### Dear customer

Thank you for purchasing this product. Before connecting, operating or adjusting this product, please read the instructions completely. Please keep this manual for future reference.



#### Region number

The player plays DVD-Video marked with labels containing the region number or "ALL".

Region	Number
Continental Europe, the Middle East and South Africa	2
Asia	3

Example:

Continental Europe



### Table of contents

#### Getting started

- Accessories/How to replace the fuse .....3
- Discs that can be played.....4
- STEP 1 Connection to a television** ..... 6
- STEP 2 The remote control** ..... 7
- STEP 3 QUICK SETUP**..... 7

#### Operations

- Basic play** .....8
- Convenient functions** .....9
  - Displaying current playback condition (Quick OSD)/  
Reviewing titles/programs to play (Advanced Disc Review) ..... 9
  - Recalling recommended audio/video setting (AV Enhancer)/  
Controlling louder portions of audio (Night Sound Mode)/  
Enjoying heavy bass with the speakers (H.Bass)/  
Enjoying virtual surround (Advanced Surround)/  
Reproducing more natural audio (Multi Re-master) ..... 10
  - Zoom/Changing subtitles/Changing soundtracks/  
Angle select/Still picture rotation/Starting play from a selected group ..... 11
  - Changing play speed/Skipping 30 seconds forward/Quick replay/Repeat play ..... 12
- Changing the play sequences** .....12
  - Program play/Random play ..... 12
- Using navigation menus** ..... 13
  - Playing programs/playlists/Playing CD/Playing HighMAT™ discs ..... 13
  - Playing data discs ..... 14
- About DivX VOD content** .....15
- Using On-Screen Menus** ..... 16
  - Main menus/Other Settings ..... 16
- Changing the player settings** ..... 18

#### Reference

- Glossary/Safety precautions** .....20
- Specifications** ..... 21
- Troubleshooting guide** ..... 22
- Maintenance** ..... 23
- Index** ..... Back cover

Unless otherwise indicated, illustrations in these operating instructions are of the models for Continental Europe.

E GC GCA GCS GCU

Getting started

Operations

Reference

## CAUTION!

THIS PRODUCT UTILIZES A LASER. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

## WARNING:

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR PRODUCT DAMAGE, DO NOT EXPOSE THIS APPARATUS TO RAIN, MOISTURE, DRIPPING OR SPLASHING AND THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHALL BE PLACED ON THE APPARATUS.

## CAUTION!

- DO NOT INSTALL OR PLACE THIS UNIT IN A BOOKCASE, BUILT-IN CABINET OR IN ANOTHER CONFINED SPACE. ENSURE THE UNIT IS WELL VENTILATED. TO PREVENT RISK OF ELECTRIC SHOCK OR FIRE HAZARD DUE TO OVERHEATING, ENSURE THAT CURTAINS AND ANY OTHER MATERIALS DO NOT OBSTRUCT THE VENTILATION VENTS.
- DO NOT OBSTRUCT THE UNIT'S VENTILATION OPENINGS WITH NEWSPAPERS, TABLECLOTHS, CURTAINS, AND SIMILAR ITEMS.
- DO NOT PLACE SOURCES OF NAKED FLAMES, SUCH AS LIGHTED CANDLES, ON THE UNIT.
- DISPOSE OF BATTERIES IN AN ENVIRONMENTALLY FRIENDLY MANNER.

This product may receive radio interference caused by mobile telephones during use. If such interference is apparent, please increase separation between the product and the mobile telephone.

The socket outlet shall be installed near the equipment and easily accessible or the mains plug or an appliance coupler shall remain readily operable.

### The Middle East, South Africa and Asia

THIS UNIT IS INTENDED FOR USE IN TROPICAL CLIMATES.

### Continental Europe

THIS UNIT IS INTENDED FOR USE IN MODERATE CLIMATES.

## SUOMI

### VAROITUS!

LAITTEEN KÄYTTÄMINEN MUULLA KUIN TÄSSÄ KÄYTTÖOHJEESSA MAINITULLA TAVALLA SAATTA AALTISTAA KÄYTTÄJÄN TURVALLISUUSLUOKAN 1 YLITTÄVÄLLE NÄKYMÄTTÖMÄLLE LASERSÄTEILYLLE.

### VAROITUS:

TULIPALO-, SÄHKÖISKUVAARAN TAI TUOTETTA KOHTAAVAN MUUN VAHINGON VÄHENTÄMISEKSI EI LAITETTA SAA ALTISTAA SATEELLE, KOSTEUDELLE, VESIPISAROILLE TAI ROISKEELLE, EIKÄ NESTETTÄ SISÄLTÄVIÄ ESINEITÄ, KUTEN ESIMERKIKSI MALJAKOITA, SAA ASETTAA LAITTEEN PÄÄLLE.

### VAROITUS!

- ÄLÄ ASENNATA TAI LAITETA TÄTÄ LAITETTA KABINETTITYYPPISEEN KIRJAKAAPPIIN TAI MUUHUN SULJETTUUN TILAAN, JOTTA TUULETUS ONNISTUISI. VARMISTA, ETTÄ VERHO TAI MIKÄÄN MUU MATERIAALI EI HUONONNA TUULETUSTA, JOTTA VÄLTETTÄISIIN YLIKUUMENEMISESTÄ JOHTUVA SÄHKÖISKU- TAI TULIPALOVAARA.
- ÄLÄ PEITÄ LAITTEEN TUULETUSAUKKOJA SANOMALEHDELLÄ, PÖYTÄLINALLA, VERHOLLA TAI MUULLA VASTAAVALLA ESINEELLÄ.
- ÄLÄ ASETA PALAVAA KYNTTILÄÄ TAI MUUTA AVOTULEN LÄHDETTÄ LAITTEEN PÄÄLLE.
- HÄVITÄ PARISTOT LUONTOA VAHINGOITTAMATTOMALLA TAVALLA.

TÄMÄ LAITE ON TARKOITETTU KÄYTETTÄVÄKSI LEUDOSSA ILMASTOSSA.

Laitte tulee asettaa lähelle verkkopistorasiaa ja pistokkeen täytyy olla sellaisessa asennossa, että siihen on helppo tarttua ongelman sattuessa.

## NORSK

### ADVARSEL!

DETTE PRODUKTET ANVENDER EN LASER. BETJENING AV KONTROLLER, JUSTERINGER ELLER ANDRE INNGREP ENN DE SOM ER BESKREVET I DENNE BRUKSANVISNING, KAN FØRE TIL FARLIG BESTRÅLING. DEKSLER MÅ IKKE ÅPNES, OG FORSØK ALDRI Å REPARERE APPARATET PÅ EGENHÅND. ALT SERVICE OG REPARASJONSARBEID MÅ UTFØRES AV KVALIFISERT PERSONELL.

### ADVARSEL:

FOR Å REDUSERE FAREN FOR BRANN, ELEKTRISK STØT ELLER SKADER PÅ PRODUKTET, MÅ DETTE APPARATET IKKE UTSETTES FOR REGN, FUKTIGHET, VANNDRÅPER ELLER VANNSPRUT. DET MÅ HELLER IKKE Plasseres GJENSTANDER FYLT MED VANN, SLIK SOM BLOMSTERVASER, OPPÅ APPARATET.

### ADVARSEL!

- APPARATET MÅ IKKE Plasseres I EN BOKHYLLE, ET INNEBYGGET KABINETT ELLER ET ANNET LUKKET STED HVOR VENTILASJONSFORHOLDENE ER UTILSTREKKELEGE. SØRG FOR AT GARDINER ELLER LIGNENDE IKKE FORVERRER VENTILASJONSFORHOLDENE, SÅ RISIKO FOR ELEKTRISK SJOKK ELLER BRANN FORÅRSAKET AV OVERHETING UNNGÅS.
- APPARATETS VENTILASJONSÅPNINGER MÅ IKKE DEKkes TIL MED AVISER, BORDDUKER, GARDINER OG LIGNENDE.
- Plasser IKKE ÅPEN Ild, SLIK SOM LEVENDE LYS, OPPÅ APPARATET.
- BRUKTE BATTERIER MÅ KASSERES UTEN FARE FOR MILJØET.

DETTE APPARATET ER BEREGNET TIL BRUK UNDER MODERATE KLIMAFORHOLD.

Utstyret bør plasseres i nærheten av AC-stikkkontakten, og støpslet må være lett tilgjengelig hvis det skulle oppstå problemer.

-If you see this symbol

### Information on Disposal for Users of Waste Electrical & Electronic Equipment (private households)



This symbol on the products and/or accompanying documents means that used electrical and electronic products should not be mixed with general household waste.

For proper treatment, recovery and recycling, please take these products to designated collection points, where they will be accepted on a free of charge basis. Alternatively, in some countries you may be able to return your products to your local retailer upon the purchase of an equivalent new product.

Disposing of this product correctly will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point. Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

### For business users in the European Union

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.

### Information on Disposal in other Countries outside the European Union

This symbol is only valid in the European Union. If you wish to discard this product, please contact your local authorities or dealer and ask for the correct method of disposal.

## Accessories



Use numbers when asking for replacement parts.  
(Product numbers correct as of January 2006. These may be subject to change.)

- 1 Remote control
- 2 Remote control batteries

**The Middle East, South Africa and Asia**

- 1 Audio/video cable

**Continental Europe, United Arab Emirates, South Africa and Asia**

- 1 AC mains lead

**The Middle East except United Arab Emirates**

- 2 AC mains leads

↓  
(EUR7631200R)

**Saudi Arabia**



#### Note


For use with this unit only. Do not use it with other equipment. Also, do not use cords for other equipment with this unit.

## How to replace the fuse


### (For Middle East except United Arab Emirates)

The location of the fuse differ according to the type of AC mains plug (figures A and B). Confirm the AC mains plug fitted and follow the instructions below. Illustrations may differ from actual AC mains plug.

1. Open the fuse cover with a screwdriver.

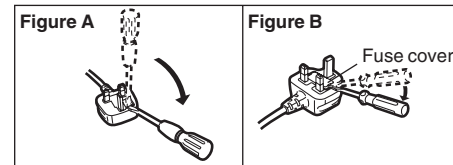

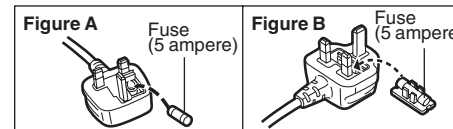


2. Replace the fuse and close or attach the fuse cover.



# Discs that can be played

## Commercial discs

Disc Logo	Indicated in these instructions by	Remarks
	<b>DVD-V</b>	High quality movie and music discs
	<b>VCD</b>	Music discs with video Including SVCD (Conforming to IEC62107)
	<b>CD</b>	Music discs




### Discs that cannot be played

DVD-Audio, Version 1.0 of DVD-RW, DVD-ROM, CD-ROM, CDV, CD-G, SACD, Photo CD, DVD-RAM that cannot be removed from their cartridge, 2.6-GB and 5.2-GB DVD-RAM, and "Chaoji VCD" available on the market including VCD, DVCD and SVCD that do not conform to IEC62107.

### Handling precautions

- Do not attach labels or stickers to discs (This may cause disc warping, rendering it unusable).
- Do not write on the label side with a ball-point pen or other writing instrument.
- Do not use record cleaning sprays, benzene, thinner, static electricity prevention liquids or any other solvent.
- Do not use scratch-proof protectors or covers.
- Do not use the following discs:
  - Discs with exposed adhesive from removed stickers or labels (rented discs etc).
  - Discs that are badly warped or cracked.
  - Irregularly shaped discs, such as heart shapes.

## Recorded discs (✓:Available, X:Not available)

Disc Logo	Recorded on a DVD video recorder, etc.		Recorded on a personal computer, etc.					Necessity of finalize <sup>*6</sup>
	DVD-VR <sup>*2</sup>	DVD-V <sup>*4</sup>	WMA	MP3	JPEG	MPEG4	DivX	
	✓	—	X	✓	✓	✓	✓	Not necessary
	✓	✓	X	✓	✓	✓	✓	Necessary
	✓ <sup>*3</sup>	✓	X	X	X	X	X	Necessary
+R/+RW —	X	(✓) <sup>*5</sup>	X	X	X	X	X	Necessary
+R DL —	X	(✓) <sup>*5</sup>	X	X	X	X	X	Necessary
CD-R/RW <sup>*1</sup> —	—	—	✓	✓	✓	✓	✓	Necessary <sup>*7</sup>

It may not be possible to play the above discs in all cases due to the type of discs, the condition of the recording, the recording method and how the files were created (→ page 5, Tips for making data discs).

<sup>\*1</sup> This unit can play CD-R/RW recorded with CD-DA or Video CD format.

**WMA MP3 JPEG** This unit also plays HighMAT discs.

<sup>\*2</sup> Discs recorded on DVD video recorders, DVD video cameras, etc. using Version 1.1 of the Video Recording Format (a unified video recording standard).

<sup>\*3</sup> Discs recorded on DVD video recorders or DVD video cameras using Version 1.2 of the Video Recording Format (a unified video recording standard).

<sup>\*4</sup> Discs recorded on DVD video recorders or DVD video cameras using DVD-Video Format.

<sup>\*5</sup> Recorded using a format different from DVD-Video Format, therefore some functions cannot be used.

<sup>\*6</sup> A process that allows play on compatible equipment. To play a disc that is displayed as "Necessary" on this unit, the disc must first be finalized on the device it was recorded on.

<sup>\*7</sup> Closing the session will also work.

## ■ Tips for making data discs

Format	Disc	Extension	Reference
<b>WMA</b>	<b>CD-R/RW</b>	“.WMA” “.wma”	<ul style="list-style-type: none"> <li>Compatible compression rate: between 48 kbps and 320 kbps</li> <li>You cannot play WMA files that are copy protected.</li> <li>This unit is not compatible with Multiple Bit Rate (MBR: a file that contains the same content encoded at several different bit rates).</li> </ul>
<b>MP3</b>	<b>DVD-RAM DVD-R/RW CD-R/RW</b>	“.MP3” “.mp3”	<ul style="list-style-type: none"> <li>Sampling frequency: DVD-RAM, DVD-R/RW : 11.02, 12, 22.05, 24, 44.1 and 48 kHz CD-R/RW : 8, 11.02, 12, 16, 22.05, 24, 32, 44.1 and 48 kHz</li> <li>Compatible compression rate: between 32 kbps and 320 kbps</li> <li>This unit is not compatible with ID3 tags.</li> </ul>
<b>JPEG</b>	<b>DVD-RAM DVD-R/RW CD-R/RW</b>	“.JPG” “.jpg” “.JPEG” “.jpeg”	<ul style="list-style-type: none"> <li>JPEG files taken on a digital camera that conform to DCF Standard Version 1.0 are displayed. <ul style="list-style-type: none"> <li>Files that have been altered, edited or saved with computer picture editing software may not be displayed.</li> </ul> </li> <li>This unit cannot display moving pictures, MOTION JPEG and other such formats, still pictures other than JPEG (e.g. TIFF) or play pictures with attached audio.</li> </ul>
<b>MPEG4</b>	<b>DVD-RAM DVD-R/RW CD-R/RW</b>	“.ASF” “.asf”	<ul style="list-style-type: none"> <li>You can play MPEG4 data [conforming to SD VIDEO specifications (ASF standard)/MPEG4 (Simple Profile) video system/G.726 audio system] recorded with the Panasonic SD multi cameras or DVD video recorders with this unit.</li> <li>The recording date may differ from that of the actual date.</li> </ul>
<b>DivX</b>	<b>DVD-RAM DVD-R/RW CD-R/RW</b>	“.DIVX” “.divx” “.AVI” “.avi”	<ul style="list-style-type: none"> <li>Plays all versions of DivX video (including DivX® 6) [DivX video system/MP3, Dolby Digital or MPEG audio system] with standard playback of DivX® media files. Functions added with DivX Ultra are not supported.</li> <li>GMC (Global Motion Compensation) is not supported.</li> <li>DivX files greater than 2GB or have no index may not play properly on this unit.</li> <li>This unit supports all resolutions up to maximum of 720 × 480 (NTSC)/720 × 576 (PAL).</li> <li>You can select up to 8 types of audio and subtitles on this unit.</li> </ul>

- If groups were created away from the root like “002 group” in the illustration right, the eighth one onwards is displayed on the same vertical line in the menu screen.
- There may be differences in the display order on the menu screen and computer screen.
- This unit cannot play files recorded using packet write.

## Naming folders and files (Files are treated as contents and folders are treated as groups on this unit.)

At the time of recording, prefix folder and file names. This should be with numbers that have an equal number of digits, and should be done in the order you want to play them (this may not work at times).

### DVD-RAM

- Discs must conform to UDF 2.0.


### DVD-R/RW

- Discs must conform to UDF bridge (UDF 1.02/ISO9660).
- This unit is not compatible with multi-session. Only the default session is played.

### CD-R/RW

- Discs must conform to ISO9660 level 1 or 2 (except for extended formats).
- This unit is compatible with multi-session but if there are a lot of sessions it takes more time for play to start. Keep the number of sessions to a minimum to avoid this.

e.g. **MP3**

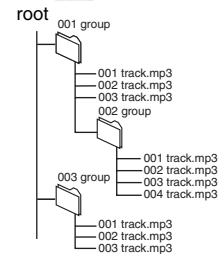


Discs that can be played

# STEP 1 Connection to a television

- Do not place the unit on amplifiers or equipment that may become hot. The heat can damage the unit.
- **Do not connect through the video cassette recorder.** Due to copy guard protection, the picture may not display properly.
- Turn off all equipment before connection and read the appropriate operating instructions.
- Connect the terminals of the same colour.
- Unless otherwise indicated, illustrations are of the models for areas except Continental Europe.  
(**Continental Europe** :There is no S VIDEO OUT terminal on the unit.)

## Television

### With VIDEO IN or S VIDEO IN

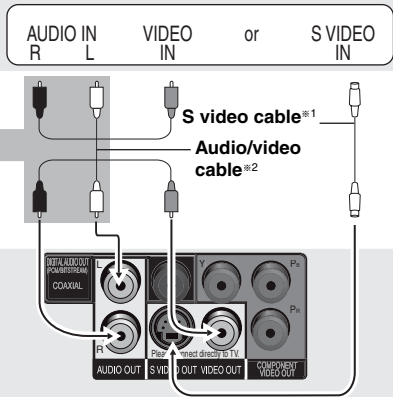


\*1 When using this connection, the audio cable (red and white plugs) should also be connected.

\*2 **The Middle East, South Africa and Asia** : included  
**Continental Europe** : not included

You can connect the audio cable to the 2-channel audio input terminals of an analog amplifier or system component to enjoy stereo sound.

### With COMPONENT VIDEO IN

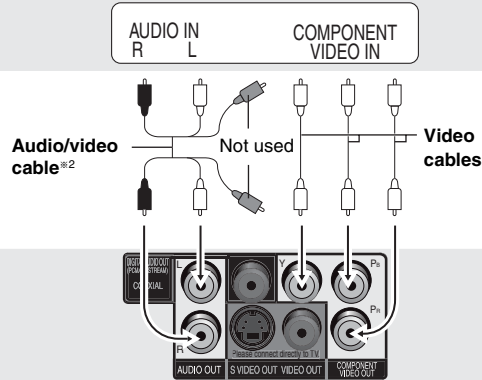

### To enjoy progressive video

Connect to a progressive output compatible television.


- ① **Continental Europe**  
Select "Video/YPbPr" for the component terminals in QUICK SETUP (→ page 7).
- ② Set "Video Output Mode" to "○○○p", then follow the instructions on the menu screen (→ page 17, Picture Menu).

### Continental Europe

Panasonic televisions with 625 (576)/50i · 50p, 525 (480)/60i · 60p input terminals are progressive compatible.

### Continental Europe

### With SCART (AV) IN

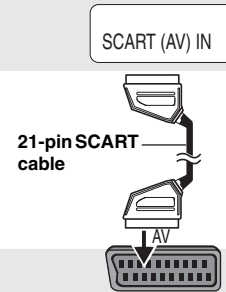


- If the television is compatible with S-video, select "S-Video/YPbPr", or compatible with RGB, select "RGB/No Output" for the AV terminals in QUICK SETUP (→ page 7).

## Back of the unit

## ■ Enjoying multi-channel surround sound

Amplifier with a built-in decoder or a decoder-amplifier combination

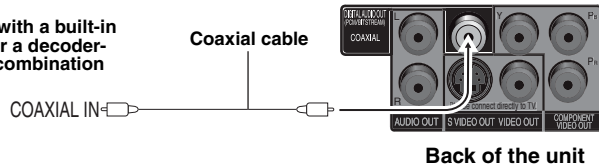


Back of the unit

- You cannot use DTS Digital Surround decoders not suited to DVD.

Change "PCM Digital Output", "Dolby Digital", "DTS Digital Surround" and "MPEG **Except Asia**" (→ page 19, "Audio" tab).

## STEP 2 The remote control

### ■ Batteries

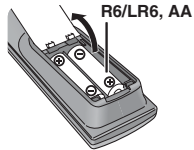

- Insert so the poles (+ and -) match those in the remote control.
- Do not use rechargeable type batteries.
- Do not:**
  - mix old and new batteries.
  - use different types at the same time.
  - heat or expose to flame.
  - take apart or short circuit.
  - attempt to recharge alkaline or manganese batteries.
  - use batteries if the covering has been peeled off.


Mishandling of batteries can cause electrolyte leakage which can damage items the fluid contacts and may cause a fire.

Remove if the remote control is not going to be used for a long period of time. Store in a cool, dark place.






### ■ Use

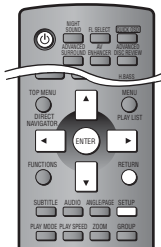Aim at the remote control sensor (→ page 8), avoiding obstacles, at a maximum range of 7 m directly in front of the unit.

## STEP 3 QUICK SETUP



Turn on the television and select the appropriate video input on the television.

<p><b>1</b></p>  <p>Power ON.</p>	<p><b>2</b></p>  <p>Shows QUICK SETUP screen.</p>	<p><b>3</b></p>  <p>Follow the message and make the settings.</p>	<p><b>4</b></p>  <p>Press to finish QUICK SETUP.</p>	<p><b>5</b></p>  <p>Press to exit.</p>
--	--	---	---	---

To change these settings later, select "QUICK SETUP" (→ page 19, "Others" tab).

## ■ Connect the AC mains lead last

### The Middle East except United Arab Emirates


Use the AC mains lead that matches the socket for the area you live in.

### Saudi Arabia



AC mains lead (included)

To household mains socket ←

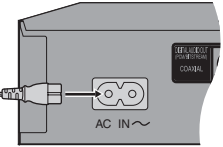

## Basic play

### 1 Power ON.



### 2 Open the disc tray.




Stop Pause



Remote control sensor

### 3 Load the disc.

- Load double-sided discs so the label for the side you want to play is facing up.
- DVD-RAM: Remove discs from their cartridges before use.

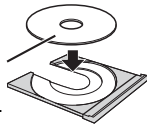

### 4 Start play.




### Skip

- **DVD-VR** Can also skip to the markers.

### Stop

- The position is memorized when "▷" flashes on the display.
- Press **[▶]** (PLAY) to resume. (**Resume play**)
  - Press **[■]** to clear the position.
  - Even after the unit is turned off, the position is memorized (Normal playback only).

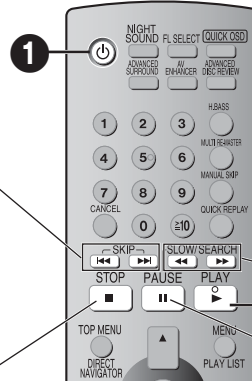

### Repeat play

- Select "Repeat" (→ page 12, Repeat play) or "A-B Repeat" (→ page 16, Play Menu).

### Search (during play)

### Slow-motion (during pause)

- Up to 5 steps
- Press **[▶]** (PLAY) to restart play.
- **VCD** Slow-motion: forward direction only
- **MPEG4** **DivX** Slow-motion: Does not work.

### Pause

- Press **[▶]** (PLAY) to restart play.

### Standby/on switch (⏻/⏻)

Press to switch the unit from on to standby mode or vice versa. In standby mode, the unit is still consuming a small amount of power.

### Standby/on indicator (⏻)

When the unit is connected to the AC mains supply, this indicator lights up in standby mode and goes out when the unit is turned on.

 
- To play MP3, JPEG, MPEG4 or DivX video contents on DVD-RAM that contain both **DVD-VR** and another format (e.g. **JPEG**), select "Play as Data Disc" (→ Page 17, Other Menu).
- Discs continue to rotate while menus are displayed. Press **[■]** when you finish to preserve the unit's motor and your television screen.
- Total title number may not be displayed properly on +R/+RW.

If you are experiencing problems, refer to troubleshooting guide (→ page 22, 23).



### Group skip


WMA MP3 JPEG  
MPEG4 DivX

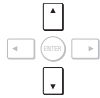

• Does not work while paused.


### Frame-by-frame (during pause)

 DVD-VR DVD-V  
VCD



• **VCD** forward direction only


### On-screen item select

 

### Return to previous screen


 
### Enter number



**DVD-VR DVD-V VCD CD**

e.g. To select 12: [ $\geq 10$ ] → [1] → [2]

**WMA MP3 JPEG MPEG4 DivX**

e.g. To select 123: [1] → [2] → [3] → [ENTER]

### Disc menu



**DVD-V**

Shows a disc top menu.

**DVD-VR**

Plays the programs (→ page 13).



**DVD-V**

Shows a disc menu.

**DVD-VR**

Plays a playlist (→ page 13).



**VCD** with playback control

Shows a disc menu.

### Main unit display



Number display  
Time display

### Information screen JPEG



## Convenient functions



QUICK OSD  
(Main unit)


### Displaying current playback condition (Quick OSD)

Press [QUICK OSD].

Basics → Details

← Off ←

#### ■ Basics

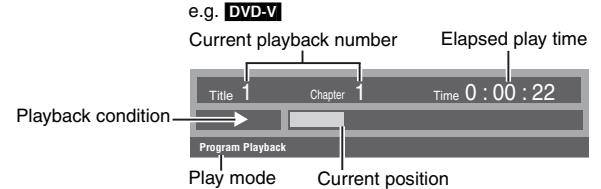

#### ■ Details

e.g. **DVD-V**

See page 11 for changing soundtracks  
See page 11 for changing subtitles  
See page 11, Angle select for changing angles  
Aspect of current playback title  
Total play time of current playback title

- Details-DVD-Video
  - Audio 1 --- DTS 3/2.1 ch
  - Subtitle - ---
  - Angle 1/1
  - Source Aspect 4:3
  - Title Total Time 0:54:28

• **MPEG4 DivX** Video and audio information is not displayed during search.

ADVANCED  
DISC REVIEW



### Reviewing titles/programs to play (Advanced Disc Review)

**DVD-VR DVD-V** (Except +R/+RW)  
(Normal playback only)

#### 1 Press [ADVANCED DISC REVIEW].

Reviews each title/program.


#### 2 Press [▶] (PLAY) when

you find a title/program to play.

- You can also review each 10 minutes. Select "Interval Mode" (→ page 18, "Advanced Disc Review" in "Disc" tab).
- This may not work depending on the play position.
- **DVD-VR** Does not work:
  - with still picture part.
  - when playing a playlist.



## Convenient functions



### Recalling recommended audio/video setting (AV Enhancer)

By pressing just one button the disc type is automatically determined and the best audio and video settings are configured.

**Functions**  
**AV Enhancer On**


Press [**AV ENHANCER**] to select “On”.

- This may not work depending on the disc’s recording.

When AV Enhancer is on, you cannot change the individual settings indicated below.

**Audio settings:**  
 Night Sound Mode, H.Bass (→ below), Advanced Surround, Multi Re-master (→ right), Dialogue Enhancer (→ page 17), Sound Enhancement (→ page 17)

**Video settings:**  
 Picture Mode (→ page 16)




### Controlling louder portions of audio (Night Sound Mode) Except **JPEG MPEG4 DivX**

You can enjoy movies and music late at night because the quieter parts of the audio are accentuated.

**Functions**  
**Night Sound Mode On**

Press [**NIGHT SOUND**] to select “On”.

- This may not work depending on the disc’s recording.
- This does not work with **MP3** on DVD-RAM or DVD-R/RW.




### Enjoying heavy bass with the speakers (H.Bass)

Press [**H.BASS**] to select “On”.

- This may not work depending on the disc’s recording.
- If the sound is distorted or there is noise, set to “Off”.
- This does not work when Night Sound Mode (→ above) is on.

**Functions**  
**H. Bass On**



### Enjoying virtual surround (Advanced Surround)

*Motion pictures with 2 or more channels*

Press [**ADVANCED SURROUND**] to select “SP 1”, “SP 2”, “HP 1” or “HP 2”.

**Functions**  
**Advanced Surround SP1**

**SP (Speaker) 1 (Natural) SP 2 (Enhanced)**  
**HP (Headphone) 1 (Natural) HP 2 (Enhanced) Off**

- When using discs recorded with surround sound, sound seems to come from speakers on either side of you.
- When using headphones from the connected equipment, select “HP 1” or “HP 2”.
- Optimum seating position is 3 to 4 times the distance between the front left and right speakers or the width of the television if using the television’s speakers.
- Do not use in combination with surround effects on other equipment.
- This does not work when Night Sound Mode or H.Bass (→ left) is on.



### Reproducing more natural audio (Multi Re-master)

**DVD-VR DVD-V** (Discs recorded with 48 kHz only) **VCD CD**

- This feature gives you a more natural sound by adding the higher frequency signals not recorded on the disc, for example, playing DVD-Video recorded with 48 kHz at 96 kHz. (→ page 20, “Sampling frequency” in Glossary)

**WMA MP3** (Disc recording is other than 8 kHz, 16 kHz, 32 kHz)

This feature reproduces the higher frequencies lost during recording to give you a sound closer to the original.

Press [**MULTI RE-MASTER**] to select “1”, “2” or “3”.

Setting	<b>DVD-V CD</b> (LPCM) Type of music	Other discs Effect level
1	High tempo (e.g., pop and rock)	Light
2	Various tempos (e.g., jazz)	Medium
3	Low tempo (e.g., classical)	Strong
Off	Off	Off

**Functions**  
**Multi Re-master 1**

- When connecting with COAXIAL terminal, the actual output sampling frequency depends on “PCM Digital Output” setting in “Audio” tab (→ page 19).
- This may not work depending on the disc’s recording.
- This does not work when Night Sound Mode, H.Bass (→ left) or Advanced Surround (→ above) is on.
- This does not work with **MP3** on DVD-RAM or DVD-R/RW.

ZOOM <input type="checkbox"/>	<b>Zoom</b> <i>Motion pictures</i>
----------------------------------	---------------------------------------

This feature expands a letterbox picture to fit the screen.

Press **[ZOOM]** to select the preset aspect ratio or "Auto". (Just Fit Zoom)

**DVD-VR** **DVD-V** **VCD**

Auto → 4:3 Standard → European Vista → 16:9 Standard

↑ Cinemascope2 ← Cinemascope1 ← American Vista ↓

• Depending on the disc, the preset aspect ratio may not be displayed.

**MPEG4** **DivX**

Standard → Original

↑ Full ←

**Fine adjustments (Manual Zoom)**

Press [**◀ ▶**] while the menu is displayed. (Press and hold to alter faster.)

–from ×1.00 to ×1.60 (in 0.01 units), from ×1.60 to ×2.00 (in 0.02 units)

**MPEG4** **DivX** only

–from ×2.00 to ×4.00 (in 0.05 units)

It may not be possible to zoom up to ×4.00 depending upon the connected television and its settings.

✓ <b>Functions</b>
Just Fit Zoom ×1.00 ▶

SUBTITLE <input type="checkbox"/>	<b>Changing subtitles</b> <i>Discs with subtitles</i>
--------------------------------------	--

**DVD-V** **VCD** **DivX**

Press **[SUBTITLE]** to select the subtitle language.

To clear/display the subtitles

Press [**◀ ▶**] to select "On" or "Off".

• On + R/+ RW, a subtitle number may be shown for subtitles that are not displayed.

**DVD-VR** (with subtitle on/off information)

Press **[SUBTITLE]** to select "On" or "Off".

• On or Off only can be selected.

• Subtitle on/off information cannot be recorded using Panasonic DVD Recorders.

✓ <b>Functions</b>
Subtitle ◀ Off ▶

AUDIO <input type="checkbox"/>	<b>Changing soundtracks</b> <i>Motion pictures</i>
-----------------------------------	---

Press **[AUDIO]** to select the soundtrack.

**DVD-VR** **VCD**

You can use this button to select "L", "R" or "LR".

**DivX**

While the menu is displayed

Press [**◀ ▶**] to select "L", "R" or "LR".

**DVD-V** (Karaoke discs)

While the menu is displayed


Press [**◀ ▶**] to select "On" or "Off" of vocals. Read the disc's instructions for details.

✓ <b>Functions</b>
Audio 1

**Signal type/data**

LPCM/**□□** Digital/DTS/MP3/MPEG: Signal type  
kHz (Sampling frequency)/bit/ch (Number of channels)

Example: 3/2 1ch

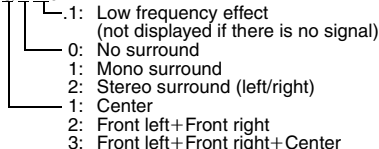

• **DivX** It may take some time for play to start if you change the audio on a DivX video disc.

ANGLE/PAGE <input type="checkbox"/>	<b>Angle select</b> <b>DVD-V</b> with multiple angles <b>Still picture rotation</b> <b>JPEG</b>
--	--

Press **[ANGLE/PAGE]** to select the angle or rotate the still picture.

e.g. **DVD-V**

✓ <b>Functions</b>
Angle 1/4

GROUP <input type="checkbox"/>	<b>Starting play from a selected group</b> <b>WMA</b> <b>MP3</b> <b>JPEG</b> <b>MPEG4</b> <b>DivX</b>
-----------------------------------	--

A folder on WMA/MP3, JPEG, MPEG4 and DivX video discs is treated as a "Group".

**1** While stopped, press **[GROUP]**.

**2** Press [**▲ ▼**] or the numbered buttons to select a group and press **[ENTER]**.

✓ <b>Functions</b>
Group Search ◀ 1

## Convenient functions

 


### Changing play speed **DVD-VR DVD-V**

During play, press [PLAY SPEED] to select "Fast", "Normal" or "Slow".

#### Fine adjustments

While the menu is displayed  
Press [◀▶] to increase or decrease the playing speed from ×0.6 to ×1.4 in 0.1 units.



- Press [▶] (PLAY) to return to the normal play.
- After you change the speed
  - Night Sound Mode, H.Bass, Advanced Surround, Multi Re-master (→ page 10) and Sound Enhancement (→ page 17) do not work.
  - Digital output switches to PCM.
  - 96 kHz sampling frequency is converted to 48 kHz.
- This may not work depending on the disc's recording.

MANUAL SKIP



### Skipping 30 seconds forward **DVD-VR DVD-V** (Except +R/+RW)

Convenient when you want to skip commercials etc.

During play, press [MANUAL SKIP].

- This may not work depending on the play position.
- **DVD-VR** Does not work:
  - with still picture part.
  - when playing a playlist.

QUICK REPLAY



### Quick replay (Only when the elapsed play time can be displayed)

**DVD-VR DVD-V WMA MP3 VCD CD**

Press [QUICK REPLAY] to skip back a few seconds.

- This may not work depending on the disc's recording.
- This does not work with +R/+RW.



FUNCTIONS



### Repeat play (Only when the elapsed play time can be displayed)

**JPEG**: you can use even if there is no elapsed time display.

- 1 Press [FUNCTIONS].
  - 2 Press [▲▼] to select "Other Settings" and press [▶].
  - 3 Press [▲▼] to select "Play Menu" and press [▶].
  - 4 Press [▲▼] to select "Repeat" and press [▶].
  - 5 Press [▲▼] to select an item to be repeated and press [ENTER].
- Depending on the disc, the items that can be selected will differ.

## Changing the play sequences

Disable HighMAT disc play to use random and program play. Select "Play as Data Disc" in Other Menu (→ page 17).

PLAY MODE



### Program play (up to 32 items) (Except **DVD-VR**)

1 While stopped, press [PLAY MODE] several times.

2 Press the numbered buttons to select the items (→ page 9, Enter number).

Repeat this step to program other items.

3 Press [▶] (PLAY).

Selecting all the items (on the disc or in the title or group)

Press [ENTER] and [▲▼] to select "ALL", then press [ENTER] again to register.

#### Changing the program

Press [▲▼] to select an item.

–To change an item, repeat step 2.


–To clear an item, press [CANCEL] (or select "Clear" and press [ENTER]).

- Press [ANGLE/PAGE] to skip page by page.

#### Clearing the whole program

Select "Clear all" and press [ENTER]. The whole program is also cleared when the unit is turned off or the disc tray is opened.

e.g. **DVD-V**

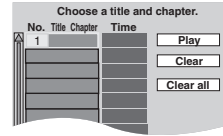

PLAY MODE




### Random play (Except **DVD-VR**)

 1 While stopped, press [PLAY MODE] several times.

- 2 **DVD-V WMA MP3 JPEG MPEG4 Divx**  
Press the numbered buttons to select a group or a title (→ page 9, Enter number).
- 3 Press [▶] (PLAY).

e.g. **DVD-V**



To exit the program or random mode

Press [PLAY MODE] several times while stopped.

# Using navigation menus



DIRECT  
NAVIGATOR




PLAY LIST

## Playing programs/playlists DVD-VR

- Titles appear only if they have been entered.
- You cannot edit playlists and titles.

## Playing the programs

- 1 Press [DIRECT NAVIGATOR].
- 2 Press [▲ ▼] or the numbered buttons to select the program.
  - Press [ANGLE/PAGE] to skip page by page.
  - To select a 2-digit number  
e.g. 23: [≥10] → [2] → [3]
  - Press [▶] to show the contents of the program.
- 3 Press [ENTER].

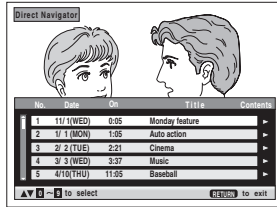



MENU


## Playing CD CD

Titles appear with CD text playback.

- 1 Press [MENU].
- 2 Press [▲ ▼] to select the track and press [ENTER].

- Press [ANGLE/PAGE] to skip page by page.
- To exit the screen, press [MENU].

e.g. CD text

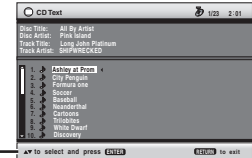

Press [FUNCTIONS] to switch between guide messages and the playback condition indicator.



TOP MENU



MENU

## Playing HighMAT™ discs WMA MP3 JPEG

While the menu is displayed

Press [▲ ▼ ◀ ▶] to select items then press [ENTER].



Menu:  
Takes you to the next menu which shows playlists or another menu.




Playlist:  
Play starts.

- To return to the menu screen, press [TOP MENU] then press [RETURN] several times.
- To change the menu background, press [FUNCTIONS].  
The background changes to the one recorded on the disc.
- To display/exit the screen, press [TOP MENU].

## Playing a playlist (Only when the disc contains a playlist)

- 1 Press [PLAY LIST].
- 2 Press [▲ ▼] or the numbered buttons to select the play list.
  - Press [ANGLE/PAGE] to skip page by page.
  - To select a 2-digit number  
e.g. 23: [≥10] → [2] → [3]
- 3 Press [ENTER].

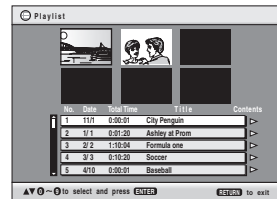


## Playing a scene

- 1 Do steps 1–2 (→ above, Playing a playlist).
- 2 Press [▶].
- 3 Press [▲ ▼] to select “Scene List” and press [ENTER].
  - Select “Contents” to show the contents of the program.
- 4 Press [▲ ▼ ◀ ▶] to select a scene and press [ENTER].

## Selecting from the list

- 1 Press [MENU].
- 2 Press [◀] then [▲ ▼] to switch among “Playlist”, “Group” and “Content” lists.
- 3 Press [▶] then [▲ ▼] to select an item and press [ENTER].

- Press [ANGLE/PAGE] to skip page by page.
- To exit the screen, press [MENU].

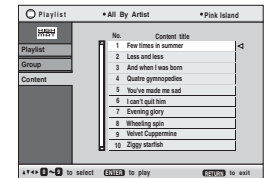

Using navigation menus

FOI78509

## Using navigation menus



### Playing data discs **WMA MP3 JPEG MPEG4 DivX**

Select "Play as Data Disc" (→ page 17, Other Menu) in the following cases:

-To play HighMAT discs without using the HighMAT function


-To play **MP3**, **JPEG**, **MPEG4** or **DivX** on DVD-RAM that contain both **DVD-VR** and another format (e.g. **JPEG**)

### Playing items in order (Playback Menu)

While the menu is displayed

Press [**▲ ▼**] to select "All", "Audio", "Picture" or "Video" and press [**ENTER**].


- To display/exit the screen, press [**TOP MENU**].

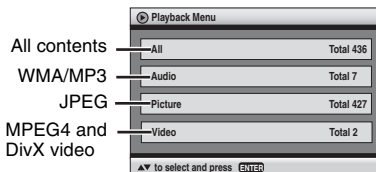

### Playing from the selected item (Navigation Menu)

- 1 Press [**MENU**].
- 2 Press [**▲ ▼ ◀ ▶**] to select the group and press [**ENTER**].
- 3 • To play content in the group in order Press [**ENTER**].  
• To start play from the selected content Press [**▲ ▼**] to select and press [**ENTER**].


Group and content number currently playing

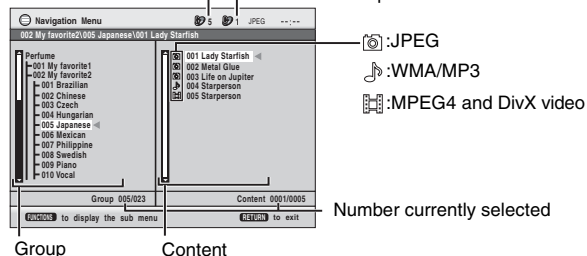

- Press [**ANGLE/PAGE**] to skip page by page.
- To listen to WMA/MP3 while showing a JPEG image on the screen Select a JPEG first, and then select WMA/MP3. (The opposite order is not effective.)
- To exit the screen, press [**MENU**].

### Using the submenu

- 1 Press [**MENU**].
- 2 Press [**FUNCTIONS**].
- 3 Press [**▲ ▼**] to select an item and press [**ENTER**].

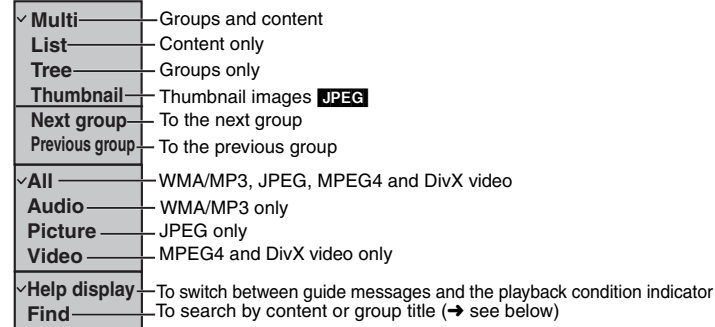

### Searching by a content or group title

- 1 Press [**MENU**].  
• Press [**◀ ▶**] to highlight a group title to search a group, or a content title to search its content.
- 2 Press [**FUNCTIONS**].
- 3 Press [**▲ ▼**] to select "Find" and press [**ENTER**].
- 4 Press [**▲ ▼**] to select a character and press [**ENTER**].  
• Repeat to enter another character.  
• Lower case is also searched.  
• Press [**◀ ▶**] to skip between A, E, I, O and U.  
• Press [**◀**] to erase a character.  
• Erase the asterisk (\*) to search for the titles starting with that character.
- 5 Press [**▶**] to select "Find" and press [**ENTER**].  
The search result screen appears.
- 6 Press [**▲ ▼**] to select the content or group and press [**ENTER**].



## About DivX VOD content

DivX Video-on-Demand (VOD) content is encrypted for copyright protection. In order to play DivX VOD content on this unit, you first need to register the unit.

Follow the on line instructions for purchasing DivX VOD content to enter the unit's registration code and register the unit. For more information about DivX VOD, visit [www.divx.com/vod](http://www.divx.com/vod).

### Display the unit's registration code

(→ page 19, "DivX Registration" in "Others" tab)



- We recommend that you make a note of this code for future reference.
- After playing DivX VOD content for the first time, another registration code is then displayed in "DivX Registration". Do not use this registration code to purchase DivX VOD content. If you use this code to purchase DivX VOD content, and then play the content on this unit, you will no longer be able to play any content that you purchased using the previous code.
- If you purchase DivX VOD content using a registration code different from this unit's code, you will not be able to play this content. ("Authorization Error" is displayed.)

### Regarding DivX content that can only be played a set number of times

Some DivX VOD content can only be played a set number of times. When you play this content, the remaining number of plays is displayed. You cannot play this content when the number of remaining plays is zero. ("Rented Movie Expired" or "Rental Expired" is displayed.)

When playing this content

- The number of remaining plays is reduced by one if
  - you press [⏮] or [SETUP].
  - you press [■] (STOP). [Press [⏸] (PAUSE) to stop play.]
  - you press [⏮] (SKIP) or [⏭] (SEARCH) etc. and arrive at another content or the start of the content being played.
- Resume (→ page 8, Stop) and Marker (→ page 16, Play Menu) functions do not work.

Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

"DTS" and "DTS 2.0 + Digital Out" are trademarks of Digital Theater Systems, Inc.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

MPEG Layer-3 audio decoding technology licensed from Fraunhofer IIS and Thomson multimedia.

This product is licensed under the MPEG-4 Visual patent portfolio license for the personal and non-commercial use of a consumer for (i) encoding video in compliance with the MPEG-4 Visual Standard ("MPEG-4 Video") and/or (ii) decoding MPEG-4 Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed by MPEG LA to provide MPEG-4 Video. No license is granted or shall be implied for any other use. Additional information including that relating to promotional, internal and commercial uses and licensing may be obtained from MPEG LA, LLC. See <http://www.mpegla.com>.

HighMAT™ and the HighMAT logo are either trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.



Windows Media, and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.



WMA is a compression format developed by Microsoft Corporation. It achieves the same sound quality as MP3 with a file size that is smaller than that of MP3.

Official DivX® Certified product.


Plays all versions of DivX® video (including DivX®6) with standard playback of DivX® media files.

DivX, DivX Certified, and associated logos are trademarks of DivX, Inc. and are used under license.




# Using On-Screen Menus

**1**




Press.

**2**

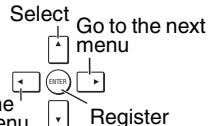

Select the menu.

**3**



Make the settings.

**4**



Press to exit.

Items shown differ depending on the type of software.

## Main menus

<b>Program, Group, Title Chapter, Track Playlist, Content</b>	<b>To start from a specific item</b> <ul style="list-style-type: none"> <li>• Press [▲ ▼] to select and press [ENTER].</li> <li>• Press and hold [▲ ▼] to alter faster.</li> </ul>
<b>Time</b>	<b>To skip incrementally or decrementally* (Time Slip for play only)</b> 1. Press [ENTER] twice to show Time Slip indicator. 2. Press [▲ ▼] to select the time and press [ENTER]. <ul style="list-style-type: none"> <li>• Press and hold [▲ ▼] to alter faster.</li> </ul> <b>To start from a specific time* (Time Search)</b> <b>To change remaining/elapsed time display</b>
<b>Video</b>	<b>To display pixel number</b> DivX fps (frame per second) is also displayed.
<b>Audio</b>	(→ page 11, Changing soundtracks)
<b>Thumbnail</b>	<b>To display the current bitrate or sampling frequency</b> <b>To show thumbnail images</b>
<b>Subtitle</b>	(→ page 11, Changing subtitles)
<b>Marker (VR)</b>	<b>To recall a marker recorded on DVD-Video recorders</b>
<b>Angle</b>	(→ page 11, Angle select)
<b>Rotate Picture</b>	(→ page 11, Still picture rotation)
<b>Slideshow</b>	<b>To turn on/off slideshow</b> <b>To change the slideshow timing (1 Fast ↔ 5 Slow)</b> <ul style="list-style-type: none"> <li>• When using Slideshow, Skip/Rotate picture may not work correctly depending on the play position.</li> </ul>
<b>Other Settings</b>	(→ below)

\* Except +R/+RW

## Other Settings

<b>Play Speed</b>	(→ page 12, Changing play speed)
<b>AV Enhancer</b>	(→ page 10)

## ■ Play Menu


(Only when the elapsed play time can be displayed, **JPEG** The Repeat and Marker functions can be used.)

<b>Repeat</b>	(→ page 12, Repeat play)
<b>A-B Repeat</b>	<b>To repeat a specified section</b> Press [ENTER] at the starting and ending points. Press [ENTER] again to cancel. <ul style="list-style-type: none"> <li>• <b>DVD-VR</b> (still picture part): Does not work.</li> </ul>
<b>Marker</b> Except <b>DVD-VR</b>	<b>To mark up to 5 positions to play again</b> Press [ENTER] (The unit is now ready to accept markers.) To mark a position: [ENTER] (at the desired point) To mark another position: [◀▶] to select "*" → [ENTER] To recall a marker: [◀▶] → [ENTER] To erase a marker: [◀▶] → [CANCEL] <ul style="list-style-type: none"> <li>• This feature doesn't work during program and random play.</li> <li>• Markers you add clear when you open the disc tray or switch the unit to standby.</li> </ul>
<b>Advanced Disc Review</b>	(→ page 9)

## ■ Picture Menu

<b>Normal:</b>	Normal images
<b>Cinema1:</b>	Mellows images and enhances detail in dark scenes.
<b>Cinema2:</b>	Sharpens images and enhances detail in dark scenes.
<b>Animation:</b>	Suitable for animation
<b>Dynamic:</b>	Enhances the contrast for powerful images.
<b>User</b> (Press [ENTER] to select "Picture Adjustment") (→ below)	
<b>Picture Adjustment</b>	
<b>Picture Mode</b>	
<b>Contrast:</b>	Increases the contrast between light and dark parts of the picture (-7 to +7).
<b>Brightness:</b>	Brightens the picture (0 to +15).
<b>Sharpness:</b>	Adjusts the sharpness of the edges of the horizontal lines. (-7 to +7)
<b>Colour:</b>	Adjust the shade of the picture's colour (-7 to +7).
<b>Gamma:</b>	Adjusts the brightness of dark parts (0 to +5).
<b>Depth Enhancer:</b>	Reduce the rough noise in the background to give a greater feeling of depth (0 to +4).
<b>MPEG DNR:</b>	Smooths block noise and reduces the smudging that appears around contrasting sections of the picture (0 to +3).



<b>Video Output Mode</b>	<p>*480p/576p (progressive) *480i/576i (interlace)</p> <p>When you select "○○○*p" (progressive) and a confirmation screen appears, select "Yes" only if connecting to a progressive output compatible television.</p> <p>*The numbers displayed depend on the geographical location and disc being played. One of the above numbers is displayed.</p>
<b>Transfer Mode</b>	<p>If you have chosen "○○○*p" (progressive) (→ above), select the method of conversion for progressive output to suit the type of material.</p> <ul style="list-style-type: none"> <li>When the tray is opened, the setting will return to Auto or Auto1.</li> </ul> <p>When playing PAL discs, MPEG4 or DivX video contents</p> <p><b>Auto:</b> Automatically detects the film and video content, and appropriately converts it.</p> <p><b>Video:</b> Select when using Auto, and the content is distorted.</p> <p><b>Cinema:</b> Select this if the edges of the film content appear jagged or rough when Auto is selected.</p> <p>However, if the video content is distorted as shown in the illustration to the right, then select Auto.</p>  <p>When playing NTSC discs</p> <p><b>Auto1</b> (normal): Automatically detects the film and video content, and appropriately converts it.</p> <p><b>Auto2:</b> In addition to Auto1, automatically detects film contents with different frame rates and appropriately converts it.</p> <p><b>Video:</b> Select when using Auto1 and Auto2, and the content is distorted.</p>
<b>Source Select</b> <b>DivX</b>	<p>When you select "Auto" the constructing method of the DivX contents is automatically distinguished and output. If the picture is distorted, select "I (Interlace)" or "P (Progressive)" depending on which constructing method was used when the contents were recorded to disc.</p> <p><b>Auto</b> <b>I (Interlace)</b> <b>P (Progressive)</b></p>
<b>■ Audio Menu</b>	
<b>Night Sound Mode</b>	(→ page 10)
<b>H.Bass</b>	(→ page 10)
<b>Advanced Surround</b>	(→ page 10)
<b>Dialogue Enhancer</b>	<p>To make the dialogue in movies easier to hear</p> <p><b>DVD-V</b> (Dolby Digital, DTS, MPEG <b>Except Asia</b>, 3-channel or over, with the dialogue recorded in the center channel)</p> <p><b>DivX</b> (Dolby Digital, 3-channel or over, with the dialogue recorded in the center channel)</p> <p>On ↔ Off</p>

## Multi Re-master (→ page 10)

<b>Sound Enhancement</b>	<p><b>You can enjoy comfortable, analog-like sound.</b></p> <p><b>DVD-VR</b> <b>DVD-V</b> (Discs recorded with 48 kHz only)</p> <p><b>VCD</b> <b>CD</b></p> <p><b>WMA</b> <b>MP3</b> (Disc recording is other than 8 kHz, 16 kHz or 32 kHz)</p> <p>On ↔ Off</p> <ul style="list-style-type: none"> <li>This does not work when Night Sound Mode, H.Bass, Advanced Surround or Multi Re-master (→ page 10) is on.</li> <li>This may not work depending on the disc's recording.</li> <li>This does not work with <b>MP3</b> on DVD-RAM or DVD-R/RW.</li> </ul>
<b>Attenuator</b>	<p>With <b>AUDIO OUT connections</b> (→ page 6)</p> <p>Switch on if sound is distorted.</p> <p>On ↔ Off</p>


## ■ Display Menu

<b>Information</b>	On ↔ Off
<b>Subtitle Position</b>	0 to -60 (in 2 units)
<b>Subtitle Brightness</b>	Auto, 0 to -7
<b>4:3 Aspect</b>	<p>To select how to show images made for 4:3 aspect screens on a 16:9 aspect television</p> <p><b>Normal:</b> Laterally stretches images.</p> <p><b>Auto:</b> The standard setting is "Shrink". However this automatically changes to "Zoom" with a letterbox picture.</p> <p><b>Shrink:</b> Images appear in the center of the screen.</p> <p><b>Zoom:</b> Expands to 4:3 aspect ratio.</p>
<b>Just Fit Zoom</b>	(→ page 11, Zoom)
<b>Manual Zoom</b>	(→ page 11, Zoom)
<b>Bit Rate Display</b>	<i>Motion pictures</i> On ↔ Off
<b>GUI See-through</b>	Off, On, Auto (Switches on automatically when the images appear on the display.)
<b>GUI Brightness</b>	-3 to +3
<b>Quick OSD</b>	(→ page 9)

## ■ Other Menu

<b>Setup</b>	(→ page 18, Changing the player settings)
<b>Play as DVD-VR</b>	Select "Play as Data Disc" to play <b>MP3</b> , <b>JPEG</b> , <b>MPEG4</b> or
<b>Play as HighMAT</b>	<b>DivX</b> on DVD-RAM that contain both <b>DVD-VR</b> and another
or	format (e.g. <b>JPEG</b> ) or to play HighMAT discs without using the
<b>Play as Data Disc</b>	HighMAT function.

# Changing the player settings

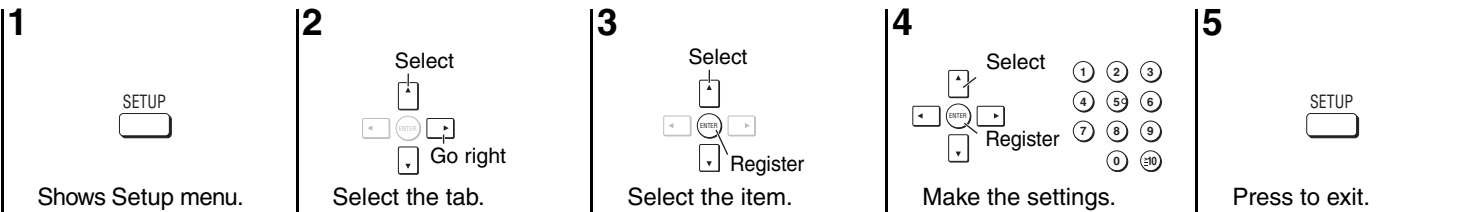

- Referring to pages 18 to 19, change as required.
- The settings remain intact even if you switch the unit to standby.
- Underlined items are the factory preset.

The QUICK SETUP enables successive settings of the items in the shaded area.

## ■ “Disc” tab

<b>Audio</b> Choose the audio language.	<u>English</u> (Language options)* <sup>1</sup> Original* <sup>2</sup> Other***** <sup>3</sup>
<b>Subtitle</b> Choose the subtitle language.	<u>Automatic</u> * <sup>4</sup> English (Language options)* <sup>1</sup> Other***** <sup>3</sup>
<b>Menus</b> Choose the language for disc menus.	<u>English</u> (Language options)* <sup>1</sup> Other***** <sup>3</sup> • Changing the menu language from QUICK SETUP also changes this setting.
<b>Advanced Disc Review</b> Select how to review (→ page 9).	<u>Intro Mode</u> : Reviews each title/program. <u>Interval Mode</u> : Reviews each 10 minutes.
<b>Ratings</b> Set a ratings level to limit DVD-Video play. • Follow the on-screen instructions.	Setting ratings (When level 8 is selected) <b>8 No Limit</b> <b>1 to 7</b> : To prohibit play of DVD-Video with corresponding ratings recorded on them. <b>0 Lock All</b> : To prevent play of discs without ratings levels. When setting a ratings level, a password screen is shown. Follow the on-screen instructions. <b>Do not forget your password.</b> A message screen will be shown if a DVD-Video exceeding the ratings level is inserted in the unit. Follow the on-screen instructions.

## ■ “Video” tab

<b>TV Aspect</b> Choose the setting to suit your television and preference.	<b>4:3 Pan&amp;Scan</b> : Regular aspect television (4:3) The sides of the widescreen picture are cut off so it fills the screen (unless prohibited by the disc). <b>4:3 Letterbox</b> : Regular aspect television (4:3) Widescreen picture is shown in the letterbox style. <b>16:9</b> : Widescreen television (16:9)
<b>TV Type</b> Select to suit the type of television.	<b>Standard (Direct View TV)</b> CRT Projector Projection TV <b>Plasma TV</b>
<b>Time Delay</b> When connected with an AV amplifier and Plasma display, adjust if you notice the audio is out of sync with the video.	<b>0ms</b> <b>20ms</b> <b>40ms</b> <b>60ms</b> <b>80ms</b> <b>100ms</b>
<b>Video Out (AV/Component)*<sup>5</sup></b> Choose the video signal format to be output from the SCART and COMPONENT VIDEO OUT terminals (→ page 6).	<b>Video/YPbPr</b> <b>S-Video/YPbPr</b> <b>RGB/No Output</b>
<b>Still Mode</b> Specify the type of picture shown when paused.	<b>Automatic</b> <b>Field</b> : The picture is not blurred, but picture quality is lower. <b>Frame</b> : Overall quality is high, but the picture may appear blurred.
<b>NTSC Disc Output</b> Choose PAL 60 or NTSC output when playing NTSC discs.	<b>PAL60</b> : NTSC discs can be viewed on PAL television. <b>NTSC</b> : Output signal from NTSC discs remains as NTSC. <b>Asia</b> : “NTSC” is the factory preset.
<b>Picture/Video Output</b> Choose the video signal format to be output for JPEG, MPEG4 and DivX video.	<b>Automatic: (Except Asia)</b> <b>PAL</b> <b>NTSC/PAL60</b> : Output will depend on “NTSC Disc Output” setting (→ above). <b>Asia</b> : “NTSC/PAL60” is the factory preset. • If picture output is not smooth during playback, change the setting.

## ■ “Audio” tab

<b>PCM Digital Output</b> Check the digital input limitations of the equipment you connect using COAXIAL terminal and select the maximum sampling frequency of PCM digital output.	<b>Up to 48 kHz:</b> When connected to equipment compatible with 44.1 or 48 kHz <b>Up to 96 kHz:</b> When connected to equipment compatible with 88.2 or 96 kHz <ul style="list-style-type: none"> <li>• Signals from copy-protected discs are converted to 48 or 44.1 kHz.</li> <li>• Some equipment cannot handle sampling frequencies of 88.2 kHz, even if they can handle 96 kHz. Read your equipment’s operating instructions for details.</li> </ul>
<b>Dolby Digital</b> With COAXIAL connections (→ page 7)	<b>Bitstream</b> <b>PCM</b> Select “ <b>Bitstream</b> ” when the equipment can decode the bitstream (digital form of multi-channel data). Otherwise, select “ <b>PCM</b> ”. (If the bitstream is output to the equipment without a decoder, high levels of noise can be output and may damage your speakers and hearing.)
<b>DTS Digital Surround</b> With COAXIAL connections (→ page 7)	<b>Bitstream</b> <b>PCM</b> Select “ <b>Bitstream</b> ” when the equipment can decode the bitstream (digital form of multi-channel data). Otherwise, select “ <b>PCM</b> ”. (If the bitstream is output to the equipment without a decoder, high levels of noise can be output and may damage your speakers and hearing.)
<b>MPEG</b> <sup>#5 #6</sup> With COAXIAL connections (→ page 7)	<b>PCM</b> <b>Bitstream</b>
<b>Dynamic Range Compression</b>	<b>Off</b> <b>On:</b> Adjusts for clarity even when the volume is low through compressing the range of the lowest sound level and the highest sound level. Convenient for late night viewing. (Only works with Dolby Digital)

## ■ “Display” tab

<b>Menu Language</b>	<sup>#5</sup> <b>English</b>	<b>Français</b>	<b>Deutsch</b>	<b>Italiano</b>	<b>Español</b>
	<b>Polski</b>	<b>Svenska</b>	<b>Nederlands</b>		
	<sup>#6</sup> <b>English</b>	<b>Français</b>	<b>Deutsch</b>	<b>Italiano</b>	<b>Español</b>
	<b>Português</b>	<b>Русский</b>	<b>Nederlands</b>		
	<sup>#7</sup> <b>English</b>	中文			
<b>On-Screen Messages</b>	<b>On</b>	<b>Off</b>			
<b>Background during Play</b> Select background during JPEG, MPEG4 and DivX video playback.	<b>Black</b>	<b>Gray</b>			

## ■ “Others” tab

<b>FL Dimmer</b> Changes the brightness of the unit’s display.	<b>Bright</b> <b>Dim</b> <b>Auto:</b> The display is dimmed, but brightens only when you perform some operations.
<b>Auto Power Off</b>	<b>On:</b> The unit switches to standby mode after about 30 minutes in the stop mode. <b>Off</b>
<b>DivX Registration</b> Displays the unit’s registration code.	You need this registration code to purchase and play DivX Video-on-Demand (VOD) content. (→ page 15, About DivX VOD content)
<b>QUICK SETUP</b>	<b>Yes</b> <b>No</b>
<b>Re-initialise Setting</b> This returns all values in the Setup menu to the default settings.	<b>Yes:</b> The password screen is shown if “Ratings” (→ page 18) is set. Please enter the same password and press [ENTER]. After “INI” on the display disappears, turn the unit off and on again. <b>No</b>

### <sup>#1</sup> Language options

#### **Continental Europe:**

French, German, Italian, Spanish, Polish, Swedish and Dutch

#### **The Middle East, South Africa:**

French, German, Italian, Spanish, Portuguese, Russian and Dutch

#### **Asia:** Chinese

<sup>#2</sup> The original language designated on the disc is selected.

<sup>#3</sup> Input a code number referring to the table (→ page 20).

<sup>#4</sup> If the language selected for “Audio” is not available, subtitles appear in that language (if available on the disc).

#### <sup>#5</sup> **Continental Europe**

#### <sup>#6</sup> **The Middle East, South Africa**

#### <sup>#7</sup> **Asia**

## Glossary

### DivX

DivX is a popular media technology created by DivX, Inc. DivX media files contain highly compressed video with high visual quality that maintains a relatively small file size.

### Film and video

DVD-Videos are recorded using either film or video. This unit can determine which type has been used, then uses the most suitable method of progressive output.

**Film:** Recorded at 25 frames per second (PAL discs) or 24 frames per second (NTSC discs). (NTSC discs recorded at 30 frames per second as well). Generally appropriate for motion picture films.

**Video:** Recorded at 25 frames/50 fields per second (PAL discs) or 30 frames/60 fields per second (NTSC discs). Generally appropriate for TV drama programs or animation.

### MPEG4

A compression system for use on mobile devices or a network, that allows highly efficient recording at a low bit rate.

### Sampling frequency

Sampling is the process of converting the heights of sound wave (analog signal) samples taken at set periods into digits (digital encoding). Sampling frequency is the number of samples taken per second, so larger numbers mean more faithful reproduction of the original sound.

## Language code list

Abkhazian:	6566	Lingala:	7678
Afar:	6565	Lithuanian:	7684
Afrikaans:	6570	Macedonian:	7775
Albanian:	8381	Malagasy:	7771
Ameharic:	6577	Malay:	7783
Arabic:	6582	Malayalam:	7776
Armenian:	7289	Maltese:	7784
Assamese:	6583	Maori:	7773
Aymara:	6589	Marathi:	7782
Azerbaijani:	6590	Moldavian:	7779
Bashkir:	6665	Mongolian:	7778
Basque:	6985	Nauru:	7865
Bengali; Bangla:	6678	Nepali:	7869
Bhutani:	6890	Norwegian:	7879
Bihari:	6672	Oriya:	7879
Breton:	6682	Pashto, Pushto:	8083
Bulgarian:	6671	Persian:	7065
Burmese:	7789	Polish:	8076
Byelorussian:	6669	Portuguese:	8084
Cambodian:	7577	Punjabi:	8065
Catalan:	6765	Quechua:	8185
Chinese:	9072	Rhaeto-Romance:	8277
Corsican:	6779	Romanian:	8279
Croatian:	7282	Russian:	8285
Czech:	6783	Samoan:	8377
Danish:	6865	Sanskrit:	8365
Dutch:	7876	Scots Gaelic:	7168
English:	6978	Serbian:	8382
Esperanto:	6979	Serbo-Croatian:	8372
Estonian:	6984	Shona:	8378
Faroese:	7079	Sindhi:	8368
Fiji:	7074	Singhalese:	8373
Finnish:	7073	Slovak:	8375
French:	7082	Slovenian:	8376
Frisian:	7089	Somali:	8379
Galician:	7176	Spanish:	6983
Georgian:	7565	Sundanese:	8385
German:	6869	Swahili:	8387
Greek:	6976	Swedish:	8386
Greenlandic:	7576	Tagalog:	8476
Guarani:	7178	Tajik:	8471
Gujarati:	7185	Tamil:	8465
Hausa:	7265	Tatar:	8484
Hebrew:	7387	Telugu:	8469
Hindi:	7273	Thai:	8472
Hungarian:	7285	Tibetan:	6679
Icelandic:	7383	Tigrinya:	8473
Indonesian:	7378	Tonga:	8479
Interlingua:	7365	Turkish:	8482
Irish:	7165	Turkmen:	8475
Italian:	7384	Twi:	8487
Japanese:	7465	Ukrainian:	8575
Javanese:	7487	Urdu:	8582
Kannada:	7578	Uzbek:	8590
Kashmiri:	7583	Vietnamese:	8673
Kazakh:	7575	Volapük:	8679
Kirghiz:	7589	Welsh:	6789
Korean:	7579	Wolof:	8779
Kurdish:	7585	Xhosa:	8872
Laotian:	7679	Yiddish:	7473
Latin:	7665	Yoruba:	8979
Latvian, Lettish:	7686	Zulu:	9085

## Safety precautions

### Placement

Set the unit up on an even surface away from direct sunlight, high temperatures, high humidity, and excessive vibration. These conditions can damage the cabinet and other components, thereby shortening the unit's service life. Do not place heavy items on the unit.

### Voltage

Do not use high voltage power sources. This can overload the unit and cause a fire. Do not use a DC power source. Check the source carefully when setting the unit up on a ship or other place where DC is used.

### AC mains lead protection

Ensure the AC mains lead is connected correctly and not damaged. Poor connection and lead damage can cause fire or electric shock. Do not pull, bend, or place heavy items on the lead.

Grasp the plug firmly when unplugging the lead. Pulling the AC mains lead can cause electric shock. Do not handle the plug with wet hands. This can cause electric shock.

### Foreign matter

Do not let metal objects fall inside the unit. This can cause electric shock or malfunction.

Do not let liquids get into the unit. This can cause electric shock or malfunction. If this occurs, immediately disconnect the unit from the power supply and contact your dealer.

Do not spray insecticides onto or into the unit. They contain flammable gases which can ignite if sprayed into the unit.

### Service

Do not attempt to repair this unit by yourself. If sound is interrupted, indicators fail to light, smoke appears, or any other problem that is not covered in these instructions occurs, disconnect the AC mains lead and contact your dealer or an authorized service center. Electric shock or damage to the unit can occur if the unit is repaired, disassembled or reconstructed by unqualified persons.

Extend operating life by disconnecting the unit from the power source if it is not to be used for a long time.

# Specifications

**Signal system:** PAL 625/50, PAL525/60, NTSC  
**Operating temperature range:** +5 to +35 °C  
**Operating humidity range:** 5 to 90 % RH (no condensation)

**Discs played (8 cm or 12 cm):**  
 (1) DVD (DVD-Video, DivX<sup>®</sup>6.7)  
 (2) DVD-RAM (DVD-VR, JPEG<sup>®</sup>4.7, MP3<sup>®</sup>2.7, MPEG4<sup>®</sup>5.7, DivX<sup>®</sup>6.7)  
 (3) DVD-R (DVD-Video, DVD-VR, JPEG<sup>®</sup>4.7, MP3<sup>®</sup>2.7, MPEG4<sup>®</sup>5.7, DivX<sup>®</sup>6.7)  
 (4) DVD-R DL (DVD-Video, DVD-VR)  
 (5) DVD-RW (DVD-Video, DVD-VR, JPEG<sup>®</sup>4.7, MP3<sup>®</sup>2.7, MPEG4<sup>®</sup>5.7, DivX<sup>®</sup>6.7)  
 (6) +R/+RW (Video)  
 (7) +R DL (Video)  
 (8) CD, CD-R/RW [CD-DA, Video-CD, SVCD<sup>®</sup>1, MP3<sup>®</sup>2.7, WMA<sup>®</sup>3.7, JPEG<sup>®</sup>4.7, MPEG4<sup>®</sup>5.7, DivX<sup>®</sup>6.7, HighMAT Level 2 (Audio and Image)]

**Video output:**  
 Output level: 1 Vp-p (75 Ω)  
 Output terminal:  
**Continental Europe** Pin jack (1 system)/AV  
**Others** Pin jack (1 system)

**S-video output:**  
 Y output level: 1 Vp-p (75 Ω)  
 C output level: NTSC; 0.286 Vp-p (75 Ω)  
 PAL; 0.300 Vp-p (75 Ω)  
 Output terminal:  
**Continental Europe** AV  
**Others** S terminal (1 system)

**Component video output:**  
 (NTSC: 480p/480i, PAL: 576p/576i)  
 Y output level: 1 Vp-p (75 Ω)  
 P<sub>B</sub> output level: 0.7 Vp-p (75 Ω)  
 P<sub>R</sub> output level: 0.7 Vp-p (75 Ω)  
 Output terminal: Pin jack (Y: green, P<sub>B</sub>: blue, P<sub>R</sub>: red)(1 system)

**RGB video output:** **Continental Europe**  
 R output level: 0.7 Vp-p (75 Ω)  
 G output level: 0.7 Vp-p (75 Ω)  
 B output level: 0.7 Vp-p (75 Ω)  
 Output terminal: AV

**Audio output:**  
 Output level: 2 Vrms (1 kHz, 0 dB)  
 Output terminal:  
**Continental Europe** Pin jack/AV  
**Others** Pin jack  
 Number of terminals: 2 channel:1 system

**Audio performance:**  
 (1) Frequency response:  
 ●DVD (linear audio): 4 Hz to 22 kHz (48 kHz sampling)  
 4 Hz to 44 kHz (96 kHz sampling)  
 4 Hz to 20 kHz  
 ●CD Audio: 115 dB  
 (2) S/N ratio:  
 ●CD Audio: 102 dB  
 (3) Dynamic range:  
 ●DVD (linear audio): 98 dB  
 ●CD Audio: 0.003 %  
 (4) Total harmonic distortion:  
 ●CD Audio: 0.003 %  
**Digital audio output:**  
 Coaxial digital output: Pin jack  
**Pickup:**  
 Wave length: 662 nm/785 nm  
 Laser power: CLASS 2/CLASS 3A

**NORSK**  
**Pickup:** 662 nm/785 nm  
 Bølgelengde: Ingen farlig stråling sendes ut  
 Laserstyrke:

**Power supply:**  
**Continental Europe** AC 230 V, 50 Hz  
**Others** AC 110 to 240 V, 50/60 Hz  
**Power consumption:** 11 W  
**Power consumption in standby mode:** **approx. 1 W**  
**Dimensions (WxDXH):** 430 mm ×251 mm×43 mm  
**Mass:** 2.2 kg

## Note

Specifications are subject to change without notice. Mass and dimensions are approximate.

\*1 Conforming to IEC62107

\*2MPEG-1 Layer 3, MPEG-2 Layer 3

\*3Windows Media Audio Ver.9.0 L3

Not compatible with Multiple Bit Rate (MBR)

\*4Exif Ver 2.1 JPEG Baseline files

Picture resolution: between 160×120 and 6144×4096 pixels (Sub sampling is 4:0:0, 4:2:0, 4:2:2 or 4:4:4)

Extremely long and slender pictures may not be displayed.

\*5MPEG4 data recorded with the Panasonic SD multi cameras or DVD video recorders Conforming to SD VIDEO specifications (ASF standard)/MPEG4 (Simple Profile) video system/G.726 audio system

\*6Plays all versions of DivX<sup>®</sup> video (including DivX<sup>®</sup>6) with standard playback of DivX<sup>®</sup> media files. Certified to the DivX Home Theater Profile.  
 GMC (Global Motion Compensation) is not supported.

\*7The total combined maximum number of recognizable audio, picture and video contents and groups: 4000 audio, picture and video contents and 400 groups.

# Troubleshooting guide

Before requesting service, make the following checks. If you are in doubt about some of the check points, or if the solutions indicated in the chart do not solve the problem, consult your dealer for instructions. (Reference pages are shown in parentheses.)

## Power

<b>No power.</b>	<ul style="list-style-type: none"> <li>Insert the AC mains lead securely into the household mains socket. (7)</li> </ul>
<b>The unit is automatically switched to the standby mode.</b>	<ul style="list-style-type: none"> <li>When "Auto Power Off" is set to "On", the unit automatically switches to standby after approximately 30 minutes in the stop mode. (19)</li> </ul>

## No operation

<b>No response when any buttons pressed.</b>	<ul style="list-style-type: none"> <li>This unit cannot play discs other than the ones listed in these operating instructions. (4)</li> <li>The unit may not be operating properly due to lightning, static electricity or some other external factor. Turn the unit off and then back to ON. Alternatively, turn the unit off, disconnect the AC mains lead, and then reconnect it.</li> <li>Condensation has formed: Wait 1 to 2 hours for it to evaporate.</li> </ul>
<b>No response when remote control buttons pressed.</b>	<ul style="list-style-type: none"> <li>Check that the batteries are installed correctly. (7)</li> <li>The batteries are depleted: Replace them with new ones. (7)</li> <li>Point the remote control at the remote control sensor and operate. (8)</li> </ul>
<b>No picture or sound.</b>	<ul style="list-style-type: none"> <li>Check the video or audio connection. (6, 7)</li> <li>Check the power or input setting of the connected equipment.</li> <li>Check that the disc has something recorded on it.</li> </ul>
<b>You have forgotten your ratings password.</b> Reset all the settings to Factory Preset.	<ul style="list-style-type: none"> <li>While stopped, press and hold [QUICK OSD] and [III] on the unit and then also press and hold [▲OPEN/CLOSE] on the unit until "Initialised" disappears from the television. Turn the unit off and on again. All settings will return to the default values.</li> </ul>

## Specific operation impossible or incorrect

<b>It takes time before play starts.</b>	<ul style="list-style-type: none"> <li>Play may take time to begin when an MP3 track has still picture data. Even after the track starts, the correct play time will not be displayed; however, this is normal.</li> <li>This is normal on DivX video.</li> </ul>
<b>The program and random play functions do not work.</b>	<ul style="list-style-type: none"> <li>These functions do not work with some DVD-Videos.</li> </ul>
<b>Menu doesn't appear.</b> [VCD] with playback control	<ul style="list-style-type: none"> <li>Press [■] twice and then press [▶] (PLAY).</li> </ul>

<b>Play doesn't start.</b>	<ul style="list-style-type: none"> <li>This unit may not play WMA and MPEG4 that contains still picture data.</li> <li>If playing DivX VOD content, refer to the homepage where you purchased the DivX VOD content. (Example: www.divx.com/vod)</li> <li>If a disc contains CD-DA and other formats, proper playback may not be possible.</li> </ul>
<b>Subtitle position is wrong.</b>	<ul style="list-style-type: none"> <li>Adjust the position. ("Subtitle Position" in Display Menu) (17)</li> </ul>
<b>No subtitles.</b>	<ul style="list-style-type: none"> <li>Display the subtitles. (11)</li> </ul>
<b>In A-B Repeat, point B is automatically set.</b>	<ul style="list-style-type: none"> <li>The end of an item becomes point B when it is reached.</li> </ul>
<b>Repeat play is automatically canceled.</b>	<ul style="list-style-type: none"> <li>A-B Repeat is canceled when you press [QUICK REPLAY].</li> <li>Repeat play may be canceled when you press [MANUAL SKIP] or [ADVANCED DISC REVIEW].</li> </ul>

## Picture incorrect

<b>Picture distorted.</b>	<ul style="list-style-type: none"> <li>Ensure that the unit is not connected through a video cassette recorder. (6)</li> <li>Make sure that progressive output has not been selected when the connected television is not progressive compatible. Press and hold [CANCEL] until the picture displays correctly. The settings will return to "○○○i" (interlace).</li> <li><b>DivX</b> Change "Source Select" in Picture Menu. (17)</li> </ul>
<b>Picture size doesn't fit the screen.</b>	<ul style="list-style-type: none"> <li>Change "TV Aspect" in "Video" tab. (18)</li> <li>Use the television to change the aspect. If your television does not have that function, change "4:3 Aspect" in Display Menu. (17)</li> <li>Change the Zoom setting. (11)</li> </ul>
<b>Picture stops.</b>	<ul style="list-style-type: none"> <li>Picture may stop if the DivX files are greater than 2GB.</li> </ul>
<b>When playing PAL disc, picture distorted.</b>	<ul style="list-style-type: none"> <li>Set "Transfer Mode" in Picture Menu to "Auto". (17)</li> </ul>
<b>The television may display incorrectly or colours appear faded.</b>	<ul style="list-style-type: none"> <li>The unit and television are using different video systems.                             <ul style="list-style-type: none"> <li><b>Asia</b> Use a multi-system or NTSC television.</li> <li><b>Others</b> Use a multi-system or PAL television.</li> </ul> </li> <li>The system used on the disc doesn't match your television.                             <ul style="list-style-type: none"> <li>-PAL discs cannot be correctly viewed on an NTSC television.</li> <li>-This unit can convert NTSC signals to PAL 60 for viewing on a PAL television ("NTSC Disc Output" in "Video" tab). (18)</li> </ul> </li> </ul>
<b>Menu not displayed correctly.</b>	<ul style="list-style-type: none"> <li>Restore the zoom ratio to <math>\times 1.00</math>. (11)</li> <li>Set "Subtitle Position" in Display Menu to "0". (17)</li> <li>Set "4:3 Aspect" in Display Menu to "Normal". (17)</li> </ul>

<b>Auto zoom function does not work well.</b>	<ul style="list-style-type: none"> <li>• Turn off TV's zoom function.</li> <li>• Use the other preset aspect ratios or manual adjustment. <b>(11)</b></li> <li>• Zoom function may not work well, especially in dark scenes and may not work depending on the type of disc.</li> </ul>
---	--

### Progressive video

<b>There is ghosting when progressive output is on.</b>	<ul style="list-style-type: none"> <li>• This problem is caused by the editing method or material used on DVD-Video, but should be corrected if you use interlace output. Change "Video Output Mode" in Picture Menu to "OOO" (interlace). <b>(17)</b></li> </ul>
<b>Pictures not in progressive output.</b>	<ul style="list-style-type: none"> <li>• If the unit is connected to the television through VIDEO OUT or S VIDEO OUT, output will be interlace.</li> </ul>

### Sound incorrect

<b>Sound distorted.</b>	<ul style="list-style-type: none"> <li>• Select "Off" in "Advanced Surround". <b>(10)</b></li> <li>• Set "Attenuator" in Audio Menu to "On" if it causes distortion with AUDIO OUT connections. <b>(17)</b></li> <li>• Noise may occur when playing WMA files.</li> </ul>
<b>Piercing noise comes from the speakers.</b>	<ul style="list-style-type: none"> <li>• If you have connected a digital amplifier which does not include decoder, be sure to select "PCM" in "Dolby Digital", "DTS Digital Surround" or "MPEG*1" in "Audio" tab. <b>(19)</b></li> </ul>
<b>Effects do not work.</b>	<ul style="list-style-type: none"> <li>• None of the audio effects work when the unit is outputting bitstream signals from the COAXIAL terminal. <b>(7)</b></li> <li>• Some audio effects do not work or have less effect with some discs.</li> <li>• Night Sound Mode, H.Bass, Advanced Surround, Multi Remaster and Sound Enhancement do not work if you have changed the play speed.</li> </ul>
<b>No sound</b>	<ul style="list-style-type: none"> <li>• There may be a pause in sound when you change the play speed.</li> <li>• <b>DivX</b> Audio may not be output due to how files were created. <b>(5)</b></li> </ul>

### Recording

<b>Cannot record to digital recording equipment. (Incorrect sound recorded.)</b>	<ul style="list-style-type: none"> <li>• You cannot record WMA/MP3.</li> <li>• You cannot record DVDs that have protection preventing digital recording.</li> <li>• You cannot record DVDs if the recording equipment cannot handle signals with a sampling frequency of 48 kHz.</li> <li>• Make the following settings: <ul style="list-style-type: none"> <li>– Advanced Surround: Off <b>(10)</b></li> <li>– PCM Digital Output: Up to 48 kHz <b>(19)</b></li> <li>– Dolby Digital/DTS Digital Surround/MPEG*1: PCM <b>(19)</b></li> </ul> </li> </ul>
--	---

### Unit displays

<b>"noPLAY"</b>	<ul style="list-style-type: none"> <li>• You inserted a disc the unit cannot play; insert one it can. <b>(4)</b></li> <li>• You inserted a blank disc.</li> <li>• You inserted a disc that has not been finalized. <b>(4)</b></li> </ul>
<b>"U11"</b>	<ul style="list-style-type: none"> <li>• The disc may be dirty. <b>(right)</b></li> </ul>
<b>"H□□"</b> (□□ stands for a number.)	<ul style="list-style-type: none"> <li>• Trouble may have occurred. The number following "H" depends on the status of the unit. Turn the unit off and then back to ON. Alternatively, turn the unit off, disconnect the AC mains lead, and then reconnect it.</li> <li>• If the service numbers fail to clear, note the service number and contact a qualified service person.</li> </ul>

<b>"nodISC"</b>	<ul style="list-style-type: none"> <li>• You haven't inserted a disc: Insert one.</li> <li>• You haven't inserted the disc correctly: Insert it correctly. <b>(8)</b></li> </ul>
-----------------	--

### Television displays

<b>"⊘"</b>	<ul style="list-style-type: none"> <li>• The operation is prohibited by the unit or disc.</li> </ul>
<b>"Cannot play group xx, content xx"</b>	<ul style="list-style-type: none"> <li>• You are trying to play incompatible group or content. <b>(5)</b></li> </ul>
<b>"Cannot display group xx, content xx"</b>	
<b>"Group xx, content xx is protected"</b>	<ul style="list-style-type: none"> <li>• You are trying to play protected group or content. You cannot play it.</li> </ul>
<b>"Cannot play audio"</b>	<ul style="list-style-type: none"> <li>• Audio has not been recorded, or recorded in a format this unit cannot playback. Video playback only is possible. <b>(4)</b></li> </ul>
<b>"No audio"</b>	
<b>"Check the disc"</b>	<ul style="list-style-type: none"> <li>• This disc may be dirty. <b>(below)</b></li> </ul>
<b>"This disc may not be played in your region"</b>	<ul style="list-style-type: none"> <li>• You can only play DVD-Video if their region number is the same or includes the same region number as the unit or if the DVD-Video is marked "ALL". Confirm the region number for the unit on the rear panel. <b>(Cover)</b></li> </ul>
<b>No on-screen display.</b>	<ul style="list-style-type: none"> <li>• Select "On" in "On-Screen Messages" in "Display" tab. <b>(19)</b></li> </ul>
<b>"Authorization Error"</b>	<ul style="list-style-type: none"> <li>• You are trying to play the DivX VOD content that was purchased with a different registration code. You cannot play the content on this unit. <b>(15)</b></li> </ul>
<b>"Rented Movie Expired"*2</b>	<ul style="list-style-type: none"> <li>• The DivX VOD content has zero remaining plays. You cannot play it. <b>(15)</b></li> </ul>
<b>"Rental Expired"*3</b>	

\*1 MPEG: **Except Asia**

\*2 **Except Asia**

\*3 **Asia**

## Maintenance

### ■ Clean this unit with a soft, dry cloth

- Never use alcohol, paint thinner or benzine to clean this unit.
- Before using chemically treated cloth, read the instructions that came with the cloth carefully.
- Cleaning of the lens is generally not necessary although this depends on the operating environment.
- Do not use commercially available lens cleaners as they may cause malfunction.

### ■ Clean discs

Wipe with a damp cloth and then wipe dry.



# Index

<b>A</b> -B Repeat . . . . .	16	<b>R</b> andom play . . . . .	12
Advanced Disc Review . . . . .	9	Re-initialise Setting . . . . .	19
Advanced Surround . . . . .	10	Repeat . . . . .	12
Angle select . . . . .	11	Resume play . . . . .	8
AV Enhancer . . . . .	10	Rotate Picture . . . . .	11
<b>C</b> D text playback . . . . .	13	<b>S</b> etup . . . . .	18
<b>D</b> ialogue Enhancer . . . . .	17	Sound Enhancement . . . . .	17
DIRECT NAVIGATOR . . . . .	13	Soundtrack . . . . .	11
DivX . . . . .	15	Subtitle . . . . .	11
Dolby Digital . . . . .	11, 19	<b>T</b> ime Slip for play only . . . . .	16
DTS . . . . .	11, 19	Top Menu . . . . .	9, 14
<b>E</b> nter number . . . . .	9	<b>Z</b> oom . . . . .	11
<b>F</b> inalize . . . . .	4		
Functions . . . . .	16		
<b>H</b> .Bass . . . . .	10		
HighMAT . . . . .	13		
<b>J</b> ust Fit Zoom . . . . .	11		
<b>M</b> anual skip . . . . .	12		
Manual Zoom . . . . .	11		
Menu . . . . .	9, 14		
MPEG . . . . .	11, 19		
Multi Re-master . . . . .	10		
<b>N</b> avigation Menu . . . . .	14		
Night Sound Mode . . . . .	10		
<b>O</b> n-Screen Menus . . . . .	16		
<b>P</b> icture Mode . . . . .	16		
Playlist . . . . .	13		
Play speed . . . . .	12		
Playback Menu . . . . .	14		
Program play . . . . .	12		
Programs . . . . .	13		
<b>Q</b> uick OSD . . . . .	9		
Quick Replay . . . . .	12		
QUICK SETUP . . . . .	7		

<b>CAUTION</b>	- LASER RADIATION WHEN OPEN. DO NOT STARE INTO BEAM. FDA 21 CFR / Class II
<b>CAUTION</b>	- VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN. AVOID EXPOSURE TO BEAM. IEC60825-1 / Class 3b
<b>ATTENTION</b>	- RAYONNEMENT LASER VISIBLE ET INVISIBLE EN CAS D'OUVERTURE. EXPOSITION DANGEREUSE AU FAISCEAU.
<b>ADVARSEL</b>	- SYNLIG OG USYNLIG LASERSTRÅLING VED ÅBNING. UNDGÅ UDSÆTTELSE FOR STRÅLING.
<b>VARO!</b>	- AVATTAESSA OLET ALTIINNA NÄKYVÄÄ JA NÄKYMÄTÖN LASERSÄTEILVILLE. ÄLÄ KATSO SÄTEESEEN.
<b>VARNING</b>	- SYNLIG OCH OSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD. BETRAKTA EJ STRÅLEN.
<b>ADVARSEL</b>	- SYNLIG OG USYNLIG LASERSTRÅLING NÄR DEKSEL ÅPNES. UNDGÅ EKSPONERING FOR STRÅLEN.
<b>VORSICHT</b>	- SICHTBARE UND UNSICHTBARE LASERSTRAHLUNG, WENN ABDECKUNG GEÖFFNET. NICHT DEM STRAHL AUSSETZEN.
<b>注意</b>	- 打开时有可见及不可见激光辐射。避免激光束照射。
<b>注意</b>	- ここを開くと可視及び不可視レーザー光が出ます。 ビームを見たり、触れないでください。 RQLCA0141

(Inside of product)  
(Produktets innsida)  
(Tuotteen sisällä)



**LUOKAN 1 LASERLAITE**  
**KLASS 1 LASER APPARAT**



(Back of product)

The illustration shows the models for Continental Europe.

Matsushita Electric Industrial Co., Ltd.

Web Site: <http://www.panasonic.co.jp/global/>

(En)

RQT8509-1B

F0106YY1016



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>