




# myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for PANASONIC DVD-S511. You'll find the answers to all your questions on the PANASONIC DVD-S511 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual PANASONIC DVD-S511  
User guide PANASONIC DVD-S511  
Operating instructions PANASONIC DVD-S511  
Instructions for use PANASONIC DVD-S511  
Instruction manual PANASONIC DVD-S511

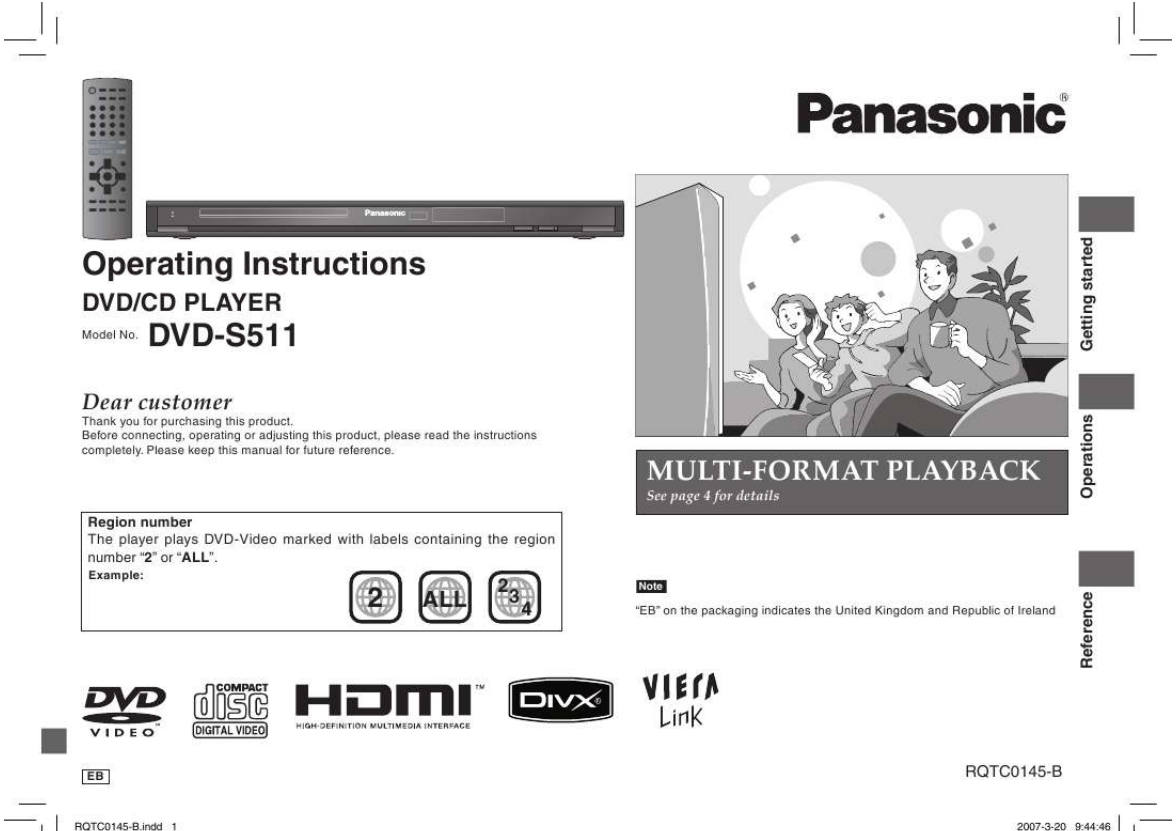


**Panasonic®**

**Operating Instructions**  
**DVD/CD PLAYER**  
Model No. **DVD-S511**

*Dear customer*  
Thank you for purchasing this product. Before connecting, operating or adjusting this product, please read the instructions completely. Please keep this manual for future reference.

**Region number**  
The player plays DVD-Video marked with labels containing the region number "2" or "ALL".  
Example:



**Multi-Format Playback**  
See page 4 for details

**Note**  
"EB" on the packaging indicates the United Kingdom and Republic of Ireland

**Logos:** DVD VIDEO, COMPACT disc DIGITAL VIDEO, HDMI HIGH-DEFINITION MULTIMEDIA INTERFACE, DIVX, VIERA Link

**EB**

RQTC0145-B

RQTC0145-B.indd 1

2007-3-20 9:44:46

Getting started  
Operations  
Reference



[Your user manual](#)  
[PANASONIC DVD-S511](#)

**Manual abstract:**

*Before use Remove the connector cover. How to replace the fuse The location of the fuse differ according to the type of AC mains plug (figures A and B). Confirm the AC mains plug fitted and follow the instructions below. Illustrations may differ from actual AC mains plug. 1. Open the fuse cover with a screwdriver. Placement Set the unit up on an even surface away from direct sunlight, high temperatures, high humidity, and excessive vibration. These conditions can damage the cabinet and other components, thereby shortening the unit's service life. Do not place heavy items on the unit. Voltage Caution for AC Mains Lead/Safety precaution RQTC0145 Do not use high voltage power sources.*

*This can overload the unit and cause a fire. Do not use a DC power source. Check the source carefully when setting the unit up on a ship or other place where DC is used. AC mains lead protection Ensure the AC mains lead is connected correctly and not damaged. Poor connection and lead damage can cause fire or electric shock.*

*Do not pull, bend, or place heavy items on the lead. Grasp the plug firmly when unplugging the lead. Pulling the AC mains lead can cause electric shock. Do not handle the plug with wet hands. This can cause electric shock.*

**CAUTION! IF THE FITTED MOULDED PLUG IS UNSUITABLE FOR THE SOCKET OUTLET IN YOUR HOME THEN THE FUSE SHOULD BE REMOVED AND THE PLUG CUT OFF AND DISPOSED OF SAFELY. THERE IS A DANGER OF SEVERE ELECTRICAL SHOCK IF THE CUT OFF PLUG IS INSERTED INTO ANY 13-AMPERE SOCKET.** *If a new plug is to be fitted please observe the wiring code as stated below. If in any doubt please consult a qualified electrician. Foreign matter Fuse cover Do not let metal objects fall inside the unit. This can cause electric shock or malfunction. Do not let liquids get into the unit. This can cause electric shock or malfunction. If this occurs, immediately disconnect the unit from the power supply and contact your dealer. Do not spray insecticides onto or into the unit.*

*They contain flammable gases which can ignite if sprayed into the unit. IMPORTANT The wires in this mains lead are coloured in accordance with the following code: Blue: Neutral, Brown: Live. As these colours may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: The wire which is coloured Blue must be connected to the terminal which is marked with the letter N or coloured Black or Blue. The wire which is coloured Brown must be connected to the terminal which is marked with the letter L or coloured Brown or Red. 2. Replace the fuse and close or attach the fuse cover. Fuse (5 ampere) Fuse (5 ampere) Service Do not attempt to repair this unit by yourself. If sound is interrupted, indicators fail to light, smoke appears, or any other problem that is not covered in these instructions occurs, disconnect the AC mains lead and contact your dealer or an authorized service centre. Electric shock or damage to the unit can occur if the unit is repaired, disassembled or reconstructed by unqualified persons. Extend operating life by disconnecting the unit from the power source if it is not to be used for a long time.*

*3 RQTC0145-B.indd 3 2007-3-19 16:05:28 Discs that can be played Commercial discs Disc Logo DVD-Video Indicated in these instructions by DVD-V Recorded discs (: Available, - : Not available) Remarks Disc Recorded on a DVD video recorder, etc. DVD-V 2 Recorded on a personal computer, etc. WMA MP3 JPEG MPEG4 DivX 4 Finalizing5 High quality movie and music discs Logo DVD-R/RW Discs that can be played Video CD VCD Including SVCD (Conforming to IEC62107) DVD-R DL - Necessary CD CD Music discs Discs that cannot be played Blu-ray, HD DVD, DVD-Audio, Version 1.0 of DVD-RW, DVD-RAM, DVDROM, CD-ROM, CDV, CD-G, SACD, Photo CD and "Chaoji VCD" available on the market including CVD, DVCD and SVCD that do not conform to IEC62107.*



[Your user manual](#)  
[PANASONIC DVD-S511](#)

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>