

# Panasonic®

## DVD/VCR DECK Operating Instructions Model No. AG-VP310

**VHS**

Professional / Industrial Video

Initial Setup  
(Connection)

Basic  
Operation

VCR  
Operation

DVD  
Operation

For Your  
Information

Connections and Initial Setup Procedures are on pages 12 to 17.



### MULTI FORMAT PLAYBACK



\*Ability to play back may depend on recording conditions.



As an **ENERGY STAR®** Partner, Matsushita Electric Corporation of America has determined that this product or product model meets the **ENERGY STAR®** guidelines for energy efficiency.

Please read these instructions carefully before attempting to connect, operate or adjust this product. Please save this manual.



L QT0844 A



# Important Safeguards and Precautions

## ⚠ WARNING

**TO REDUCE THE RISK OF ELECTRIC SHOCK, FIRE, INJURY TO PERSONS OR DAMAGE TO THIS PRODUCT, READ AND RETAIN ALL SAFETY AND OPERATING INSTRUCTIONS. HEED ALL WARNINGS IN THE MANUAL AND ON THE PRODUCT.**

### INSTALLATION

#### 1 POWER SOURCE CAUTION

Operate only from a power source indicated on the unit or in this manual. If necessary, have your Electric Utility service Company or Video Products Dealer verify the power source in your home.

#### 2 POLARIZED OR GROUNDING PLUG

As a safety feature, this product comes with either a polarized power cord plug (one blade is wider than the other), or a three-wire grounding type plug.

#### HAZARDOUS PLUG CAUTION:

This plug will only fit into an outlet one way. If you cannot fully insert the plug, try reversing it. If it still will not fit, have an electrician install the proper wall outlet. Do not defeat the safety feature by tampering with the plug.

#### GROUNDING PLUG CAUTION:

This plug will only fit into a three-hole grounding outlet. If necessary, have an electrician install the proper outlet. Do not defeat the safety feature by tampering with the plug.

#### 3 POWER CORD

Make sure power cords are routed so that they are not likely to have anything rest on them, roll over them, or be in the way of walking traffic. If an extension cord is used, make sure it also has either a polarized or grounded plug and that the cords can be securely connected. Frayed cords, damaged plugs, and damaged or cracked wire insulation are hazardous and should be replaced by a qualified service technician. Overloaded outlets and extension cords are fire hazards and should be avoided.

#### 4 DO NOT BLOCK VENTILATION HOLES

Ventilation openings in the cabinet release heat generated during operation. If they are blocked, heat build-up inside the unit can cause failures that may result in a fire hazard or heat damage to cassettes or discs.

For protection, follow these rules:

- Never cover ventilation slots or the unit while in use, or operate the unit when placed on a bed, sofa, rug, or other soft surface.
- Avoid built-in installation, such as a book case or rack, unless proper ventilation is provided.

#### 5 PLACEMENT: AVOID EXTREMELY HOT LOCATIONS OR SUDDEN TEMPERATURE CHANGES

Do not place the unit over or near heater or radiator, in direct sunlight, inside closed vehicles, in high temperature [over 104°F (40°C)], or in over 75% humidity. If the unit is suddenly moved from a cold place to a warm one, moisture may condense in the unit and on the tape causing damage. Never subject the unit to vibration, impact, or place it so that the surface is tilted as internal parts may be seriously damaged.

#### 6 TO AVOID PERSONAL INJURY

- Do not place unsecured equipment on a sloping surface.
- Do not place this unit on any support that is not firm, level, and adequately strong. The unit could fall causing serious injury to a child or adult and damage to the unit.
- An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
- Carefully follow all operating instructions and use the manufacturer's recommended accessories when operating this unit or connecting it to any other equipment.




### OUTDOOR ANTENNA INSTALLATION

#### 1 SAFE ANTENNA AND CABLE CONNECTION

If an outside antenna or cable system is connected to the equipment, be sure the antenna or cable system is grounded so as to provide some protection against built up static charges and voltage surges.

Section 810 of the National Electrical Code, AN I/NFPA 70 (in Canada, part 1 of the Canadian Electrical Code) provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes and requirements for the grounding electrode.

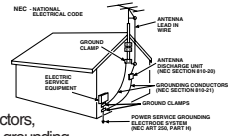

#### 2 KEEP ANTENNA CLEAR OF HIGH VOLTAGE POWER LINES OR CIRCUITS

An outside antenna system should be located well away from power lines, electric light or power circuits and where it will never come into contact with these power sources if it should happen to fall. When installing an outside antenna, extreme care should be taken to avoid touching power lines, circuits or other power sources as this could be fatal. Because of the hazards involved, antenna installation should be left to a professional.

### USING THE UNIT

If the unit has been in storage or moved to a new location, refer first to the INSTALLATION section of these safeguards.

#### 1 KEEP THE UNIT AWAY FROM WATER OR MOISTURE OF ANY KIND.

**2 IF EQUIPMENT IS EXPOSED TO RAIN, MOISTURE, OR STRONG IMPACT,** unplug the unit and have it inspected by a qualified service technician before use.

#### 3 DURING AN ELECTRICAL STORM

During a lightning storm, whether indoors or outdoors, or before leaving the unit unused for extended periods of time, disconnect all equipment from the power source as well as the antenna and cable system.

#### 4 WHEN THE UNIT IS PLUGGED IN

- Never expose the unit to rain or water. DO NOT OPERATE if liquid has been spilled into the unit. Immediately unplug the unit, and have it inspected by a service technician. Fire and shock hazards can result from electrical shorts caused by liquid contact inside.
- Never drop or push any object through openings in the unit. Some internal parts carry hazardous voltages and contact can cause electric shock or fire hazard. Do not put any foreign object on the disc tray.
- Avoid placing the unit directly above or below your TV set as this may cause electrical interference. Keep all magnets away from electronic equipment.

#### 5 USING ACCESSORIES

Use only accessories recommended by the manufacturer to avoid risk of fire, shock, or other hazards.

#### 6 CLEANING THE UNIT

Unplug the unit. Then, use a clean, dry, chemically untreated cloth to gently remove dust or debris. DO NOT USE cleaning fluids, aerosols, or forced air that could over-spray, or seep into the unit and cause electrical shock. Any substance such as wax, adhesive tape, etc. may mar the cabinet surface. Exposure to greasy, humid, or dusty areas may adversely affect internal parts.

### SERVICE

#### 1 DO NOT SERVICE THIS PRODUCT YOURSELF

If, after carefully following the detailed operating instructions, this product does not operate properly, do not attempt to open or remove covers, or make any adjustments not described in the manual. Unplug the unit and contact a qualified service technician.


#### 2 IF REPLACEMENT PARTS ARE REQUIRED

Make sure the service technician uses only parts specified by the manufacturer, or those having the same safety characteristics as the original parts. The use of unauthorized substitutes may result in fire, electric shock, or other hazards.

#### 3 HAVE THE SERVICE TECHNICIAN PERFORM A SAFETY CHECK

After any service or repairs to the unit, request the service technician to conduct a thorough safety check as described in the manufacturer's service literature to ensure that the unit is in safe operating condition.

# Safety Precautions/Mesures de sécurité

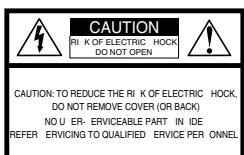

This symbol warns the user that uninsulated voltage within the unit may have sufficient magnitude to cause electric shock. Therefore, it is dangerous to make any kind of contact with any inside part of this unit.

This symbol alerts the user that important literature concerning the operation and maintenance of this unit has been included. Therefore, it should be read carefully in order to avoid any problems.

## CAUTION:

UNIT IS A CLASS I LASER PRODUCT. HOWEVER THE UNIT USES A VISIBLE LASER BEAM WHICH COULD CAUSE HAZARDOUS RADIATION EXPOSURE IF DIRECTED. BE SURE TO OPERATE THE UNIT CORRECTLY AS INSTRUCTED.

WHEN THE UNIT IS PLUGGED TO THE WALL OUTLET, DO NOT PLACE YOUR EYE CLOSE TO THE OPENING OF THE DISC TRAY AND OTHER OPENING TO LOOK INTO THE INSIDE OF THE UNIT.

USE OF CONTROL OR ADJUSTMENT OR PERFORMANCE OF PROCEDURE OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

DO NOT OPEN COVER AND DO NOT ATTEMPT TO REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

## CAUTION:

LASER RADIATION WHEN OPEN DO NOT STARE INTO BEAM.

## ATTENTION:

RAYONNEMENT LASER EN CAS D'OUVERTURE. NE PAS REGARDER DANS LE FAISCEAU.

(Inside of product)

## FCC NOTE:

This equipment has been tested and found to comply with part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when operated in a residential environment. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, use the equipment in another location and/or utilize an electrical outlet different from that used by the receiver. If necessary, consult the dealer or an experienced radio/TV technician for help. The user may find the booklet, "Something About Interference" available from FCC local regional offices helpful.

## FCC Caution:

To assure continued compliance, (example- use only shielded interface cables when connecting to other devices.) Any changes or modifications not expressly approved by the party responsible for this equipment may void the warranty. If this is helpful.

## Region Management Information:

This DECK is designed and manufactured to respond to the Region Management Information that is recorded on a DVD disc. If the Region number described on the DVD disc does not correspond to the Region number of this DECK, this DECK cannot play this disc.

- The Region number for this DECK is "1".
- The Player will play DVD-Video marked with labels containing "1" or "ALL".

### Example:



# Before Using

 
## Congratulations

on your purchase of one of the most sophisticated and reliable products on the market today. Used properly, it will bring you years of enjoyment. Please fill in the information below. The serial number is on the tag located on the back of your DECK.

- Date of Purchase \_\_\_\_\_
- Dealer Purchased From \_\_\_\_\_
- Dealer Address \_\_\_\_\_
- Dealer Phone No. \_\_\_\_\_
- Model No. **AG-VP310** \_\_\_\_\_
- Serial No. \_\_\_\_\_

## Accessories

- Remote Control EUR724KD0
- Batteries 2 "AA"

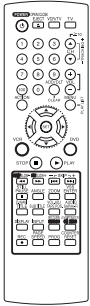

- RF Coaxial Cable L JA0418



## Loading the Batteries

- 1) Open cover.
- 2) Insert batteries as marked.
- 3) Close cover.

- Battery replacement caution**
  - Do not mix old and new batteries.
  - Do not mix alkaline with manganese batteries.

## Record/ Playback Time

Only use tapes with the **VHS** mark in this DECK.

Tape Speed Setting	Type of Video Cassette		
	T120	T160	T180
P (Standard Play)	2 Hours	2 Hours 40 Minutes	3 Hours
LP (Super Long Play)	6 Hours	8 Hours	9 Hours

## Head Cleaning

Playing older or damaged tapes may eventually cause video heads to become clogged.

### Video Head Clog Sensor

During playback, this screen appears if clogging is detected. To remove screen, press **PLAY** on the remote or DECK.

VIDEO HEADS MAY NEED CLEANING  
PLEASE INSERT HEAD CLEANING CASSETTE OR REFER TO MANUAL  
END :PLAY

- Use "dry" type head cleaning cassette only. (Part No. NV-TCL30PT is recommended.)
- Follow cleaning tape instructions carefully. Excessive use of tape can shorten head life.

## Built-in Head Cleaner

A clean video head helps produce a clear picture. So, we have equipped your DECK with a built-in, non-chemical head cleaning system that helps prevent clogging of the video heads. Cleaning is performed each time you load or unload a video cassette.

- This feature is preventative only. If your video heads are seriously clogged, consider the use of a chemical non-abrasive head cleaning kit.

## Cleaning DECK

Use a soft cloth or dusting attachment of a vacuum cleaner to remove dust from the ventilation holes on the back sides and bottom of the cabinet. Plastic surfaces are easily scratched and can be marred by alcohol and various solvents. Avoid excessive use of oil-based furniture polishes since the materials used in the cabinet will accumulate more dust. We recommend using a non-abrasive, antistatic cleaner and polisher.

## Features for a Quality Picture (VCR)

### Digital Auto Picture

Automatically controls the video output signal for less noise depending on the tape condition.

### Digital Auto Tracking

Continuously analyzes the signal and adjusts for optimum picture quality.

### Manual Tracking Control (to reduce picture noise)

Use during Playback and Low Motion mode to reduce picture noise.

Press **CH** (TRACKING) ▲/▼ on the remote control or on DECK until the picture clears up.

To return to Auto Tracking, press **POWER** off, then on again a few seconds later.



### V-Lock Control (to reduce picture jitter)

In still mode, **CH** (TRACKING) ▲/▼ operate as a V-Lock control.

# Table of Contents

## Initial Setup (Connection)

### DVD / VCR

Important Safeguards and Precautions .....	2, 3
Before Using .....	4
DECK & Cassette Information .....	6, 7
Location of Controls .....	8 ~ 10
Displays (On-Screen Displays and Multi Function Display) .....	11
Connections .....	12 ~ 15
Initial Setup for Basic Connections (Ready to Play) .....	16, 17

## Basic Operation

### VCR

Reset Language, Channels, Clock, VCR's Output Channel ..	18, 19
Playback/ Record on a Tape .....	20, 21

### DVD

Basic DVD Operation .....	22, 23
---------------------------	--------

## VCR Operation

Timer Recording .....	24, 25
MTS Broadcast/ VHS Hi-Fi Stereo System .....	26, 27
Multi-Brand Control Feature .....	28, 29
Tape Operation (each system) .....	30, 31
Special VCR Features .....	32 ~ 34
Copying Your Tapes (Dubbing) .....	35

## DVD Operation

Disc Operation .....	36 ~ 41
DVD-RAM Operation (DVD-RAM only) .....	42, 43
DVD Operation using On-Screen Displays .....	44 ~ 48
MP3/JPEG Playback Operation .....	49 ~ 51
Settings for DVD Operation .....	52 ~ 55
A/V OPTIMIZER .....	55
Language Code List .....	56

## For Your Information

Warning and Instruction Displays .....	57
Before Requesting Service .....	58, 59
Index .....	60, 61
Memo .....	62, 63

Initial Setup  
(Connection)

Basic  
Operation

VCR  
Operation

DVD  
Operation

For Your  
Information

# DECK & Cassette Information

 
## Prevent Accidental Tape Erasure

Break off the tab to prevent recording.



To record again

Cover the hole with cellophane tape.



## Disc formats supported by this DECK

DECK can play back discs bearing any of the following marks:

Logo	Disc type
	DVD-RAM (Version 1.1 of the Video Recording Format a unified video recording standard)
	DVD (DVD-Video)
	DVD-R (DVD-Video formatted discs [finalized])
	DVD-Audio
	CD (CD-DA)
	CD-R/CD-RW • CD-DA format • WMA/MP3/JPEG file and finalized.*

[Discs Played 8cm (3") or 12cm (5")]

\*A process that allows play on compatible equipment.

### Discs which cannot be played

- DVD with Region No. other than "1" or "ALL"
- PAL discs (the audio on DVD-Audio can be played), DVD-ROM, DVD-RW, DVD+R, DVD+RW, CD-ROM, CDV, CD-G, CVD, VCD, ACD, CD-TEXT, Divx Video Disc, Photo-CD and Video CD

### Notes


- Do not use irregularly shaped discs (e.g. heart-shaped), as these can damage the unit.
- It may not be possible to play CD-R, CD-RW, DVD-R and DVD-RAM in all cases due to the type of disc or condition of the recording.

## DVD-RAM discs

DVD-RAM discs must meet the following conditions for this unit to be able to play them.

Type	<ul style="list-style-type: none"> <li>• Non-cartridge discs</li> <li>• Discs that can be removed from their cartridges (TYPE 2 and 4)</li> </ul>
Capacity	<ul style="list-style-type: none"> <li>• 12 cm (5") 9.4 GB (double-sided) and 4.7 GB (single-sided)</li> <li>• 8 cm (3") 2.8 GB (double-sided)</li> </ul>

- Remove TYPE 2 and 4 discs from their cartridges before use, then return them when you are finished. Read the instructions for the disc carefully.

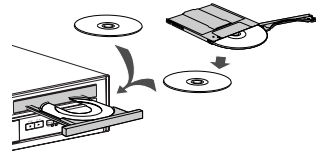


- Some parts of the disc, for example where one program ends and another begins, may not play smoothly.

## Disc Handling

### Handling precautions

- Ticking a label on the disc may impair DVD-R playback.
- Do not attach sticker to discs. (Do not use discs with exposed adhesive from tape or left over peeled-off stickers.)
- Only hold disc by edges as shown below. Fingerprints, dirt and scratches can cause skipping and distortion.
- Do not write on label side of disc.
- Never use record cleaning sprays, benzine, thinner, static electricity prevention liquids, or any other solvent.

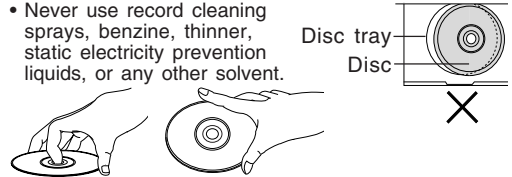

- Do not try to close disc tray when disc is not properly placed.

### To clean disc surface

With a soft, damp (water only) cloth, gently wipe from the center hole to the outer edge as shown below. (Wiping in a circular pattern will scratch the surface.)

- DVD-RAM, DVD-R :

Clean only with the DVD-RAM disc cleaner available. Never use cloths or cleaners for CDs etc.

### If disc is brought from a cold to a warm environment, moisture may form on the disc

Wipe away moisture with a soft, dry, lint-free cloth before using disc. (See above.)

### Improper disc storage

- Discs could be damaged if stored or left in areas:
- exposed to direct sunlight.
  - that are humid or dusty.
  - near heat (i.e. heater, radiator, etc.).

## Specifications

<b>Power Source:</b>	120 V AC, 60 Hz
<b>Power Consumption:</b>	<u>Power On:</u> Approx. 28 watts, <u>Power Off:</u> Approx. 0.85 watts
<b>Video Signal:</b>	EIA standard NT C color
<b>Video Recording System:</b>	4 rotary heads helical scanning system
<b>Audio Track:</b>	1 track (Normal), 2 channel (Hi-Fi Audio sound)
<b>Tuner</b>	
<b>Broadcast Channels:</b>	VHF 2 ~ 13, UHF 14 ~ 69
<b>CABLE Channels:</b>	Midband A through I (14 ~ 22), upperband J through W (23 ~ 36) Hyperband AA ~ EEE (37 ~ 64), Lowband A-5 ~ A-1 (95 ~ 99) Special CABLE channel 5A (01), Ultraband 65 ~ 94, 100 ~ 125
<b>Input/Output Terminal:</b>	Audio/Video Line Input/Output, RF Input/Output
<b>Input Terminal:</b>	Audio/Video Line Input (Front)
<b>Output Terminal:</b>	-Video Output (DVD only), Component Video Output (DVD only) Audio Output 2 (L), (R)
<b>Operating Temperature:</b>	5 °C ~ 40 °C (41 °F ~ 104 °F)
<b>Operating Humidity:</b>	10 % ~ 75 %
<b>Weight:</b>	3.85 kg (8.5 lbs).
<b>Dimensions:</b>	430 (W) x 95 (H) x 273 (D) mm 16-15/16" (W) x 3-3/4" (H) x 10-3/4" (D) inch
<b>Discs Played</b>	
<b>(1) DVD-Video Disc</b>	5" (12 cm) single-sided single-layer
<b>DVD-Audio Disc</b>	5" (12 cm) single-sided double-layer 5" (12 cm) double-sided double-layer (one layer per side) 3" (8 cm) single-sided single-layer 3" (8 cm) single-sided double-layer 3" (8 cm) double-sided double-layer (one layer per side)
<b>DVD-RAM Disc</b>	5" (12 cm) 9.4 GB (double-sided) and 4.7 GB (single-sided) 3" (8 cm) 2.8 GB (double-sided)
<b>(2) Compact Disc</b>	5" (12 cm) disc
(CD-DA)	3" (8 cm) disc
(CD-R/CD-RW, MP3, WMA, JPEG)	
<b>Digital Audio Output:</b>	Digital Optical Connector
<b>Pickup:</b>	Wavelength: 655 nm (DVD), 790 nm (CD) Laser power: CL A II

Note: • Designs and specifications are subject to change without notice.

## Definition of Terms (DVD)

<b>Angle:</b>	Some DVD discs feature scenes simultaneously shot from different angles. The ANGLE button can be used to view the scene from different angles. (ANGLE Indicator lights on DECK when a scene recorded at different angles is detected.)
<b>Chapter Number:</b>	Titles are subdivided into numbered sections. You can quickly search for a favorite scene using these numbers.
<b>DVD:</b>	A high-density optical disc on which high-quality pictures and sound have been digitally recorded. DVD incorporates video compression technology (MPEG II) and high-density recording technology which allow entire movies to be recorded with incredible playback quality.
<b>Subtitles:</b>	Written dialogue which appears at the bottom of the screen.
<b>Time Number:</b>	The elapsed play time from the start of a disc or title. Use to quickly find scenes. (May not work with some discs.)
<b>Title Number:</b>	For DVD discs with two or more titles, the title is numbered as title 1, title 2, etc.
<b>Track Number:</b>	Numbers assigned to tracks on CDs to allow specific tracks to be quickly located.

Apparatus Claims of U. . Patent Nos. 4,631,603, 4,577,216, 4,819,098 and 4,907,093, licensed for limited viewing uses only.

This product incorporates copyright protection technology that is protected by method claims of certain U. . Patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

# Remote Control

POWER	p. 28
MENU /	
SELECT	
PAUSE	
STOP	
SKIP	
SKIP-	
Virtual surround sound (V. . .) / E	
	pp. 23, 28
ZOOM	
POWER	p. 37
TAPE POSITION / STATUS	
VOLUME	
	p. 31, 40
AUDIO (SAP / Hi-Fi)	
	pp. 27, 36
RETURN / SEARCH	
	pp. 22, 30
COMMERCIAL	
	pp. 33, 35
operative if pressed during r	
	pp. 33, 35
COUNTER RESET	

p. 36

TITLE /  
DIRECT NAVIGATOR p. 38, 42

INPUT p. 35

DISPLAY p. 11

RECORD p. 21


SPEED / PAGE  
p. 21, 41



## Front View of DECK


**Bold:** VCR Function  
*Italic:* DVD Function  
***Bold Italic:*** VCR and DVD Functions  
 Normal: Others

**If the disc cannot be removed...**  
 First, unplug DECK. Then, prepare a rigid wire (e.g. an extended paper clip) and, applying moderate force, insert it straight into the hole at the base of the tray. The tray will eject a little. Now, pull the tray all the way out and remove the disc.

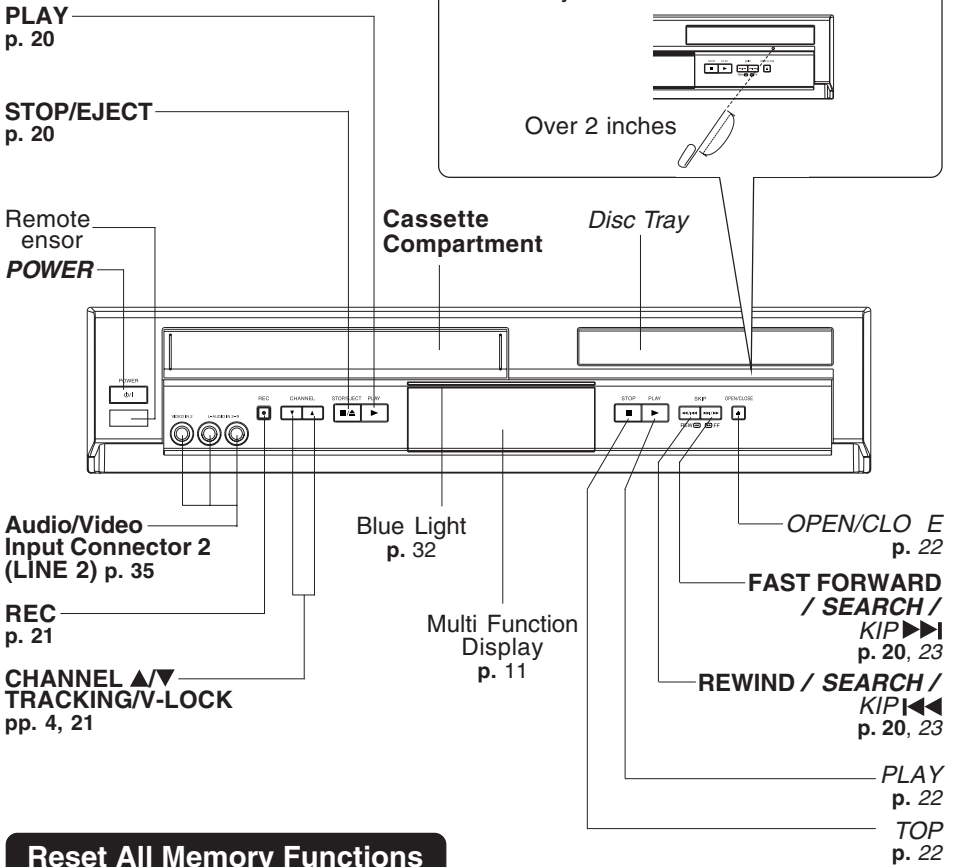

## Reset All Memory Functions

Returns to factory setting. Use if relocating DECK, or if Initial etup needs to be redone.  
 • Make sure a tape is not inserted in the DECK.

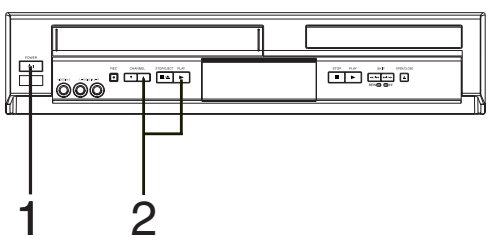

- 1 Turn DECK Power on.
- 2 Press and hold both **VCR PLAY** and **CHANNEL ▲** on the DECK for more than 5 seconds.
  - The power shuts off.
- 3 Perform "Initial etup (Ready to Play)" on page 16.

# Location of Controls (continued)

## Rear View of DECK

### AC Power Plug

- While plugged into an AC outlet, this DECK consumes 0.85 W of electrical power in off mode.

**Bold:** VCR Function  
**Bold Italic:** VCR and DVD Functions

*Italic:* DVD Function

*Component Video Output Connector (Y, P<sub>B</sub>, P<sub>R</sub>) (DVD Only)*  
 p. 13

**VHF/UHF Antenna Output Terminal**  
 p.12

**VHF/UHF Antenna Input Terminal**  
 p. 12

**Video Output Connector**  
 p. 12

**Video Input Connector**  
 p. 35

*Optical Digital Audio Output Connector (DVD Only)*  
 p. 15

*-Video Out Connector (DVD Only)*  
 pp. 10, 13

**Audio Output 1 Connector (L/R)**  
 p. 12

**Audio Output 2 Connector (L/R)**  
 p. 13

**Audio Input Connector (L/R)**  
 p. 35

The following table shows the status of the output jacks when in VCR or DVD mode.

	<b>Video Output Audio Out 1 Audio Out 2</b>	<i>Component Video Output</i>	<i>-VIDEO OUT</i>
<b>VCR</b>	YE	N/A	N/A
<b>DVD</b>	YE		YE

**Note** • PROG functions on the remote are not available when using Component Video Output and -VIDEO OUT. Please set TV to either RF INPUT or VIDEO INPUT, and then press PROG.

### To enjoy PROGRESSIVE SCAN video

- Connect *Component Video Output* to the component video input terminals of a television. ( see p. 13.)
- When PROGRE IVE OUT is set to "ON" in the DVD Main Menu (p. 55), a Progressive can signal is output from the *Component Video Output Connector*.


### Notes

- The screen may shift off-center when using progressive output. Please adjust the screen position if this occurs. (Refer to your TV manual.)
- If the television is not progressive compatible, a progressive scan picture is not available. Connect the Video Output or -Video Output connector (see p. 12, 13) and set PROGRE IVE OUT to "OFF" in the DVD Main Menu. ( see p. 55.)

# Displays (On Screen & Multi Function)

## On Screen Displays (VCR)

### Function & Channel Displays

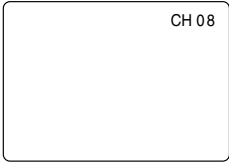

When a function button is pressed, e.g. PLAY, or you change channels, a 5-second display appears.


### Blank Tape/ No Video Signal Indications

Whenever a blank section of a tape comes up in Play mode, or when the selected channel has no broadcast signal with Weak signal Display Feature (p. 33) set to OFF, the TV screen will turn solid blue.

### VCR Status & Clock Displays

To display or remove screen shown at right,

→ press DISPLAY.

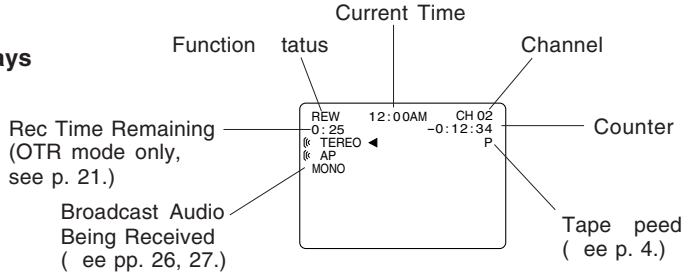

## Multi Function Display

### VCR mode Indicator

Lights up when DECK is in VCR mode.

### Tape Indicator

Lights up when a tape is inserted.

### DISC Indicator

Lights up when a disc is inserted.

### DVD mode Indicator

Lights up when DECK is in DVD mode.

### Timer Indicator

Lights up when DECK is set for Timer Recording, or when One Touch Recording (OTR) is used.

Flashes when Timer Recording is set, but a tape has not been inserted into DECK and when a power interruption occurs during Timer Programming.

### DTS Indicator

Lights up when a DT formatted DVD is played. (DVD only)

### Dolby Digital Indicator

Lights up when a "Dolby Digital" formatted DVD is played. (DVD only)

### VCR REC Indicator

Lights up during recording.

### CD/MP3/WMA Indicator

CD : Lights when an Audio CD is inserted or JPEG file is played.  
MP3/WMA : Lights when an MP3 or WMA file is played.

### ANGLE Indicator

Lights up when a scene recorded at different angles is detected. (see p. 37.) (DVD only)



### Clock/ Status/ Channel/ Speed Display


Displays current time. Briefly displays DECK status when you press a function button, channel number or "L1" or "L2" when you select channel or line input, and recording speed when you press PEED.

# Connections

## Basic Connections

- If your TV has **AUDIO and VIDEO IN** terminals, connect them to **DECK** for higher quality picture and sound.
- You can enjoy stereo sound even if your TV is not stereo by connecting a stereo amplifier to **DECK**.
- Connect **DECK** and **TV** with an **RF Coaxial Cable (a)** (supplied) or an **AV Cable (b)** (not supplied) as shown in the figure below.

■ **DSS Receiver → DECK → TV**   ■ **DECK → TV**   ■ **Cable Box → DECK → TV**

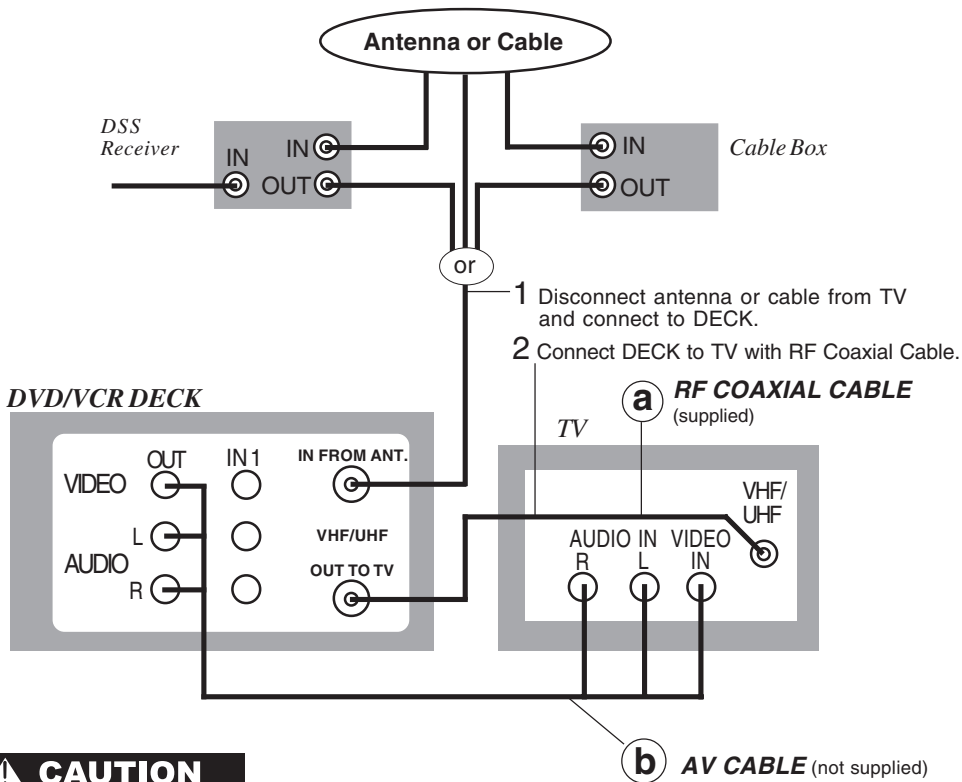

## CAUTION


When using "Nut type" RF coaxial cables, tighten with fingers only. Overtightening may damage terminals.

### Note to CABLE system installer


This reminder is provided to call the CABLE system installer's attention to Article 820-40 of the NEC in U A (and to the Canadian Electrical Code in Canada) that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

### Other Connections

#### With a Cable Box (DECK → Cable Box → TV)

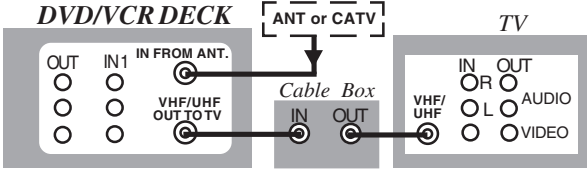

#### Connect With Two Cable Boxes

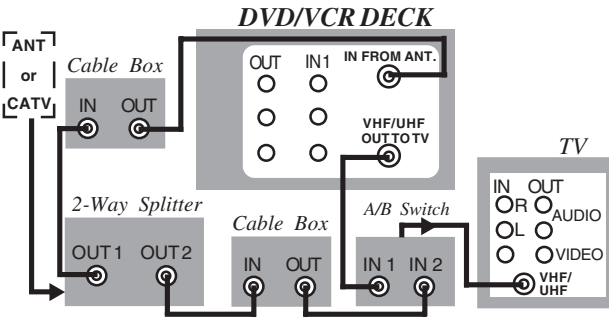

#### You Can

- view any (including scrambled) channel.
- use Remote Control to select channels without using Multi-brand control feature.

#### You Cannot

- record scrambled channels.

#### You Can

- record and view both scrambled and unscrambled channels if additional equipment is added. This connection requires: two converter boxes, an A/B switch, and a 2-way splitter.

#### You Cannot


- view a channel other than the one selected for any type of recording.
- set a Timer recording of a channel unless you select it on the Cable Box.

### Connections For DVD Only (enjoying higher picture quality)

- Connect AUDIO OUT2 (L, R) to the AUDIO IN (L, R) of the TV. (audio input for COMPONENT or -VIDEO mode).
- If your TV has COMPONENT VIDEO INPUT, connect to COMPONENT VIDEO OUT. If your TV does not have COMPONENT VIDEO INPUT but has -VIDEO INPUT, connect to -VIDEO OUT.
- When in DVD mode, set your TV to either COMPONENT VIDEO IN or -VIDEO IN.

#### Notes

- You can watch DVDs through the S-VIDEO or COMPONENT VIDEO, VHF/UHF OUT TO TV, and VIDEO OUT connections to your TV. The VCR and TUNER pictures are available only from the VIDEO OUT and VHF/UHF OUT TO TV connections to your TV.
- PROG functions on the remote are not available when using -VIDEO OUT and COMPONENT Video Output. Please set TV to either RF INPUT or VIDEO INPUT, and then press PROG.
- TV must have capability to accept and display a progressive scan signal to use PROGREIVE mode. Consult your TV operating instructions.

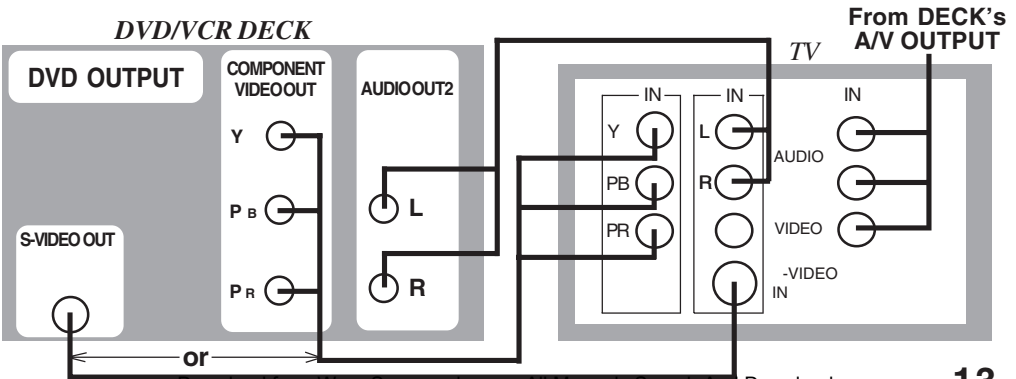

# Connections (continued)


## Audio Connections



### Ready Checklist

- Turn down the volume, then turn DECK, as well as other equipment to be connected, off before proceeding with connection.
- Do not block ventilation holes of any of the equipment and arrange them so that air can circulate freely.
- Read through the instructions before connecting other equipment.
- Ensure that you observe the color coding when connecting audio and video cables.

### ■ Connecting Amplifier (2ch stereo system)

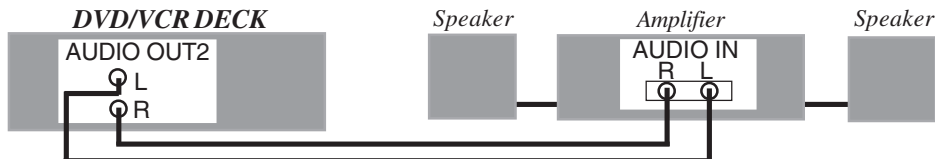

### Enjoying digital audio output from the digital audio output connector

#### Notes on audio output from the optical digital audio output connector

Disc	Sound recording format	Optical digital audio output from connector
DVD	Dolby Digital	Dolby Digital bitstream (1-5.1 ch) or PCM (48 kHz sampling/16 bit only)*1
	Linear PCM (48/96/192/44.1/88.2/176.4 kHz 16/20/24bit)	Linear PCM (2 ch) (48 kHz sampling/16 bit or 44.1 kHz sampling/16 bit)*2
	DT	Bitstream or PCM (48 kHz sampling/16 bit only)*1
DVD-RAM	Dolby Digital	Dolby Digital bitstream (1 - 5.1 ch) or PCM (48 kHz sampling/16 bit only)
	Linear PCM(48 kHz/16 bit)	Linear PCM (2 ch)
CD	Linear PCM	Linear PCM (44.1 kHz sampling)
MP3	MP3	Linear PCM (It depends on the MP3 file)
WMA	WMA	Linear PCM (It depends on the WMA file)

\*1 The type of audio output from the connector can be selected by the settings for DVD Operation. ( see p. 53.)

\*2 When "LPCM(DVD)" is set to OFF in the DVD Main Menu, 44.1 or 48 kHz sampling/16 bit is output. When set to ON, sampling of sound quality greater than 44.1 or 48 kHz/16 bit is reduced to 44.1 or 48 kHz/16 bit. ( see page 53.)

### For your reference:

- Dolby Digital is a digital sound compression technique developed by the Dolby Laboratories Licensing Corporation. Supporting 5.1-channel surround sound, as well as stereo (2-channel) sound, this technique enables a large quantity of sound data to be efficiently recorded on a disc.
- Linear PCM is a signal recording format used in CDs. While CDs are recorded in 44.1 kHz/16 bit, DVDs are recorded in 44.1 kHz/16 bit ~ 192 kHz/24 bit.
- If you have a Dolby Pro Logic surround decoder, you will obtain the full benefit of Pro Logic from the same DVD movies that provide full 5.1 channel Dolby Digital soundtracks, as well as from titles with the Dolby surround mark. For information on Panasonic or Technics Dolby Pro Logic surround sound Decoders please contact your local dealer.

■ **Connecting Amplifier (5.1 ch Surround system) [Digital connection]**  
**DECK → Dolby Digital Decoder → Amplifier → Speaker**


or

**DECK → DTS (Digital Theater Systems) Decoder → Amplifier → Speaker**

When DVDs recorded in Dolby Digital or DTS are played, Dolby Digital bitstream or DTS bitstream is output from the DECK OPTICAL digital audio output connector. When DECK is connected to a Dolby Digital decoder or DTS decoder, you can enjoy theater-quality audio in your home. [An optical digital audio cable (optional) is required when an optional Dolby Digital decoder or DTS decoder is used.]

**Notes on connecting an optical digital audio cable (optional)**

- Firmly connect the cable to the connector.

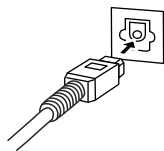


**DVD/VCR DECK**  
(Rear)

Optical Digital Audio Cable (optional)

DI\*  
PCM BITSTREAM OPTICAL

Decoder with Dolby Digital /DTS processing (optional)

To Optical Digital Audio Input Connector

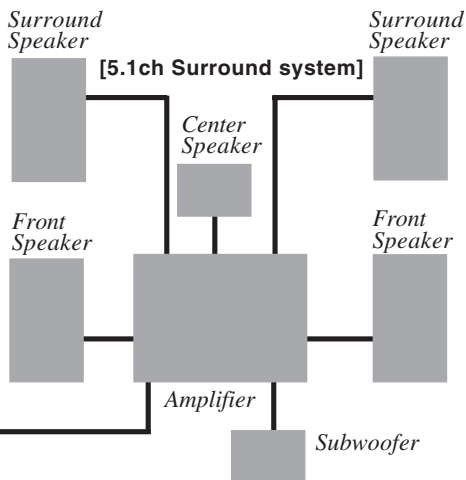

**Caution for optical digital audio output connector:**

- When connecting an amplifier (with an Optical Digital Input Connector) which does not contain the Dolby Digital or DTS decoder, be sure to select “PCM” at “Dolby Digital” and “PCM” at “dts” of the Settings for DVD Operation “Audio Output” (see p. 53). Otherwise, any attempt to play DVDs may cause such a high level of noise that it may be harmful to your ears and damage your speakers.
- When a Dolby Digital/DTS decoder is connected, please select “Bitstream” at “dts” or “Dolby Digital” of the Settings for DVD Operation “Audio Output”. If “PCM” is selected, there will be stereo sound. (See p. 53.)
- CDs can be played as usual.

**Note:**

- Some DTS decoders which do not support DVD-DTS interface may not work properly with DECK.

Manufactured under license from Digital Theater Systems, Inc. U.S. Pat. No's. 5,451,942, 5,956,674, 5,974,380, 5,978,762, 6,487,535 and other U.S. and world-wide patents issued and pending. “DTS” and “DTS 2.0 + Digital Out” are trademarks of Digital Theater Systems, Inc. Copyright 1996, 2003 Digital Theater Systems, Inc. All Rights Reserved.

Manufactured under license from Dolby Laboratories. “Dolby,” “Pro Logic,” and the double-D symbol are trademarks of Dolby Laboratories.

# Initial Setup for Basic Connections (Ready to Play)



## Before doing Initial Setup

- 1 Turn TV on.
- 2 See connections (a) RF Coaxial Cable Connection and (b) AV Cable Connection on page 12.  
<RF Coaxial Cable Connection>  
Set TV to channel 3.  
<AV Cable Connection>  
Set TV to VIDEO.
- 3 [DECK → TV]
  - Go to “Initial Setup (Ready to Play).” ( See below.)[Cable Box → DECK → TV], [DSS → DECK → TV]
  - Turn on Cable Box and set it to your Public Broadcasting Station (PB ) channel in your time zone.
  - If you use a DSS Receiver, it must be turned off.

## Initial Setup (Ready to Play)

- 1 Press VCR on remote for VCR mode.
- 2 Plug DECK Power Cord into AC wall outlet. DECK comes on and auto channel and clock set starts.
  - If screen below does not appear, check DECK - TV connection and, if TV is tuned to channel 3, try switching it to channel 4.
  - To change VCR’s output channel, please see “VCR’s Output Channel” on page 19.

Plug VCR Power plug  
into an AC wall outlet.

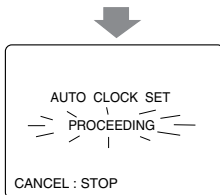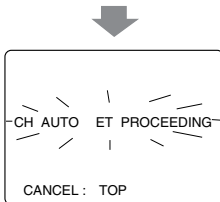

### Notes

- Function buttons are void during Initial Setup.
- To eject a tape during Auto Setup, press EJECT on remote or TOP/EJECT twice on DECK. Then make settings manually. ( See p. 18.)
- If Auto Clock Setup takes more than 30 minutes, press TOP and perform settings manually. ( See p. 18.)

*Continued on next page...*




o Play)



# Ma

# Reset Language, Channels, Clock,

## 1

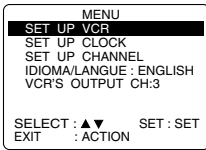


Press **ACTION**\* to display MENU.

- PROGRAM functions are not available when using COMPONENT Video Output and -VIDEO OUT. Please set TV to either RF INPUT or VIDEO INPUT, and then press PROGRAM.


## 2

### Language


- 1) Press **▲▼** to select language item.

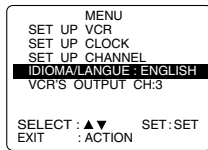


- 2) Press **SET** repeatedly to change language item as shown below.

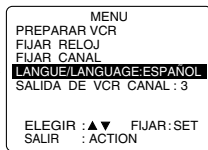

For panish ↓

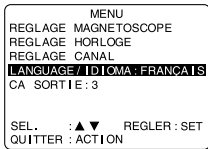

For French ↓

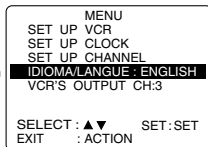


For English


- 3) Press **ACTION** to exit.

### Channels

- 1) Press **▲▼** to select "ET UP CHANNEL," and press **SET**.

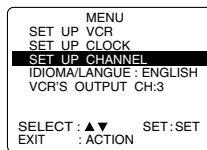


- 2) Press **▲▼** to select "ANTENNA," then press **SET** to set your antenna system ("TV" or "CABLE.")

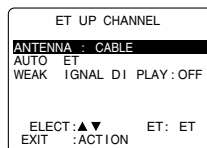

- 3) Press **▲▼** to select "AUTO ET," then press **SET**.


- If you use a Cable Box, set it to the PB channel in your time zone.

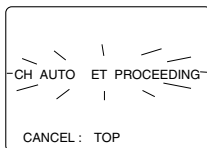


- After Channel Auto et is finished, Auto Clock et will be performed.

### Clock


- 1) Press **▲▼** to select "ET CLOCK," and press **SET**.

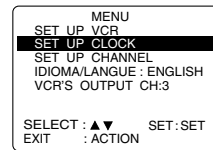

- 2) Press **▲▼** to select "MANUAL," and press **SET**. (For Auto Clock et, select "AUTO CLOCK ET.")

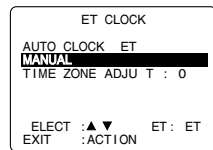

("TIME ZONE ADJUST" appears only when auto clock is set.)

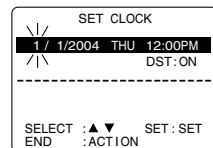


- 3) Press **▲▼** and **◀** to select, then set the date, time, and D T (Daylight saving Time).

- 4) Press **ACTION** to start Clock and exit this mode.

# VCR's Output Channel


**\*Important:** If a remote control button does not work when pressed, press the VCR button on the remote and try the button again.

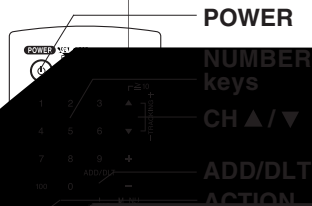


## ■ Time Zone Adjust

(Only when Auto Clock is set.)

- 1) Press ▲▼ to select "ET CLOCK," and press SET.

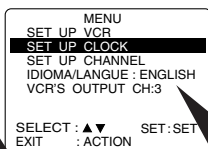

- 2) Press ▲▼ to select "TIME ZONE ADJUST,"

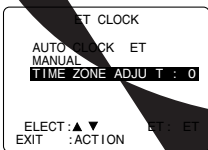


and press SET to subtract or add hours as necessary.

- 3) Press ACTION to save the TIME ZONE.

## ■ VCR's Output Channel

 - 1) Press ▲▼ to select "VCR'S OUTPUT CHANNEL," and press SET.



Basic  
Operation

# Playback/ Record on a Tape

## ✓ Ready Checklist

- All connections are made. (pp. 12 ~ 15)
- TV and DECK are plugged in.
- TV is on and tuned to CH 3, 4, or VIDEO.
- Remote is in VCR mode. (Press VCR.)

### Playback a Tape

## 1 Insert a tape.

- DECK power comes on. If Auto VCR/TV (see p. 32) is set to "OFF," press VCR/TV on the remote for VCR mode.

## 2 Press PLAY\* to play a tape.

- If tape has no rec. tab (p. 6), auto play begins.

### Special Features During Play

#### ■ Forward/Reverse Scene Search

- Press FF/SLOW+ or REW/SLOW-.
- Press PLAY to release.

After search has begun, each additional press of FF or REW changes speed.

#### Notes

- Picture interruption may occur with some TVs.
- FF and REW search speed may vary depending on current tape position.
- After 10 minutes in search mode, VCR returns to Play mode to protect the tape and the video heads.

#### ■ Still (Freeze) Picture

- Press PAUSE/STILL.
- Press PLAY to release.

#### ■ Frame by Frame Picture

- Press PAUSE/STILL in still mode.
- Press PLAY to release.

#### ■ Slow Motion Picture

- Press FF/SLOW+ (increase speed) or REW/SLOW- (decrease speed) in still mode.
- Press PLAY to release.


## 3 Press STOP to stop a tape.

### Rapid Rewind/FF

- Press REW/SLOW- or FF/SLOW+ in top mode to rewind or fast forward a tape.

- Rewinds a T-120 tape in approx. 1 minute.

- Press EJECT on remote, or STOP/EJECT on DECK to eject a tape.

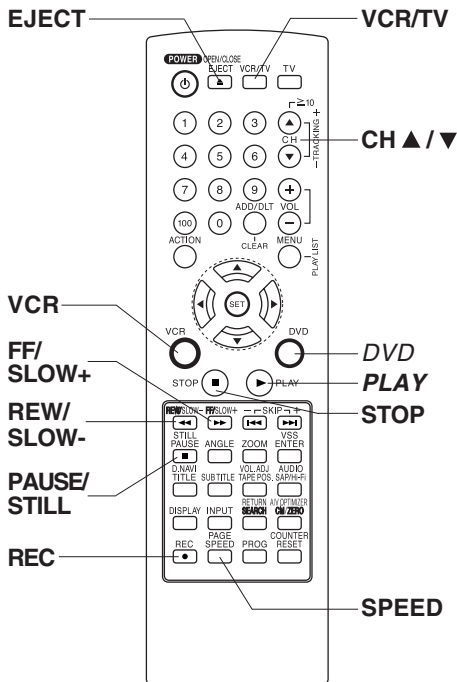


#### Notes

- These features work best in P or LP mode.
- The sound will be muted.
- To reduce picture noise, see "Manual Tracking Control" on page 4.
- After 3 minutes in still or low mode, VCR stops to protect the tape and the video heads.

### Playback using DECK buttons

 - 1 Insert a tape.
- 2 Press PLAY.



Multi Function Display

- Press TOP/EJECT to stop and/or eject a tape.

**\*Important:** If a remote control button does not work when pressed, press the VCR button on the remote and try the button again.

## Record on a Tape

- 1 Insert a tape with a record tab (p. 6).**
  - DECK power comes on. If Auto VCR/TV (see p. 32) is set to "OFF," press VCR/TV on the remote for VCR mode.
- 2 Press CH ▲▼, or NUMBER keys** to select the channel.
  - If channel number is over 100, first press 100 key then the other 2 digits.
  - For "LINE" input, see p. 35.
- 3 Press SPEED** to select the record speed (p. 4).
  - SP = tandard Play
  - SLP = uper Long Play
  - peed appears on-screen and on Multi Function Display.
- 4 Press REC** to start recording.
 



(The VCR REC indicator lights up on Multi Function Display),

  - To edit out unwanted scenes, **press PAUSE/STILL** to pause, and again to resume recording.
  - You cannot view another channel during recording.
- 5 Press STOP** to stop recording.


This video recorder, equipped with HQ (High Quality) system, is compatible with existing VH equipment. Only use tapes with the **VHS** mark. Only tapes tested and inspected for use in 2, 4, 6, and 8 hour machines are recommended.

### Note

Remove loose or peeling labels from tapes to prevent tape jam.

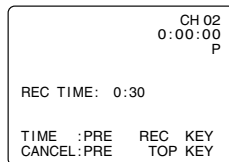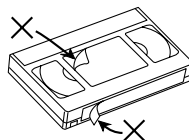

<One Touch Recording screen>

 

- **One Touch Recording** (recording in progress),
  - **press REC** repeatedly to set the recording length (30 min. ~ 4 hours) (see right).
  - DECK shuts off after the preset record length.
- **Record one station, watch another,**
  - **press VCR/TV** on the remote (change to TV mode),
  - select channels at TV (recording continues).
- **Select Channels at DECK** (In top or Rec. Pause mode)
  - **press VCR/TV** on the remote (change to TV mode),
  - select channels at DECK.
- **Play a disc while recording a tape.**
  - insert a disc during recording,
  - **press DVD**, and then **press PLAY**.

## Record using DECK buttons

- 4 Press REC** to start recording.
  - 1 Insert a tape.**
  - 2 elect Channel.**
  - Press **TOP/EJECT** to stop.
- Multi Function Display



### Notes

- **It is not possible to record from DVD/ CD to VHS tape using DECK.**
- **Watching one channel and recording another is not possible when using Cable Box or DSS Receiver.**
- After 5 minutes in Pause mode, DECK stops to protect a tape and video heads.

# Basic DVD Operation

## Ready Checklist

- All connections are made. (pp. 12 ~ 15)
- DECK is plugged in.
- If DECK is connected to an audio amplifier, turn the stereo system's power on.

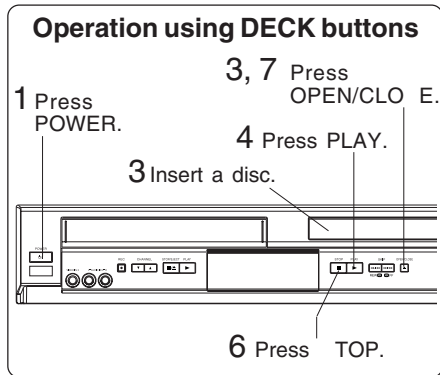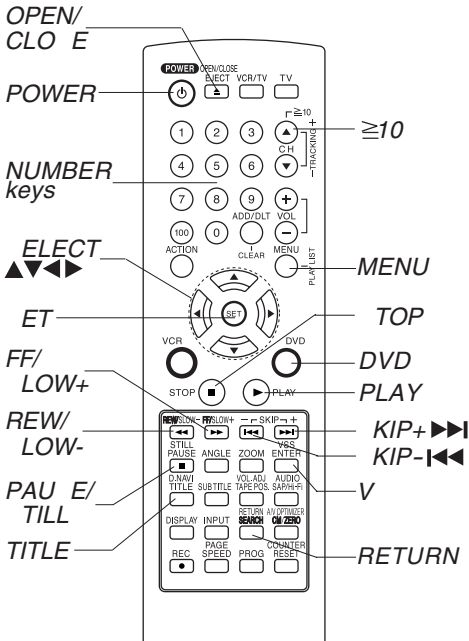


\*1 Interactive DVD...  
May include multiple camera angles, stories, etc.

**1** Press **POWER**\* on the remote or DECK.


**2** Press **DVD** to select DVD mode.  
• If a disc is already inserted, go to step 4. (Depending on the disc, playback may start automatically.)

**3** Press **OPEN/CLOSE**, and then place a disc into the disc tray.

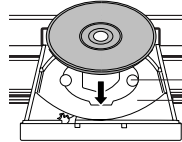

- Hold disc by its edges only (p. 6) with printed side up and use guides to place into tray.
- Use **1** 3" (8 cm) or **2** 5" (12 cm) disc.
- DVD-RAM** → see p. 42

**4** Press **PLAY** to start playing. Disc tray closes automatically.

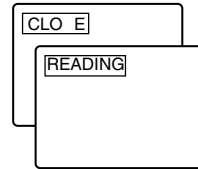


- You may also close tray by pressing **OPEN/CLOSE**.
- Data reading time differs with each disc.

<Example1>



If an interactive DVD\*1 is used and **TITLE MENU** appears, go to step 5.

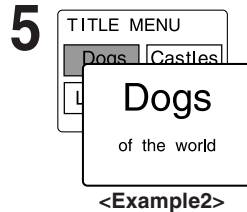

Press **▲▼▶◀** or **NUMBER keys** (see below) to select title, and press **SET** or **PLAY** to start playing.  
• Pressing **ET** or **PLAY** is not necessary when using **NUMBER keys**.

Using **NUMBER keys** starts play automatically. The number of available titles varies with each disc.

<Input 1 digit number 1 ... 1  
Example> 2 digit number 12 ... ≥10 → 1 → 2

Press **SKIP+▶▶** or **SKIP-◀◀** to go to next or previous menu screen.

- KIP function not available with all discs. Please refer to disc jacket for operation information.

**To return to menu (play stops)**  
Press **TITLE**, **MENU**, or **RETURN**.

**6** Press **STOP** to stop playing.

**7** Press **OPEN/CLOSE** to eject the disc.

**\*Important:** If a remote control button does not work when pressed, press the DVD button on the remote and try the button again.

## ■ Forward/Reverse Scene Search

Press **FF/SLOW+** or **REW/SLOW-** during play. Press **PLAY** to release.


- Each speed, slow at first, increases with each additional press of the button up to 5 levels.

## ■ Forward/Reverse Chapter/Track Skip

Press **SKIP+ >>>|** or **SKIP- |<<<** during play. Each press skips a chapter (DVD-Video), track (DVD-Audio/CD) or Program/Play List/Marker (DVD-RAM).


### DVD-Video, DVD-Audio and CD

- Pressing **SKIP- |<<<** once midway through a chapter/track returns to the start of that chapter/track. Each additional press skips back one chapter/track.

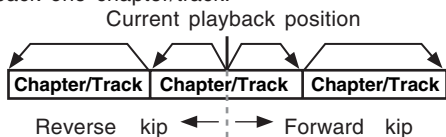

### DVD-RAM

- Pressing **SKIP- |<<<** once midway through a program/play list returns to the start of that program/play list. Each additional press skips back one program/play list.

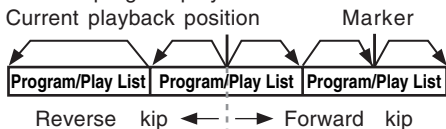

## ■ Still Picture or Pause

Press **PAUSE/STILL** during play. Press **PLAY** to release.

- DVD : DECK will enter still picture mode.
- CD : DECK will enter pause mode.

## ■ Frame by Frame Picture (DVD)

Press **PAUSE/STILL** in still mode. Press **PLAY** to release.

- Each press advances picture one frame.
- Hold button down for consecutive frame advance.
- Whether pictures are advanced by "FRAME" or "FIELD" is selected automatically. ( See p. 54.)


## ■ Slow Motion Picture (DVD)

Press **FF/SLOW+** or **REW/SLOW-** in still mode. Press **PLAY** to release.

- Slow motion speed, slow at first, is increased with each additional press of the button up to 5 levels.

## Auto-Power Off Function

Power turns off after DECK has been in top mode (DVD) for about 5 minutes.


- When  appears on the screen while a button is being operated, it means that the corresponding operation is prohibited by DECK or the disc.

## V.S.S. (Virtual Surround Sound)

Enjoy a surround-like effect if you are using two front speakers only. The effect is broadened and sound seems to come from virtual speakers on either side if the disc has surround signals recorded on it.

Press **VSS** in DVD mode.

- The surround sound effect can be changed by pressing **V** repeatedly as shown by the figure below.

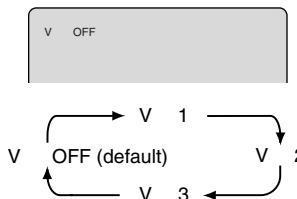

### Note

- Surround sound effect is available in DVD mode only.
- Turn off the surround effects on the other equipment.
- V. . . will not work, or will have less effect, with some discs.
- Turn V. . . off if it causes distortion.
- Sound will only come from the two front speakers if V. . . is on.

## Resume Function

DECK memorizes the point where **TOP** is pressed (**STOP >** is displayed on screen).

Press **PLAY** to resume play from this point.

Pressing **STOP** again or opening the tray cancels **REUME**, however, **REUME** is not canceled when power is turned off and on.

- **REUME** works only with discs for which elapsed play time is displayed during play.
- When a DVD-RAM still picture is played back, the counter will not be displayed, however **REUME** will function.

### Notes

- Please read the disc jacket for operation information.
- If a single sided disc is placed in upside down, "THIS TYPE OF DISC CANNOT BE PLAYED. PLEASE INSERT A DIFFERENT DISC" is displayed.
- Remove disc and press **DECK POWER** off when not in use.
- Disc continues to rotate with menu displayed even after play is done. Press **TOP** to clear menu display when finished with menu.

# Timer Recording

## Ready Checklist

- All connections are made. (pp. 12 ~ 15)
- V and DECK are plugged in.
- Lock set correctly. (p. 18)
- Tape has record tab intact. (p. 6)
- Remote is in VCR mode. (Press VCR.)
- Sufficient tape remaining for recording time.

 
## Press PROG\*

to display Program.

DT	TART	TOP	CH	PD
---	---	---	--	---
---	---	---	--	---
---	---	---	--	---

ECT : ▲▼ ET: ET  
: PROG

- 3) Set remaining items, press SET to set TART/ TOP times, LINE



Press PROG to exit.

- The “Timer” Indicator lights up on DECK.
- You can set Timer Recording with the power on or off.
- **“TIMER REC WILL START SOON”** appears on-screen for 20 seconds before timer recording starts. If DECK is in DVD mode, “DVD” appears, but the VCR REC Indicator, the VCR mode indicator, and “REC” will flash on Multi function Display.



**\*Important:** If a remote control button does not work when pressed, press the VCR button on the remote and try the button again.

## Review, Replace or Clear Program Contents:

(Recording is not in progress)

**1** Press **PROG**  
to display Program List.

P	DT	TART	TOP	CH	PD
1	13	2:00p	3:20p	02	LP
2	14	7:00p	7:30p	10	P
3	---	---	---	---	---
4	---	---	---	---	---

▼

CANCEL : ADD/HLT  
ELECT : ▲▼ ET: ET  
EXIT : PROG

Press **▲▼**  
to select number.

### To cancel a Timer Recording in progress...

Hold down **STOP** in VCR mode for a few seconds to cancel the Timer Recording.

(The "TIMER" Indicator goes out on Multi Function Display.)

- Any future daily or weekly recording will be performed as programmed.

**3** To Replace program...

P	DT	TART	TOP	CH	PD
1	13	2:00p	3:20p	02	LP
2	14	7:00p	7:30p	10	P
3	---	---	---	---	---
4	---	---	---	---	---

▼

ELECT : ▲▼ ET: ET  
EXIT : PROG

Repeat step 2 (p. 24)  
to set new programs.

or

To Clear program...

P	DT	TART	TOP	CH	PD
1	13	2:00p	3:20p	02	LP
2	14	7:00p	7:30p	10	P
3	---	---	---	---	---
4	---	---	---	---	---

▼

ELECT : ▲▼ ET: ET  
EXIT : PROG

Press **ADD/DLT**.

**4** Press **PROG**  
to end the programming.

### Notes

- If you are using a Cable Box, the VCR's channel for Timer Recording must be set to the Cable Box input channel and Cable Box must be manually set to the desired channel. Cable Box power must be left on.
- 2 minutes before Timer Recording is performed, "PLEASE PREPARE FOR TIMER REC" appears and Timer Indicator flashes.  
Be sure a cassette with record tab is loaded and DECK is in Stop mode.
- If a power interruption occurs while programming the timer, the timer program(s) may be canceled. If "TIMER PROGRAM WERE LO T DUE TO POWER INTERRUPTION" appears on-screen, please re-enter the timer programs.
- If the start time for Timer Recording comes up during recording and playing back, Timer Recording will not be performed.

### Important notes when using DSS Receiver

- When recording programs via D Receiver, D Receiver must be left on.
- When recording programs via an antenna or cable, D Receiver must be turned off.

# MTS Broadcast/ VHS Hi-Fi Stereo System


## Connection

Make the Audio/Video Connection as shown on pp. 12 ~ 15.

- You can use TV connected to a stereo amplifier and speakers instead of stereo TV.

## Receivable Broadcast Types

The following are possible audio broadcast types and on-screen displays.


The signal being received is indicated with a “” mark while the selected audio mode is indicated with an arrow.

To display the broadcast signal being received,

➔ **press DISPLAY\*.**


### MTS Stereo and SAP broadcast

Multi-channel Television sound stereo (main language) and secondary Audio Program (sub language) broadcasts are being received simultaneously. Select **STEREO** or **SAP** audio mode.

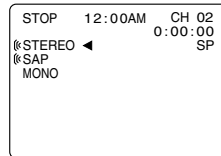

### MTS Stereo broadcast


Multi-channel Television sound stereo broadcast. Select **STEREO** audio mode.

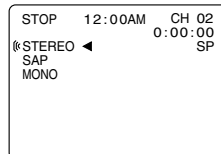

- If stereo broadcast is weak and display flickers, select **MONO** audio mode for possible better results.



### SAP broadcast

Secondary Audio Program (sub language) broadcast. Select **SAP** audio mode for the sub language.

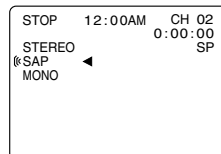

### MONO broadcast

Normal monaural sound broadcast.

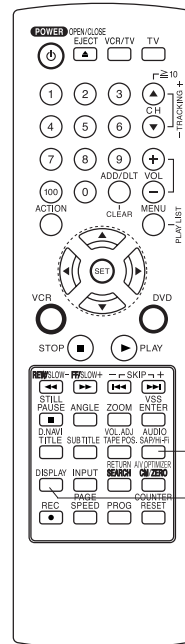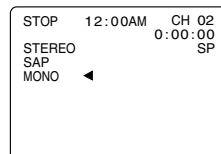

**AUDIO (SAP/Hi-Fi)**  
**DISPLAY**


Equipped with **dbx**®-TV Noise Reduction for true MT reproduction. **dbx**®-TV Noise Reduction is required for good stereo separation and audio fidelity. **dbx**® is a registered trademark, and is licensed by **dbx**® Technology Licensing.

**\*Important:** If a remote control button does not work when pressed, press the VCR button on the remote and try the button again.

## Audio Mode for Recording

### 1 Press **AUDIO (SAP/Hi-Fi)** to display audio mode.

(Display disappears after 5 seconds.)

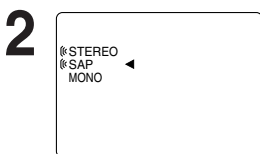

Press **AUDIO (SAP/Hi-Fi)** repeatedly to select desired mode.


- Refer to "Receivable Broadcast Types" on p. 26.
- Arrow indicates selection.

### 3 Make a recording. ee p. 21.

## Audio Mode for Playback

### 1 Start playback. ee p. 20.

### 2 Press **AUDIO (SAP/Hi-Fi)** to display audio mode.

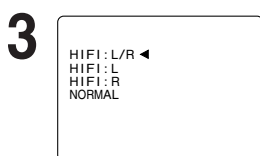

Press **AUDIO (SAP/Hi-Fi)** repeatedly to select desired mode.

- elect "HI-FI (L/R)" or "HI-FI (L)" or "HI-FI (R)" to listen to stereo recordings in stereo sound.
- elect "NORMAL" for monaural sound.
- Display disappears after 5 seconds.
- Arrow indicates selection.

### Notes

- Only tapes recorded in Hi-Fi stereo will playback with true stereo sound. standard stereo tapes will playback in monaural sound.
- To listen to Hi-Fi stereo playback, the DECK AUDIO (L/R) jacks must be connected to a stereo TV or an external stereo amplifier and speakers. ( ee pp. 12, 14.)
- If tracking is adjusted during playback, Hi-Fi audio may revert to normal audio.
- Hi-Fi and normal audio playback volume level may differ.

# Multi-Brand Control Feature

## Multi-Brand Control Setup

The Remote Control can be set to control some TVs.

- 1 Find your TV Brand Code Number on the following page.**
- 2 ■ Set up for TV control,**
  - hold down TV button,
  - enter code with NUMBER keys.
- 3 Confirm code entry,**
  - press **POWER** to turn selected unit on or off.
  - ee table below for controllable functions in each mode.

### Notes

- Repeat setup after remote battery replacement.
- Remote will not control every TV made by the manufacturer listed. If you get no response, your particular unit cannot be controlled. There are NO additional codes for the products listed. If your product is not listed, then the remote is not compatible with that product.

## Using Multi-Brand Control

After remote is set up, you can select VCR, DVD, or TV for the desired function.

Press **VCR**, **DVD**, or **TV** on the remote.

(Table below shows available remote buttons for each mode.)

Unit Mode	DVD/VCR	TV
DVD VCR	All	VOL +/-
TV	<b>EJECT/OPEN/CLO E*</b> , <b>DISPLAY, PLAY, STOP,</b> <b>FF/SLOW+, REW/SLOW-</b> , <b>VCR/TV, PAUSE/STILL, KIP,</b> <b>AUDIO, CM/ZERO, SPEED, REC,</b> <b>TAPE POSITION, PAGE,</b> <b>COUNTER RESET</b>	POWER, INPUT, NUMBER keys, ENTER, CH ▲/▼, VOL +/-

\* **Bold:** VCR Function  
*Italic:* DVD Function

**Bold Italic:** VCR and DVD Functions  
Normal: TV

### Notes

- Not all functions listed may be controllable.
- In TV mode, it may be necessary to press ENTER after pressing NUMBER keys for channel selection.

## TV Brand Code Numbers

Panasonic .....	01, 02
Quasar .....	01, 02
CA .....	03
.....	03
th .....	04
navox .....	05
nia .....	05
.....	06, 07
.....	08

### Important Notes

Manufacturers use several codes for their brand. If the code entered fails, try the next one listed. If you are unable to turn on the TV, consult the manual for your model.



# Tape Operation

## Search System

For each recording, an invisible index mark is placed on the tape. A program index and information are also included for timer recordings. These marks are used to access or scan recordings.

### Index Search

1

```
INDEX  EARCH
ENTER INDEX NUMBER :1
U ING 1- 9 KEY
FORWARD EARCH :FF
REVER E EARCH:REW
EXIT : EARCH
```

Press **SEARCH\*** to display **EARCH** in top or Play mode, and then **press NUMBER keys** to select recording number.

- To calculate number, see below.
- Press **FF/SLOW+** or **REW/SLOW-** on the remote to start search.

2

```
INDEX SEARCH
FORWARD SEARCH : FF
REVERSE SEARCH : REW
```

 
Play begins at search end. To search forward or back 1 index, **press FF/SLOW+** or **REW/SLOW-** on the remote while screen left is displayed (10 sec.).

- To cancel, **press PLAY** or **STOP**.

### To Calculate Index Number


#### Example 1:

To go to rec. 2 from rec. 4, enter 3 and press REW.



#### Example 2:

 To go to rec. 6 from rec. 2, enter 4 and press FF.



NOTE: ↓ indicates start points of each recording.

### Note

- If Index search is started very close to an index mark, that index mark may not be counted in the search.

## Zero Search

To quickly return to a specified tape location.

1 Press **DISPLAY** during play to display Counter.

2

```
PLAY 12:00AM 0:00:00
SP
```

Press **COUNTER RESET** on remote at desired position to reset to "0:00:00".

3

Continue to record, playback etc.

4

Press **STOP**.

5

```
REW 12:30AM CH 02
0:30:30 SP
↓
STOP 12:31AM CH 02
0:00:00 SP
```

Press **CM/ZERO** in top mode to start Zero search.

- DECK will go into FF or REW mode and stop at the last point the Counter was set to 0:00:00.


## Commercial Skip

DECK fast forwards (skips) over 1, 2, or 3 minutes of recorded tape as desired.

1

Press **CM/ZERO** in Play mode.

- The skip time can be changed by pressing **CM/ZERO** repeatedly as shown by the figure below.

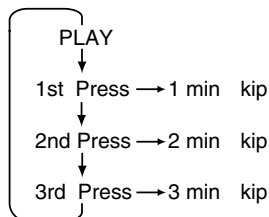

- No indication appears on-screen.

DETECTING TAPE POSITION




# Special VCR Features


## VCR/TV Selection Feature

The VCR/TV selection can be set to auto or manual.

**1** Press **ACTION\*** to display MENU.

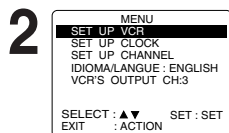

Press **▲▼** to select “ ET UP VCR,” and press **SET**.

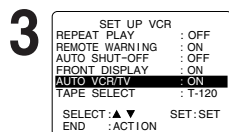

Press **▲▼** to select “AUTO VCR/TV,” and press **SET** to set “ON” or “OFF.”

- OFF(Manual): You select “VCR” or “TV” mode using the VCR/TV button on the remote.
- ON(Auto): “VCR” mode is automatically set when VCR is turned on, or in Play mode.

**4** Press **ACTION** to return to normal screen.


### Note

- For more on VCR/TV selection, see “Record one station, watch another” and “ elect channels at DECK” sections (see p. 21).


## VCR Lock Feature

When set to ON, all operations except for timer record and tape eject are prohibited. Useful for households with small children.

**To turn on, hold down REC** on DECK in top mode with no tape inserted for 7 seconds. (Please ignore “NO CA ETTE” warning.)

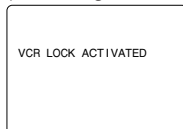

**To turn off, repeat above.**

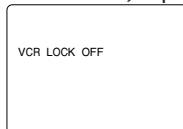

- VCR Lock cancels in 24 hours.

### Note

- DVD functions will work even when VCR Lock is set to ON.

## Blue LIGHT ON/OFF Feature


You can turn DECK's blue light off if you find it to be glaring.

**To turn LIGHT off,** press **DISPLAY** for 5 seconds in VCR mode.

**To turn LIGHT on,** repeat above.

### Notes

- This operation is not possible in power off mode.
- If you unplug DECK, DECK turns to default setting (Blue light turns on).

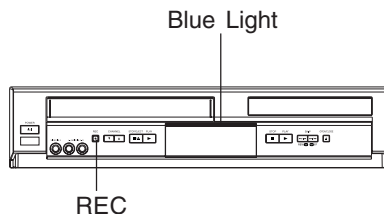




**\*Important:** If a remote control button does not work when pressed, press the VCR button on the remote and try the button again.


## Weak Signal Display Feature

When “ON,” picture is displayed regardless of signal strength.

**1 Press ACTION**  
to display MENU.

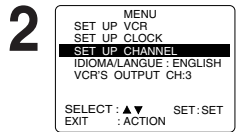

**Press ▲▼**  
to select “ ET UP CHANNEL,” and  
**press SET.**

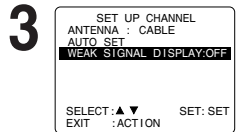

**Press ▲▼**  
to select “WEAK SIGNAL  
DISPLAY,” and  
**press SET**  
to set “ON” or “OFF.”


- ON: Picture is displayed regardless of signal condition, and may not always be clearly visible.
- OFF: Screen turns solid blue when signal is weak or non-existent.
- Selecting ON has no effect on connected equipment with blue back feature.

**4 Press ACTION**  
to return to normal screen.


## Auto Shut-Off Feature

The power shuts off at a preset time.


**1 Press ACTION**  
to display MENU.

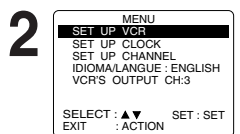

**Press ▲▼**  
to select “ SET UP VCR,” and  
**press SET.**

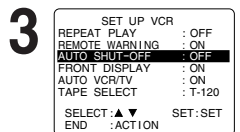

 
**Press ▲▼**  
to select “AUTO SHUT-OFF.”  
**Press SET** repeatedly to  
change shut-off time as  
shown below.



**4 Press ACTION**  
to return to normal screen.

### Note

- The shut-off countdown will not function during Play or Record.

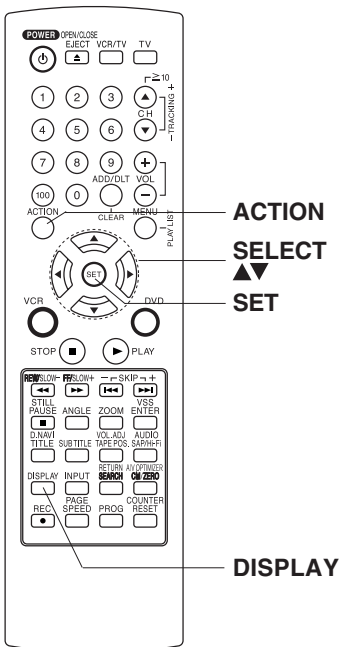



1 2 3 ▲ 100%  
 4 5 6 ▼ 100%  
 7 8 9 +  
ADD/DLT  
 000 0 -  
CLEAR MENU




STOP STOP - SNP +  
STILL ANGLE ZOOM VSE  
SEARCH TITLE SUBTITLE NO. AD AUDIO  
RETURN AUTO STOP  
PAGE

**ACTION**  
**SELECT**  
**▲▼**  
**SET**  
  
**STOP**  
  
**STILL/  
 PAUSE**  
  
**INPUT**  
  
**REC**

# Copying Your Tapes (Dubbing)

## Connection

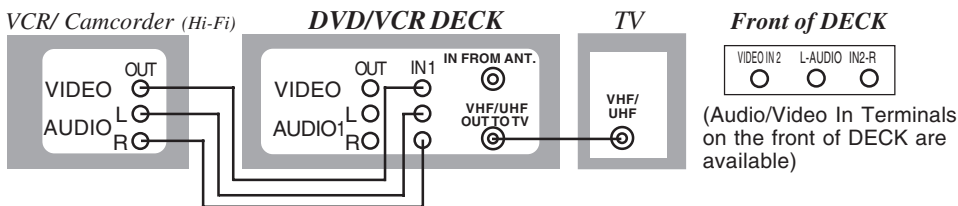

- Connect VIDEO OUT terminal on Playing VCR to VIDEO IN terminal on DECK. To monitor the dubbing, also connect TV as shown.
- Connect "L" and "R" AUDIO OUT terminals on Playing VCR to "L" and "R" AUDIO IN terminals on DECK.  
In place of Playing VCR, you can use other equipment, such as a Camcorder. Simply connect the unit's Audio/Video outputs to DECK.

### Playing (Source) VCR

### Recording (Editing) DECK

 
- |  |   |          |  |
|--|---|----------|--|
| <b>1</b>   | Insert a pre-recorded tape.   | <b>1</b> | Insert a blank tape with record tab.   |
| <b>2</b>   | _____   | <b>2</b> | <b>Press INPUT</b> to set DECK Input mode to LINE for Video Input.<br>( See "Selecting the Input Mode" below.) |
| <b>3</b>   | <b>Press PLAY</b> , then <b>PAUSE</b> immediately to enter PLAY/PAUSE mode. | <b>3</b> | <b>Press REC</b> , then <b>STILL/PAUSE</b> immediately to enter REC/PAUSE mode.                                |
| <b>The operation of steps 4 and 5 must be done on the playing and recording VCRs at the same time.</b> |   |          |  |
| <b>4</b>   | <b>Press PLAY</b> to start dubbing. Playing VCR starts playback.            | <b>4</b> | <b>Press STILL/PAUSE</b> to start dubbing. DECK starts recording.  |
| <b>5</b>   | <b>Press STOP</b> to stop dubbing.  | <b>5</b> | <b>Press STOP</b> to stop dubbing.   |

### To Monitor Dubbing on TV

- Turn TV on and tune to the Recording VCR channel (CH 3 or CH 4).
- If Auto VCR/TV (see p. 32) is set to "OFF," press VCR/TV on the remote for VCR mode.

### Selecting the Input Mode

- Method 1: **Press INPUT** repeatedly.  
Channel Number ↔ LINE1 ↔ LINE2
- Method 2: **Press CH ▲/▼**.  
Display will change as below.



- "L1" or "L2" lights up on Multi Function Display (about 4 seconds) when LINE1 or LINE2 is selected.
- LINE1: For rear audio/video connection.
- LINE2: For front audio/video connection.


### Note

- Dubbing tapes protected with Copy Guard will result in poor quality recordings.

**Caution:** •Unauthorized exchanging and/or copying of copyrighted recordings may be copyright infringement.

 
•Please note that some tapes cannot be dubbed on DECK.

Also, it is not possible to dub DVD/ CD to VHS tapes using DECK.

•When  appears on the screen while a button is being operated, it means that the corresponding operation is prohibited by DECK or the disc.



⊖ appears on the screen while on is being operated, it means the corresponding operation is limited by DECK or the disc.



## Multiple Angles

DVDs may contain so many angles allowing the viewer to watch the same scene from different angles. You can select the angle by pressing the ANGLE button.

1

ANGLE Indicator lights up when a scene recorded in different angles is detected. The angle number is displayed on the hand so that you can select the angle when the ANGLE button is pressed.

## Zoom (DVD only)

You can enlarge specific portions of the picture and change the zoom ratio using the ZOOM button during playback.

Press **ZOOM** repeatedly to change the zoom ratio as follows.

- You can enlarge the picture to one of 2 magnification ratios.

X 1.0 (ORIGINAL SIZE) X 2.0 (2x ORIGINAL SIZE)



DVD  
guid  
Al  
steps sh  
the following  
the menu.

1


DVD **ss MENU**  
lay mode to d  
1. UBT  
2. AUDIO

\*Important: if a remote control button does not work when pressed, press the DVD button on the remote and try the button again.


## Program Play (CD only)

You can program specific tracks and order of play.


**1** Press **ACTION** to display DVD MAIN MENU.

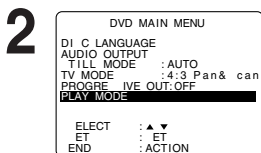

Press  **$\blacktriangle\blacktriangledown$**  to select "PLAY MODE," and press **SET** to display.

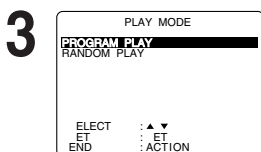


Press  **$\blacktriangle\blacktriangledown$**  to select "PROGRAM PLAY," and press **SET** to display.

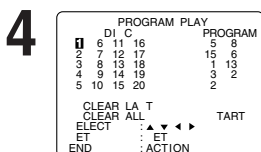

Press  **$\blacktriangle\blacktriangledown\blacktriangleleft\blacktriangleright$**  to select a track number (Track numbers on disc are displayed.), and press **SET**.

- Repeat step 4 to select another track.
- The selected track is added on the right side.

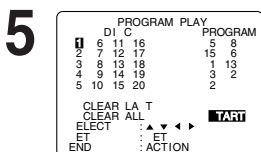

Press  **$\blacktriangle\blacktriangledown\blacktriangleleft\blacktriangleright$**  to select "TART," and press **SET** to start play of programs in the sequence selected.

- To cancel, press **STOP** during play, then press **CLEAR**.

### Notes

- Up to 15 tracks can be programmed.
- " **$\blacktriangleleft$** " or " **$\blacktriangleright$** " (depending on disc) indicates additional PROGRAM PLAY screen. Press  **$\blacktriangle\blacktriangledown\blacktriangleleft\blacktriangleright$**  for next or previous screen.
- **To clear the last program one by one**  
Press  **$\blacktriangle\blacktriangledown\blacktriangleleft\blacktriangleright$**  to move to "CLEAR LA T" and press **ET**. (Pressing **CLEAR** on remote control also clears last program.)
- **To clear all programs**  
Press  **$\blacktriangle\blacktriangledown\blacktriangleleft\blacktriangleright$**  to move to "CLEAR ALL" and press **ET**. (Programs are also cleared when the power is turned off or the disc is removed.)


### Ready Checklist

- DECK is in DVD mode, press DVD.
- CD is inserted.

## Program Repeat Play (CD only)


**1** Do operation steps 1 through 5 at left on this page.

**2** Press **DISPLAY** to display Disc Information screen. (Disc Information creen)

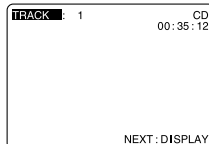


**3** Press **DISPLAY** to display DECK Information screen.

**4** Press **SET** to enter elect mode. Cursor move to "OFF." (DECK Information creen)

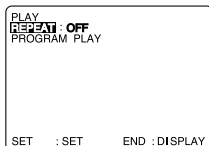

**5** Press  **$\blacktriangle\blacktriangledown$**  to select "DI C." (DECK Information creen)

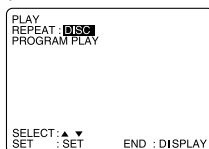


**6** Press **SET** to set mode. Cursor moves to "REPEAT." To cancel, select "REPEAT : OFF" in step 5, then press **SET**.

# Disc Operation (continued)


## Random Play (CD only)

Tracks are played in a random order.

**1** Press **ACTION\*** to display DVD MAIN MENU.

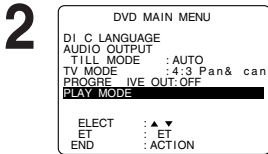

Press **▲▼** to select "PLAY MODE," and press **SET** to display.

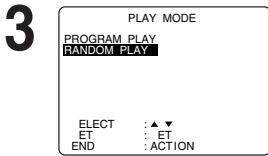


**2** Press **▲▼** to select "RANDOM PLAY," and press **SET** to begin random play.

• To cancel, press **STOP** during play, then press **CLEAR**.

## Ready Checklist

DECK is in DVD mode, press DVD.

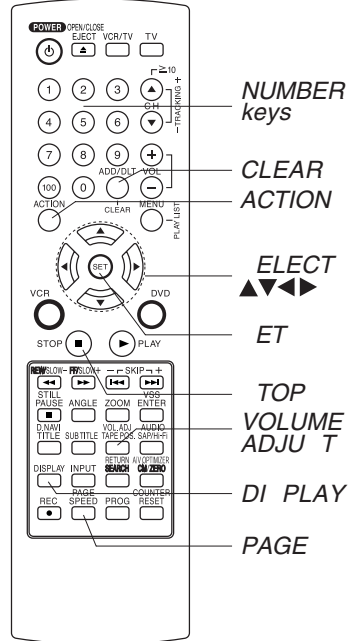

## Setting the VOLUME ADJUST (DVD only)

Some DVDs are recorded in lower than average volume levels. For these DVDs, this DECK can be set so that the average volume is increased automatically.

Press **VOL.ADJ** repeatedly to change "OFF" ↔ "ON."

- "OFF" or "ON" lights up on Multi Function Display (about 3 seconds) when VOL.ADJ is pressed.

	VOLUME ADJUST "OFF"	VOLUME ADJUST "ON"
Some DVD [Low volume level]	Volume is at the original level.	Volume level is increased when played back.

- "ON" is set ..... When a DVD is played back, the average volume is increased.
- "OFF" is set .... The volume level recorded on the disc is played back just as it is.

### Notes

- While settings can be made with all discs, they may have no effect with some discs. Please set as you prefer.
- When audio equipment is connected, setting the Sound Output level to "OFF" is recommended.
- If the sound becomes abnormal while playing a disc, set the Sound Output level to "OFF."



\*Important: if a remote control button does not work when pressed, press the DVD button on the remote and try the button again.

## DVD-Audio Operation (DVD-Audio only)

This DECK, equipped with a 192 kHz/ 24 bit Audio D/A converter, supports DVD-Audio recorded with high quality sound.

The DVD-Audio feature includes “Still Image Skip” and “Bonus Group Playback” functions. (See below.)

Please refer to “Basic DVD Operation” on pages 22 and 23.

### Still Image Skip (DVD-Audio only)

DVD-Audio still images (only if contained) can be skipped over.

**Press PAGE**

in Play or Pause mode to display the still image and page number.


### Bonus Group playback (DVD-Audio only)

Some DVD-Audio discs contain bonus groups. To enjoy these groups you may have to enter a password. Refer to the disc's jacket.

**1** Press **DISPLAY** in stop mode to display “On-screen Displays.”

**Note** • During playback, Bonus Group tracks cannot be selected.

**2** Press **▲▼** to select “GROUP,” and press **SET**. Press **▲▼** or **NUMBER keys** to select bonus group number, and press **SET** (see pp. 44, 45.)

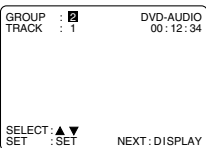

**Notes** • If the proper secret code is already entered, Bonus Group tracks can be selected. (Secret code enter screen is skipped.)

**3** Press **NUMBER keys** to enter bonus group secret code.

**To Make Corrections**

Press **◀** repeatedly to move the cursor.

Press **NUMBER keys** to make the correction.

**Note** • When the proper secret code has been entered, Bonus Group track 1 playback begins. If a mistake is made, the secret code enter screen is redisplayed.

**4** Press **CLEAR** to return to normal screen.

# DVD-RAM Operation (DVD-RAM only)

You can enjoy playing your personally recorded/edited DVD-RAM discs on this DECK.

## Note

- This DECK was designed for playback only. DVD-RAM recording is not possible.

## Play a DVD-RAM

- 1 Do steps 1 ~ 3 on page 22.**
  - Play begins from the first program title recorded on the DVD-RAM.
- 2 Press *D.NAVI*\* or *PLAY LIST*** to display Direct Navigator or Play List menu for easy title or scene selection.
  - See below for “Direct Navigator” or next page for “Play List information”.
- 3 Press *STOP*** to stop playing.
- 4 Press *OPEN/CLOSE*** to eject the disc.

## Direct Navigator

If the DVD-RAM features Direct Navigator, a list of recorded titles is displayed. Simply select a title number and start playback. (Operation can vary with disc used.)

- 1 Press *D.NAVI*** in Play/ top mode to display the Direct Navigator menu.

- 2 Press  $\blacktriangleleft$  to select a page and press  $\blacktriangleright$  to select a title (Program No.).**

Then, press *SET* or *PLAY* to start playing.

- “Pressing *ET* or *PLAY*” is not necessary when using NUMBER keys.

**Using NUMBER keys starts playing automatically.**

The number of available titles varies with each disc.

<Input 1 digit number 1 ••••1

Example> 2 digit number 12 ••  $\geq 10 \rightarrow 1 \rightarrow 2$

- 3 Press *D.NAVI*** to clear Direct navigator menu.

Program No.      Recording time length      Page No.

Program No.	Date	Length	Title
1	2002/12/24 5:15:41AM	00:01:00	Drama
2	2002/12/25 4:31:49AM	00:03:12	Pana NEW
3	2002/12/25 8:24:25AM	00:15:01	Tigers vs.Giants
4	2002/12/25 12:45:00AM	00:03:00	Dinosaur

ELECT:  $\blacktriangleleft$   $\blacktriangleright$  ET      END:TITLE

Recording time and date

Titles  
(Example)

\*Important: if a remote control button does not work when pressed, press the DVD button on the remote and try the button again.

## Play List

If the DVD-RAM features a Play List, your preselected list of favorite scenes is displayed for easy access. (Operation can vary according to how you edited the DVD-RAM.)

**1 Press PLAY LIST**  
in Play/ top mode to display the Play List menu.

**2 Press ◀▶** to select a page and **press ▲▼** to select a title (Play List No.).  
Then, **press SET** or **PLAY** to start playing.

- “Pressing **ET** or **PLAY**” is not necessary when using **NUMBER** keys.

**Using NUMBER keys starts playing automatically.**

The number of available titles varies with each disc.


<Input 1 digit number 1 ••••1  
Example> 2 digit number 12 •• ≥ 10 → 1 → 2

**3 Press PLAY LIST** to clear Play List menu.

Play List No.      Established time length      Page No.

Play List No.	Date	Length	Title
1	2002/12/24 5:15:41AM	00:01:00	Movie Picture Playback
2	2002/12/25 6:31:49AM	00:03:12	Till Picture Playback
3	2002/12/25 8:24:25AM	00:15:01	Hybrid Playback
4	2002/12/25 12:45:00AM	00:03:00	Partial Playback

Recording time and date      Titles (Example)

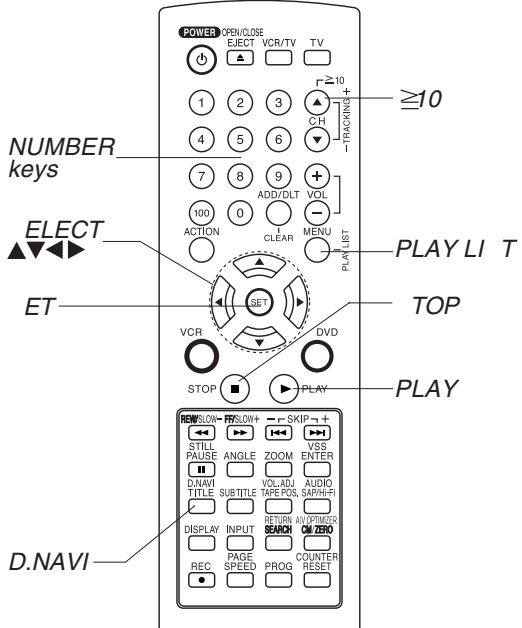

DVD Operation

### Notes

- Titles of Direct Navigator and Play List cannot be changed using this DECK.
- With Direct Navigator, up to 99 programs can be displayed. With Play List, up to 99 titles (999 scenes) can be displayed.
- While DVD MAIN MENU is displayed, Direct Navigator and Play List display will not appear even if TITLE or MENU is pressed.
- When ⊘ appears on the screen while a button is being operated, it means that the corresponding operation is prohibited by DECK or the disc.

# DVD Operation using On-Screen Displays

When *DI PLAY* is pressed, On- screen Displays show disc information (title/chapter/track number, elapsed playing time) and DECK information (repeat play, play mode).



## Ready Checklist

- DECK is in DVD mode, press DVD.



**1** Press **DISPLAY\*** in Play or top mode to display "On- screen Displays."

- Each **press** of **DISPLAY** changes the on-screen display as follows. (Refer to pp. 44 ~ 48.)

**2** Press **▲▼** (or **◀▶**) to select an item, and press **SET**.

**3** Press **▲▼** or **NUMBER** keys to select the setting, and press **SET**.

<Example of DVD-Video>

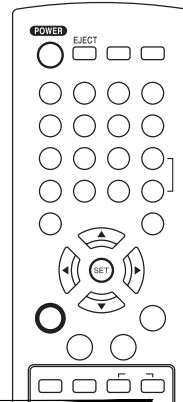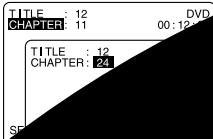

NUMBER  
keys

the screen while  
ed, it means  
operation is  
the disc.

\*Important: if a remote control button does not work when pressed, press the DVD button on the remote and try the button again.

## Detailed Descriptions of each On-Screen Display

### ■ Disc information screen (for DVD-Video)

#### 1. TITLE No.

Go directly to a preset title number.

- elect "TITLE", and **press SET**.
- Change the No. by **pressing ▲▼** or **NUMBER keys**, and **press SET**.

#### 2. CHAPTER No.

Go directly to a preset chapter number.

- elect "CHAPTER", and **press SET**.
- Change the No. by **pressing ▲▼** or **NUMBER keys**, and **press SET**.
- This function does not work with some discs.

#### 3. Disc currently being played

The type of disc currently inserted is displayed.

#### 4. Elapsed playing time

The screen may be changed by selecting the elapsed time.

- elect the elapsed playing time ("xx:xx:xx"), and **press SET**.
- Change the elapsed time by **pressing NUMBER keys**.



Enter time starting with seconds.

If the time entered is not on the disc, the entry will have no effect.  
Re-enter the correct time.

e.g., press 0 → 1 → 2 → 3 → 4 → 5 → ET for "01 : 23 : 45".

press 3 → 0 → ET for "00 : 00 : 30".

- This function does not work with some discs.

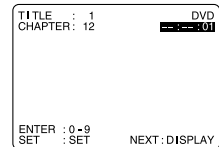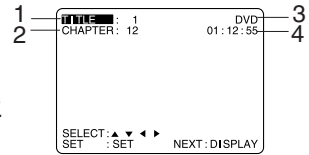

### ■ Disc information screen (for DVD-Audio)

#### A. GROUP No.

Go directly to a preset group number.

- elect "GROUP", and **press SET**.
- Change the No. by **pressing ▲▼** or **NUMBER keys**, and **press SET**.

#### B. TRACK No.

Go directly to a preset track number.

- elect "TRACK", and **press SET**.
- Change the No. by **pressing ▲▼** or **NUMBER keys**, and **press SET**.

#### C. Disc currently being played

The type of disc currently inserted is displayed.

#### D. Elapsed playing time

The screen may be changed by selecting the elapsed time.

- elect the elapsed playing time ("xx:xx:xx"), and **press SET**.
- Change the elapsed time by **pressing NUMBER keys**.



Enter time starting with seconds.

If the time entered is not on the disc, the entry will have no effect.  
Re-enter the correct time.

e.g., press 0 → 1 → 2 → 3 → 4 → 5 → ET for "01 : 23 : 45".

press 3 → 0 → ET for "00 : 00 : 30".

- This function does not work with some discs.

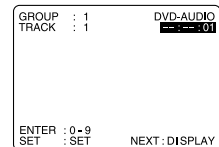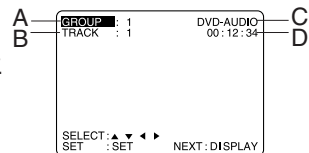

# DVD Operation using On-Screen Displays (continued)

## ■ Disc information screen (for CD)

### 1. TRACK No.


Go directly to a preset track number.

- elect "TRACK", and **press SET**.\*
- Change the No. by **pressing ▲▼** or **NUMBER keys**, and **press SET**.

### 2. Disc currently being played

The type of disc currently inserted is displayed.

### 3. Elapsed playing time

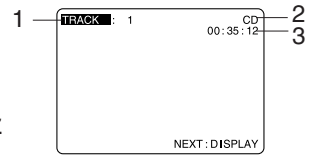

## ■ Disc information screen (for DVD-RAM)

### A. Direct Navigation (PROGRAM) or PLAY LIST No.

Go directly to a preset title number.

- elect "PROGRAM" or "PLAY LI T", and **press SET**.
- Change the No. by **pressing ▲▼** or **NUMBER keys**, and **press SET**.

### B. Disc currently being played

The type of disc currently inserted is displayed.

### C. Elapsed playing time

The screen may be changed by selecting the elapsed time.

- elect the elapsed playing time ("xx:xx:xx"), and **press SET**.
- Change the elapsed time by **pressing NUMBER keys**.

Enter time starting with seconds.


If the time entered is not on the disc, the entry will have no effect.

Re-enter the correct time.


e.g., press 0 → 1 → 2 → 3 → 4 → 5 → ET for "01 : 23 : 45".

press 3 → 0 → ET for "00 : 00 : 30".


- This function does not work with some discs.

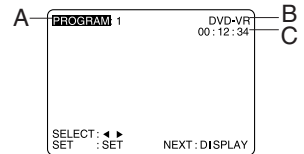


Direct Navigation  
(PROGRAM)

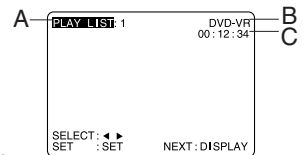

PLAY LI T

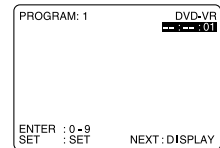

## Note


- When  appears on the screen while a button is being operated, it means that the corresponding operation is prohibited by DECK or the disc.

\*Important: if a remote control button does not work when pressed, press the DVD button on the remote and try the button again.

## ■ DECK information screen (for DECK)

### 1. Operating mode

The current operation is displayed.

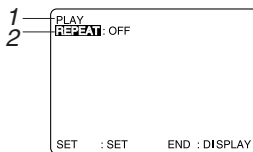

### 2. Repeat Play mode (see p. 48)

Repeat play mode can be selected.


- select "REPEAT", and **press SET**.
- Change the desired mode during play by **pressing ▲▼**, and **press SET**.

Repeat Play mode			
DVD-Video	CHAPTER	TITLE	OFF (NORMAL)
DVD-Audio	TRACK	GROUP	OFF (NORMAL)
DVD-RAM	(PROGRAM)	PROGRAM	DI C
	(PLAY LI T)	PLAY LI T	ALL PLAY LI T
CD	TRACK	DI C	OFF (NORMAL)


### 3. Play mode [CD only] (see p. 39, 40.)

When Play mode is set (p. 39, 40), the mode name is displayed.

PROGRAM PLAY	program play
RANDOM PLAY	random play
----	normal play

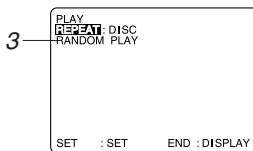

**Note** • For repeat play in VCR mode, see p. 31.

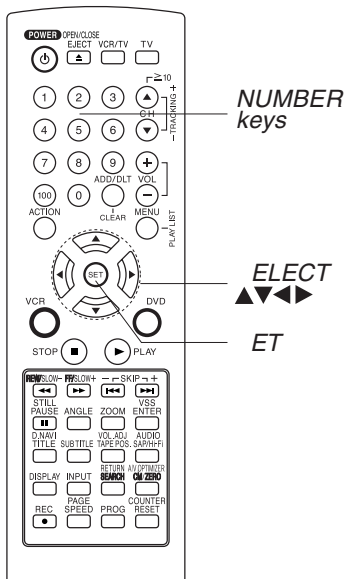


# DVD Operation using On-Screen Displays (continued)


## For your reference

Repeat Play mode example (see p. 47)


### • CHAPTER/TITLE REPEAT PLAY (DVD-Video)

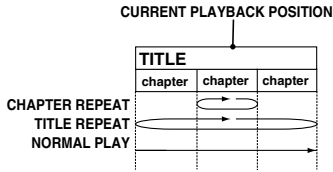


### • TRACK/GROUP REPEAT PLAY (DVD-Audio)

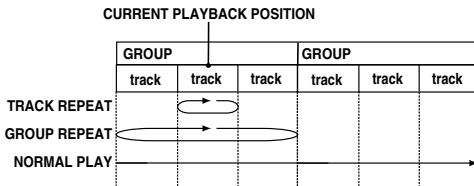



### • TRACK/DISC REPEAT PLAY (CD)

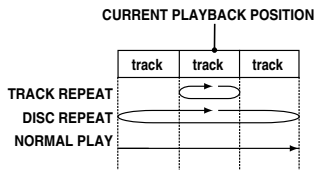

### • PROGRAM/DISC REPEAT PLAY (DVD-RAM [PROGRAM])

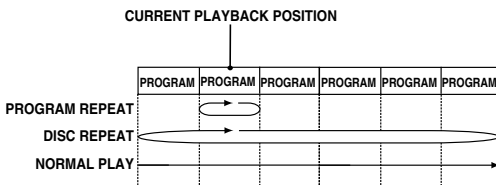

### • PLAY LIST/ALL PLAY LIST REPEAT PLAY (DVD-RAM [PLAY LIST])

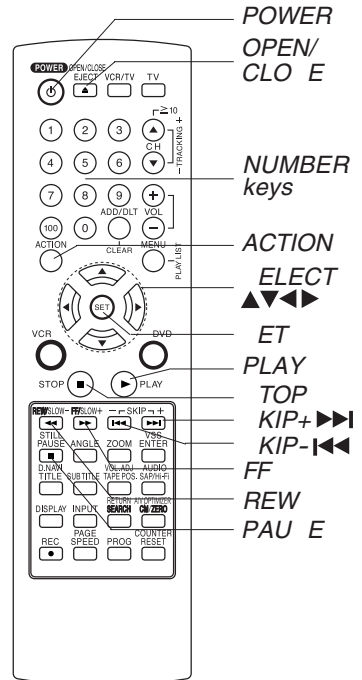
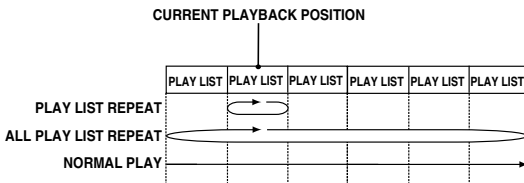


**Note** • For repeat play in VCR mode, see p. 31.

\*Important: if a remote control button does not work when pressed, press the DVD button on the remote and try the button again.



# MP3/WMA/JPEG Playback Operation

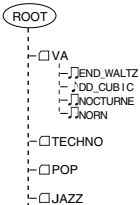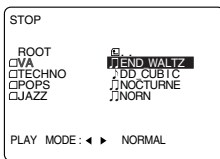

## Notes

- Only File (not Folder) area operation is possible.
- Files are displayed in the following order:  
(!...0,1.....9,A,B.....Z).

- 
- 4** • **Select file** (During TOP mode)  
1) Press ▲▼ to select an MP3/WMA file (

# MP3/WMA/JPEG Playback Operation (continued)

## JPEG Playback

You can play back JPEG images.


Displayable Image Size: 32x32~7680x7680 pixels

- Note** • Some JPEG format may not be played back.

Do steps 1~3 on page 49.

**1** Press **▲▼** to select a JPEG file (📷).

**2** Press **SET** or **PLAY**.  
Selected JPEG file is displayed.  
[JPEG Playback Screen]

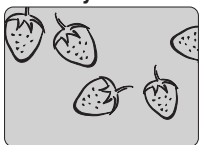

<Example>

- Returned on the MP3/WMA/JPEG MENU  
⇒ Press **STOP**. ( see p. 49)
- Next/Previous Search  
⇒ Press **SKIP+ ▶▶|** or **SKIP- |◀◀**.
- Start Slide-show ⇒ Press **FF/SLOW+** or **REW/SLOW-**. (below)
- Enlarging an image ⇒ Press **ZOOM**. (P. 51)
- Rotating an image ⇒ Press **ANGLE**. (P. 51)

**3** Press **STOP** to return to the MP3/WMA/JPEG MENU.

## JPEG Slide-show

(During JPEG Playback.)

JPEG files are displayed automatically (about every 3 seconds) as a slide-show.

**1** Press **FF/SLOW+** or **REW/SLOW-**.

<Example>



Image changes every 3 seconds.

- Cancel slide show  
⇒ Press **STOP** to return the MP3/WMA/JPEG MENU. ( see p. 49)
- Still picture  
⇒ Press **STILL** (only LIDE).  
⇒ Press **PLAY** to release.
- Forward/Reverse File Skip  
⇒ Press **SKIP+ ▶▶|** or **SKIP- |◀◀**.  
Each press skips a file.

**2** Press **ACTION** to return to the DVD MAIN MENU.

**50**

- Select **PLAY MODE** [JPEG Slide-show] (During TOP mode)  
Press **◀▶** to select the desired PLAY MODE ( see below).

### [PLAY MODE]

#### NORMAL:

All JPEG files are selected and played back one time only.

#### SINGLE REPEAT:

The selected JPEG file is played back repeatedly.

#### FOLDER REPEAT:


The JPEG files contained in the selected folder are played back repeatedly. However, folders below the selected folder are not played back.

#### DISC REPEAT:

All JPEG files are played back repeatedly.

<Example>

Operation can be done when files are in order, such as in the diagram below.

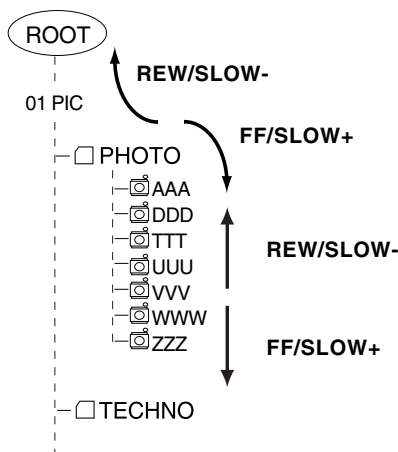

OPEN/CLOSE




ANGLE

DVD  
Operation

# Settings for DVD Operation

**1** Press **ACTION\*** to display DVD MAIN MENU.

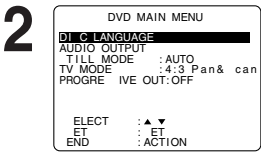

Press **▲▼** to select an item, and press **SET**.

## DISC LANGUAGES ( see below)

All languages offered on the disc can be set. If a language not offered is set, the original disc language will be selected.

## AUDIO OUTPUT ( see p. 53.)

You can set the audio output that comes from the digital audio output terminal.

## STILL MODE ( see p. 54.)


To select "FIELD" (Field still) or "FRAME" (Frame still) to prevent jitter or make small text or fine patterns clearly visible in a still picture. When "AUTO" is set, "FIELD" or "FRAME" is selected automatically.

## TV MODE ( see p. 54.)


To select whether the video material for a wide-screen will be played back in the Pan & can style, Letterbox style or 16 : 9 style.

## Disc Languages (DVD only)

To select and set the language of the audio soundtrack, subtitles, or title/DVD menus for all discs to be played.

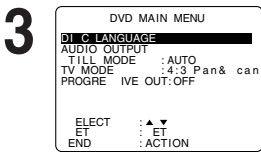

Press **▲▼** to select "DI C LANGUAGE , " and press **SET** to display screen.

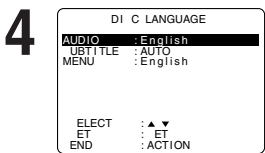

Press **▲▼** to select an item, and press **SET** repeatedly for desired language. (Please refer right.)

**5** Press **ACTION** to redisplay DVD MAIN MENU and go to step 2 to setup another item.


Or, press **ACTION** twice to exit.

Once initial settings are done, they remain in memory (even after power is turned off) until changed. This means DECK will operate under the same conditions (especially DVDs) each time.



## Ready Checklist

DECK is in DVD mode, press DVD.

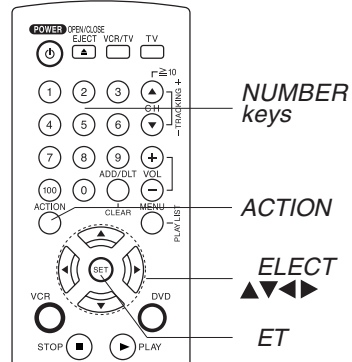

## "AUDIO" selections

(Factory preset: English)

To select the audio soundtrack language.

**English/Spanish/French/Japanese**

**Original:** Original disc language

**OTHER 0000:** Other language selection\*1

## "SUBTITLE" selections

(Factory preset: AUTO)

To select the subtitle language.

**AUTO:** ame language selected for "AUDIO"

- If language set for "AUDIO" is used in playback, subtitles will not appear.

- If another language is used during playback, the subtitles will appear in the language selected at "AUDIO" setup.

**English/Spanish/French/Japanese**

**OTHER 0000:** Other language selection\*1

## "MENUS" selections

(factory preset: English)

To select the language used in title menus or DVD menus.

**English/Spanish/French/Japanese**

**OTHER 0000:** Other language selection\*1

**To enter OTHER \*\*\*\* code number, Press NUMBER keys** (Please refer to language codes on p. 56).

To make corrections, press **◀** repeatedly to delete language code number, and correct.


\*1 If the selected language is not offered, the original disc language is selected.

**\*Important:** If a remote control button does not work when pressed, press the DVD button on the remote and try the button again.


## Audio Output (DVD only)

Select the digital output to be output from the optical digital audio output connector of DECK.

**1 Press ACTION** to display DVD MAIN MENU.

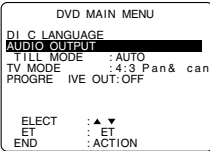

Press **▲▼** to select “AUDIO OUTPUT,” and press **SET** to display screen.

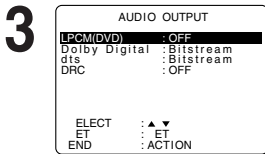

Press **▲▼** to select an item, and press **SET** repeatedly for output. ( See below.)

### ■ “LPCM (DVD)” selections

**OFF:** Linear PCM of less than 44.1 or 48 kHz/16 bit is output. When playing DVDs recorded in linear PCM of over 44.1 or 48 kHz/20 bit, no digital audio is output. (Factory preset)

**PCM:** When playing DVDs recorded in linear PCM of 44.1 or 48 kHz/20 bit/24 bit or more, digital audio converted to 44.1 kHz/16 bit or 48 kHz/16 bit is output. (Digital output of PCM audio is restricted to 48 kHz/16 bit or below for copyright protection.)

### ■ “Dolby Digital” selections

**Bitstream:** Dolby Digital bitstream (1 ch - 5.1 ch) is output. (Factory preset)

**PCM:** When you have connected an amplifier that doesn't have a built-in Dolby Digital decoder.

### ■ “dts” selections

**Bitstream:** DT bitstream is output. (Factory preset)

**PCM:** When you have connected an amplifier that doesn't have a built-in DT decoder.

### ■ “DRC (Dynamic Range Compression)” selections

**OFF:** Normal audio range is selected. (Factory preset)

**ON:** For dynamic sound even at low volume, this is useful for late-night listening. [Dolby Digital DVDs only].

**4 Press ACTION** to redisplay DVD MAIN MENU and go to step 2 to setup another item.

Or, press **ACTION** twice to exit.



## Ready Checklist

DECK is in DVD mode, press DVD.

Type of amplifier to be connected	Recommended setting		
	LPCM (DVD)	Dolby Digital	DT
No amplifier is connected	---	---	---
AV amplifier (with digital audio input connector) without Dolby Digital/DT decoder	PCM	PCM*1	PCM*1
AV amplifier including Dolby Digital decoder	PCM	Bitstream	PCM
AV amplifier including Dolby Digital/DT decoder	PCM	Bitstream	Bitstream*2

• Make settings according to amplifier connected to optical audio output as shown in above table.

\*1 When connecting an amplifier (with an optical digital input connector) which does not contain the Dolby Digital or DT decoder, be sure to select “PCM”. If “Bitstream” is selected, starting DVD play may cause such a high level of noise as to be harmful to your ears and damage the speakers.

\*2 When a dts decoder is connected, please select “Bitstream” in “dts.” If “PCM” is selected, there will be stereo sound. When a Dolby Digital decoder is connected, please select “Bitstream” in “Dolby Digital.” If “PCM” is selected, there will be stereo sound.

## Still Mode (DVD only)

et to reduce jitter in a displayed still picture of a motion picture.

**1** Press **ACTION\***  
to display DVD MAIN MENU.

**2** Press **▲▼**  
to select " STILL MODE,"  
and  
press **SET** repeatedly  
for mode. ( See below.)

**MODE:** "FIELD" (Field still) or "FRAME" (Frame still) is  
automatically selected during the still mode.  
(Factory preset)

**MODE:** "FIELD" (Field still) is always selected.  
This setting will reduce jitter when compared  
with "AUTO" on some discs.

**MODE:** "FRAME" (Frame still) is always selected.  
Some texts and fine patterns will be seen clearly  
when compared with "AUTO" on some discs.

Press **ACTION**  
to exit this mode.

## TV Mode (DVD only)

the screen display style for wide-screen video  
initial playback.

Press **ACTION**  
to display DVD MAIN MENU.

Press **▲▼**  
to select "TV MODE,"  
and press **SET**  
repeatedly for mode.  
( See below.)

**Pan & Scan** (Factory preset) :  
Wide-screen video data is played in Pan & scan  
style (left and right of screen is trimmed.)

- Video data not formatted in Pan & scan will play  
in letterbox style.

**Letterbox** :


Wide-screen video data is played in Letterbox  
style (top and bottom of screen has black margin).

et "16:9" when using Wide-screen TV.


Press **ACTION**  
to exit this mode.

### Example

- Pan & scan (Factory preset)

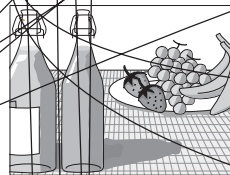

- Letterbox

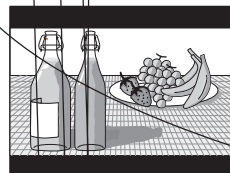


**\*Important:** If a remote control button does not work when pressed, press the DVD button on the remote and try the button again.

## PROGRESSIVE OUT

sets the Component Video Output Connector (p. 10, 13) to output the Progressive scan signal.

**1 Press ACTION** to display DVD MAIN MENU.

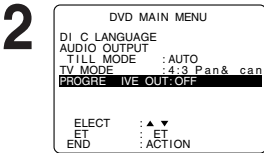

**Press ▲▼** to select "PROGRESSIVE OUT," and **press SET** repeatedly for mode. (see below.)


**OFF:** Progressive scan signal is not output.

**ON:** Progressive scan signal is output from the Component Video Output Connector.

**3 Press ACTION** to exit this mode.


## A/V OPTIMIZER

You can set to preset audio/video effects as desired.

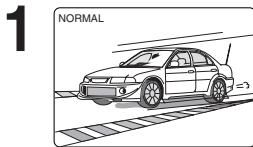


**Press A/V OPTIMIZER** in Play mode to display the A/V OPTIMIZER selection on-screen.

- Display disappears after 5 seconds.

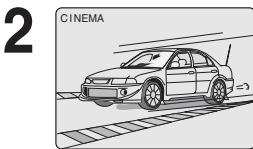

 **Press A/V OPTIMIZER** to select the desired mode below.



The video/audio effect of each mode is listed below.


Mode	Video	Audio
NORMAL	tandard video	tandard audio
CINEMA	Bright areas are subdued.	Enhances high/low range for dynamic sound.
DRAMA	tandard video	Reduces high/low range so dialog and vocals can be heard clearly.
ACTION	Brightness and sharpness are enhanced.	Enhances high/low range for dynamic sound.

### Note

- With some discs, the audio/video effect may not be obtained, also the audio/video effects may not work well.

### Notes

- If the television is not progressive compatible, a progressive scan picture is not available. Connect the Video Output or -Video Output connector (see p. 12, 13) and set PROGRESSIVE OUT to "OFF".
- CONSUMER SHOULD NOTE THAT NOT ALL HIGH DEFINITION TELEVISION SETS ARE FULLY COMPATIBLE WITH THIS PRODUCT AND MAY CAUSE ARTIFACT TO BE DISPLAYED IN THE PICTURE. IN CASE OF 525 PROGRESSIVE SCAN PICTURE PROBLEM, IT IS RECOMMENDED TO SET PROGRESSIVE OUT TO "OFF". IF THERE ARE QUESTIONS REGARDING OUR TV SET COMPATIBILITY WITH THE MODEL 525p DVD/VCR DECK, PLEASE CONTACT OUR CUSTOMER SERVICE CENTER.

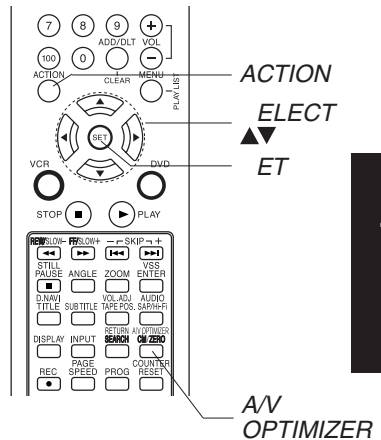

DVD Operation

# Language Code List

Enter the appropriate code number for the initial settings "AUDIO", "UBTITLE" and/or "MENU" (see p. 52).

Code	Language	Code	Language	Code	Language	Code	Language
6565	Afar	7079	Faroese	7678	Lingala	8375	lovak
6566	Abkhazian	7082	French	7679	Laothian	8376	lovenian
6570	Afrikaans	7089	Frisian	7684	Lithuanian	8377	amoan
6577	Ameharic	7165	Irish	7686	Latvian, Lettish	8378	hona
6582	Arabic	7168	cots Gaelic	7771	Malagasy	8379	omali
6583	Assamese	7176	Galician	7773	Maori	8381	Albanian
6588	Aymara	7178	Guarani	7775	Macedonian	8382	erbian
6590	Azerbaijani	7185	Gujarati	7776	Malayalam	8385	undanese
6665	Bashkir	7265	Hausa	7778	Mongolian	8386	wedish
6669	Byelorussian	7273	Hindi	7779	Moldavian	8387	wahili
6671	Bulgarian	7282	Croatian	7782	Marathi	8465	Tamil
6672	Bihari	7285	Hungarian	7783	Malay	8469	Telugu
6678	Bengali; Bangla	7289	Armenian	7784	Maltese	8471	Tajik
6679	Tibetan	7365	Interlingua	7789	Burmese	8472	Thai
6682	Breton	7378	Indonesian	7865	Nauru	8473	Tigrinya
6765	Catalan	7383	Icelandic	7869	Nepali	8475	Turkmen
6779	Corsican	7384	Italian	7876	Dutch	8476	Tagalog
6783	Czech	7387	Hebrew	7879	Norwegian	8479	Tonga
6789	Welsh	7465	Japanese	7982	Oriya	8482	Turkish
6865	Danish	7473	Yiddish	8065	Panjabi	8484	Tatar
6869	German	7487	Javanese	8076	Polish	8487	Twì
6890	Bhutani	7565	Georgian	8083	Pashto, Pushto	8575	Ukrainian
6976	Greek	7575	Kazakh	8084	Portuguese	8582	Urdu
6978	English	7576	Greenlandic	8185	Quechua	8590	Uzbek
6979	Esperanto	7577	Cambodian	8277	Rhaeto-Romance	8673	Vietnamese
6983	panish	7578	Kannada	8279	Romanian	8679	Volapük
6984	Estonian	7579	Korean	8285	Russian	8779	Wolof
6985	Basque	7583	Kashmiri	8365	anskrit	8872	Xhosa
7065	Persian	7585	Kurdish	8368	indhi	8979	Yoruba
7073	Finnish	7589	Kirghiz	8372	erbo-Croatian	9072	Chinese
7074	Fiji	7665	Latin	8373	inghalese	9085	Zulu



# Warning and Instruction Displays

These displays will alert you to a missed operation or provide further instructions.

OSD	Caution	Page
<b>PLEASE SET CLOCK BY PRESSING ACTION KEY</b>	If you attempt to set or review a Timer Recording and the Clock is not set...	24
<b>PLEASE PREPARE FOR TIMER REC</b>	If the DECK is not in top mode, or cassette is not inserted, or cassette has no record tab, or tape is at its end 2 minutes before a Timer Recording is about to begin...	24 25
<b>CHECK CASSETTE RECORD TAB</b>	If you press REC on the remote control or DECK, and a cassette is inserted with no record tab...	6
<b>NO CASSETTE</b>	If you press PLAY, FF, REW, or REC on the remote control or DECK without a cassette inserted...	20 21
<b>TO CANCEL TIMER REC HOLD DOWN STOP KEY FOR APPROX 3 SEC</b>	If you press TOP or POWER during a Timer Recording... (visible in VCR mode only)	25
<b>VIDEO HEADS MAY NEED CLEANING PLEASE INSERT HEAD CLEANING CASSETTE OR REFER TO MANUAL</b>  END : PLAY	If head cleaning becomes necessary while playing back a tape...	4
<b>VCR LOCK ACTIVATED</b>	If you press a function button other than TOP/EJECT or POWER while DECK is in VCR Lock mode...	32
<b>REMOTE CONTROL IS SET TO TV MODE USE VCR : VCR KEY USE DVD : DVD KEY</b>	If you press an invalid key on the remote while in TV mode...	28 29 34
<b>PLEASE CHECK THE DISC, AND FOR STAINS OR SCRATCHES ON DISC</b>	If you press PLAY, and DECK reads data from a stained or scratched disc in DVD mode.	6
<b>THIS DISC MAY NOT BE PLAYED IN YOUR REGION</b>	Playback of a disc with different region number was attempted. Only discs marked region "1", "ALL", or those that include "1" are playable on this DECK.	3
<b>THIS TYPE OF DISC CANNOT BE PLAYED. PLEASE INSERT A DIFFERENT DISC</b>	An unusable disc is inserted in the unit, or the disc is not installed with label side up.	6
<b>CANNOT PLAY THIS FILE</b>	This file format cannot be played. (Appears during MP3/WMA/JPEG file playback)	49
<b>THIS FILE IS PROTECTED</b>	This file is copyright protected and cannot be played back. (Playback is prohibited.) (WMA only)	49

# Before Requesting Service

Check the following points if you are having trouble with your DECK.

<b>Power</b>	<b>Solution</b>
No power...	<ul style="list-style-type: none"> <li>• Completely insert Power Plug into an AC outlet.</li> <li>• Press POWER button on.</li> <li>• Make sure power source is active.</li> </ul>
Power turns itself off...	<ul style="list-style-type: none"> <li>• Auto power-off (shutoff) occurs after about 5 min. in DVD mode with no operation, or if there is no broadcast signal in TV or Playback mode. Turn the power back on. (pp. 23, 33)</li> </ul>
<b>Recording &amp; Playback</b>	<b>Solution</b>
TV program cannot be recorded...	<ul style="list-style-type: none"> <li>• Check connections between DECK, external antenna, and TV.</li> <li>• Check channel selections.</li> <li>• Make sure your antenna system (CABLE or TV) is correctly set. (Channels [p. 18])</li> <li>• Make sure cassette record tab is intact. (p. 6)</li> </ul>
Timer recording cannot be performed...	<ul style="list-style-type: none"> <li>• Confirm that clock is set to current time and date.</li> <li>• Make sure Cable/D box (if used) is left on and tuned to channel to be recorded.</li> <li>• et recording start/stop times correctly. (p. 24)</li> <li>• Timer recording may not be performed or continued if a power interruption occurs before or during a Timer Recording, even after power is restored.</li> </ul>
There is no playback picture, or the playback picture is noisy or contains streaks...	<ul style="list-style-type: none"> <li>• elect channel 3 or 4 on TV to match VCR output channel (3 or 4) (p. 16) or select LINE.</li> <li>• et VCR/TV selector to "VCR."</li> <li>• Adjust TRACKING control in either direction. (p. 4)</li> <li>• Try Head Cleaning. (p. 4)</li> </ul>
During special effects playback picture may contain some vertical jitter when using a TV with an Automatic Vertical Hold Control...	<ul style="list-style-type: none"> <li>• et TV's Vertical Hold Control to MANUAL, then adjust.</li> </ul>
DECK cannot be controlled...	<ul style="list-style-type: none"> <li>• Make sure DECK power is on.</li> <li>• Check Remote batteries.</li> <li>• Make sure VCR LOCK is set to off. (p. 32)</li> <li>• Make sure Remote is in proper mode. (p. 28)</li> <li>• Make sure Timer Recording is not in progress.</li> </ul>
<b>Remote Control</b>	<b>Solution</b>
DECK cannot be remote controlled...	<ul style="list-style-type: none"> <li>• Make sure DECK power is on.</li> <li>• Make sure Remote is in VCR mode.</li> <li>• Aim Remote Control directly at remote sensor on DECK. (p.9)</li> <li>• Avoid any object blocking signal path.</li> <li>• Check Remote batteries. (p. 4)</li> <li>• Exposing DECK remote sensor to direct fluorescent or outdoor light may cause signal interference.</li> </ul>
PROG buttons do not respond...	<ul style="list-style-type: none"> <li>• PROG functions are not available in COMPONENT Video Output and -VIDEO OUT. et TV to either RF IN or VIDEO IN. (p. 10)</li> <li>• Check Remote batteries. (p. 4)</li> <li>• Press VCR or DVD button for DVD/VCR mode. (p. 28)</li> </ul>

DVD/CD	Solution
Play fails to start even when PLAY is pressed...	<ul style="list-style-type: none"> <li>This DECK cannot play discs other than DVDs and CDs.</li> <li>The disc may be dirty and require cleaning.</li> </ul>
Picture is distorted during rapid advance or rapid reverse...	<ul style="list-style-type: none"> <li>The picture will be somewhat distorted at times: this is normal.</li> </ul>
No Forward/Reverse scene search play...	<ul style="list-style-type: none"> <li>Some discs may have sections which prohibit Forward/Reverse scene search. (p. 23)</li> </ul>
Audio soundtrack and/or subtitle language is not the one selected at the initial settings...	<ul style="list-style-type: none"> <li>If the audio soundtrack and/or subtitle language selected at DVD initial settings does not exist on the disc, it will not be accessible.</li> </ul>
No subtitles...	<ul style="list-style-type: none"> <li>Subtitles appear only when available on disc.</li> <li>"OFF" is selected at the changing subtitle language. Select "ON" at the "Subtitle Languages" section (p. 36) to display the subtitles.</li> </ul>
Alternative audio soundtrack (or subtitle) language cannot be selected...	<ul style="list-style-type: none"> <li>Alternative language cannot be selected with discs which do not contain more than one language.</li> <li>For some discs, alternative language cannot be selected with the AUDIO or SUBTITLE button. Try selecting it from the DVD MAIN MENU if available.</li> </ul>
Angle cannot be changed...	<ul style="list-style-type: none"> <li>This function is dependent on software availability. Even if disc has multiple angles, they may be recorded for specific scenes only (ANGLE indicator on DECK lights up). (p. 37)</li> </ul>
Miscellaneous	Solution
Programs cannot be viewed on TV...	<ul style="list-style-type: none"> <li>Make sure TV is tuned to VCR's output channel (3 or 4).</li> <li>Check connections between DECK, external antenna, and TV.</li> <li>Set VCR/TV selector to "TV." (p. 21)</li> <li>Make sure proper signal source is selected.</li> <li>If the television is not progressive compatible, a progressive scan picture is not available. Connect the Video Output or S-Video Output connector (pp. 12, 13) and set PROGRESSIVE OUTPUT to "OFF" in the DVD Main Menu. (p. 55)</li> </ul>
Video cassette cannot be inserted...	<ul style="list-style-type: none"> <li>Insert the cassette with window side up; record tab facing you.</li> </ul>
Video cassette ejects when a recording is started or the power is turned off for timer recording...	<ul style="list-style-type: none"> <li>Make sure cassette record tab is intact. (p. 6)</li> </ul>
In stop mode, the motor (CYLINDER) continues to rotate...	<ul style="list-style-type: none"> <li>To enable Quick play mechanism, the cylinder will rotate for about 3 minutes. This reduces response time from stop to Play mode.</li> </ul>
The disc cannot be removed..	<ul style="list-style-type: none"> <li>First, unplug DECK. Then, prepare a rigid wire (e.g. an extended paper clip) and, applying moderate force, insert it straight into the hole at the base of the tray. The tray will eject a little. Now, pull the tray all the way out and remove the disc. (p. 9)</li> </ul>

# Index

 
## DECK & VCR

- A** ACTION button ..... 8, 18
  - Accessories ..... 4
  - ADD/DELETE button
    - (Add or Delete a Channel) ..... 8, 19
  - Audio Broadcast types
    - ( stereo/ AP/Mono) ..... 26
  - Audio Mode (Playback, Recording) .... 27
  - Auto Operation Functions ..... 31
  - Auto Shut-Off ..... 33
- B** Batteries ..... 4
  - Blue Light (ON/OFF Feature) ..... 9, 32
- C** Channel (“ SET UP CHANNEL”) ..... 18
  - Channel Up/Down,
    - Tracking/V-Lock Button ..... 4, 8
  - Clock (“ SET CLOCK”) ..... 18
  - CM/ZERO SEARCH button ..... 8, 30
  - Commercial Skip ..... 30
  - Connections ..... 12 ~ 15
  - Copy Your Tapes (Dubbing) ..... 35
  - COUNTER RESET button ..... 8, 30
- D** DIRECT PLAY button ..... 8, 11
  - DAYTIME (Daylight Saving Time) ..... 19
- E** EJECT button ..... 8, 20
  - ENTER button
    - (For tuning TV Channel) ..... 8, 28
- F** FAST FORWARD/ LOW+ button .... 8, 20
- H** Head Cleaning ..... 4
- I** Index Search ..... 30
  - Indicator (Multi Function Display) ..... 11
  - Initial Setup (Ready to Play) ..... 16, 17
  - INPUT button ..... 8, 35
- L** Location of Controls
  - (Remote, DECK) ..... 8 ~ 10
- M** Multi-Brand Control ..... 28, 29
  - Multi Function Display (Front Display)
    - ON/OFF Feature ..... 34
- O** On-Screen Displays (VCR) ..... 11
  - One Touch Recording ..... 21
- P** PLAY button (Playback a Tape) ..... 8, 20
  - POWER button ..... 8
  - PROG button (PROGRAM) ..... 8, 24
  - Program Clear, Review, Replace ..... 25
- Q** Quality Picture ..... 4
- R** REC button (Record on a Tape) ..... 8, 21
  - Record Tab ..... 6
  - Remote Sensor ..... 9
  - Remote Warning ..... 34
  - Repeat Play ..... 31
  - Reset All Memory Functions ..... 9
  - REWIND/ LOW- button ..... 8, 20
- S** AP/Hi-Fi ..... 27
  - SEARCH button ..... 8, 30
  - Specifications ..... 7
  - PEED button ..... 8, 21
  - Still (Freeze) Picture ..... 20
  - TILL/PAUSE button ( Still Picture) .. 8, 20
  - TOP button ..... 8, 20
- T** Tape Position, Tape Status ..... 31
  - Tape Select ..... 31
  - Timer Recording ..... 24
  - Trouble Shooting ..... 58, 59
  - TV mode button ..... 8, 28
- V** VCR Lock ..... 32
  - VCR mode button ..... 8, 28
  - VCR/TV button ..... 8, 21
  - VCR/TV Selection Feature ..... 32
  - VOLUME +/- button (TV Volume) .... 8, 28
- W** Warning and Instruction Displays ..... 57
  - Weak Signal Display ..... 33

**DVD**

- A** ACTION button ..... 8, 52
- ANGLE button
  - (Multiple Angle Viewing) ..... 8, 37, 51
- AUDIO button
  - (Audio Soundtrack Language) ..... 8, 36
- Audio Output
  - (For selecting Audio Output) ..... 53
- Auto-Power Off Function ..... 23
- A/V OPTIMIZER ..... 55
- B** Bonus Group (For DVD-Audio) ..... 41
- C** CLEAR button ..... 8, 39
- Component Video Output ..... 10, 13
- D** Direct Navigator ..... 42
- Disc Languages ..... 52
- DI PLAY button
  - ("On- screen Display") ..... 8, 44
- DT ..... 14
- DVD-Audio ..... 41
- DVD Menu ..... 38
- DVD mode button ..... 8, 28
- DVD-RAM (DVD-VR) ..... 42
- F** Frame by Frame Picture ..... 23
- Forward/Reverse Chapter/Track Skip... 23
- Forward/Reverse Scene Search ..... 23
- J** JPEG ..... 49 ~ 51
- K** Karaoke
  - (Vocal Selection for Karaoke Discs) ... 37
- L** Language Code List ..... 56
- M**MENU button
  - (To display DVD Menu) ..... 8, 38
- MP3 ..... 49
- Multiple Angle Viewing ..... 37
- O** OPEN/CLOSE button ..... 8, 22
- Optical Digital Audio Output ..... 10, 15
- P** PAGE button (Still Image Skip) ..... 8, 41
- PLAY button (Play a Disc) ..... 8, 22
- Play List ..... 43
- Program Play (For CD) ..... 39
- Progressive Scan ..... 10, 13, 55
- R** Random Play (For CD) ..... 40
- Repeat Play ..... 47, 48
- Resume Function ..... 23
- RETURN button ..... 8, 22
- Rotation ..... 51
- S** KIP+ ►►I or KIP- I◄◄ button
  - (Forward/Reverse Chapter/Track) 8, 23
  - Slide-show ..... 50
  - LOW+/ LOW- button
    - (Low Motion Picture) ..... 8, 23
  - TILL/PAUSE button
    - (Still Picture or Pause) ..... 8, 23
  - till Mode
    - (For selecting "FIELD" or "FRAME") .. 54
  - TOP button ..... 8, 22
  - SUB TITLE button
    - (For selecting subtitle Language) ... 8, 36
  - Video Out ..... 10, 13
- T** TITLE button (Title Menu) ..... 8, 38
- TV Mode
  - (For selecting the screen display style) .. 54
- V** VOLUME ADJUST button ..... 8, 40
- V. . . (Virtual Surround Sound) ..... 8, 23
- W**WMA ..... 49
- Z** ZOOM button (Picture Zoom) ..... 8, 37, 51

A large, empty rectangular box with a thin black border, occupying most of the page. It is intended for the user to write their memo content.



# Panasonic®

## Broadcast & Digital Systems Company

---

### **Panasonic Broadcast & Television Systems Company**

Division of Matsushita Electric Corporation of America

#### **Executive Office:**

One Panasonic Way 4E-7, Secaucus, NJ 07094 (201) 348-7000

#### **Eastern Zone:**

One Panasonic Way 4E-7, Secaucus, NJ 07094 (201) 348-7621

#### Central Region:

1707 N Randall Road E1-C-1, Elgin, IL 60123 (847) 468-5200

#### **Western Zone:**

3330 Cahuenga Blvd W, Los Angeles, CA 90068 (323) 436-3500

#### **Government Marketing Department:**

52 West Gude Drive, Rockville, MD 20850 (301) 738-3840

#### **Matsushita Electric Corporation of America**

#### **Corporate Sales Group, Hawaii Region**

99-859 Iwaiwa T., Aiea, HI 96701-3267 (808) 488-7779

#### **Panasonic Canada Inc.**

5770 Ambler Drive, Mississauga, Ontario L4W 2T3 (905) 624-5010

#### **Panasonic Sales Company**

#### **Division of Matsushita Electric of Puerto Rico, Inc.**

Ave. 65 de infantería. Km. 9.5 San Gabriel Industrial Park, Carolina, PR 00985  
(787) 750-4300

Printed in Indonesia

L QT0844A

0504-0



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>