 


Panasonic

Proprietary Telephone for
Electronic Modular Switching System

MODEL NO. **KX-T7050**

Reference Manual

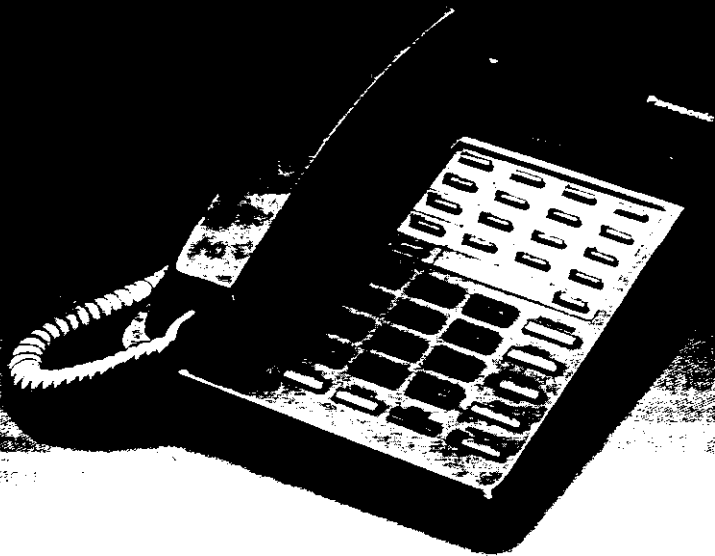

Illustrated Model: White

KX-T7050 is compatible with all of the Panasonic Electronic Modular Switching Systems and can perform most functions within each system.

Please read before use.

Important Safety Instructions

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- 4 Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.
- 5 Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
- 6 Slots and openings in the cabinet and the back or bottom are provided for ventilation, to protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on the bed, sofa, rug, or other similar

surface. This product should never be placed near or over a radiator or heat register. This product should not be placed in a built-in installation unless proper ventilation is provided.

- 7 Do not allow anything to rest on the telephone cord. Do not locate this product where the cord will be abused by persons walking on it.
- 8 Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
- 9 Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
- 10 To reduce the risk of electric shock, do not disassemble this product, but take it to a qualified serviceman when some service or repair work is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.

11. Unplug this product from the wall outlet and refer servicing to qualified **service** personnel under the following conditions:

- A. When the power supply cord or plug is damaged or frayed.
- B. If liquid has been spilled into the product.
- C. If the product has been exposed to rain or water.
- D. If the product does not operate normally by following the operating instructions. Adjust only those controls, that are covered by the operating instructions because improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.

E. If the product has been dropped or the cabinet has been damaged.

F. If the product exhibits a distinct change in performance.

- 12 Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
- 13 Do not use the telephone to report a gas leak in the vicinity of the leak.

SAVE THESE INSTRUCTIONS


Thank you for purchasing the Panasonic Telephone.

Table of Contents

Important safety instructions	..1
C o n n e c t i o n .	..4
Initial setting	..5
W a l l m o u n t i n g	..6
Location of controls	..7
Accessory order information	..9
Important information	..9


Connection

 Connect as shown.


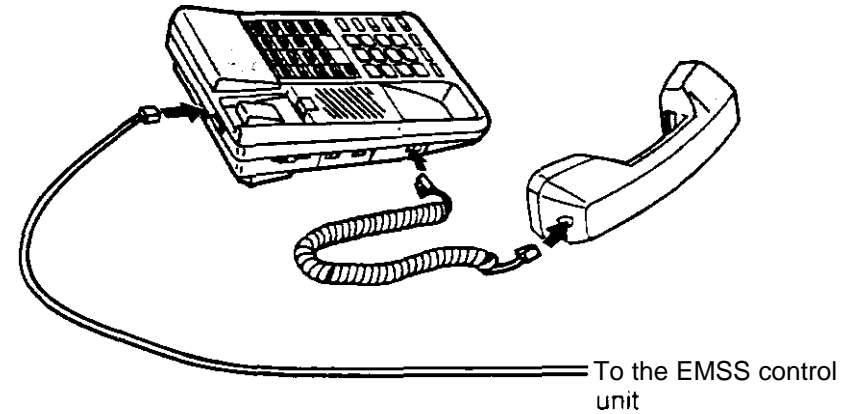


Included accessories

 
Handset one Telephone line cord one

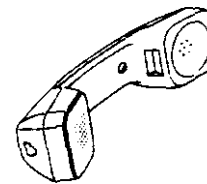

Handset cord one

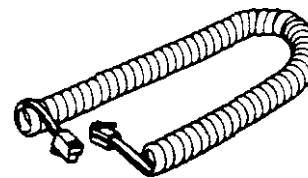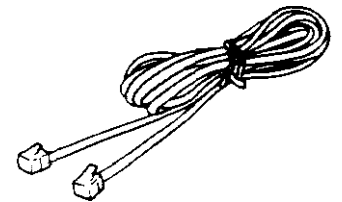  


Initial setting

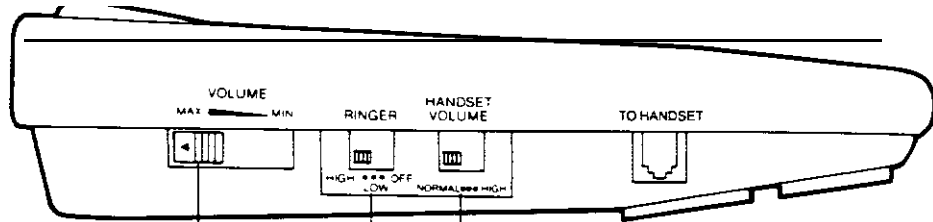 

HANDSET VOLUME Selector:
To adjust the volume level of the handset.
NORMAL: Normal voice
HIGH: Loud voice

RINGER VOLUME Selector:
To adjust the volume level of the ringer.
HIGH: Loud ringer
LOW: Low ringer
OFF: No ringer

 VOLUME Control:
To adjust the volume level of the speaker volume
MAX: Loud voice
MIN: Low voice

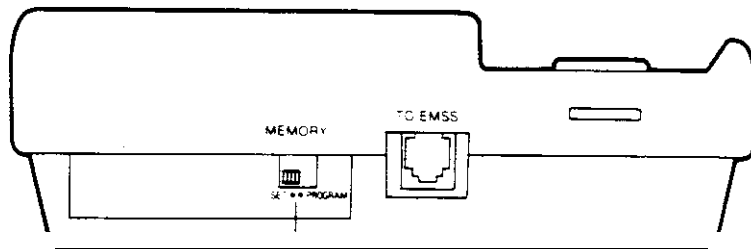


MEMORY Switch:
Set to "SET".
For station programming, set to "PROGRAM"


Wall mounting

This unit can be mounted on the wall phone plate

 
1 Turn the handset hook upside down.

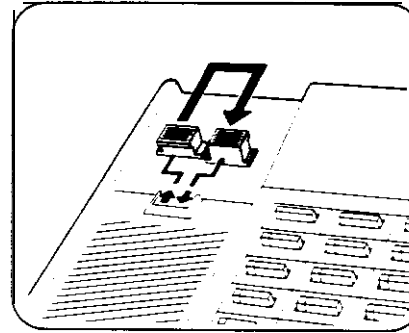


2 Remove the attached stand.

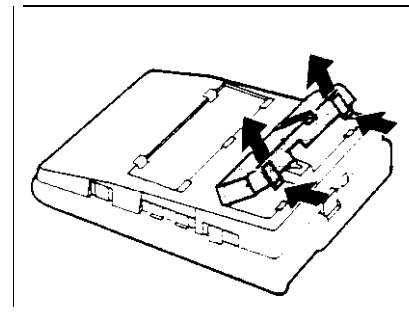 

 
3 Rotate the stand 1/2 turn so that the arrow on the stand shows UP for WALL

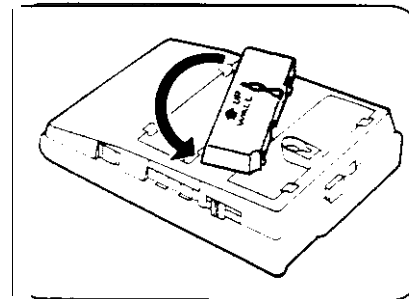

 
4 Place the stand on the center of the unit.

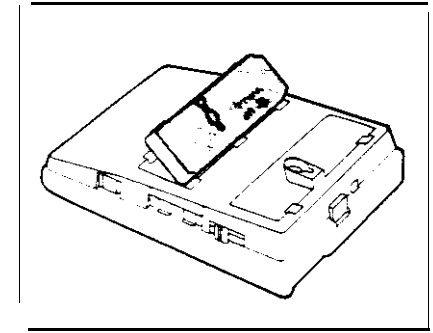

 
5 Mount the unit on the wall phone plate.

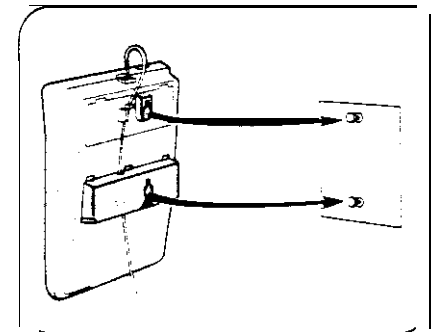

 To temporarily place the handset down during a conversation, hook as shown.

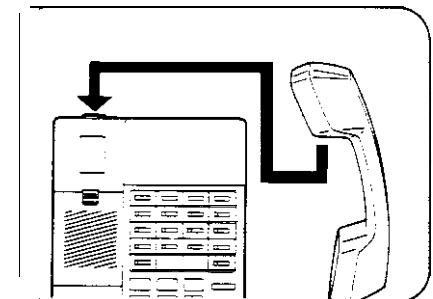

Location of controls

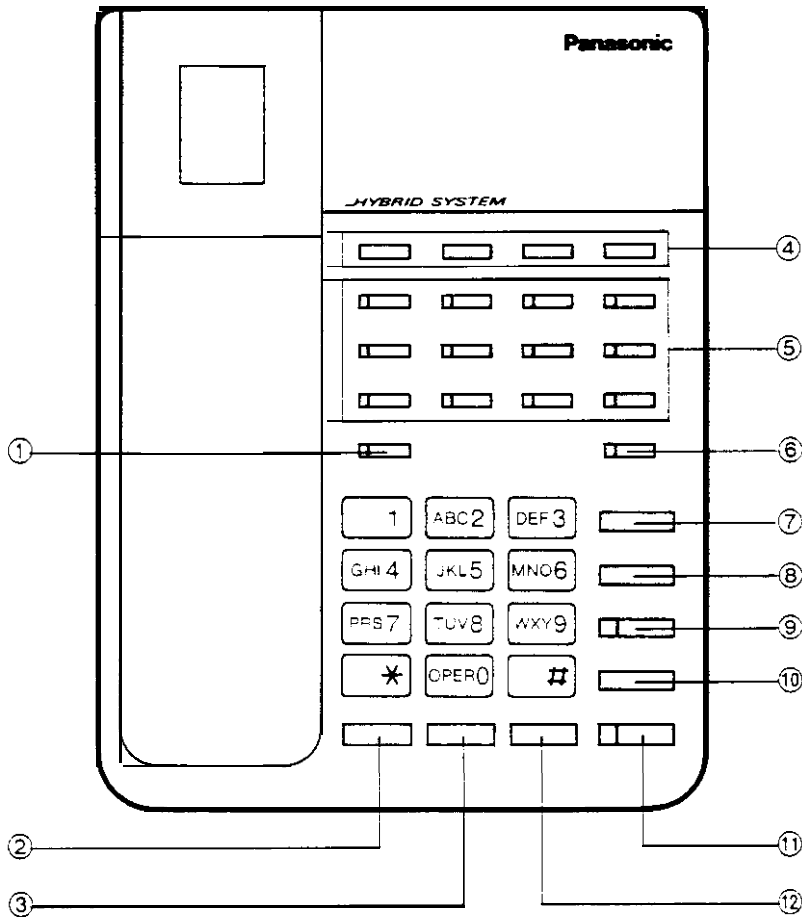 

① INTERCOM Button and Indicator:
Used for making or receiving an intercom call.

② REDIAL Button:
Redials the last number dialed.

@FLASH Button:
Used for sending the hook flash signal to the CO line.

④ Programmable Feature Buttons:
Dials or accesses the system feature with one touch.

@Flexible CO Line Buttons and Indicators':
Used for dialing via CO line. Direct Station Selection, or Programmable Feature buttons.

@Flexible Message Waiting Button and Indicator:
Used for Message Waiting, Direct Station Selection, or Programmable Feature button,

⑦ TRANSFER Button:
Transfers a call to any extension.

@PAUSE Button:
Inserts a pause between the access number and the phone number.

@AUTO DIAL/STORE Button and Indicator:
Used for dialing the system speed dialing/For storing functions into memory.

⑩ CONFERENCE Button:
Used for speaking with three parties at the same time.

⑪ MONITOR Button and Indicator:
Used for making a call without using the handset.


⑫ HOLD Button:
Places a call on hold.

*These functions are limited to the specified EMSS Control Units. Refer to the Installation manual.

KX-T7050 is compatible with the Panasonic Electronic Modular Switching Systems and can perform most functions within each system.

Accessory order information

*Replacement parts and accessories are available through your local authorized parts distributor.

Part No.	Picture	Description	Comment
KX-J07W,B KX-J15W,B KX-J25W.B		Handset cord	7 feet 15 feet 25 feet

Important information

*Keep the unit away from heating appliances and electrical noise generating devices such as fluorescent lamps and motors.

- The unit should be kept free of dust, moisture and vibration, and should not be exposed to direct sunlight.
- Do not use benzine, thinner, or the like, or any abrasive powder to clean the cabinet. Wipe it with a soft cloth.
- Do not use any handset other than Panasonic handset.

If there is any trouble, disconnect the unit from the extension line and connect a known working phone. If the known working phone operates properly, have it repaired by one of the specified Panasonic Factory Service Centers. If the known working phone does not operate properly, check the Electronic Modular Switching System and the internal extension wiring.

Important information (cont.)

WARNING:

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR ANY TYPE OF MOISTURE

CAUTION:

To assure continued compliance with FCC rules, do not make any unauthorized modifications. When programming emergency numbers and/or making test calls to emergency numbers:

- 1) Remain on the line and briefly explain to the dispatcher the reason for the call before hanging up.
- 2) Perform such activities in the off-peak hours, such as early morning hours or late evenings.

This telephone provides magnetic coupling to hearing aids

INSTALLATION:

- 1) Never install telephone wiring during a lightning storm.
- 2) Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
- 3) Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network Interface.
- 4) Use caution when installing or modifying telephone lines.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between equipment and receiver,
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>