



# PYLE<sup>®</sup> PRO


## PDCD510MU

DOUBLE DUAL USB/SO CD PLAYER WITH MP3



### OWNER'S MANUAL

**PROFESSIONALDAUL CD PLAYER WITH ANTI-SHOCK MEMORY  
USER MANUAL  
PDCD510MU**

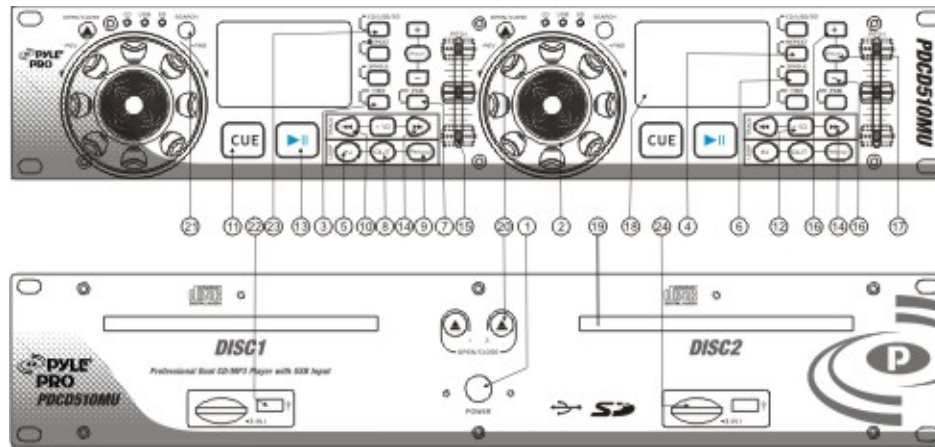

**IMPORTANT**

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

**CD Player function:**

**1. POWER BUTTON**

Press the power switch to turn the unit on. To switch the POWER off press the POWER switch again.

**2. JOG & SHUTTLE WHEELS**

*The controls values functions, as follows:*

**Speed control:** Rotating the wheel, in play mode, will change the playback speed according. While rotating clock wise, the player speed increase, rotating counterclockwise the speed decrease.

**Searching:** Rotating the wheel in pause mode, the player will forward or backward to the desired point to start. The searching speed changed according to the dialing speed. It can be carried out by one frame increase

**3. TIME BUTTON**

This buttons switches the time display/between each. Remaining time, elapsed playing time, and total remaining time.

**4. REPEAT BUTTON**

Use this button to repeat one track or all the track of the CD.

**5. IN BUTTON (LOOP SYSTEM)**

This button sets the beginning of the loop. The Loop indicator on the display flashes.

**6. CONT. / SINGLE BUTTON**

Press this button to switch the single and continues play mode. The select mode is indicated on the LCD. In SINGLE mode, after each track, the unit pauses the beginning of the next track in continues mode, the unit plays all tracks.

**7. PROG AND FOLDER CONNERSION BUTTON**

In STOP mode, you can program several tracks (20 tracks max):

- Press the STOP button to enter in the stop mode
- Press the PROG button to enter in the program mode
- Use the skip track buttons to choose the track you want to listen then press the PROG button to enter your choice.
- Use one more time the skip track buttons to choose the track you want to listen then press the PROG button to enter your choice.
- Repeat the operation to select all the track you want to listen
- Press the play / pause button to start the playback

**8. OUT BUTTON (LOOP BUTTON)**

When you press this button, you set the end point of the seamless loop and you start the loop. To finish the loop, press again this button.

**9. RELOOP BUTTON(LOOP SYSTEM)**

This button is used to start the last saved loop. To finish the loop, press the reloop button.

**10. SKIP I<< BUTTON**

This button selects the last track to be player.

**11. PITCH BEND +/- BUTTON**

The CUE function allows the CD to be played from the memorized point any numbers of times, with the unit in pause mode. Press the CUE button to set up the memorized CUE point and then the CUE button blinks.

**12. +10 BUTTON**

Use this button to jump of 10 tracks in one press.

**13. PLAY / PAUSE BUTTON**

Each time you press the PLAY/PAUSE button, the operation changes from play to pause or from pause to play.

**14. SKIP >>I BUTTON**

Uses the button select the next track to be player.

**15. PITCH CONTROL**

Use this fader to increase or decrease the speed of the track.

**16. PITCH BEND +/- BUTTON**

When each to two CD player is playing the pitch bend function allows the button beat when mixing from one song to another.

**17. PITCH BUTTON**

If you push this button, the ajustement of the pitch potentiometer is available.

**18. DISPLAY**

This LCD Display indicates track Numbers,Time,Remain,pitch,Single,Continue and Time Bar

**19. DISC-TRAY**

To enter the disc, please refer to the explanations under 6.2 CD-tray.

**20. OPEN/CLOSE BUTTON**

The Disc is placed on this tray pressing the Disc tray open/close buttons will open or close the tray

**21. SEARCH BUTTON**

Press this button to switch the single and continues play mode.The select mode is indicated on the LCD.In SINGLE mode, after each track,the unit pauses the beginning of the next track in continues mode,the unit plays all tracks.

**22. USB PORT**

Support USB playing and you may also connect the computer with the USB cable but only when enter into USB work mode.


**23. CD/USB**

To enter into the CD or USB work mode by this key conversion.

**24. ◀ 3 IN 1 CARD SLOT**

Slot for inserting 3 IN 1 card. The contacts of the card must point downwards. The unit cannot read cards with a capacity of more than 4GB. The unit is not compatible to SDHC cards and only supports the MP3 format.

**Connection:**

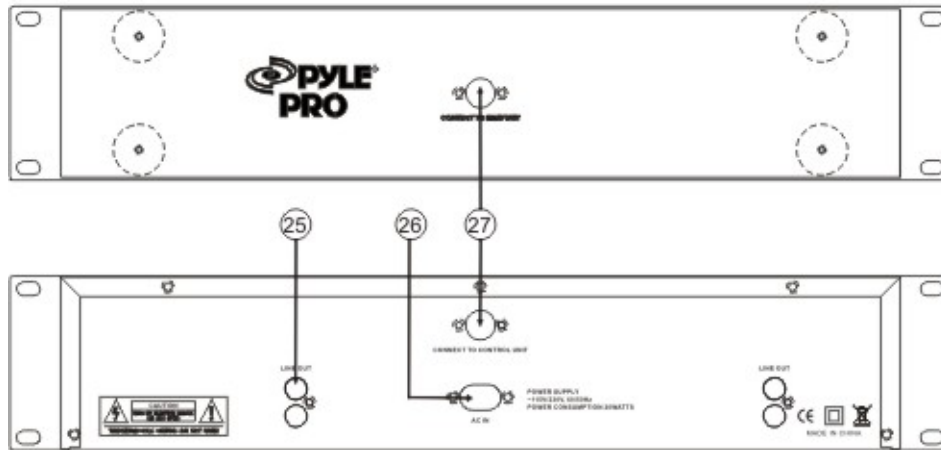

**25. LINE OUT 1-2**

The audio for each CD player is output from these jacks. Connect to the line input of the mixer.

**26. AC CORD**

Connect the power cord into an AC wall outlet with the proper AC voltage

**27. CONNECTION PORT**

The 8 PIN Termination permits the connection the control unit to the main unit

#### **WARRANTY CONDITIONS**

**PLYE PRO** equipment is covered by a 1-year warranty on parts and labour except for faders (90 days).

The following rules apply from the day the equipment leaves the factory:

The date on the invoice is considered to be the date the warranty begins.

Only companies approved by **PLYE PRO** are allowed to work on the equipment. Warranty becomes void when other service technicians open the equipment.

During warranty period, defective equipment must be sent by pre-paid mail in the original box.

**PLYE PRO** will return the goods by pre-paid mail during the first year of warranty; thereafter the mailing cost is to be paid by the recipient.

Potentiometers have a limited lifetime and are not covered by the manufacturer for more than normal use.

For all service enquiries, refer to your local distributor, as he is best able to help you.

#### **SPECIFICATIONS:**

Anti-Shock Buffer Memory:	40 seconds
Range of adjustments:	+/- 24%
Power supply:	~115/230V, 60/50Hz
Dimensions :	Player : 482x90x255mm Controller : 482x132x80mm





[WWW.PYLEAUDIO.COM](http://WWW.PYLEAUDIO.COM)

**IMPORTANT: PACK CAREFULLY IN ORIGINAL CARTON IF POSSIBLE. WE ARE NOT RESPONSIBLE FOR DAMAGE INCURRED IN RETURNING ITEMS FOR REPAIR. A LETTER STATING YOUR EXACT STREET ADDRESS, DAYTIME PHONE NUMBER, AND THE PROBLEM YOU ARE EXPERIENCING SHOULD BE INCLUDED. YOU MUST ALSO ENCLOSE A COPY OF THE ORIGINAL RECEIPT A SPROOF OF DATE OF PURCHASE**

**PYLE SERVICE CENTER  
1600 63RD STREET  
BROOKLYN, NY 11204  
1-800-444-5671**

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>