 


PYLE[®] PRO

PT-688CU CD PLAYER

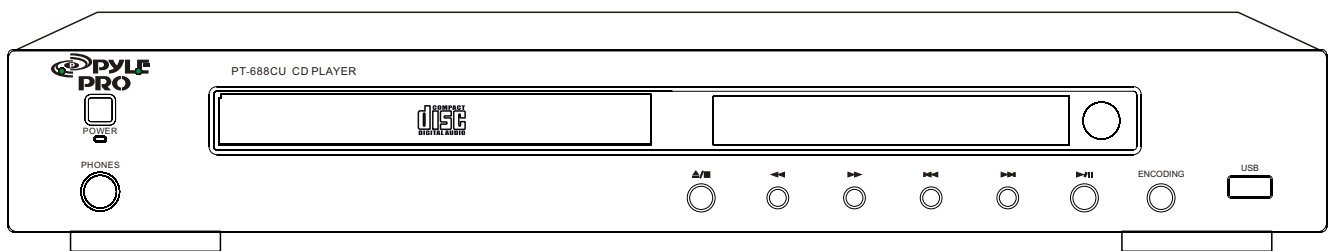

 
OPERATION MANUAL

www.pyleaudio.com

Precautions

Thank you for purchasing this HI-FI product. Taking time to read these operating instructions carefully before use will acquaint you fully with all its features and help ensure optimum performance.

In order to simplify the explanation illustrations may sometimes differ from the originals.

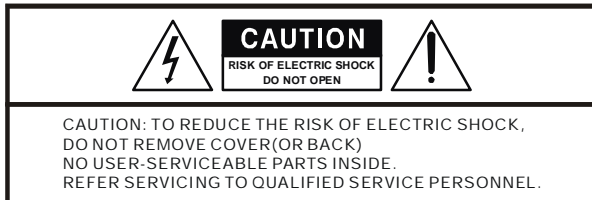

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: To prevent fire or shock hazard, do not expose this appliance to rain or moisture



Power plug

When disconnecting the power cord from the power outlet, always take hold of the plug, and not the wire, and pull free. Never connect or disconnect the power plug with wet hands since you may receive an electric shock.

Remember to disconnect the power plug from the power outlet when you do not intend to use the unit for a prolonged period of time.



Do not remove the case and bottom panel

Any inspections or adjustments inside the unit may lead to malfunctions and electric shocks. Do not touch any of the inside parts.



Ventilation warning

The normal ventilation of the product shall not be impeded for intended use.



Installation precautions

Do not install the unit in any of the following locations since this may result in deterioration in performance or malfunction:

- Locations exposed to direct sunlight or near objects radiating heat such as heating appliances.
- Locations exposed to moisture or humidity.
- Locations with poor ventilation exposed to dust and dirt.
- Locations which are unstable and not perfectly flat or which are susceptible to vibration.



 
 
Do not wipe with thinners

Wipe the panels and case from time to time with a soft cloth. Using any kind of thinner, alcohol or volatile liquid will mar the surface, cause blotching on the exterior and erase the markings and should therefore be avoided. Do not use insecticide sprays in the vicinity.

Dripping warning

The product shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the product.

Front Panel and Remote Control Information

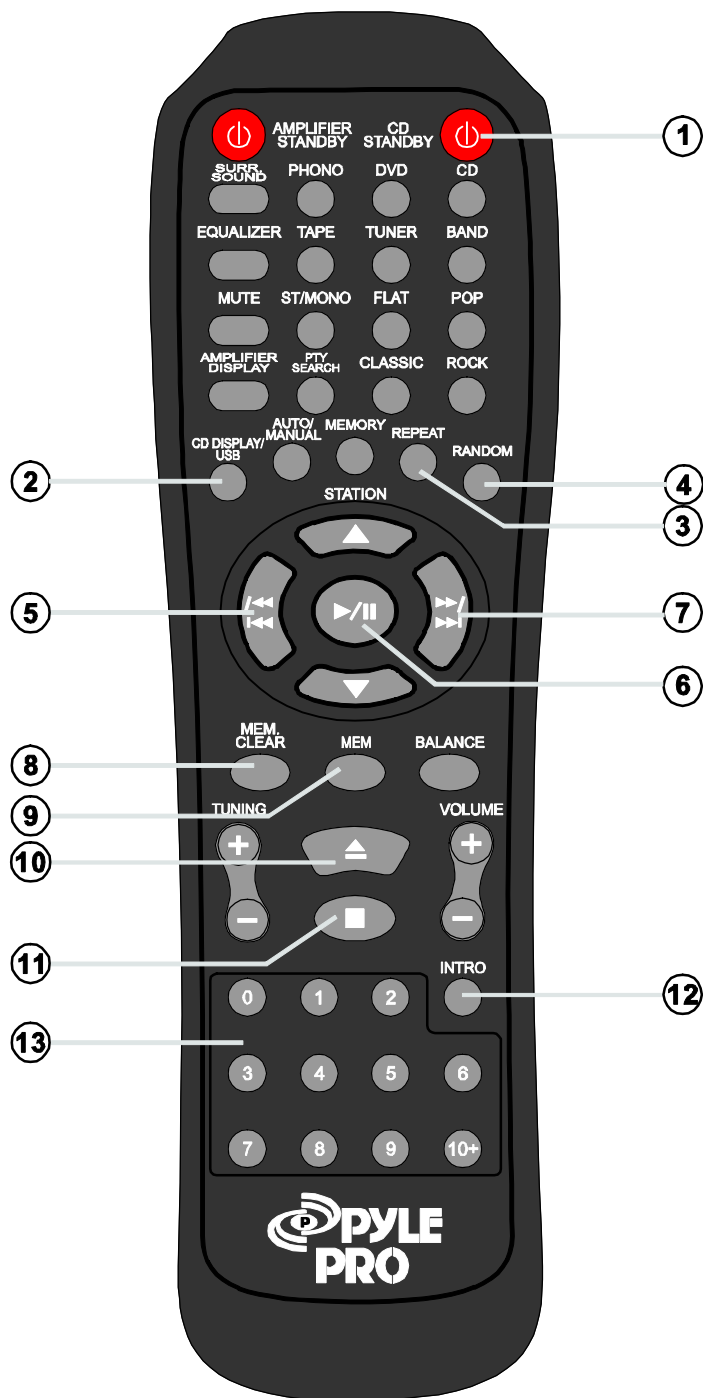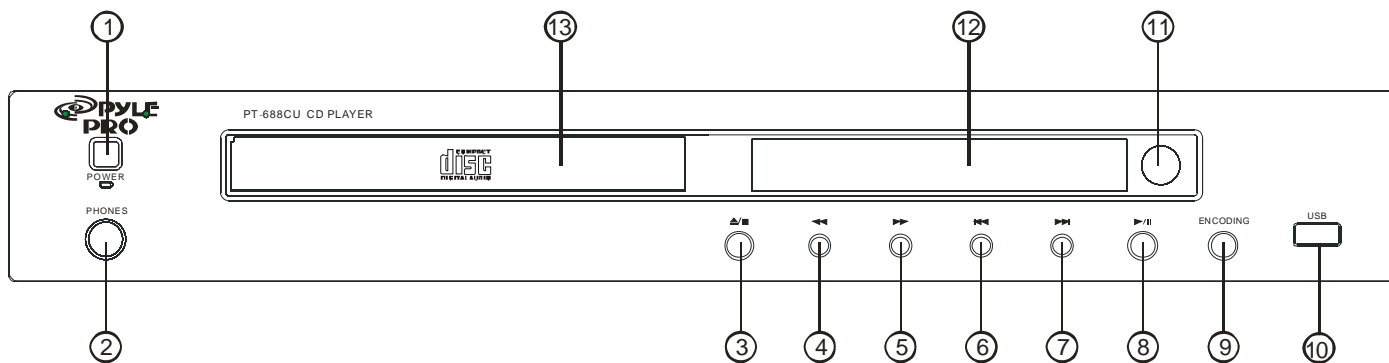

Front Panel Information

1. Power

Press this button to power on/off this unit.

2. Phones

- This is the jack for headphones. Connect the plug on the stereo headphones for private listening.
- Adjust the volume so that it does not hurt your ears when using the headphones.
- If you do not intend to use your headphones, always ensure that you unplug them.

3. ▲/■

Press this button once to stop disc playback. Press it again to open the disc tray and third press to close it.

4. ◀◀

Fast motion reverse playback.

5. ▶▶

Fast motion forward playback.

6. ◀◀

Press this button to skip back a track.

7. ▶▶

Press this button to skip forward a track.

8. ▶/||

Press this button to begin or pause playback.

9. Encoding

Under CD mode, after the disc loading, press this button once. There will be "REC" display in the VFD. After it stop flashing, it will start to play and convert all the tracks on the disc to be MP3 and save in the USB stick when there is USB plug in.

Press ▲/■ once will stop the encoding and press it twice to stop the disc playback.

If you want to choose some tracks to be converted to MP3, press "MEM." on the remote control and then enter the track no. with the numeric keys on the remote control. Press "MEM." again to confirm after each track selection. Press the Encoding button as described above to start the encoding.

10. USB port

11. Remote sensor

12. Indicator (VFD)

Indicates the current status of the unit.

13. Disc Tray

Remote Control Information

1. CD Standby

 

When this unit is powered his buttoon, press tn to turn this unit into standby mode, press it again to power on this unit.

2. CD Display/USB

Press once to displays the current playing time and the remained time.

When there is disc inside the CD tray, press and hold this button for 2~3 seconds to switch to USB playback. Press and hold again to switch back to CD playback. Please note that if there is no disc inside the unit, then it will switch to USB Playback automatically.

3. Repeat

Press REPEAT button once, the display will shown out REPEAT  , then the track which is in play mode or ready mode will repeat until you switch off the CD player or press STOP (■). Press REPEAT button once more, REPEAT  will shown on the display, all tracks will be repeated until you switch off the CD player or press STOP (■) button.

4. Random

Plays songs in random order. Press this button, the total track and the time of the CD disc shows in the display, then press ►/|| button to begin random playback.

5. ◀◀/◀◀

The player will skip backward each time the FastFWD ◀◀/◀◀ button is pressed. Continuously pressing this button makes the player scan through the tracks backward fast.

6. ►/||

Press this button to play and press it once again if you wish to pause. The relative sign will be shown on display. If in pause mode, press this key once again to resume the operation.

7. ▶▶/▶▶

The player will skip ahead to the next track each time the FastFWD ▶▶/▶▶ button is pressed. Continuously pressing this button makes the player scan through the tracks forward fast.

8. MEM Clear: Press this key to clear all memories.

9. MEM.

Press this button at first, the MEMORY and the corresponding track will be flashed. Then press the FastFWD ▶▶/▶▶ or FastBWD ◀◀/◀◀ to reach your desired track, and press MEMORY button once more to store the first track. If wishing to store the second track, press the FastFWD ▶▶/▶▶ or FastBWD ◀◀/◀◀ to the second desired track and press MEMORY button to store the second track.

Repeat the same procedure to similar settings. Continue to enter track numbers until all the pre-decided tracks are stored for playback. Press the STOP ■ upon finishing programming. Press PLAY ►/|| button once, the different tracks that have been stored will be played accordingly to the memories stored.

All the memory registered tracks will be cleaned if you press STOP and MEMORY simultaneously.

10. ▲: Press this button to open or close the disc tray.

 
11. ■: Press this button to stop disc playback.

12. Intro

If you desire the Introduction Scanning, you can press INTRO button. Then each track will be scanned 10 seconds. An "INTRO ON" will be shown on the display. Press it once again can resume the operation, and "INTRO OFF" appears on the VFD, the relative light will gone off.


13. Numeric : Select numbers by pressing these buttons.

Rear Panel Information

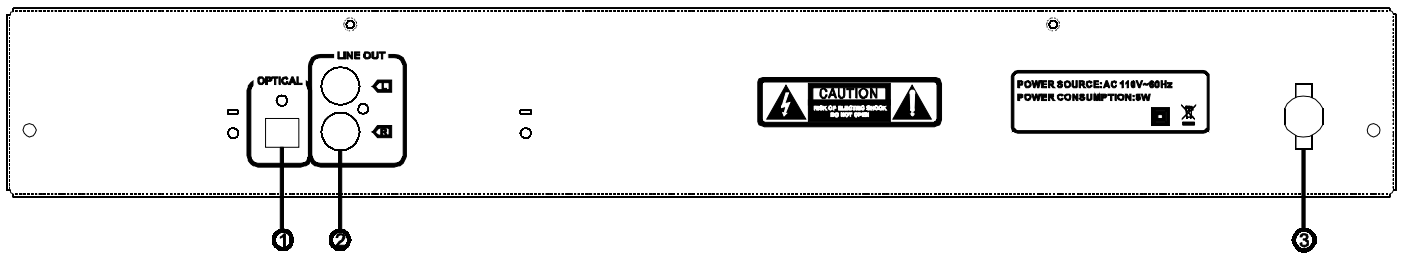

1. Optical jack
2. Jack connections (Stereo analogue)
3. Power cable

 Operating Procedures

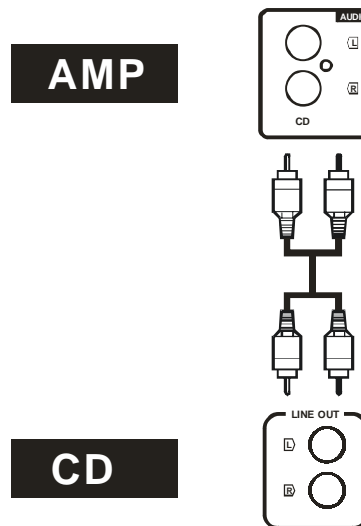

Operating procedure

1. Power on the Amplifier.
2. Select "CD" from function selection column at the Amplifier, relative light will be seen when selected.
3. Power on the CD player by pressing POWER button.
4. Press the OPEN/CLOSE button. The disc tray will slide out. When it has opened fully, place a compact disc carefully in the tray.

Note:

- Always place the compact disc in the disc tray with the label facing upward.
 - The CD tray accepts two different sizes of disc: 120 mm & 80 mm.
5. To close the disc tray, press the OPEN/CLOSE button again. When the tray is securely closed the disc will start turning automatically and the total number of selections and the disc time will be counted. A few seconds later the PLAY indicator will light, and the TRACK NO. and TIME counters will show "00:00".
 6. Press the PLAY/PAUSE button. Playback will start, the PLAY indicator "▶" will go on.

Specifications

Output voltage	2 Vrms (0 dB)
Freq. Response	20 to 20 KHz +3dB-- -3dB
Sin ratio (FLAT)	75 dB (1 KHz)
(IHF-A)	90 dB (1 KHz)
Channel separation	58 dB (1 KHz)
Channel balance	0.5 dB (1 KHz)
Distortion	(-10dB) 0.08% (1 KHz)
Power consumption	8W
Dimension	430 (W) x 225 (D) x 71 (H) mm / 16.93" x 8.86" x 2.8" inches
Weight	3.5Kg

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>