

PYLE®

PL7PHRG
PL7PHRB
PL7PHRT

Operation Instruction



Before operating the Monitor, please read this manual thoroughly and retain it for future reference.

PL7PHRG/PL7PHRB/PL7PHRT

一、INSTALLATION GUIDE

Precautions:

- 1> This unit should be installed by a qualified service technician.
- 2> This product is designed to operate with a 12V DC, negative ground battery system.
- 3> Disconnect the ground wire from the battery terminal prior to connecting the unit to the electrical system
- 4> Please use accessories that come with this unit. in order to avoid fire or electrical damage to it.
- 5> This unit fit any models of car, the distance between two poles can be adjust.



- 1 -

PYLE®

二、MONITOR ILLUSTRATION



- | | |
|---------------------------|------------------------------|
| 1、Indicator light | 2、Incept window |
| 3、Power ON/OFF button | 4、AV/TV Switch from AV to TV |
| 5、MENU OSD Setting | 6、V-Volume Reduction Button |
| 7、V+ Volume Ascend Button | 8、▼ Program descend button |
| 9、▲ Program Ascend Button | 10、Video/Audio Input |

- 2 -

PL7PHRG/PL7PHRB/PL7PHRT

三、REMOTE CONTROL

- | | |
|----------|---|
| MUTE | MUTE on/off |
| ON/OFF | Power switch |
| TIME | Off-time |
| SYS | No function |
| VIEWMODE | Setting picture display dimension. |
| MIRROR | Mirror image setting |
| VIDEO | AV/TV selection |
| MENU | Main menu |
| P▲ | To the next higher program (the cursor is moved upwards) |
| P▼ | To the next lower program (the Cursor is moved downwards) |
| V+ | Volume increase (submenu adjust) |
| V- | Volume decrease (submenu adjust) |
| 0~9 | Digit key (0~9) and -/-- |
| -/-- | Tens digit channel select |
| Ⓢ | Recall |



- 3 -

PYLE®

四、TROUBLE SHOOTING

Phenomenon	Reason
No picture and sound	AC adapter or automobile adapter is improperly connected. Uncertified power is being used. Power switch is off.
No sound	Audio volume is off or in mute condition. Press VOL+.
No color	"Color" isn't open enter into "Puncture" to adjust it It's Black-white TV program. Wrong TV system is steed. Enter into the MENU "PICTURE SYSTEM" to adjust its system. .
No pictures	TV signal disturbance or the unit is in the protection condition.
Remote Controller Doesnt Work	Check the battery in the remote controller, make sure it installed correctly. The power of battery is run out or the signal is disturbed.
Snowflake pictures	Antenna signal is weak. Make sure to connect the antenna correctly.

- 4 -

PL7PHRG/PL7PHRB/PL7PHRT

五、TECHNICAL SPECIFICATIONS

TYPE	Headrest with pillow color TFT-LCD Monitor
Display System	7-inch TFT-LCD Monitor/TV
Display Format	640×480
Aspect Ratio	4: 3
Active Area	144(H)×105(W)
Rotary Angle	Picture turn Up/Down and Right/Left
Source	RF incept 47-870MHZ Video input 1VP-P (PAL/NTSC) *2PC Audio input:
Operating Temperature	0℃ ~60℃
Operating Humidity	20%~85%
Operating Voltage	DC+12V
Power Consumption	<10W

- 5 -

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>