


## OWNER'S MANUAL

---

### Mobile Video System

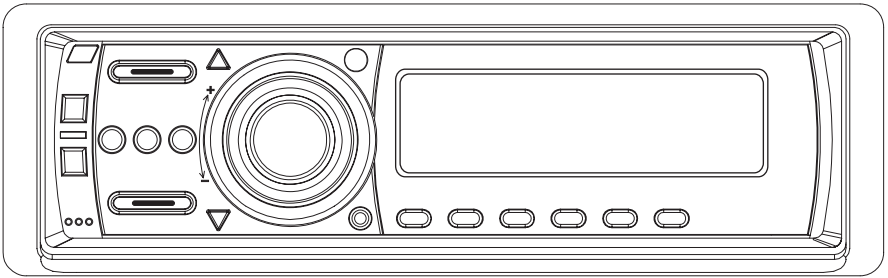

- **Anti Theft Flip Down Detachable Panel**
- **AM/FM Digital PLL Tuning Radio**
- **Car DVD/VCD/CD/MP3 Player/TV Tuner**
- **Auxiliary Input Function**
- **Parental Control**
- **Remote Control**

# CONTENTS

---

|  |           |
|--|-----------|
| <b>Safety Information</b> .....        | <b>2</b>  |
| <b>Disc Notes</b> .....                | <b>3</b>  |
| <b>Installation</b> .....              | <b>4</b>  |
| <b>Electric Connection</b> .....       | <b>7</b>  |
| <b>Remote Control</b> .....            | <b>8</b>  |
| <b>Basic Operation</b> .....           | <b>10</b> |
| MP3/WMA/JPEG Disc Play .....           | 14        |
| AUX Operation .....                    | 14        |
| On-Screen Display Function .....       | 15        |
| Multi-Audio Language Function .....    | 16        |
| Multi-Subtitle Language Function ..... | 16        |
| Multi-Angle Function .....             | 16        |
| Title Menu Function .....              | 16        |
| TV Operation .....                     | 16        |
| <b>Setup</b> .....                     | <b>17</b> |
| General Setup .....                    | 17        |
| Speaker Setup .....                    | 19        |
| Dolby Digital Setup .....              | 19        |
| Preferences Setup .....                | 20        |
| Defaults Table .....                   | 21        |
| <b>Specifications</b> .....            | <b>22</b> |
| <b>Trouble Shooting</b> .....          | <b>23</b> |

# SAFETY INFORMATION

---

## **CAUTION:**

THIS DVD PLAYER IS A CLASS I LASER PRODUCT. HOWEVER THIS DVD PLAYER USES A VISIBLE/INVISIBLE LASER BEAM WHICH COULD CAUSE . HAZARDOUS RADIATION EXPOSURE IF DIRECTED. BE SURE TO OPERATE THE DVD PLAYER CORRECTLY AS INSTRUCTED.

USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

## **WARNING:**

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, AND ANNOYING INTERFERENCE, USE ONLY THE RECOMMENDED ACCESSORIES.

THIS DEVICE IS INTENDED FOR CONTINUOUS OPERATION.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. Patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macro vision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

## **REGION MANAGEMENT INFORMATION:**

This DVD Player is designed and manufactured to respond to the Region Management Information that is recorded on a DVD disc. If the Region number described on the DVD disc does not correspond to the Region number of this DVD Player, this DVD Player cannot play this disc.

# DISC NOTES

## Disc formats supported by this player



DVD  
12 cm disc  
(Single-sided disc only)



Video CD  
12 cm disc



CD  
12 cm disc  
MP3



12 cm disc

## Discs which cannot be played with this player

- DVD-ROM
- DVD-R/DVD-RAM
- CDV
- CD-G

## Handling and Cleaning

- Dirt, dust, scratches and warping disc will cause misoperation.
- Do not place stickers or make scratches on discs.
- Do not warp discs.
- A disc should always be kept in its case when not in use to prevent from damaging.
- Do not place discs in the following places:
  1. Direct sunlight
  2. Dirty, dusty and damp areas
  3. Near car heaters
  4. On the seats or dashboard

 
## Disc Cleaning

Use a dry soft cloth to wipe the surface. If the disc is quite dirty, use a soft cloth slightly moistured with isopropyl (rubbing) alcohol. Never use solvents such as benzine, thinner or conventional record cleaners as they may mar the surface of the disc.

### Note:

A disc may become somewhat scratched (although not enough to make it

unusable) depending on your handle it and conditions in the usage environment. Note these scratches are not an indication of any problem with the player.

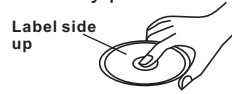


Label side up



Do not touch the underside of the disc



 
Do not bend



Wipe the disc from center toward the outside edge

## Preparing New Discs with Rough Spots

A new disc may have rough edges on its inside and outside edges. If a disc with rough edges is used, the proper setting will not be performed and the player will not play the disc. Therefore, remove the rough edges in advance by using a ball point pen or pencil as shown on the right. To remove the rough edges, press the side of the pen or pencil against the inside and outside edges of the disc.

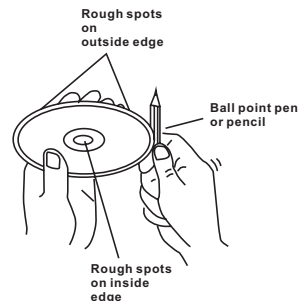

Rough spots on outside edge

Ball point pen or pencil

Rough spots on inside edge

# INSTALLATION

---

## NOTES:

Choose the mounting location where the unit will not interfere with the normal driving function of the driver.


Before finally installing the unit, connect the wiring temporarily and make sure it is all connected up properly and the unit and the system work properly.

Use only the parts included with the unit to ensure proper installation. The use of unauthorized parts can cause malfunctions.

Consult with your nearest dealer if installation requires the drilling of holes or other modifications of the vehicle.

Install the unit where it does not get in the driver's way and cannot injure the passenger if there is a sudden stop, like an emergency stop.

If installation angle exceeds 30 from horizontal, the unit might not give its optimum performance.


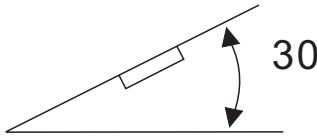


Avoid installing the unit where it would be subject to high temperature, such as from direct sunlight, or from hot air, from the heater, or where it would be subject to dust, dirt or excessive vibration.


## DIN FRONT/REAR-MOUNT

This unit can be properly installed either from "Front"(conventional DIN Front-mount) or "Rear"(DIN Rear-mount installation, utilizing threaded screw holes at the sides of the unit chassis). For details, refer to the following illustrated installation methods.


# INSTALLATION

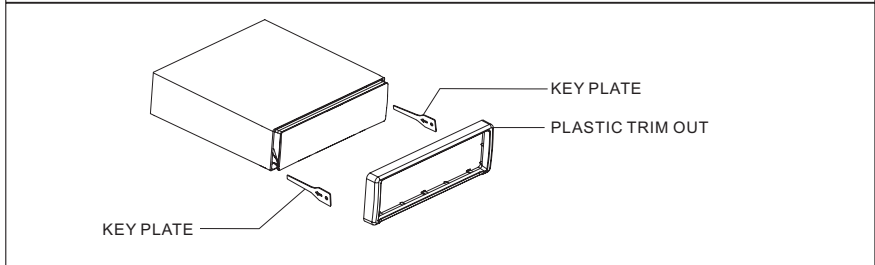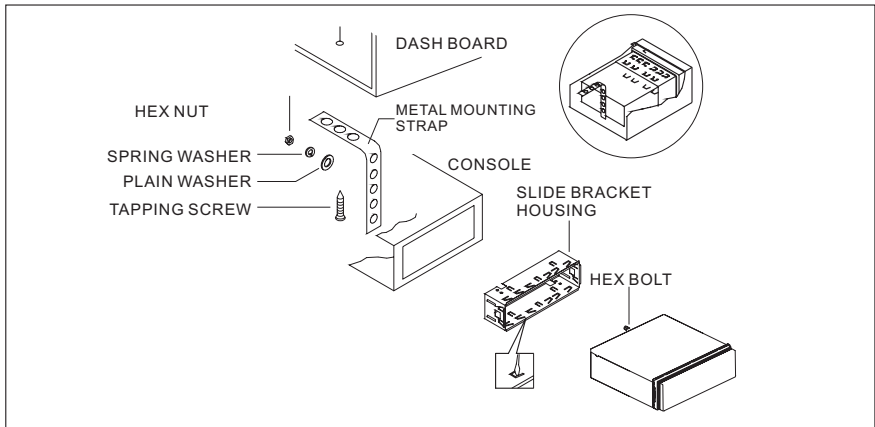

1. WHILE INSTALLING THE FRONT PANEL, PLEASE MOUNT THE LEFT SIDE FIRST, AND MAKE THE DIRECTION HOLE ON THE FRONT PANEL AIM AT THE LEFT GUIDE ON THE UNIT
2. THAN PUSH THE RIGHT SIDE TO MOUNT THE RIGHT GUIDE

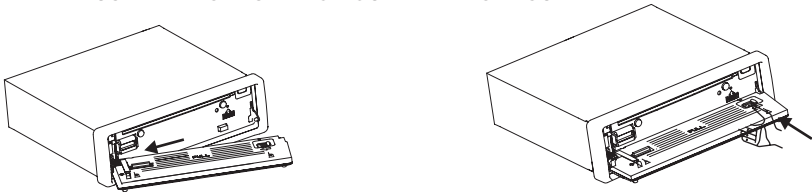

3. PUSH IT TO INSTALL THE FRONT PANEL COMPLETELY .

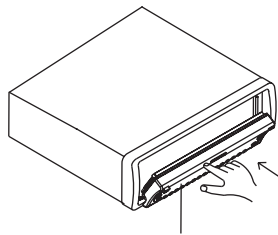


# INSTALLATION


**CAUTION: DO NOT INSTALL THE DETACHABLE PANEL BEFORE CONNECTING THE WIRE.**

1. The unit is designed for negative terminal of the battery which is connected to the vehicle metal. Please confirm it before installation.
2. If the car interior is extremely hot, as after being parked in the sun, do not use the player until the car has been driven for a while to cool off the interior.
3. Press the OPEN button to flip down the front panel (see fig.1), Slide the guide knob to remove the right side first, then take away the front panel. (see fig.2) and put it in the protective case (see fig.3) for safe keeping.
4. Install the front panel back into its bracket and then push it back to the position for playing (see fig.4).

**FRONT PANEL**

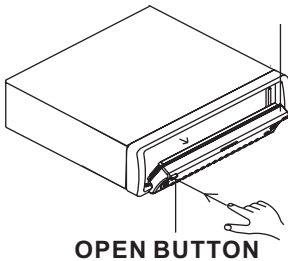


**(FIG.1)**

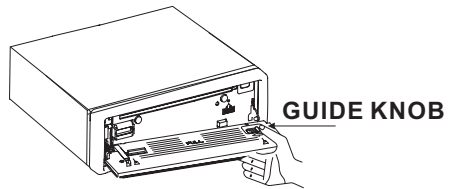


**(FIG.2)**

**PROTECTIVE CASE**

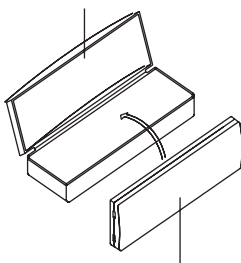


**(FIG.3)**

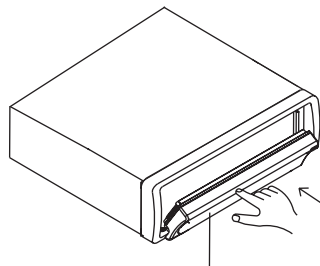

**(FIG.4)**


# ELECTRIC CONNECTION

## WIRING CONNECTION

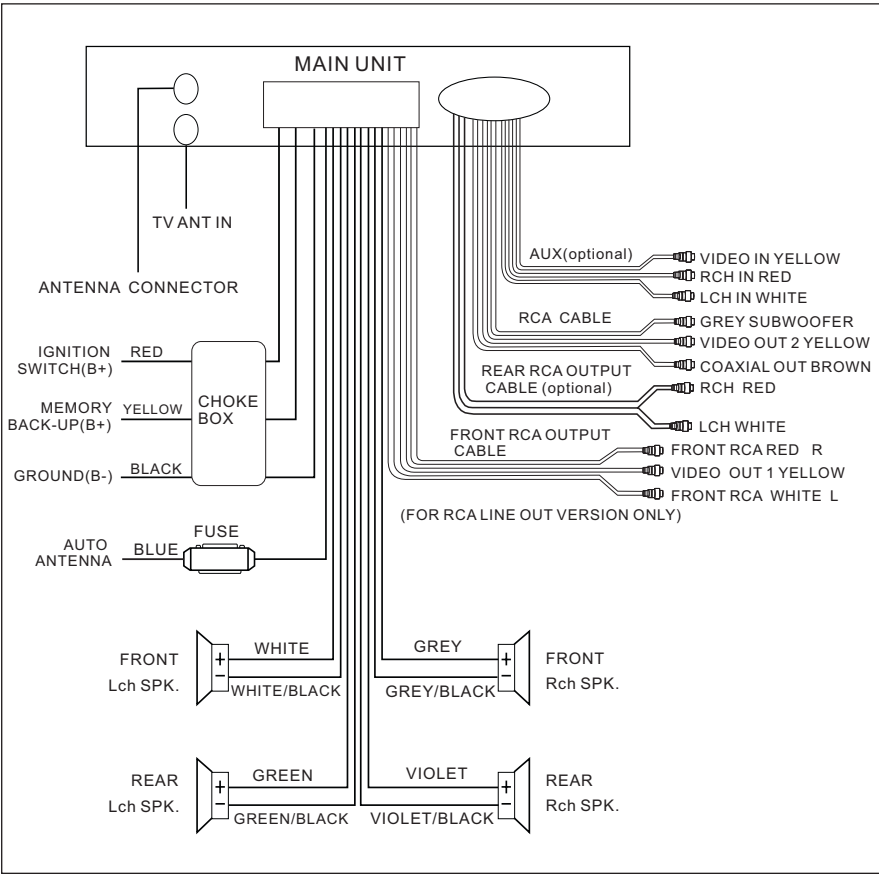



# REMOTE CONTROL

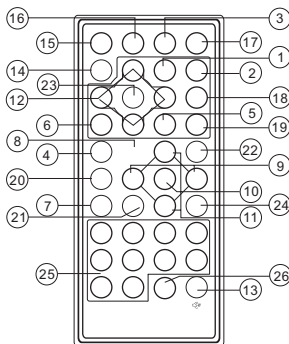

- |   |   |
|---|---|
| <p>1. CLK<br/>2. MODE<br/>3. STOP<br/>4. SETUP<br/>5. MO/ST(AUDIO)</p> <p>6. SUBTITLE<br/>LO/DX</p> <p>7. REPEAT</p> <p>8. GOTO</p> <p>9. ►► / ◄◄</p> <p>10. SEL</p> <p>11. VOL+/VOL-<br/>12. ▲ / ▼ / ► / ◄</p> <p>13. MENU<br/>SUB WOOFER</p> <p>14. BAND(OSD)</p> <p>15. POWER</p> <p>16. PLAY/PAUSE</p> <p>17. MUTE</p> <p>18. TITLE/PBC<br/>(A/P)</p> <p>19. SLOW</p> <p>20. ANGLE</p> <p>21. EQ</p> <p>22. SEARCH<br/>►►</p> <p>23. ENTER</p> <p>24. SKIP<br/>◄◄</p> <p>25. 0 - 9</p> <p>26. +10</p> | <p>Press it to change the display to clock display.</p> <p>Press it button on the select TV ,DISC,RADIO AUX IN mode.</p> <p>Press it to stop playback.</p> <p>Display the SETUP menu.</p> <p>In radio mode,press it to select STEREO or MONO (IN disc mode, press it to changing of the AUDIO soundtrack on multi-audio soundtrack DVD disc. Changing of the sound mode of the VCD/CD disc)</p> <p>Changing of the SUBTITLE language on multi-subtitle language DVD disc. In radio mode, .Press this button for distance reception when you are located at weak signal location, depress it for stronger signal.</p> <p>Switch the Repeat mode of DVD/VCD/CD/MP3 disc.</p> <p>Disc search button, cooperatively used with numeric buttons</p> <p>Press ►► to skip to the next track &amp; press ◄◄ to skip back one track. (In DVD mode , press continually ◄◄ twice to skip back one track.)</p> <p>Press it to change audio mode through volume ,bass,treble balance and fader modes.</p> <p>Press it to adjust volume level</p> <p>Cursor buttons in MENU mode. Note: For models without built-in FM Modulator, the▲ / ▼ buttons can be used for volume up/down control. In TV mode, press ► / ◄ to fine tune. Press the ▲ / ▼ to select channel upward and downward..</p> <p>Press it to display the root menu of the DVD disc/Press and hold for more than 2 seconds can have sub woofer, press it again for more than 2 seconds to release this mode.</p> <p>Display statistical disc information during playback (To change the band in radio stations)</p> <p>Press it to turn on the unit ,press it again to turn off.</p> <p>Press once to pause a play, press again to resume playback.</p> <p>Press it to mute down sound.</p> <p>Display the TITLE menu that is stored in DVD disc changing between PBC ON and PBC OFF on the VCD disc. (Auto store and preset scan function in radio stations .)</p> <p>Changing for slow forward/reverse playback motion</p> <p>Changing of the view angle on multi-angle DVD disc.</p> <p>Press it to turn to equalization function</p> <p>In TV mode, Press it to search TV channel automatically.</p> <p>In DISC mode, Press it to start forward rapidly.</p> <p>Confirm the Track/Chapter selected with the number key or selected with the cursor buttons on TV screen.</p> <p>In TV mode, press it to ADD and DELETE channel .</p> <p>In DISC mode,press it to reverse rapidly</p> <p>Numeric buttons.</p> <p>Tens digit select button, cooperatively used with numeric buttons.</p> |
|---|---|

# REMOTE CONTROL

---

## Preparing the Remote Control

### Inserting the Batteries



1. First push to inside as the direction indicated by the arrow (See ①) And then Remove the battery holder as the direction indicated by the arrow (See ②).
2. Replace the battery Set a new battery property with (+)side up as illustrated (See ③).
3. Insert the battery holder. Push in the holder to the original position(See ④).

### Using the Remote Control


Face the remote control towards the player front face IR mark (remote control signal receiver).

Operation angle: About  $\pm 30$  degree in each the direction of the front of the IR mark.

To prevent damage to the unit, be sure to follow the connection diagram (page 7).

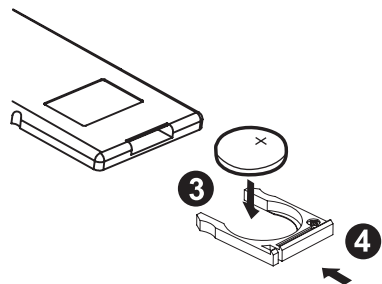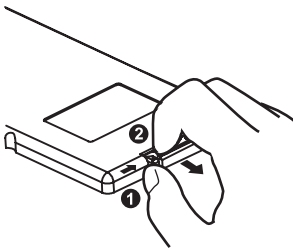

# BASIC OPERATION

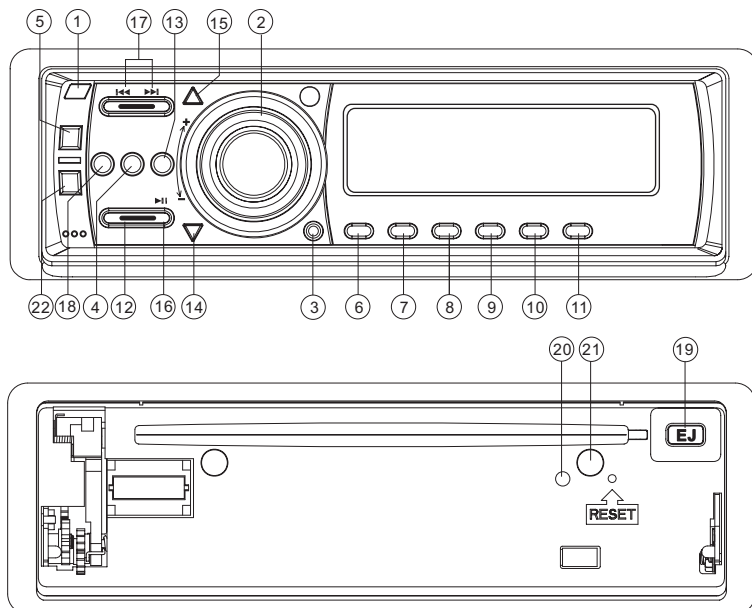


## 1.OPEN BUTTON

Press it to flip down the front panel then you can insert the cd disc into the cd compartment. and you can find the EJ button , press it to eject the disc .

## 2-3.VOL+/VOL- & SEL BUTTON

Press it repeatedly to change audio mode through volume, bass, treble, balance, and fader modes. Rotate VOL + /VOL- knob to adjust the selected mode. (The corresponding value will show on the display.)

 When mode has not been adjusted for several seconds, display returns to normal radio or CD display.



**A.Volume:**Adjust volume level by using VOL + / VOL - knob..

Note: The unit is initially set to volume mode.

**B.Bass:**Press SEL button one time. Adjust bass level by using VOL + / VOL - knob.

**C.Treble:**Press SEL button two times. Adjust treble level by using VOL + / VOL - knob.

**D.Balance:**Press SEL button three times. Adjust sound balance between left and right speakers by using VOL + / VOL - knob.

**E.Fader:**Press SEL button four times. Adjust sound balance between front and rear speakers by using VOL + / VOL - knob.

# BASIC OPERATION

## 4. BAND BUTTON

In RADIO mode, press the BAND button on the front panel or on the remote control to select your desired radio band and word which band is selected will be displayed on LCD. Press it to change the bands as below :



## 5. EQ BUTTON

Press it to turn to equalization function and to select desired audio mode. There are four kinds of mode as below:



## 6-7-8-9-10-11. PRESET STATION

A. To memorize the current frequency, press any one of the six preset buttons [1-6] on the front panel or on the remote controller hold for more than 2 seconds.

B. To recall the preset memory, press one of the preset buttons [1-6].

C. Press **1/TOP** button to select the first track/chapter to play.

a. In the state of VCD/CD/MP3 disc playing, press the button on the front panel to select the first track/chapter to play. (depend on the disc used for VCD)

b. In the state of DVD disc playing, the 1/TOP button is not available.

D. Long press **2/RPT** button to select repeat mode as follow.

VCD/CD:



DVD:



a. Continuously repeat at the current chapter/track, when selected REP-ONE mode.

b. Select REP-ALL mode to continuously repeat all chapter/track on the current disc.

c. REPEAT feature does not support VCD2.0 (with PBC ON).

E. Long press **3/INT** button to scan disc.

a. In the state of CD disc playing, press the 3/INT button on the front panel to play the previous 6 seconds part of each track/chapter on disc.

b. In the state of DVD/MP3 disc playing, the 3/INT button is not available.

c. In the state of VCD disc playing, long press the 3/INT button, the screen will display as follow (long press it again will release this mode.):

SELECT DIGEST TYPE:  
TRACK DIGEST  
DISC INTERVAL  
TRACK INTERVAL

# BASIC OPERATION

---


1). You can use the▲/▼/▶/◀ buttons on the remote control to select the item, and then press the ENTER button to confirm .

2). **In Track Digest OR Disc/Track Interval MODE.**

You can use the▲/▼/▶/◀ buttons to select the items ,and then press the ENTER to confirm .

You can also select the items using the corresponding number buttons, and then press the ENTER to confirm .

d.In the state of DVD disc playing , long press the 3/INT button, the screen will display as follow (long press it again will release this mode.):

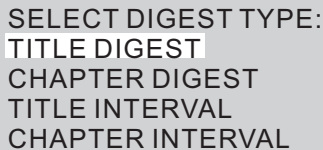

```
SELECT DIGEST TYPE:
TITLE DIGEST
CHAPTER DIGEST
TITLE INTERVAL
CHAPTER INTERVAL
```

1). you can use the ▲/▼/▶/◀ buttons on the remote control to select the item, and then press the ENTER button to confirm .

2). **In Title/Chapter Digest OR Title/Chapter Interval MODE.**

You can use the ▲/▼/▶/◀ buttons to select the items ,and then press the ENTER to confirm .

You can also select the items using the corresponding number buttons, and then press the ENTER to confirm .

F. Long press **4/RDM** to play disc in random.

In the DVD/VCD/CDDisc playing, press the 4/RDM button on the front panel to play in random (depend on the disc used for VCD).

## 12.AS/PS BUTTON

When shortly pressing the APS button on the front panel or the A/P button on the remote controller, the radio searches for each preset station. When the field strength level is more than the threshold level of stop level, the radio is holding at that preset number for few seconds with releasing mute, and then searches again. In FM band, FM 1, FM 2 and FM 3 is checked one at a time When long pressing the APS or A/P button (more than 1 second), the radio searches from the current frequency and checks the signal strength level until 1 cycle search is finished. And then 6 strongest stations are preset to the corresponding preset number. The AS operation is implemented in the each band of selected band. When the AS operation is finished, the radio executes the preset scan.

## 13.MU BUTTON

Press it to mute down sound. Press it again to release this mode and recover previous volume level.

## 14.CLK BUTTON

Press it to change the display to clock display. Press it again to return to previous display. In clock display, press and hold for about 2 seconds until the hour display flashes. Rotate VOL+/- button to adjust hours ,press CLK button to flash minute then Rotate VOL+/- button to adjust minutes.

# BASIC OPERATION

---

## 15. PWR BUTTON

Press it to turn on the unit. Press it again to turn off.

 
## 16. PAUSE BUTTON

Pressing **PAUSE** during playback will stop play temporary. Return to normal playback, press **PAUSE** once again.

## 17. FAST FORWARD / REVERSE BUTTONS

A. When long Pressing the **FF** / **REW** button (more than 2 seconds ) during play. The speed of rapid forward/reverse changes according to the disc as follow.

DVD/VCD/CD/MP3:



B. Shortly press the **FF** / **REW** button during playback to skip to next track or back one track. (Note: In DVD mode, press continually the **REW** button twice to skip to back one track.)

Note: For some VCD 2.0 discs (PBC-playback control), **FF** and **REW** buttons may be unavailable.

C. Press UP or DN button on the remote controller or **FF** / **REW** on the front panel to manually tune up or down for your desired station. Press them hold for more than 2 seconds to automatically tune up or down for the stronger station.

## 18. MOD BUTTON

Press it repeatedly select TV, DISC ,AUX IN , RADIO mode.

## 19. EJECT BUTTON

In CDP playing , Press the eject button to eject the disc form the disc slot.

## 20. FLASHING LED

If the front panel is not on the main unit, LED will be flashing.

## 21. RESET BUTTON

RESET button is placed on the housing and must be activated with either a ballpoint pen or thin metal object. The RESET button is to be activated for the following reasons:

A. Initial installation of the unit when all wiring is completed.

B. All the function buttons do not operate.

C. Error symbol on the display.

Note: If press RESET button , the unit can't work yet, please use a cotton swab soaked in isopropyl alcohol to clean the socket on the back of the front panel.

## 22. ST BUTTON


Press ST button to select stereo or mono reception for radio stations.

# BASIC OPERATION

## MP3/WMA/JPEG DISC PLAY

1. When inserting an MP3/WMA/JPEG disc

Ex: When Mp3 file is detected.

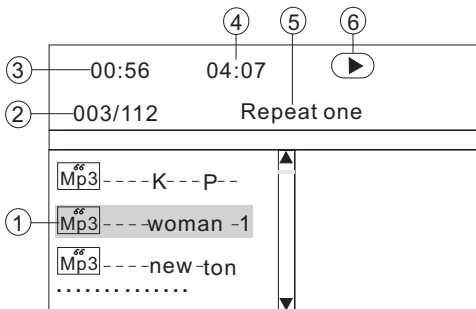

- ①. Current track(file)(highlighted bar)
- ②. Current track (file) number/total number of tracks(files) in the current folder.
- ③. Elapsed playing time of the current track(not available for JPEG disc)
- ④. total playing time.( not available for JPEG disc)
- ⑤. Selected playback mode
- ⑥. Operation mode icon. ▶ (Play), ■ (stop), || (pause), ►► (forward) ◀◀ (reverse).

In stop mode , use ▲/▼/▶/◀ on the remote control to select the item or folder, then press ENTER button to confirm.

Pressing REPEAT button repeatedly can select two kinds of repeat play mode.

2. REP-ONE:

Play the same song over and over again.

3. REP-ALL:

Play all songs in the disc over and over again.

In the playback, use ►► or ◀◀ to skip an item ahead or back.

In the playback, when long pressing the ►► / ◀◀ button on the front panel (more than 2 seconds ) or short press ►►/◀◀ on the remote control to rapid forward/ reverse.

## AUX OPERATION

When the unit connect external A/V , you can press MODE to switch the AUX input mode.

# BASIC OPERATION

## ON-SCREEN DISPLAY FUNCTION

Press the **OSD** button during playback to display the contents of the current disc on the screen.

Example :

1. DVD:

A. Press **OSD** for the first time:

```
TITLE ELAPSED
TT 01/01 CH 01/38  0:02:06
```

Title Number, Total Title Number, Chapter Number, Total Chapter Number of this Title of the disc currently being played will be shown on the screen, along with the elapsed time.

B. Press **OSD** for the second time:

```
TITLE REMAIN
TT 01/01 CH 01/38  3:24:36
```

C. Press **OSD** for the third time:

```
CHAPTER ELAPSED
TT 01/01 CH 01/38  0:02:56
```

D. Press **OSD** for the fourth time:

```
CHAPTER REMAIN
TT 01/01 CH 01/38  0:04:32
```

E. Press **OSD** for the fifth time:

The message on the screen will be cleared.

2. Example for VCD/SVCD/CD:

A. Press **OSD** for the first time:

```
SINGLE ELAPSED
TRACK 01/16      00:49
```

B. Press **OSD** for the second time:

```
SINGLE REMAIN
TRACK 01/16      02:45
```

C. Press **OSD** for the third time:

```
TOTAL ELAPSED
TRACK 01/16      00:60
```

D. Press **OSD** for the fourth time:

```
TOTAL REMAIN
TRACK 01/16      78:46
```

E. Press **OSD** for the fifth time:

The message on the screen will be cleared for SVCD and VCD.

NOTE:

For CD and MP3, the message will always display on the screen.

3. Example for MP3:

Each time **OSD** is pressed, the message displayed on screen changes as follows:

```
— SINGLE ELAPSED → SINGLE REMAIN —
```






# BASIC OPERATION

## Multi-audio Language Function

### For DVD:

Press **AUDIO** during playback. Each time the button is pressed, number of the audio soundtrack language changes on sequential order.

### NOTES:

- The language number is different according to the disc.
- Some disc only contain one language soundtrack
- When no different language soundtrack are recorded  will be display at screen left top corner.

### For VCD/CD:

Press **AUDIO** during playback. It is possible to switch the sound between monaural and stereo sound.



## Title Menu Function

### For DVD:

If the DVD has multiple titles recorded on the disc. It can select preferred title from the title menu to start playback.

- Press **TITLE** during playback. The title menu is display.
- Press the cursor button shown in TV screen, select preferred title by the cursor button and confirmed by **ENTER** key.

### For VCD:


Press **TITLE/PBC** button on the remote control while the disc is playing, you can switch between "PBC on" and "PBC off" mode.

## Multi-subtitle Language Function (for DVD Only)

Press **SUBTITLE** during playback. Each time the button is pressed, number of the subtitle language changes in sequential order.

### Notes:


- The language number is different according to the disc.
- Some discs only contain one subtitle language.

- When no different subtitle language are recorded,  will be displayed at screen left top corner.

## Multi-angle Function (for DVD Only)

Press **ANGLE** during playback. Each time the button is pressed, number of the angle changes in sequential order.

### Notes:

- The angle number is different according to the disc.
- The function only work for disc having scenes recorded at different angles.
- When no different angle are recorded,  will be displayed at screen left top corner.

## TV Operation

### Switching to TV mode

1. Connect the TV antenna to the TV.IN (from Ant) jack on the back of the unit.
2. Press the mode button on the remote control to select the TV mode.

### Auto searching TV channels

Press the **SEARCH** button on the remote controller to star search channel automatically.

### Selecting channel

- Press the **▲ / ▼** button to choose the channel upward and downward.
- The numeric button (0-9) allow you to select the corresponding channel directly.

### Note:

In TV mode, the +10 button is not available.

### Fine TV channel

You can press **► / ◀** button on the remote controller to fine TV channel. It can be improve the picture quality .

### Channel ADD/DEL

In TV mode ,after search channel automatically, when you want delete the no sign channel, press the **SKIP** button (the screen display **SKIP**),the channel will be deleted. Also, you can press numeric button to select channel, then press **SKIP** to add channel(the screen display **SAVE**).

# SETUP

## GENERAL SETUP

--- GENERAL PAGE ---

|                            |           |
|----------------------------|-----------|
| ----General setup page---- |           |
| TV Display                 | LB        |
| Angle Mark                 | ON        |
| OSD Lang                   | ENG       |
| Spdif Output               | SPDIF/RAW |
| Captions                   | ON        |
| Screen Saver               | ON        |
| Last Memory                | ON        |
| Go To General Setup Page   |           |

|                            |           |
|----------------------------|-----------|
| ----General setup page---- |           |
| TV Display                 | Normal/PS |
| Angle Mark                 | Normal/LB |
| OSD Lang                   | Wide      |
| Spdif Output               |           |
| Captions                   |           |
| Screen Saver               |           |
| Last Memory                |           |
| Set TV Display Mode        |           |

1. Press **SETUP** button on the remote control .
- 2.The **SETUP** menu is displayed.
- 3.Select the preferred item by using the **▶ / ◀ / ▼ / ▲** buttons
- 4.Press **ENTER** button.

### a.GENERAL SETUP

This setup page includes the item of TV display & audio output feature. The detail please refer to **GENERAL SETUP MENU**.

### b.SPEAKER SETUP

This is to activate the audio output from DOLBY AC3 5.1 DOWNMIX to 2 channel mode. Please refer to **SPEAKER SETUP MENU**.

### c.DOLBY DIGITAL SETUP

Please refer to **DOLBY DIGITAL SETUP**.

### d.PREFERENCE SETUP

This setup page includes all the configuration of support feature. The detail please refer to **PREFERENCES SETUP MENU**.

| Video Material | TV Screen |          |            |            |
|----------------|-----------|----------|------------|------------|
|                | Normal    | Pan Scan | Letter-box | Wide(16:9) |
| 4:3            |           |          |            |            |
| 16:9           |           |          |            |            |

## 1. TV DISPLAY SETUP

This is to select the appropriate TV aspect (4:3 or 16:9) according to the connected TV set.

### Normal/PS (For 4:3 TV)

Played back in the PAN & SCAN style. (If connected to wide-screen TV, the left and right edges are cut off.)


### Normal/LB (For 4:3 TV)

Played back in letterbox style. (If connected to wide-screen TV, black bands appear at top and bottom of the screen.)


### Wide (For 16:9 TV)


Select when a wide-screen TV set is connected.

# SETUP

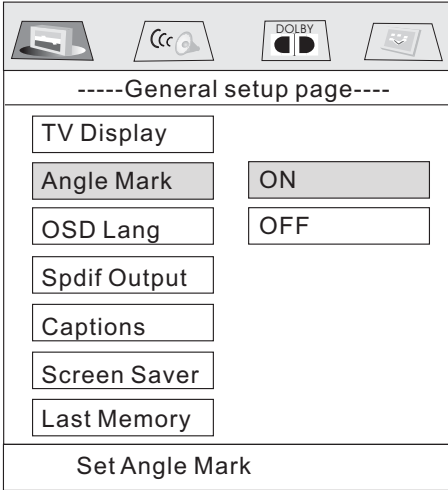

## 2. ANGLE MARK DISPLAY SETUP

If it is set to ON, when the multi-angle DVD disc is playing,  (the angle mark) will appear on the screen; if it is set to OFF, the mark will not appear.

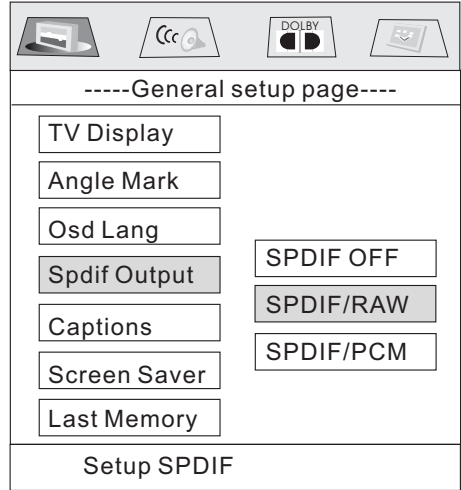


## 4. SPDIF OUTPUT

This is to activate the audio output from SPDIF OFF mode to SPDIF/RAW mode to SPDIF/PCM mode.



## 3. OSD LANG TYPE SETUP


Select the preferred OSD language by using the ▲ / ▼ buttons.

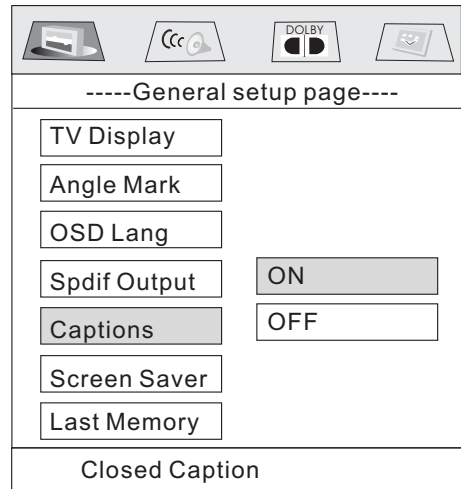

## 5. CAPTIONS SETUP


Activate the CAPTIONS feature by selecting ON. And release this feature by selecting OFF.

# SETUP

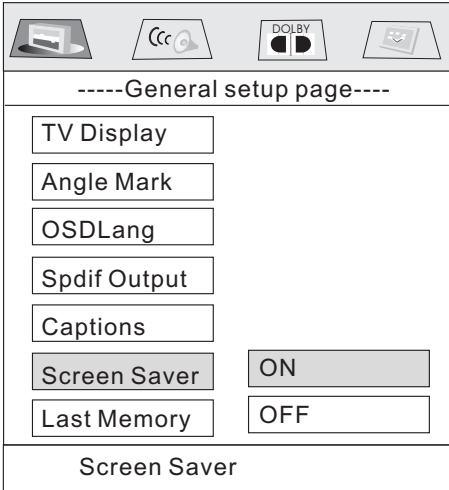

## 6. SCR SAVER SETUP

Select the SCR SAVER output ON/OFF.

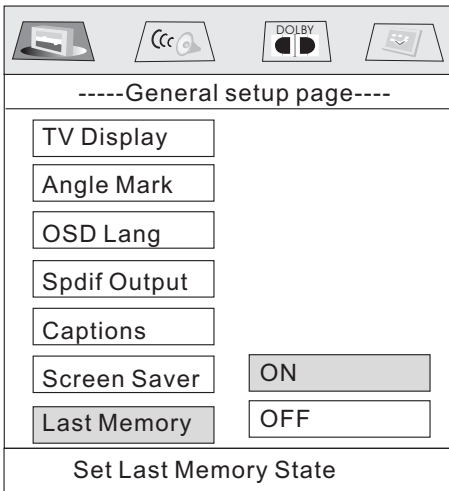


## 7. LAST MEMORY SETUP

Select the LAST MEMORY output ON/OFF.


## SPEAKER SETUP

--- SPEAKER SETUP PAGE ---

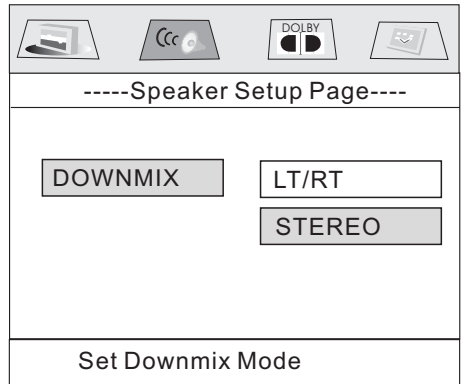

This is to activate the audio output from DOLBY AC3 5.1 DOWNMIX to 2 channel mode. Select the preferred SPEAKER connection by using the cursor buttons. Select the LT/RT to activate the Dolby surround compatible output. Select the STEREO to activate simple stereo mode.

## DOLBY DIGITAL SETUP

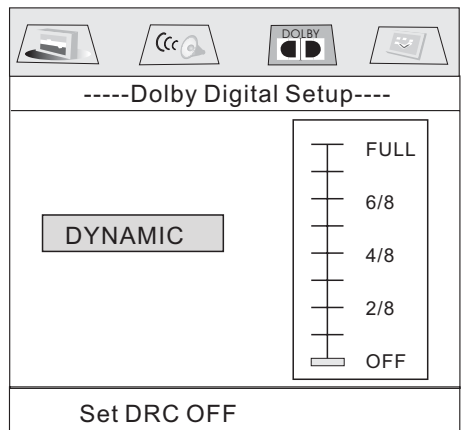





## DYNAMIC RANGE CONTROL

Select DRC and adjust the dynamic range of a Doby Digital encoded program. There are 8 steps between full compression and off compression.

# SETUP





## PREFERENCES SETUP

--- PREFERENCES PAGE ---

|  |   |   |   |
|--|---|---|---|
|  |  |  |  |
| -----Preference Page-----  |   |   |   |
| TV Type  | PAL   |   |   |
| Audio  | AUTO  |   |   |
| Subtitle   | NTSC  |   |   |
| Disc Menu  |   |   |   |
| Parental   |   |   |   |
| Password   |   |   |   |
| Default  |   |   |   |
| Set TV standard  |   |   |   |





### 1. TV TYPE SETUP

This player can play discs recorded in either PAL or NTSC format. Select NTSC format, when you connected to NTSC TV. Select PAL format, when you connected to PAL TV. Select AUTO format, the player TV output format will according to the DVD disc format..

|  |   |   |   |
|--|---|---|---|
|  |  |  |  |
| -----Preference Page-----  |   |   |   |
| TV Type  |   |   |   |
| Audio  | English   |   |   |
| Subtitle   | French  |   |   |
| Disc Menu  | Spanish   |   |   |
| Parental   | German  |   |   |
| Password   | Italian   |   |   |
| Default  | Portuguese  |   |   |
| Preferred Audio Language   |   |   |   |



### 2. AUDIO LANGUAGE SETUP

Select the preferred AUDIO sound-track by using the cursor buttons.

|   |   |   |  |
|---|---|---|--|
|  |  |  |  |
| -----Preference Page-----   |   |   |  |
| TV Type   | English   |   |  |
| Audio   | French  |   |  |
| Subtitle  | Spanish   |   |  |
| Disc Menu   | German  |   |  |
| Parental  | Italian   |   |  |
| Password  | Portuguese  |   |  |
| Default   | OFF   |   |  |
| Preferred Subtitle Language   |   |   |  |

### 3. SUBTITLE LANGUAGE SETUP


Select the preferred SUBTITLE language by using the cursor buttons.

|   |   |   |  |
|---|---|---|--|
|  |  |  |  |
| -----Preference Page-----   |   |   |  |
| TV Type   |   |   |  |
| Audio   | English   |   |  |
| Subtitle  | French  |   |  |
| Disc Menu   | Spanish   |   |  |
| Parental  | German  |   |  |
| Password  | Italian   |   |  |
| Default   | Portuguese  |   |  |
| Preferred Menu Language   |   |   |  |

### 4. DISC MENU LANGUAGE SETUP

Select the preferred DISC MENU language by using the cursor buttons.

# SETUP

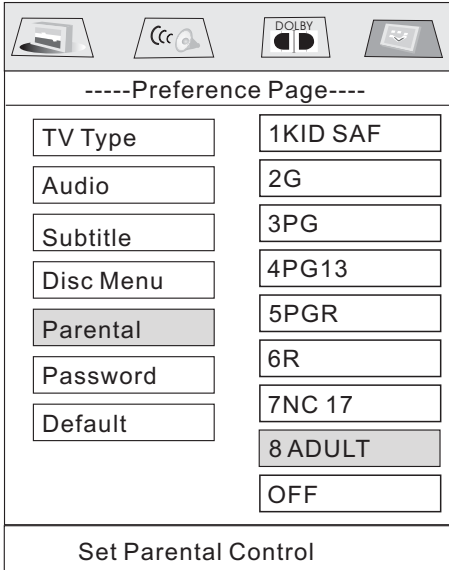


-----Preference Page-----

|           |          |
|-----------|----------|
| TV Type   | 1KID SAF |
| Audio     | 2G       |
| Subtitle  | 3PG      |
| Disc Menu | 4PG13    |
| Parental  | 5PGR     |
| Password  | 6R       |
| Default   | 7NC 17   |
|           | 8 ADULT  |
|           | OFF      |

Set Parental Control

## 5. PARENTAL

Select suitable parental guidance by the cursor buttons and conformed by pressing ENTER button.

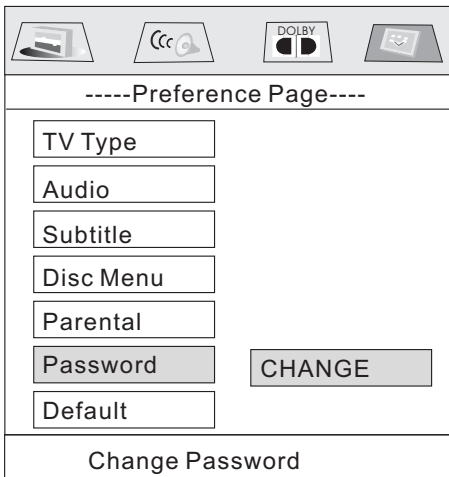


-----Preference Page-----

|           |        |
|-----------|--------|
| TV Type   |        |
| Audio     |        |
| Subtitle  |        |
| Disc Menu |        |
| Parental  |        |
| Password  | CHANGE |
| Default   |        |

Change Password

## 6. PASSWORD

Select the change and press ENTER button. Type the old password (The initial factory code is **1379**) and key in 4 characters password now you want to use, and retype again to confirm key in correctly.

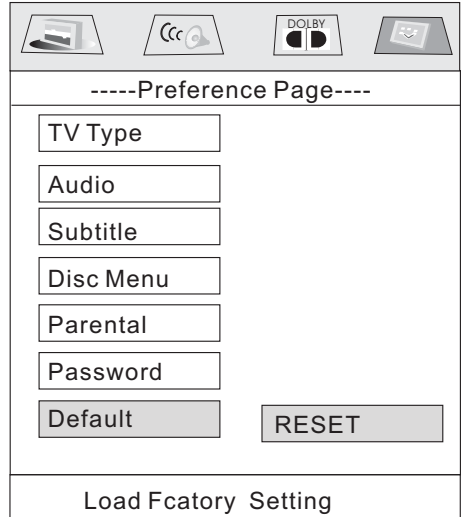

-----Preference Page-----

|           |       |
|-----------|-------|
| TV Type   |       |
| Audio     |       |
| Subtitle  |       |
| Disc Menu |       |
| Parental  |       |
| Password  |       |
| Default   | RESET |

Load Factory Setting

## 7. DEFAULTS

Select reset to become factory initial setting.

## DEFAULTS TABLE

|               |              |           |
|---------------|--------------|-----------|
| GENERAL SETUP | TV DISPLAY   | NORMAL/LB |
|               | ANGLE MARK   | ON        |
|               | OSD LANGUAGE | ENGLISH   |
|               | SPDIF OUPUT  | SPDIF/RAM |
|               | CAPTIONS     | ON        |
|               | SCR SAVER    | ON        |
|               | LAST MEMORY  | ON        |
| SPEAKER SETUP | DOWNMIX      | STEREO    |
| DOLBY DIGITAL | DYNAMIC      | OFF       |
| PREFERENCES   | TV TYPE      | AUTO      |
|               | AUDIO        | ENGLISH   |
|               | SUBTITLE     | OFF       |
|               | DISC MENU    | ENGLISH   |
|               | PARENTAL     | 8 ADULT   |
|               | PASSWORD     | 1379      |

# SPECIFICATION

---

## GENERAL

|                      |                                |
|----------------------|--------------------------------|
| Supply Voltage       | :12v Dc (11v-15v)              |
| Current Consumption  | :More Then 10 A                |
| <b>SIGNAL SYSTEM</b> | :Compositive Video 1.0vp-p 75Ω |

## DISCS PLAYED

- (1)Dvd-video Disc
  - 5"(12 Cm) Single-sided, Single-layer
  - 5"(12 Cm) Single-sided, Double-layer
- (2)Compact Disc (cd-da, Video Cd)
  - 5"(12cm) Disc

## AUDIO SIGNAL OUTPUT CHARACTERISTICS

- |                       |                         |
|-----------------------|-------------------------|
| :2ch&4ch Line Out     |                         |
| (1)Frequency Response | 20 Hz - 20 Khz          |
| (2)S/n Ratio          | 90 Db (jis)             |
| (3)Wow And Flutter    | Below Measurable Limits |

## RADIO

### FM TUNER SECTION

|                          |                |
|--------------------------|----------------|
| Tuning Range             | :87.5-107.9MHz |
| IF Range                 | :10.7MHz       |
| Usable sensitivity(30dB) | :15dB          |

### AM TUNER SECTION

|                          |              |
|--------------------------|--------------|
| Frequency Range          | :530-1710KHz |
| IF Range                 | :450KHz      |
| Usable sensitivity(30dB) | :45dB        |

## TV TUNER

|                |                          |
|----------------|--------------------------|
| TV System      | :NTSC or PAL             |
| TV Sensitivity | :45dBμV @CH25 in average |

## NOTE:

Specifications and design are subject to modification, without notice, due to improvements in technology.

# TROUBLE SHOOTING

Before going through the check list, check wiring connection. If any of the problems persist after check list has been made, consult your nearest service dealer.

| SYMPTOM                          | CAUSE   | SOLUTION  |
|----------------------------------|---|---|
| NO POWER                         | The car ignition switch is not on                                 | If the power supply is properly connected to the car accessory terminal, switch the ignition key to "ACC" |
|                                  | The fuse is blown   | Replace the fuse  |
| DISC CANNOT BE LOADED OR EJECTED | Presence of disc inside the player.                               | Remove the disc in the player, then put a new one   |
|                                  | Inserting the disc in reverse direction                           | Insert the compact disc with the label facing upward  |
|                                  | The disc is extremely dirty or defective                          | Clean the disc or try to play a new one   |
|                                  | Temperature inside the car is too high                            | Cool off or until the ambient temperature return to normal  |
|                                  | Condensation  | Leave the player off for an hour then try again   |
| NO SOUND                         | Volume is in minimum  | Adjust volume to a desired level  |
|                                  | Wiring is not properly connected                                  | Check wiring connection   |
| SOUND SKIPS                      | The installation angle is more than 30 degrees                    | Adjust the installation angle less than 30 degrees  |
|                                  | The disc is extremely dirty or defective disc                     | Clean the compact disc, then try to play a new one  |
| THE OPERATION KEYS DO NOT WORK   | The built-in microcomputer is not operating properly due to noise | Press the RESET button. Front panel is not properly fixed into its place                                  |
| THE RADIO DOES NOT WORK          | The antenna cable is not connected                                | Insert the antenna cable firmly   |
|                                  | The signals are too weak  | Select a station manually   |



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>