



PYLE® view

INSTRUCTION MANUAL



PLHR58

5.8" TFT LCD MONITOR FOR HEADREST INSTALLATION

WARNING: DO NOT WATCH TV WHILE VEHICLE IN MOTION,
IT CAN BE HAZARDOUS





IR sensor Power

PLHR58

5.8" TFT LCD MONITOR FOR HEADREST INSTALLATION

SPECIFICATION

Type:TFT LCD

Display size:5.8"

Display ratio:16:9



Power Consumption:< = 7W

Video input: Dual Video input

System: PAL/NTSC (Auto switching)

Pixels: 480X234XRGB

Connect Method:

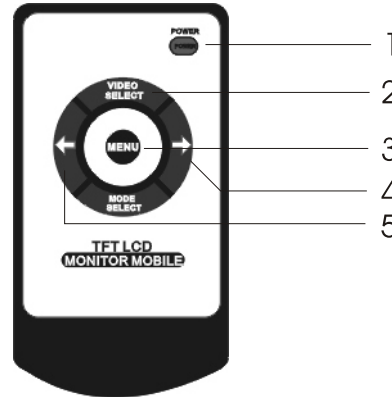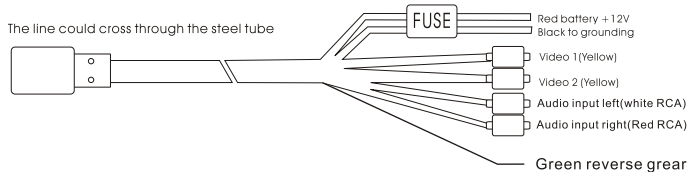

- 1 Power: Press to Power On/Off the monitor
- 2 Video select: V1/V2 switch
- 3 Menu: Press to active the OSD menu, it shows brightness-contrast-color-tint-default
- 4 <-: Press to decrease the value
- 5 ->: Press to increase the value

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>