


## User's Manual

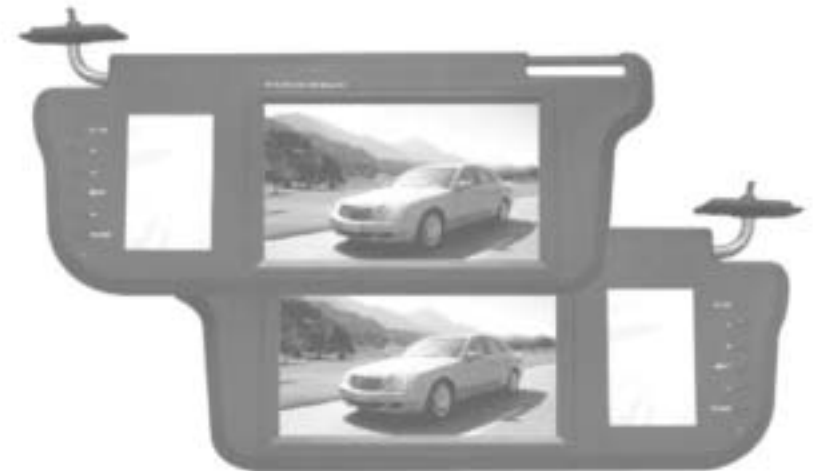

Before operating the Monitor, please read this manual thoroughly and retain it for future reference.

### 7" TFT LEFT AND RIGHT SIDE SUN VISOR MONITORS

#### Monitor




#### Function key

1. V1/V2 Switch
2. R/C Window
3. Positive increase
4. Menu
5. Negative decrease
6. Power
7. Light

#### Operating instructions

Turn drawbar counter-clockwise by 90° when installing, drawbar can be easily stretched out or draw back, it is extremely facile to install in a wide variety of vehicles.

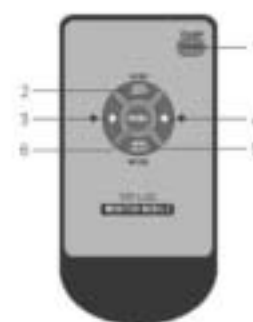

1. POWER
2. V1/V2 Change
3. Negative Decrease
4. Positive Increase
5. Mode Selection
6. Menu

#### Connection



#### Specification

- \* Display size: 7"
- \* TFT LCD Sanyo panel
- \* Video: Dual video input
- \* System: PAL/NTSC auto switching
- \* Resolution: 480xRGBx234
- \* Brightness: 300CD/M<sup>2</sup>

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>