

PYLE®

PyleAudio.com

718.535.1800 718.236.2400 (fax)
1600 63rd Street, Brooklyn NY 11204

PYLE® PWMA-170


OPERATING INSTRUCTIONS

**Dual Channel 400 Watt Wireless PA System W/USB/SD/MP3, FM Radio,
2 VHF Wireless Microphones (1 Lavalier, 1 Handheld)**




www.pyleaudio.com

A. Direction map:

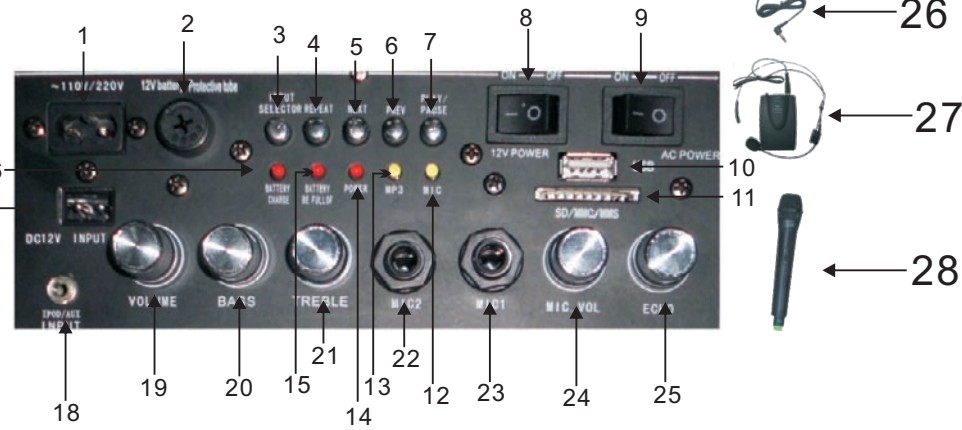

- | | |
|---------------------------------|--------------------------------------|
| 1. 110V/220V Input | 15. Battery Charged Indicator Light |
| 2. 12 V Battery Protective Tube | 16. Battery Charging Indicator Light |
| 3. Input Selector | 17. DC 12V Input |
| 4. Repeat | 18. Ipod/Aux Input |
| 5. Next | 19. Volume Control |
| 6. PREV | 20. Bass Control |
| 7. Play/Pause | 21. Treble Control |
| 8. DC 12V Power Switch | 22. MIC2 Input |
| 9. AC Power Switch | 23. MIC1 Input |
| 10. USB Input | 24. Mic. Volume Control |
| 11. SD/MMC/MMS Card Input | 25. Echo Control |
| 12. Mic Indicator Light | 26. Lavalier Microphone |
| 13. MP3 Indicator Light | 27. Headset Microphone |
| 14. Power Indicator Light | 28. Handheld Microphone |

B. Remote control:

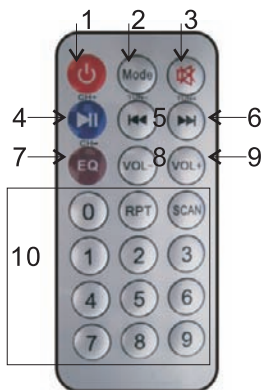

1. Power: on/off
2. Mode: USB/FM/Aux input
3. Mute
4. Play/Pause
5. Previous: previous station/previous song
6. Next: next song/next station
7. EQ: equalizer
8. Volume: increase
9. Volume reduce
10. 0-9/100+/200+ directly select items or the 0 of the menu.

P-1

C. Accessories

- Audio cable
- AC power cord
- Manual
- Remote Control
- Wireless microphone
- DC 12V cord
- AUX cord
- Belt to carrying speaker

D. Function:

Dual Channel 400 Watt Wireless PA System W/USB/SD/MP3, FM Radio, 2 VHF Wireless Microphones (1 Lavalier, 1 Handheld)

E. Important:

1. This unit has rechargeable battery, when the battery power run up, kindly plug the switch to electric socket according to input voltage. When charging the battery the light of CHARGING will be on. Once the battery is charged the FULL light will be on. When charge the battery make sure DC switch should be ON. Once unit is charged please UNPLUG the socket from electricity. You have to charge the battery for 7 to 10 hours. Battery normally working time is 3-4 hours according to the volume of speaker.
2. When you want to use microphone, please insert the microphone to MIC1 or MIC2 & you can control the volume from MIC.VOL in the control panel.

F. Attention:

1. In order to keep battery life longer, kindly charge the battery every time after the battery power is finished, else it will damage the battery if you keep it long time without charge or not using it for long period of time, so kindly use it after regular interval of time.
2. Our company reserve right to bring changes in product without any notice.
3. If any issue with the product kindly contact the professional person to handle as this unit is high power, so please don't open the unit.
4. Keep it away from children.

P-2

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>