
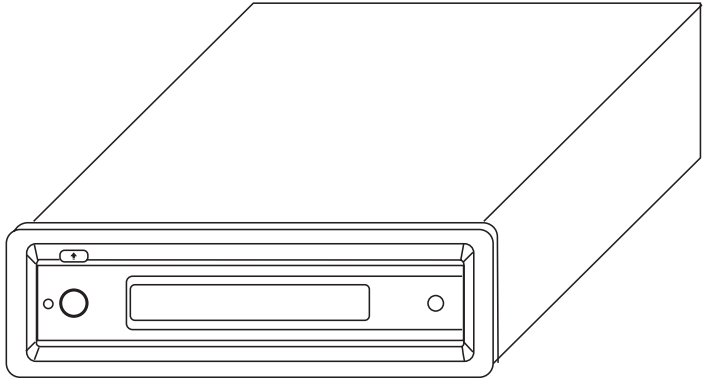


OWNER'S MANUAL

Mobile Video System

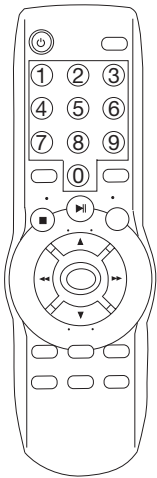

- **Vacuum Fluorescent Display**
- **Multi-subtitle and Multi-audio Soundtrack Languages Function**
- **Multi-angle Function**
- **Parental Control**

FEATURES

Compatible with PAL DVD (Video CD) and NTSC DVD (Video CD)

This player can play discs recorded in either PAL or NTSC format.

- A single LSI chip now integrates all major DVD playback circuit functions including MPEG2 decoder, video D/A converter, and audio decoders.
- L/R stereo analog audio outputs (RCA) for connection to existing head unit aux inputs. Video output is composite video (RCA).
- Supplied remote handles multi-function software (multi-language audio-track/subtitle, multi-angle), plus all basic functions.

USE THIS PRODUCT SAFELY

When Driving

Keep the volume level low enough to be aware of road and traffic conditions.

When Car Washing

Do not expose the product to water or excessive moisture. This could cause electrical shorts, fire or other damage.

When Parked

Parking in direct sunlight can produce very high temperatures inside your vehicle. Give the interior a chance to cool down before starting playback.

Use the Proper Power Supply

This product is designed to operate with a 12 volt DC, negative ground battery system (the regular system in a North American car).

Protect the Disc Mechanism

Avoid inserting any foreign objects into the slot of this player.

Failure to observe this may cause malfunction due to the precise mechanism of this unit.

Use Authorized Service Centres

Do not attempt to disassemble or adjust this precision product. Please refer to the Service Centre list included with this product for service assistance.

For Installation

The unit should be installed in a horizontal position with the front end up at a convenient angle, but not more than 30°.

DOLBY DIGITAL

Manufactured under license from Dolby Laboratories.

“Dolby” and the double-D symbol are trademarks of Dolby Laboratories.

Confidential Unpublished Works.

©1992-1997 Dolby Laboratories, Inc.

All rights reserved.

CONTENTS

Safety Information	4
Disc Notes	5
Installation	6
DIN Front-Mount (Method A)	6
DIN Rear-Mount (Method B)	7
Using the Detachable Front Panel	8
Electric Connection	9
Remote Control	10
Preparing the Remote Control	11
Loading a DVD/VCD/CD Disc	11
Ejecting a Disc	11
Basic Operation	12
On-Screen Display Function	13
Multi-audio Function	13
Menu Function	13
Subtitle Language Function (For DVD only)	13
Multi-angle Function (For DVD only)	14
MP3 Disc Play	14
Extra Function Control	15
Setup	16
Initial Setup	16
General Setup	16
Speaker Setup	18
Dolby Digital Setup	18
Preference Page	19
Specifications	22

SAFETY INFORMATION

CAUTION:

MOBILE DVD PLAYER IS A CLASS I LASER PRODUCT. HOWEVER THIS MOBILE DVD PLAYER USES A VISIBLE/INVISIBLE LASER BEAM WHICH COULD CAUSE HAZARDOUS RADIATION EXPOSURE IF DIRECTED. BE SURE TO OPERATE THE MOBILE DVD PLAYER CORRECTLY AS INSTRUCTED. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVERS AND - DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

WARNING:

- TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.
- TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, AND ANNOYING INTERFERENCE, USE ONLY THE RECOMMENDED ACCESSORIES.
- THIS DEVICE IS INTENDED FOR CONTINUOUS OPERATION.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Region Management Information

Region Management Information: This Mobile DVD Player is designed and manufactured to respond to the Region Management Information that is recorded on a DVD disc. If the Region number described on the DVD disc does not correspond to the Region number of this Mobile DVD Player, this Mobile DVD Player cannot play this disc. The Region number for this product is "1".

CE Mark:

This mark signifies that the product conforms to all applicable requirements of the European Community. A Declaration of Conformance is included with the user information that describes the specifications used to demonstrate conformity.

DISC NOTES

Disc formats supported by this player



DVD
12 cm disc/8 cm disc
(Single-sided disc only)



Video CD
12 cm disc/8 cm disc



CD
12 cm disc/8 cm disc

Discs which cannot be played with this player

- DVD-ROM
- DVD-R/DVD-RAM
- CD-ROM
- CDV
- CD-G
- Photo CD
- DVDs with a Region number other than "2" and "ALL"

Handling and Cleaning

- Dirt, dust, scratches and warping disc will cause misoperation.
- Do not place stickers or make scratches on discs.
- Do not warp discs.
- A disc should always be kept in its case when not in use to prevent from damaging.
- Do not place discs in the following places:
 1. Direct sunlight
 2. Dirty, dusty and damp areas
 3. Near car heaters
 4. On the seats or dashboard


Disc Cleaning

Use a dry soft cloth to wipe the surface. If the disc is quite dirty, use a soft cloth slightly moistured with isopropyl (rubbing) alcohol. Never use solvents such as benzine, thinner or conventional record cleaners as they may mar the surface of the disc.

Note:

A disc may become somewhat scratched (although not enough to make it unusable) depending on your handle it and conditions in the usage environment.

Note these scratches are not an indication of any problem with the player.

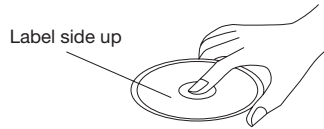


Label side up



Do not touch the underside of the disc



 
Do not bend



Wipe the disc from center toward the outside edge

Preparing New Discs with Rough Spots

A new disc may have rough edges on its inside and outside edges. If a disc with rough edges is used, the proper setting will not be performed and the player will not play the disc. Therefore, remove the rough edges in advance by using a ball point pen or pencil as shown on the right. To remove the rough edges, press the side of the pen or pencil against the inside and outside edges of the disc.

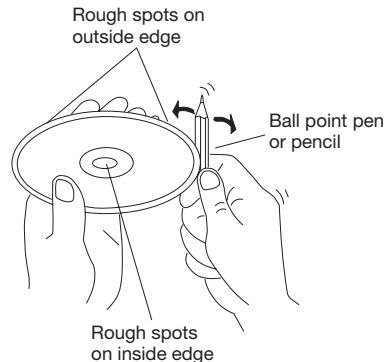

Rough spots on outside edge

 
Ball point pen or pencil

Rough spots on inside edge

INSTALLATION

Notes:

- Choose the mounting location where the unit will not interfere with the normal driving function of the driver.
- Before finally installing the unit, connect the wiring temporarily and make sure it is all connected up properly and the unit and the system work properly.
- Use only the parts included with the unit to ensure proper installation. The use of unauthorized parts can cause malfunctions.
- Consult with your nearest dealer if installation requires the drilling of holes or other modifications of the vehicle.
- Install the unit where it does not get in the driver's way and cannot injure the passenger if there is a sudden stop, like an emergency stop.
- If installation angle exceeds 30° from horizontal, the unit might not give its optimum performance.




- Avoid installing the unit where it would be subject to high temperature, such as from direct sunlight, or from hot air, from the heater, or where it would be subject to dust, dirt or excessive vibration.

DIN FRONT/REAR-MOUNT

This unit can be properly installed either from "Front" (conventional DIN Front-mount) or "Rear" (DIN Rear-mount installation, utilizing threaded screw holes at the sides of the unit chassis). For details, refer to the following illustrated installation methods.


DIN FRONT-MOUNT (Method A)

Installing the unit

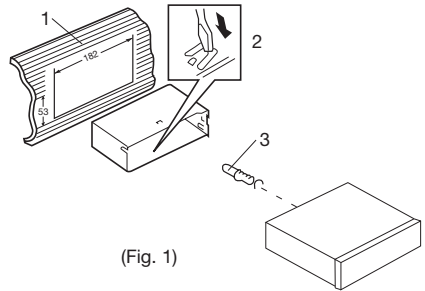

(Fig. 1)

1. Dashboard
2. Holder
After inserting the holder into the dashboard, select the appropriate tab according to the thickness of the dashboard material and bend them inwards to secure the holder in place.
3. Screw

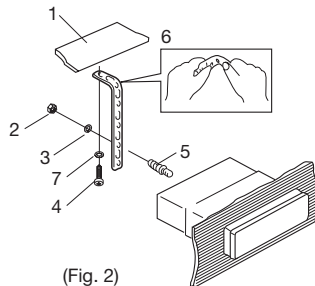


(Fig. 2)

1. Dashboard
2. Nut (5mm)
3. Spring washer
4. Screw (5 x 25mm)
5. Screw
6. Strap
Be sure to use the strap to secure the back of the unit in place. The strap can be bent by hand to the desired angle.
7. Plain washer

INSTALLATION

Removing the unit

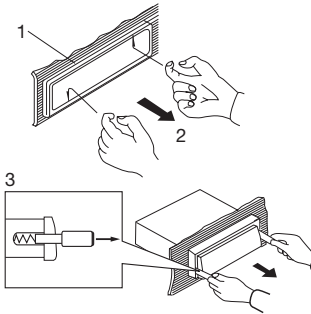

1. Frame
2. Insert fingers into the groove in the front of frame and pull out to remove the frame. (When reattaching the frame, point the side with a groove downwards and attach it.)
3. Lever
Insert the levers supplied with the unit into the grooves at both sides of the unit as shown in figure until they click. Pulling the levers makes it possible to remove the unit from the dashboard.


Fastening the unit to the factory radio mounting bracket.

1. Select a position where the screw holes of the bracket and the screw holes of the main unit become aligned (are fitted), and tighten the screws at 2 places on each side.
Use either truss screws (5 x 5mm) or flush surface screw (4 x 5mm), depending on the shape of the screw holes in the bracket.
2. Screw
3. Factory radio mounting bracket
4. Dashboard or Console
5. Hook (Remove this part)

Note: The mounting box, outer trim ring, and half-sleeve are not used for method B installation.

DIN REAR-MOUNT (Method B)


Installation using the screw holes on the sides of the unit.

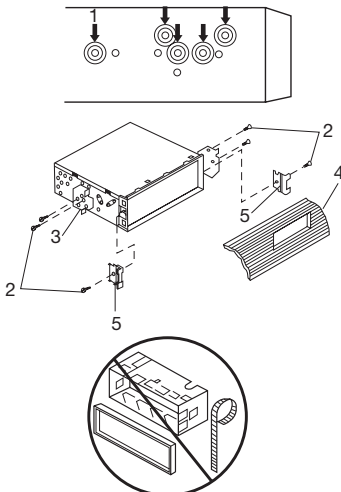


USING THE DETACHABLE FRONT PANEL

To Detach the Front Panel


1. Press the open button (OPEN), then the front panel will be folded down.

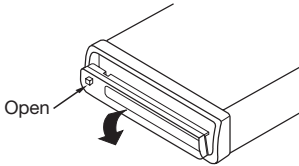


2. Remove the front panel by pulling its middle-hand outward.

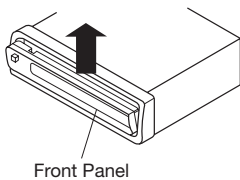

3. For safekeeping, store the front panel in the supplied protective case immediately after being removed.

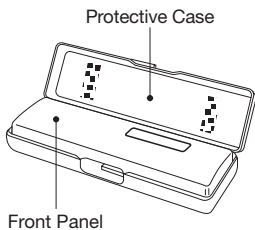


4. Push the front metal plate into the main body. A 'click' sound should be heard.

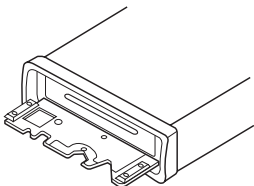

To Reinstall the Front Panel

1. Push the front panel into the main body. A 'click' sound should be heard.

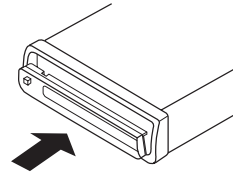


2. Note that if the front panel fails to lock in position properly, press control button may not function and LCD display may be missing some segments. Pressing the OPEN button and then reinstall the front panel again.


Precautions when Handling

1. Do not drop the front panel.
2. Do not put pressure on the display or control buttons when detaching or reinstalling the front panel.
3. Do not touch the contacts on the front panel or on the main unit body. It may result in poor electrical contact.
4. If any dirt or foreign substances adhered on the contacts, they can be removed with a clean and dry cloth.
5. Do not expose the front panel to high temperatures or direct sunlight in anywhere.
6. Keep away any volatile agents (e.g. benzene, thinner, or insecticides) from touching the surface of the front panel.
7. Do not attempt to disassemble the front panel.

ELECTRIC CONNECTION

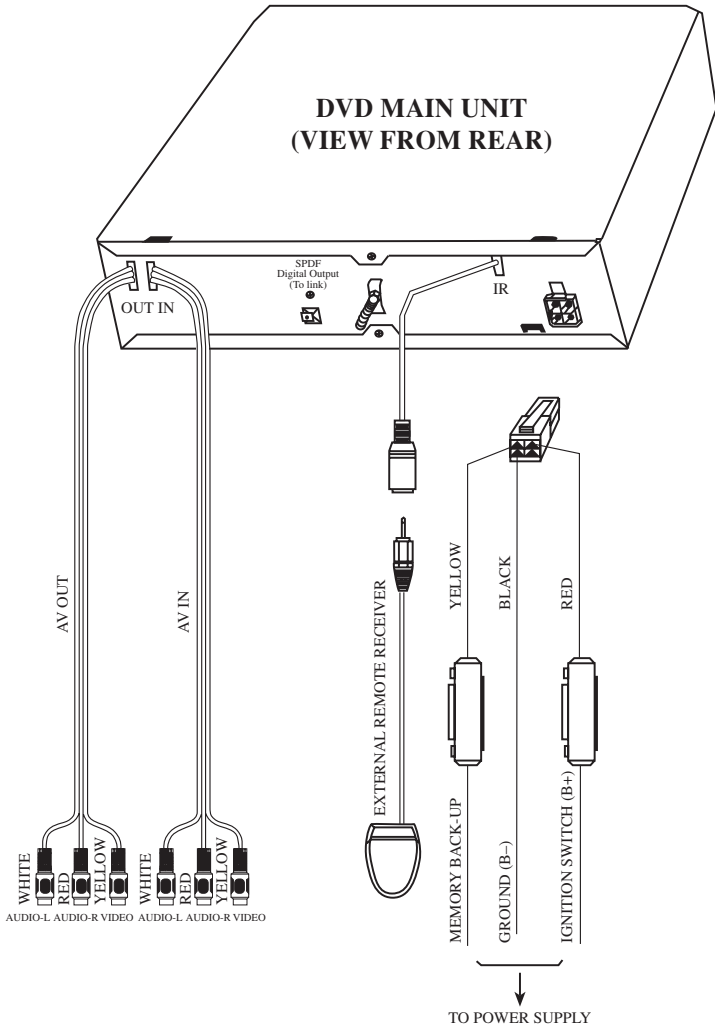

REMOTE CONTROL

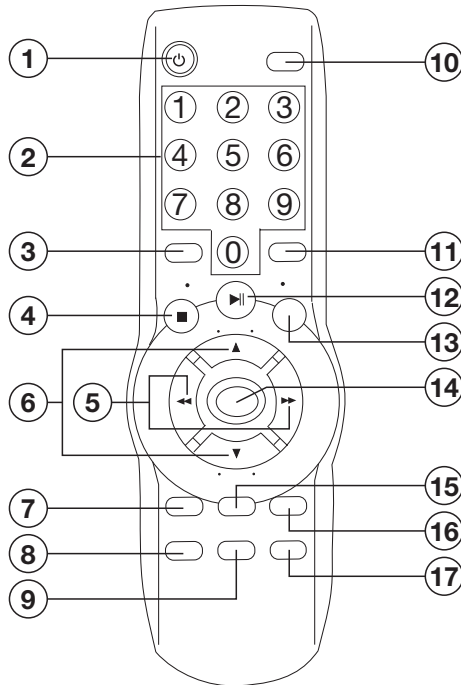

1. POWER Press POWER to turn the unit ON or OFF
2. 0 - 9 Numeric Key buttons
3. ILL Choose the VFD Display brightness level
4. Press it to stop playback
5. Press to start forward rapidly & to reverse rapidly
6. Press to skip to the next track & press to skip back one track
In case of MENU mode, those buttons served as cursor buttons
7. SUBTITLE Changing of the SUBTITLE language on multi-subtitle language DVD disc
8. SETUP Display the SETUP menu
9. TITLE Display the TITLE menu that is stored in DVD disc
10. DISPLAY Display statistical disc information during playback
11. REPEAT Switch the Repeat mode, following by REPEAT, REPEAT 1 and REPEAT OFF
12. Press once to PAUSE a play, press again to resume continuous playback
13. AV Switch between the DVD player and the external AUDIO/VIDEO
14. ENTER Confirm the Track/Chapter selected with the number key or selected with the cursor buttons on TV screen
15. AUDIO Changing of the AUDIO soundtrack on multi-audio soundtrack DVD disc
16. ANGLE Changing of the view angle on multi-angle DVD disc
17. MENU Display the root menu that is stored on the DVD disc

Note: , **DISPLAY**, **ANGLE** are also assigned as special function keys, please refer to "Extra Function Control".

REMOTE CONTROL

Preparing the Remote Control

Inserting the Batteries

1. Open the battery compartment cover.
2. Insert the new batteries. Make sure that the positive and negative terminals of the batteries are oriented indicated.
3. Close the cover
Battery: Two AAA size battery.

Using the Remote Control

Face the remote control towards the player front face IR mark (remote control signal receiver).

Operation angle: About ± 30 degree in each the direction of the front of the IR mark.


To prevent damage to the unit, be sure to follow the connection diagram (page 9).

Loading a DVD/VCD/CD Disc


1. Turn the ignition on the the accessory position.
2. Press the POWER button (1).
3. Press the OPEN button (2), the front panel will fold down slowly.
4. Insert the disc with printed side facing up.
5. The player starts playback automatically.

Ejecting a Disc

- Press the OPEN button (2).
- Let the panel fully fold down, then press Δ (8) to eject.
- Remove the disc and close back the front panel.

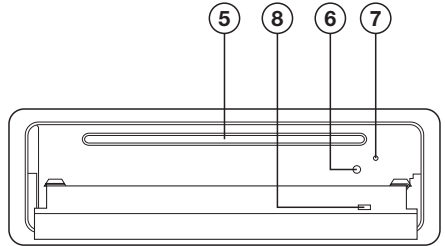

- (1) Power Button
- (2) Open Button
- (3) Remote Sensor
- (4) VFD Display
- (5) Disc Slot
- (6) Flash LED
- (7) Reset Button
- (8) Eject Button

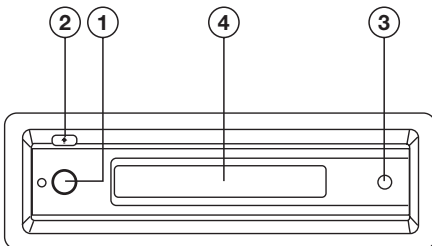

BASIC OPERATION

Stopping Play

- Brief press the STOP button to stop the unit playback, when press the PLAY button it can continuous normal playback.
- Press STOP button twice, it will stop the playback and go back to initial Track/Chapter.

Rapid Forward/Rapid Reverse

Press ►► FF & ◀◀ REW during play. Each time the button is pressed, the speed of rapid forward/reverse changes according to the disc as follow.

DVD/VCD/CD/MP3



Skipping Track

Press SKIP ▲/▼ during playback. Press ▲ to skip to next track, and ▼ to back one track.
Note: For some VCD 2.0 discs (PBC-playback control), ▲/▼ buttons may be unavailable.

Pause (still picture)

Press ►|| during playback. Return to normal playback. Press ►|| once again.

Repeat

Press the REPEAT button to select repeat mode as follow.



DVD/CD DISC

1. Continuously repeat at the current chapter/track, when selected REPEAT 1 mode.
2. Select REPEAT mode to continuously repeat all chapter/track on the current disc.
3. When the player finish playback the current disc last chapter/track, it will stop display the elapsed time. When selected REPEAT OFF mode (REPEAT & REPEAT disappear at VFD display).

VCD

REPEAT feature not support VCD 2.0 (with PBC).

Illumination (ILL)

Press ILL to adjust the light of the VFD display in the following order. Brightness Level



Choose higher brightness level will increase the VFD lighting.

Reset

Reset button is placed on the housing and must be activated with either a ball point pen or thin metal object. The reset button is th be activated for the following reasons:

- Initial installation of the unit when all wiring is completed.
- All the function buttons do not operate.
- Error symbol on the display.

Open

Press OPEN to fold down the front panel.

Remote Sensor (IR)

Point the remote handset to the remote sensor. Receive the signal from remote handset.

Flash LED

If the front panel do not install in the main unit, the LED will be flashing.

Tuning the player off

Press the POWER button in front of panel or press ⏻ on remote control.

 
BASIC OPERATION

On-Screen Display Function

Press the DISPLAY button during playback to display the contents of the current disc on the screen.


Example:
DVD

(1) Press DISPLAY for the first time:




Title Number, Total Title Number, Chapter Number, Total Chapter Number of this Title of the disc currently being played will be shown on the fluorescent display, along with the elapsed time.

 
(2) Press DISPLAY for the second time:



 (3) Press DISPLAY for the third time:



 (4) Press DISPLAY for the fourth time:



(5) Press DISPLAY for the fifth time:

The message on the screen will be cleared.

Video CD/SVCD/CD

Each time DISPLAY is pressed, the message displayed on screen changes in the following order:

SINGLE ELAPSED → SINGLE REMAIN →
TOTAL ELAPSED → TOTAL REMAIN → OFF

MP3

Each time DISPLAY is pressed, the message displayed on screen changes as follows:

CHAPTER ELAPSED → CHAPTER REMAIN

Multi-audio Function

For DVD

 
Press AUDIO during playback. Each time the button is pressed, number of the audio soundtrack language changes on sequential order.

Notes:

- The language number is different according to the disc.
- Some disc only contain one language soundtrack.
- When no different language soundtrack are recorded will be display at screen left top corner.

For VCD

Press AUDIO during playback. It is possible to switch the sound between monaural and stereo sound.



MENU Function

TITLE Menu

If the DVD has multiple titles recorded on the disc. It can select preferred title from the title menu to start playback.

1. Press TITLE during playback. The title menu is display.
2. Press the cursor button show in TV screen, select preferred title by the cursor button and confirmed by ENTER key.


SUBTITLE Language Function (For DVD only)

Press SUBTITLE during playback. Each time the button is pressed, number of the subtitle language changes in sequential order.

Notes:

- The language number is different according to the disc.

BASIC OPERATION

 
- Some discs only contain one language soundtrack.
- When no different language soundtrack are recorded  will be display at screen left top corner.

Multi-ANGLE Function (For DVD only)

Press ANGLE during playback.

Each time the button is pressed, number of the angle changes in sequential order.

Notes:

- The angle number is different according to the disc.
- The function only work for discs having scenes recorded at different angles.
- When no different angle are recorded  will be display at screen left top corner.


MP3 Disc Play

This player support the following MP3 CD format:

1. Joliet
2. Romeo
3. ISO9660

MP3 disc is playing as the format of FOLDER.

For example:

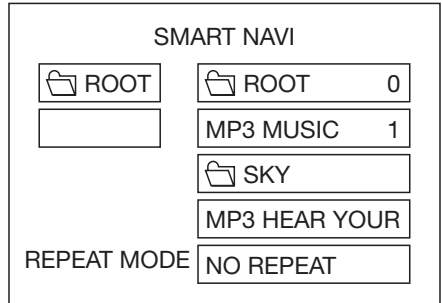

Use ▲▼◀▶ to select the item or folder, then press ENTER or PLAY button. Pressing REPEAT button repeatedly can select three kinds of play mode.

REP-ONE:

Play the same song over and over again.

FOLDER REPEAT:

Play all songs in the current directory in sequence, over and over again.

NO REPEAT:

Play all songs in the current directory once.

In the playback, use ▲▼ to skip an item ahead or back.

◀◀: Rapid reverse, ▶▶: Rapid advance

Note: The FOLDER cannot be selected during playing. It can be selected after <STOP> pressed.

BASIC OPERATION

Extra Function Control

The volume, colour, contrast and brightness can be adjusted in “STOP” mode.

ANGLE : Select the volume, colour, contrast and brightness

◀◀ : Decrease the level

▶▶ : Increase the level

DISPLAY : Recover to the normal value (except volume)

Notes:

1. For MP3 disc, the above modes cannot be adjusted.
2. When the sum of the contrast value and brightness value is 29, it is prohibited increasing.
3. Do not adjust the contrast and brightness level too high.

AV switch

It is used to switch between the DVD player and external AUDIO/VIDEO. Please connect the external AV line to the AV input terminal of the DVD player. Then press AV button to switch to the external AV. Pressing AV again will return to the AV of the DVD unit.


Notes:

1. When switched to external AV, insert the disc into the player. After the disc identification it enters to play, and it will automatically switch to AV output of the DVD unit.
2. When you switch to external AV during play, it will stop playing. When switched to the AV of the DVD player, it will play automatically.

SETUP

INITIAL SETUP


SET UP --- MAIN PAGE

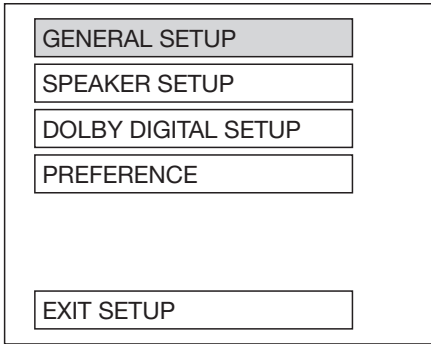

1. Press SETUP in the stop mode.
(Press the stop button twice to ensure the player under STOP mode.)
2. The initial SETUP menu is displayed.
3. Select the preferred item by using the ▲/▼ buttons.
4. Press ENTER buttons.
 - a. **GENERAL SETUP**
This setup page includes all the item of TV display & audio output feature. The detail please refer to **GENERAL SETUP MENU**.
 - b. **SPEAKER SETUP**
This is to activate the audio output from DOLBY AC3 5.1 DOWNMIX to 2 channel mode. Please refer to **SPEAKER SETUP MENU**.
 - c. **DOLBY DIGITAL SETUP**
This setup page includes all the items for DOLBY DIGITAL. Please refer to **DOLBY DIGITAL SETUP MENU**.
 - d. **PREFERENCE SETUP**
This setup page includes all the configuration of support feature. The detail please refer to **PREFERENCE SETUP MENU**.

GENERAL SETUP

SET UP --- GENERAL SETUP

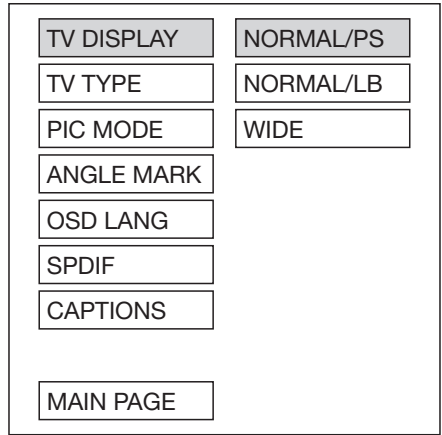

Video Material	TV Screen			
	4:3			Wide (16:9)
	Normal	Pan Scan	Letter-box	
4:3				
16:9				

TV display setup

This is to select the appropriate TV aspect (4:3 or 16:9) according to the connected TV set.

Normal/PS (For 4:3 TV)

Played back in the PAN & SCAN style. (If connected to wide-screen TV, the left and right edges are cut off.)

Normal/LB (For 4:3 TV)

Played back in letterbox style. (If connected to wide-screen TV, black bands appear at top and bottom of the screen.)

Wide (For 16:9 TV)

Select when a wide-screen TV set is connected.

SETUP

SET UP --- GENERAL SETUP

TV DISPLAY	
TV TYPE	MULTI
PIC MODE	NTSC
ANGLE MARK	PAL
OSD LANG	
SPDIF	
CAPTIONS	
MAIN PAGE	

TV type setup

This player can play discs recorded in either PAL or NTSC format.

Select NTSC format, when you connected to NTSC TV.


Select PAL format, when you connected to PAL TV.

Select MULTI format, the player TV output format will according to the DVD disc format.

SET UP --- GENERAL SETUP

TV DISPLAY	
TV TYPE	
PIC MODE	
ANGLE MARK	ON
OSD LANG	OFF
SPDIF	
CAPTIONS	
MAIN PAGE	

ANGLE MARK display setup

If it is set to ON, when the multi-angle DVD disc is playing,  (the angle mark) will appears on the screen; if is set to OFF, the mark will not appear.

SET UP --- GENERAL SETUP

TV DISPLAY	
TV TYPE	
PIC MODE	AUTO
ANGLE MARK	HI-RES
OSD LANG	N-FLICKER
SPDIF	
CAPTIONS	
MAIN PAGE	

PIC mode setup

Select AUTO, the player PIC mode will depend on DVD disc.



Select HI-RES format for best image resolution.

Select N-FLICKER format on format on image or picture under noise affect.

SET UP --- GENERAL SETUP

TV DISPLAY	
TV TYPE	
PIC MODE	
ANGLE MARK	
OSD LANG	ENGLISH
SPDIF	CHINESE
CAPTIONS	
MAIN PAGE	

OSD LANG type setup

Select the preferred OSD language by using the  /  buttons.

SETUP

SET UP --- GENERAL SETUP

TV DISPLAY	
TV TYPE	
PIC MODE	
ANGLE MARK	
OSD LANG	
SPDIF	OFF
CAPTIONS	ON
MAIN PAGE	

SPDIF

Select the SPDIF optical output ON/OFF.

SET UP --- GENERAL SETUP

TV DISPLAY	
TV TYPE	
PIC MODE	
ANGLE MARK	
OSD LANG	
SPDIF	
CAPTIONS	ON
	OFF
MAIN PAGE	

CAPTION

Activate the CAPTIONS feature by selecting ON. And release this feature by selecting OFF.

SPEAKER SETUP

SET UP --- SPEAKER SETUP

DOWNMIX	LT/RT
	STEREO
MAIN PAGE	

This is to activate the audio output from DOLBY AC3 5.1 DOWNMIX to 2 channel mode.

Select the preferred SPEAKER connection by using the cursor buttons.

- Select the LT/RT to activate the Dolby surround compatible output.
- Select the STEREO to activate simple stereo mode.

DOLBY DIGITAL SETUP

SET UP --- DOLBY DIGITAL SETUP

OP MODE	LINE MODE
DUAL MONO	
DRC	

OP MODE

Only one operating mode for the Dolby Digital decoder: LINE OUT.

SETUP

SET UP --- DOLBY DIGITAL SETUP

OP MODE	
DUAL MONO	STEREO
DRC	CH1-MONO
	CH2-MONO
	MIX-MONO

DUAL MONO

The Dual mono reproduction only process for Dolby Digital program with 1+1 Audio code mode.

- Stereo-reproduce 1+1 program CH1 for left channel, CH2 for right channel.
- CH1 Mono-reproduce CH1 channel in both Left/Right output.
- CH2 Mono-reproduce CH2 channel in both Left/Right output.
- Mix Mono-reproduce CH1+CH2 in both Left/Right output.

SET UP --- DOLBY DIGITAL SETUP

OP MODE											
DUAL MONO											
DRC											
	<table border="1"> <tr> <td>┆</td> <td>FULL</td> </tr> <tr> <td>┆</td> <td>6/8</td> </tr> <tr> <td>┆</td> <td>4/8</td> </tr> <tr> <td>┆</td> <td>2/8</td> </tr> <tr> <td>┆</td> <td>OFF</td> </tr> </table>	┆	FULL	┆	6/8	┆	4/8	┆	2/8	┆	OFF
┆	FULL										
┆	6/8										
┆	4/8										
┆	2/8										
┆	OFF										

DRC-Dynamic Range Control

Select DRC and adjust the dynamic range of a Dolby Digital encoded program. There are 8 steps between full compression and off compression.

PREFERENCE PAGE

SET UP --- PREFERENCE PAGE

LANGUAGE	ENGLISH
SUBTITLE	FRENCH
DISC MENU	SPANISH
LOCALE	CHINESE
PARENTAL	JAPANESE
PASSWORD	
DEFAULTS	
MAIN PAGE	

AUDIO language setup

Select the preferred AUDIO soundtrack by using the cursor buttons.

SET UP --- PREFERENCE PAGE

LANGUAGE	
SUBTITLE	ENGLISH
DISC MENU	FRENCH
LOCALE	SPANISH
PARENTAL	CHINESE
PASSWORD	JAPANESE
DEFAULTS	OFF
MAIN PAGE	

SUBTITLE language setup

Select the preferred SUBTITLE language by using the cursor buttons.

SETUP

SET UP --- PREFERENCE PAGE

LANGUAGE	
SUBTITLE	
DISC MENU	ENGLISH
LOCALE	CHINESE
PARENTAL	FRENCH
PASSWORD	SPANISH
DEFAULTS	JAPANESE
MAIN PAGE	

DISC MENU language setup

Select the preferred DISC MENU language by using the cursor buttons.

SET UP --- PREFERENCE PAGE

LANGUAGE	1 G
SUBTITLE	2
DISC MENU	3 PG
LOCALE	4 PG 13
PARENTAL	5
PASSWORD	6 PG-R
DEFAULTS	7 NC-17
	8 ADULT
MAIN PAGE	NO PARENTAL

PARENTAL

Select suitable parental guidance by the cursor buttons and conformed by pressing ENTER button.

SET UP --- PREFERENCE PAGE

LANGUAGE	
SUBTITLE	
DISC MENU	CHINA
LOCALE	FRANCE
PARENTAL	HONG KONG
PASSWORD	JAPAN
DEFAULTS	TAIWAN
	GBR
MAIN PAGE	USA

LOCALE

Select preferred city by using the cursor button, the player will depend on this setting to choose related film grade division.

SET UP --- PREFERENCE PAGE

LANGUAGE	
SUBTITLE	
DISC MENU	
LOCALE	
PARENTAL	
PASSWORD	CHANGE
DEFAULTS	
MAIN PAGE	

PASSWORD

Select the change and press ENTER button. Type the old password (The initial factory is code 3308) and key in 4 characters password now you want to use, and retype again to confirm key in correctly.

SETUP

SET UP --- PREFERENCE PAGE

LANGUAGE	
SUBTITLE	
DISC MENU	
LOCALE	
PARENTAL	
PASSWORD	
DEFAULTS	RESET
MAIN PAGE	

Select reset to become factory initial setting.

DEFAULT SETTING	GENERAL SETUP	TV DISPLAY	NORMAL/PS
		TV TYPE	MULTI
		PIC MODE	AUTO
		ANGLE MARK	ON
		OSD LANGUAGE	ENGLISH
		SPDIF	OFF
		CAPTION	OFF
	SPEAKER SETUP	DOWNMIX	STEREO
	DOLBY DIGITAL SETUP	OP MODE	LINEMODE
		DUAL MONO	STEREO
		DRC	FULL
	PREFERENCE PAGE	LANGUAGE	ENGLISH
		SUBTITLE	ENGLISH
		DISC MENU	ENGLISH
LOCALE		USA	
PARENTAL		6 PG-R	
PASSWORD	3308		

SPECIFICATIONS

Supply Voltage	: 12V DC (11V-16V), test voltage 14.4V, negative ground
Current Consumption	: Less than 2.0A
Signal System	: Compositive video 1.0Vp-p 75Ω RCA pin jack
Discs Played	: (1) DVD-VIDEO Disc 5" (12 cm) single-sided, single-layer 5" (12 cm) single-sided, double-layer 3" (8 cm) single-sided, single-layer 3" (8 cm) single-sided, double-layer (2) Compact Disc (CD-DA, VIDEO CD) 5" (12cm) disc 3" (8 cm) disc
Audio Output Level	: 600Ω (2 ch 2.0 Vrms)
Audio Signal Output Characteristics	: (1) Frequency Response 20 Hz - 20 KHz (2) S/N Ratio 90 dB (JIS) (3) Wow and Flutter Below measurable limits

Note:

Specifications and design are subject to modification, without notice, due to improvements in technology.

www.pyleaudio.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>