 


OPERATING INSTRUCTIONS

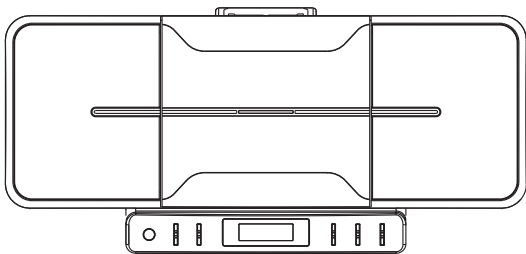

PICD65I






PLL
DIGITAL
TUNER

BLUE
BACKLIGHT
DISPLAY



iPod/iPhone Flat Panel Motorized Vertical FM Radio CD Sound System



	<p>CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN</p>	
<p>The lightning flash and arrowhead within the triangle is a warning sign alerting you of "dangerous voltage" inside the product.</p>	<p>WARNING: To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.</p>	<p>The exclamation point within the triangle is a warning sign alerting you of important instructions accompanying the product.</p>
<p>WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO DRIPPING OR SPLASHING LIQUIDS.</p>		
<p>THE MAINS PLUG IS USED AS THE DISCONNECT DEVICE AND IT SHALL REMAIN READILY OPERABLE. TO COMPLETELY DISCONNECT THE POWER INPUT, THE MAINS PLUG OF THE APPARATUS MUST BE DISCONNECTED FROM THE MAINS COMPLETELY. THE MAINS PLUG SHOULD NOT BE OBSTRUCTED OR SHOULD BE EASILY ACCESSED DURING INTENDED USE.</p>		
<p>PLEASE NOTE: YOU WILL FIND THE RATING LABEL FOR THIS PRODUCT LOCATED ON THE REAR OF THE UNIT.</p>	 <p>CAUTION DO NOT EXPOSE TO DRIPPING OR SPLASHING LIQUIDS!</p>	
<p>CAUTION: GROUNDING OR POLARIZATION. THE PRECAUTIONS SHOULD BE TAKEN SO THAT THE WIDER BLADE OF THE AC PLUG MUST MATCH THE SLOT IN RECEPTACLE "WALL SOCKET".</p>		
<p>NOTE: CAUTION SYMBOLS ARE PRINTED ON REAR OF UNIT. PLEASE REFER TO INSTRUCTION MANUAL.</p>		

CAUTION: INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED. AVOID EXPOSURE TO BEAM.

VORSICHT: UNSICHTBARE LASERSTRAHLUNG TRITT AUS, WENN DECKEL GEÖFFNET UND WENN SICHERHEITSVERRIEGELUNG ÜBERBRÜCKT IST. NICHT DEM STRAHL AUSSETZEN.

VARNING: OSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD OCH SPÄRR ÄR URKOPPLAND. STRÅLEN ÄR FARLIG.

ADVARSEL: USYNLIG LASERSTRÅLING VED ÅBNING. NÅR SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION. UNDGÅ UDS/ETTELSE FOR STRÅLING.

ATTENZIONE: RADIONI LASER INVISIBILE. NON GUARDARE DIRETTAMENTE NELLA SORGENTE DEL LASER.

ACHTUNG: LASERLINSE NICHT BERÜHREN UNSICHTBARER LASERSTRAHL.

AVISO: A LENTE NUNCA DEVE SER TOCADA.



 
CLASS 1 LASER PRODUCT
KLASSE 1 LASER PRODUKT
LASER DE CLASSE
LASER DI PRIMA CLASSE
KLASSE 1 LASER
LASER PRIMERA CLASE
LASER CLASSE 1
KLASSE 1 LASER PRODUKT

IMPORTANT SAFETY INSTRUCTIONS

- 1. READ INSTRUCTIONS** - All the safety and operating instruction should be read before the product is operated.
- 2. RETAIN INSTRUCTIONS** - The safety and operating instruction should be retained for future reference.
- 3. HEED WARNINGS** - All warning on the product and in the operating instructions should be adhered to.
- 4. FOLLOW INSTRUCTIONS** - All operating and use instructions should be followed.
- 5. CLEANING** - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a dry cloth for cleaning.
- 6. ATTACHMENTS** - Do not use attachments not recommended by the product manufacturer as they may cause hazards.
- 7. WATER AND MOISTURE** - Do not use this product near water- for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, and the like.
- 8. ACCESSORIES** - Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.
- 9. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.**
- 10. VENTILATION** - Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction have been adhered to.
- 11. POWER SOURCES** - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instruction.
- 12. GROUNDING OR POLARIZATION** - This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarizes plug.
ALTERNATE WARNINGS - This product is equipped with a three-wire grounding-type plug, a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.
- 13. POWER-CORD PROTECTION** - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and point where they exit from the product.
- 14. PROTECTIVE ATTACHMENT PLUG** - The product is equipped with an attachment plug having overload protection. This is a safety feature. See Instruction Manual for replacement or resetting of protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug specified by the manufacturer that has the same overload protection as the original plug.
- 15. OUTDOOR ANTENNA GROUNDING** - If an outside antenna is connected to the receiver, be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna-discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.




SEE FIGURE:

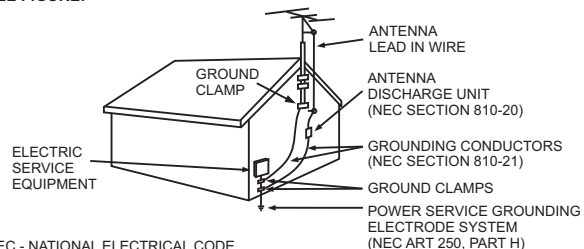


NEC - NATIONAL ELECTRICAL CODE

- 16. LIGHTNING** - For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.
- 17. POWER LINES** - An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
- 18. OVERLOADING** - Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
- 19. OBJECT AND LIQUID ENTRY** - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
- 20. SERVICING** - Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
- 21. DAMAGE REQUIRING SERVICE** - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a) When the power-supply cord or plug is damaged,
 - b) If liquid has been spilled, or objects have fallen into the product,
 - c) If the product has been exposed to rain or water,
 - d) If the product does not operate normally be following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
 - e) If the product has been dropped or damaged in any way, and
 - f) When the product exhibits a distinct change in performance - this indicates a need for service.
- 22. REPLACEMENT PARTS** - When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
- 23. SAFETY CHECK** - Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
- 24. WALL OR CEILING MOUNTING** - The product should be mounted to a wall or ceiling only as recommended by the manufacturer.
- 25. HEAT** - The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

 
TOP VIEW:

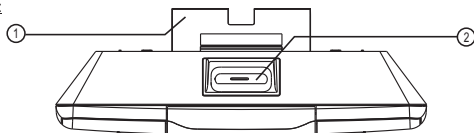

FRONT VIEW:

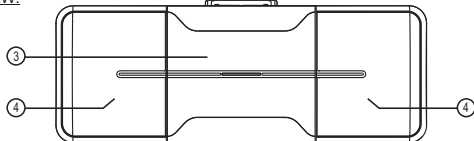 


BACK VIEW:

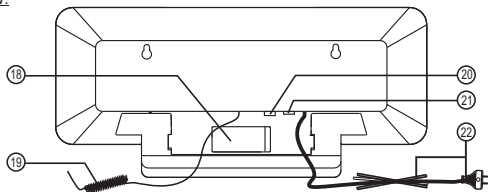 

LOCATION OF CONTROLS

- | | |
|----------------------------|--------------------------------|
| 1. DESK STAND | 12. PLAY/ PAUSE/ FM MODE KEY |
| 2. CAVITY FOR DOCK ADAPTOR | 13. STOP/ CLOCK SET KEY |
| 3. CD DOOR (MOTORIZED) | 14. NEXT/ HOUR/ MIN. UP KEY |
| 4. SPEAKERS (LEFT & RIGHT) | 15. BACK/ HOUR/ MIN. DOWN KEY |
| 5. ON/ STANDBY KEY | 16. VOLUME DOWN (—) KEY |
| 6. OPEN/ CLOSE KEY | 17. VOLUME UP (+) KEY |
| 7. FUNCTION KEY | 18. BACK UP BATTER COMPARTMENT |
| 8. PROGRAM/ PLAY MODE KEY | 19. FM ANTENNA WIRE |
| 9. EQ/ MEM-UP KEY | 20. DOCK VIDEO OUT SOCKET |
| 10. BLUE BACKLIT DISPLAY | 21. AUX INPUT SOCKET |
| 11. REMOTE CONTROL SENSOR | 22. AC CORD & PLUG |

 REMOTE CONTROL - LOCATION OF CONTROLS:

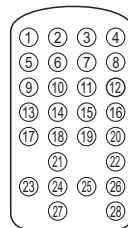

- | | |
|----------------------|-------------------------|
| 1. ON/ STANDBY KEY | 16. CD KEY |
| 2. DISPLAY KEY | 17. PLAY MODE KEY |
| 3. CLOCK SET KEY | 18. STOP KEY |
| 4. MUTE KEY | 19. FM MODE KEY |
| 5. EQ KEY | 20. TUNER KEY |
| 6. TIMER KEY | 21. iPod MENU UP KEY |
| 7. RADIO MEM. + KEY | 22. AUX KEY |
| 8. VOL. UP + KEY | 23. iPod BACK KEY |
| 9. PROGRAM KEY | 24. iPod SELECT KEY |
| 10. SLEEP KEY | 25. iPod NEXT KEY |
| 11. RADIO MEM. - KEY | 26. DOCK KEY |
| 12. VOL. DOWN - KEY | 27. iPod DOWN KEY |
| 13. BACK KEY | 28. MENU KEY |
| 14. PLAY/ PAUSE KEY | 29. BATTERY COMPARTMENT |
| 15. NEXT KEY | |

POWER SUPPLY

- THIS SET WORKS ON NORMAL HOUSEHOLD AC-POWER.
- MAKE SURE THE SET VOLTAGE OF THE UNIT MATCHES YOUR LOCAL VOLTAGE.
- INSERT THE PLUG OF THE AC-CORD INTO A WALL OUTLET WITH AC-POWER.
- PRESS THE ON/ STANDBY KNOB TO SWITCH "ON" THE UNIT.

IMPORTANT : HOW TO TELL IF POWER IS "ON" ?

WHEN THE POWER IS "ON" THE ENTIRE DIGITAL DISPLAY WILL BE LIT UP WITH A "BLUE" BACK-LIGHT. THIS INDICATES THE HI-FI IS SWITCHED "ON".

BACK UP BATTERIES

- OPEN THE BATTERY DOOR AT THE REAR OF UNIT.
- INSERT 2 PCS "AAA-CELL" (UM-4/LR03 TYPE) BATTERIES IN THE BATTERY COMPARTMENT. THESE 2 BATTERIES ARE FOR BACKUP OF THE "REAL TIME CLOCK" AND "RADIO MEMORY PRESET STATIONS DURING BRIEF POWER OUTAGES". PLEASE OBSERVE THE CORRECT POLARITIES OR THE MEMORY WILL NOT BE PROPERLY MAINTAINED.

 
PREPARATION OF REMOTE CONTROL

- REMOVE (GENTLY PULL OUT) THE PLASTIC "TAB" FROM THE BATTERY COMPARTMENT AT THE REAR OF THE REMOTE CONTROL.
- TEST THE REMOTE CONTROL BY PRESSING THE ψ (ON/ STANDBY) KEY TO CHECK THAT THE UNIT SWITCHES ON PROPERLY USING THE REMOTE CONTROL.

DIGITAL CLOCK FUNCTION

- THE SET HAS A BUILT-IN DIGITAL CLOCK, WHICH IS DISPLAYED IN 2 SITUATIONS:
- (1) WHEN THE SET IS IN "STANDBY MODE". (THE DISPLAY WILL CONTINUOUSLY SHOW THE CURRENT TIME). IN THIS SITUATION THE BLUE BACKLIGHT IS NORMALLY DIMMED (TO SAVE ELECTRICITY) BUT YOU CAN SWITCH ON THE BLUE DISPLAY LIGHT BY PRESSING THE "CLOCK SET" KEY OR "TIMER" KEY ON REMOTE CONTROL. THIS WILL ACTIVATE THE BLUE LIGHT FOR APPROXIMATELY 10 SECONDS.
 - (2) WHEN THE SET IS IN "ON MODE" (THE BLUE LIGHT OF THE DISPLAY IS "ON" IN THIS MODE, TO INDICATE THAT THE SET IS POWERED "ON"). IN THIS SITUATION THE LCD DISPLAY NORMALLY DOES NOT AUTOMATICALLY SHOW THE CURRENT TIME. BUT YOU CAN PRESS THE "DISPLAY" KEY (ON REMOTE CONTROL) TO SEE THE CURRENT TIME.

HOW TO SET CORRECT TIME:

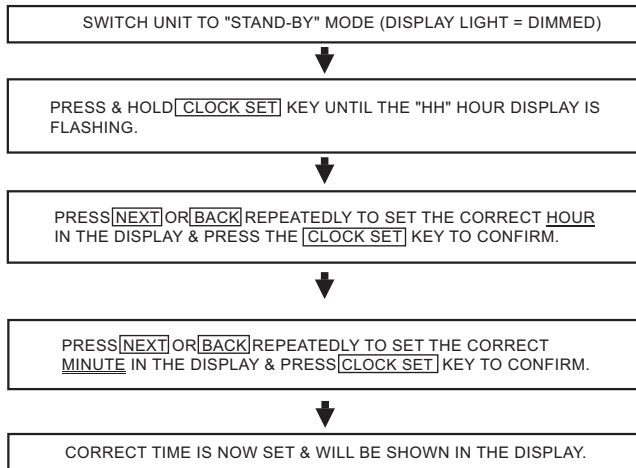

AUTOMATIC POWER ON/OFF TIMER FUNCTION

- THIS SET HAS A TIMER FUNCTION TO ENABLE YOU TO PROGRAM THE UNIT TO AUTOMATICALLY SWITCH "ON" OR "OFF" AT PRESET TIMES. THIS IS USEFUL AS A MORNING ALARM CLOCK :

HOW TO SET TIMER

1. PRESS AND HOLD **[TIMER]** KEY (ON REMOTE CONTROL). THE **[ON TIME]** SYMBOL APPEARS IN THE DISPLAY.
2. PRESS NEXT OR **[BACK]** TO ADJUST THE HOUR OF THE DESIRED "ON" TIME AND THEN PRESS **[TIMER]** KEY TO CONFIRM.
3. PRESS NEXT OR **[BACK]** TO ADJUST THE MINUTES OF THE DESIRED "ON" TIME AND THEN PRESS **[TIMER]** TO CONFIRM.
4. NOW THE WORDING IN THE DISPLAY CHANGES TO SHOW **[OFF TIME]**.
5. PRESS NEXT OR **[BACK]** TO ADJUST THE HOUR OF THE DESIRED "OFF" TIME AND THEN PRESS **[TIMER]** TO CONFIRM.
6. PRESS NEXT OR **[BACK]** TO ADJUST THE MINUTES OF THE DESIRED "OFF" TIME AND THEN PRESS **[TIMER]** TO CONFIRM.
7. NOW THE DISPLAY WILL INDICATE THE "WAKE UP MODE" (iPod OR RADIO OR CD). PRESS NEXT TO CHOOSE THE DESIRED MODE & PRESS **[TIMER]** TO CONFIRM.
8. THE DISPLAY THEN SHOWS THE "WAKE UP VOLUME LEVEL" (LOUDNESS). PRESS **[BACK]** OR NEXT TO DECREASE OR INCREASE THE VOLUME LEVEL TO BE USED FOR THE MUSIC TO BE PLAYED WHEN THE TIMER SWITCHES ON THE UNIT AT THE PRE-SET TIME.
9. PRESS **[TIMER]** TO CONFIRM.
10. FINALLY THE UNIT WILL RETURN TO THE NORMAL DISPLAY, EXCEPT THAT THE **[TIMER]** SYMBOL WILL BE SHOWN, TO INDICATE THAT YOU HAVE PROGRAMMED A ON/OFF ALARM SETTING.
11. IN CASE YOU WISH TO DISABLE THE TIMER, PRESS THE **[TIMER]** KEY ONCE, & THE **[TIMER]** SYMBOL WILL DISAPPEARS.

(NOTE : THE AUTOMATIC ON/OFF TIMER WILL SWITCH ON THE UNIT AS IF YOU HAVE MANUALLY PRESSED THE "ON/ STANDBY" KEY. IF YOU HAVE SELECTED "WAKE TO RADIO", THE EXACT PRESET RADIO BAND & STATION WILL BECOME ACTIVATED WHEN POWER SWITCHES ON).

AUTOMATIC POWER OFF SLEEP FUNCTION

- THIS SET HAS A SPECIAL SLEEP TIMER FUNCTION WHICH CAN AUTOMATICALLY SWITCH OFF THE UNIT. THIS IS USEFUL FOR SLEEPING TO MUSIC AT NIGHT.
- AT ANY TIME WHILE THE UNIT IS OPERATING, PRESS **[SLEEP]** KEY (ON REMOTE CONTROL) REPEATEDLY TO CHOOSE THE AUTOMATIC POWER OFF TIME.



(*OFF MEANS SLEEP TIMER IS DEACTIVATED)

ELECTRONIC VOLUME CONTROL

- THIS UNIT USES AN ELECTRONIC VOLUME CONTROL (PUSH BUTTON TYPE).
- TO INCREASE OR DECREASE THE LOUDNESS OF UNIT, PRESS THE VOLUME UP (VOL +) OR VOLUME DOWN (VOL -) KEYS RESPECTIVELY.
- RELEASE THE KEY WHEN VOLUME LEVEL IS AT THE DESIRED LOUDNESS.
- SOMETIMES, ESPECIALLY DURING LISTENING TO THE RADIO, YOU MAY NOTICE A "CLICK-CLICK-CLICK" (REPEATING) SOUND WHEN YOU ARE INCREASING OR DECREASING THE VOLUME. THIS IS A NORMAL CONDITION & THE SOUND WILL DISAPPEAR WHEN YOU RELEASE THE VOLUME KEY (WHEN YOU REACH THE DESIRED VOLUME LEVEL).

OPERATION OF RADIO

- PRESS THE "ON/OFF" KEY ONCE TO SWITCH ON THE UNIT.
- PRESS THE **[FUNCTION]** KEY (ON UNIT) REPEATEDLY UNTIL THE DISPLAY SHOWS "FM" OR PRESS THE "TUNER" KEY ONCE ON REMOTE CONTROL.
- TO IMPROVE FM-RADIO RECEPTION, FULLY EXTEND THE FM-ANTENNA WIRE AND ADJUST IT'S POSITION.
- USE THE "FM MODE" KEY (ON REMOTE CONTROL) TO SELECT THE DESIRED MODE (FM MONO/STEREO). IN SOME CASES, WHERE RECEPTION IS POOR, IT MAY BE ADVISABLE TO SELECT "MONO" MODE, TO IMPROVE CLARITY OF THE RADIO SIGNAL.

MANUAL FREQUENCY ADJUSTMENT (SCAN MODE)

- PRESS (AND IMMEDIATELY RELEASE) THE **[NEXT]** KEY OR **[BACK]** KEY TO "SCAN" (MANUALLY ADJUST) THE RADIO FREQUENCY "UP" OR "DOWN" BY 1-STEP AT A TIME.
- THE RADIO DIGITAL DISPLAY WILL INDICATE THE EXACT FREQUENCY AT EACH STEP'S POSITION.
- WHEN A DESIRED FREQUENCY OR STATION IS REACHED, IT CAN BE SAVED INTO ONE OF THE "MEMORY" POSITIONS. (SEE "RADIO MEMORY" SECTION).

AUTOMATIC FREQUENCY ADJUSTMENT (SEEK MODE)

- PRESS AND HOLD (FOR 2 SECONDS) THE **[NEXT]** OR **[BACK]** KEYS TO "SEEK" (AUTOMATICALLY ADJUST) THE RADIO FREQUENCY "UP" OR "DOWN" TO THE NEXT AVAILABLE RADIO STATION.
- THE RADIO DIGITAL DISPLAY WILL INDICATE THE EXACT FREQUENCY OF THE NEXT STATION THAT IS FOUND.
- WHEN A DESIRED STATION IS REACHED, IT CAN BE SAVED INTO ONE OF THE "MEMORY" POSITIONS. (SEE "RADIO MEMORY" SECTION).

RADIO MEMORY (STATION PRESET MEMORY STORAGE)

- AT ANY TIME, THE CURRENTLY DISPLAYED STATION OR FREQUENCY CAN BE STORED INTO ONE OF THE MEMORY POSITION.
- PRESS **[PROGRAM]** KEY ONCE.
- PRESS **[RADIO M+]** OR **[RADIO M-]** KEY ON THE REMOTE CONTROL TO SELECT DESIRED MEMORY POSITION. (THERE ARE 30 MEMORY POSITIONS FOR FM BAND).
- PRESS **[PROGRAM]** KEY ONCE TO SAVE THE SELECTED STATION INTO THE SELECTED MEMORY POSITION.
- TO RECALL ANY SAVED MEMORY, SIMPLY PRESS **[RADIO M+]** OR **[RADIO M-]**, THE SAVED RADIO-BAND WILL BE RECALLED.
- TO CLEAR THE MEMORY OF ANY POSITION, SIMPLY SAVE A NEW STATION TO THE SAME MEMORY POSITION.

OPERATION WITH THE iPod/ iPhone

 
THIS UNIT IS DESIGNED TO ALLOW YOU TO CONNECT AN iPod/ iPhone WITHOUT THE NEED FOR DOCK CONNECTORS. THE DESIGN OF THE UNIT HAS BEEN STRUCTURED TO PROVIDE SUPPORT TO TE CONNECTOR UNDER NORMAL USAGE WITHOUT EXCESSIVE PRESSURE ON THE iPod/ iPhone WHEN CONTROLLING PLAYBACK USING THE iPod/ iPhone SCREEN.

- TURN ON BOTH THE UNIT AND THE iPod/ iPhone.
- PRESS THE **[FUNCTION]** KEY REPEATEDLY UNTIL THE DISPLAY SHOWS "iPod" OR SIMPLY PRESS THE "DOCK" KEY ON REMOTE CONTROL.
- THE UNIT WILL AUTOMATICALLY START PLAYBACK OF THE SONGS.
- THE iPod/ iPhone DISPLAY WILL INDICATE THE INFORMATION OF THE CURRENT SONG (TRACK).
- AT ANYTIME DURING PLAYBACK, PRESS THE **[PLAY/PAUSE]** KEY TO PAUSE OPERATION OF THE UNIT. PRESS **[PLAY/PAUSE]** KEY TO RESUME OPERATION AT THE SAME TRACK & POSITION.
- AT ANYTIME DURING PLAYBACK, PRESS & HOLD THE **[PLAY/PAUSE]** KEY TO STOP PLAYBACK OF UNIT.
- AT ANYTIME DURING PLAYBACK, PRESS AND RELEASE THE **[▶▶ NEXT/ TUNE +]** OR **[◀◀ BACK/ TUNE -]** KEYS ON UNIT (OR "iPod NEXT/ iPod BACK" KEY ON REMOTE CONTROL) TO SKIP FORWARD OR BACKWARDS BY ONE TRACK, AS DESIRED.
- ANY ANYTIME DURING PLAYBACK, PRESS AND HOLD THE **[▶▶ NEXT/ TUNE +]** OR **[◀◀ BACK/ TUNE -]** KEYS ON UNIT (OR "iPod NEXT/ iPod BACK" KEY ON REMOTE CONTROL) TO FAST-FORWARD (CUE) OR FAST-REVERSE (REVIEW) THE SPECIFIC TRACK, WHICH IS CURRENTLY PLAYING.
- YOU CAN OPERATE THE iPod/ iPhone USING EITHER THE SET, REMOTE CONTROL OR DIRECTLY WITH THE iPod/ iPhone ITSELF.
- WHEN THE iPod/ iPhone HAS BEEN CONNECTED WITH THE UNIT, IT WILL START CHARGING THE BATTERY OF THE iPod/ iPhone.
- NEVER REMOVE (OR UNPLUG) THE iPod/ iPhone FROM THE SET DURING PLAYBACK, ALWAYS PRESS & HOLD FOR 2 SECONDS THE **[PLAY/PAUSE]** KEY FIRST AND THEN PRESS THE **[FUNCTION]** KEY TO SWITCH TO ANOTHER SOURCE (EG. "RADIO" OR "AUX") BEFORE REMOVING OR UNPLUGGING THE iPod/ iPhone, TO PREVENT DAMAGE TO YOUR SONG FILES OR MEMORY DEVICES.

"Made for iPod," "Made for iPhone," mean that an electronic accessory has been designed to connect specifically to iPod, iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. **Please note that the use of this accessory with iPod, iPhone may affect wireless performance.**

REPEAT PLAYBACK FUNCTION (iPod/ iPhone)

- AT ANYTIME DURING iPod/ iPhone PLAYBACK:
- PRESS THE "PLAY MODE" KEY ON REMOTE CONTROL OR PRESS THE FOLLOWING SYMBOLS ON THE iPod/ iPhone SCREEN:



SHUFFLE (RANDOM) PLAYBACK FUNCTION (iPod/ iPhone)

- THIS UNIT IS ABLE TO SHUFFLE ALL SONGS ON AN iPod/ iPhone AND PLAY THEM BACK IN "RANDOM" ORDER.
- TO ACTIVATE THIS FUNCTION, SELECT THE SHUFFLE ICON "↻" (ON THE iPod/ iPhone).
- THE "SHUFFLE" SYMBOL WILL BE DISPLAYED ON THE iPod/ iPhone SCREEN & THE SONGS WILL BE PLAYED IN RANDOM ORDER.

iPod VIDEO OUT

YOU CAN CONNECT THE iPod/ iPhone VIDEO OUT SOCKET TO THE VIDEO INPUT TERMINAL OF YOUR TV TO WATCH VIDEO PROGRAMS FROM YOUR iPod/ iPhone ON YOUR TV SCREEN.

* NOTE: THIS UNIT DOES NOT SUPPORT VIDEO-JOUT FROM THE iPhone 4.

INSERTION AND REMOVAL OF DISCS

PRESS THE "FUNCTION" KEY (ON UNIT) REPEATEDLY UNTIL THE DISPLAY SHOWS "CD" OR PRESS "CD" KEY ONCE ON REMOTE CONTROL. PRESS THE OPEN/ CLOSE KEY TO OPEN THE CD-DOOR. CAREFULLY PLACE A COMPACT DISC ONTO THE CENTER SPINDLE WITH THE LABEL SIDE (PRINTED SIDE OF DISC) FACING OUTWARDS (TOWARDS YOU). PRESS THE "OPEN/ CLOSE" KEY TO AUTOMATICALLY CLOSE THE CD-DOOR. THE CD-DISPLAY WILL BRIEFLY SHOW THE TOTAL NUMBER OF TRACKS ON THE DISC AFTER A FEW SECONDS. THE CD IS NOW READY TO BE PLAYED. TO REMOVE A DISC, PRESS THE OPEN/ CLOSE KEY. THE DOOR WILL OPEN UPWARDS ALLOWING THE REMOVAL OF THE CD INSIDE.







IMPORTANT: ALWAYS HOLD A CD BY IT'S EDGES. AVOID GETTING ANY FINGER-PRINTS, SMUDGES OR DIRT ONTO THE SURFACE OF A DISC. IN CASE THIS HAPPENS, USE A SPECIAL CD-CLEANING CLOTH OR CLEANING KIT TO REMOVE THE DIRT OR SMUDGES.

IMPORTANT


MOTORIZED AUTOMATIC CD-DOOR - OPERATION AND PRECAUTIONS








- THIS UNIT HAS A MOTORIZED (MOTOR OPERATED) AUTOMATIC CD-DOOR.
- PLEASE NEVER TRY TO OPEN OR CLOSE THE DOOR MANUALLY (BY HAND)
- ALWAYS USE THE CD OPEN / CLOSE KEY
- WHEN OPENING, THE DOOR WILL SWING UPWARDS AND STOP AUTOMATICALLY WHEN IT IS FULLY OPEN. NEVER APPLY PRESSURE ON THE DOOR TO OPEN THE DOOR FASTER OR BEYOND ITS LIMIT.
- IF THERE IS ANY OBSTRUCTION WHEN OPENING THE DOOR (IF SOMETHING IS BLOCKING THE DOOR AND PREVENTING IT FROM OPENING) THE DOOR WILL AUTOMATICALLY STOP AND REVERSE DIRECTION (CLOSE) AFTER 4-5 SECONDS TO PREVENT DAMAGE TO THE CD-DOOR AND MOTOR.

NORMAL CD OPERATION


- PRESS "ON/ STANDBY" KEY TO SWITCH ON THE UNIT.
- PRESS THE "FUNCTION" KEY (ON UNIT) REPEATEDLY UNTIL THE DISPLAY SHOWS "CD" OR PRESS THE "CD" KEY ON REMOTE CONTROL.
- PRESS THE "OPEN/ CLOSE" KEY & INSERT A CD AS DESCRIBED.
- PRESS **PLAY/PAUSE**  KEY IF PLAYBACK DOESN'T AUTOMATICALLY BEGIN. THE DISK WILL START SPINNING & THE FIRST SONG (TRACK) WILL START PLAYING. THE DISPLAY WILL INDICATE THE CURRENT TRACK NO.
- AT ANY ANYTIME DURING PLAYBACK, PRESS THE **PLAY/PAUSE**  KEY TO PAUSE OPERATION OF THE UNIT. PRESS **PLAY/PAUSE**  KEY TO RESUME OPERATION AT THE SAME TRACK & POSITION.
- AT ANYTIME DURING PLAYBACK, PRESS THE **STOP**  KEY TO STOP OPERATION OF THE SET. THIS WILL RESET THE SET TO THE FIRST TRACK (IF YOU PRESS PLAY AFTER STOP, THE FIRST TRACK WILL ALWAYS START PLAYING).
- AT ANYTIME DURING PLAYBACK, PRESS AND RELEASE THE **NEXT** OR **BACK**  KEYS TO SKIP FORWARD OR BACKWARDS BY ONE TRACK, AS DESIRED.
- ANY ANYTIME DURING PLAYBACK, PRESS AND HOLD THE **NEXT** OR **BACK**  KEYS TO FAST-FORWARD (CUE) OR FAST-REVERSE (REVIEW) THE SPECIFIC TRACK, WHICH IS CURRENTLY PLAYING.

PROGRAMMING THE CD-PLAYER

- THE CD PLAYER CAN BE PROGRAMMED TO PLAY ANY SEQUENCE OF UPTO 20 TRACKS, AS DESIRED.
- ALWAYS PRESS THE **STOP**  KEY BEFORE STARTING THE PROGRAMMING.

1. SWITCH ON THE SET AND SELECT "CD" FUNCTION. THEN PRESS **STOP**  KEY.
2. PRESS **PROGRAM**  KEY ONCE.
3. PRESS **NEXT** AND **BACK**  KEYS TO SELECT THE TRACK (SONG) NUMBER IN THE CURRENT MEMORY POSITION (AS DISPLAYED ON THE SCREEN).
4. PRESS **PROGRAM**  KEY. THIS SAVES THE SELECTED SONG INTO THE PREVIOUS MEMORY POSITION AND ADVANCES THE MEMORY POSITION TO THE NEXT NUMBER SO THAT YOU CAN SAVE ANOTHER SONG IN THIS POSITION.
5. REPEAT STEP (3) AND (4), EACH TIME SELECTING ANY TRACK (SONG) NUMBER OF YOUR CHOICE TO BE STORED IN SUCCESSIVE PROGRAM MEMORY POSITIONS. MAKE SURE TO PRESS **PROGRAM**  KEY EACH TIME.
6. AFTER A MAXIMUM OF 20 SONGS (OR LESS) HAVE BEEN SELECTED AS DESCRIBED, PRESS THE **PLAY**  KEY TO START PLAYING YOUR PROGRAMMED SEQUENCE OF SONGS.
7. TO CLEAR (CANCEL) THE ENTIRE PROGRAM WHICH IS STORED IN THE MEMORY, SIMPLY PRESS **STOP**  KEY TWICE. THIS WILL RESET THE MEMORY AND CLEAR THE PROGRAM.

MUSIC EQUALIZER

- ANYTIME DURING CD PLAYBACK, PRESS THE **EQ**  KEY (ON REMOTE CONTROL) REPEATEDLY TO CHOOSE THE DESIRED SOUND EFFECT ACCORDING TO THE MUSIC YOU ARE LISTENING TO :



(*OFF MEANS SLEEP TIMER IS DEACTIVATED)

REPEAT PLAYBACK FUNCTION

- AT ANYTIME DURING PLAYBACK:
- PRESS **[P-MODE]** KEY (SAME AS **[PLAY MODE]** KEY ON REMOTE CONTROL) REPEATEDLY TO SELECT:
 - PRESS ONCE = REPEAT ONE: TO REPEAT THE CURRENT TRACK (DISPLAY FLASHES "REP")
 - PRESS TWICE = REPEAT ALL: TO REPEAT ALL TRACK (DISPLAY SHOWS "REP")
 - PRESS THREE = RANDOM: TO SHUFFLE ALL SONGS ON A DISC. (DISPLAY SHOWS "RAND")

MUTE FUNCTION

- THIS SET HAS A MUTE FUNCTION TO ENABLE YOU TO TURN OFF THE VOLUME TEMPORARILY.
- PRESS THE **[MUTE]** KEY (ON REMOTE CONTROL) ONCE, THE VOLUME WILL TURN OFF AND THE MUTE SYMBOL WILL SHOW ON THE DISPLAY.
- TO RESUME THE SOUND, SIMPLY PRESS THE **[MUTE]** KEY AGAIN.

USING THE AUDIO LINE IN CONNECTION (AUX-INPUT)

- YOU CAN CONNECT THE AUDIO OUTPUT OF AN EXTERNAL DEVICE SUCH AS A MP3 PLAYER OR A TV TO THIS UNIT, TO LISTEN TO THE SOUND OF THAT DEVICE THROUGH THE HIGH QUALITY AMPLIFIER OF THIS MUSIC SYSTEM.
- TO CONNECT THE EXTERNAL DEVICE PLEASE USE A STANDARD STEREO HEADPHONE (3.5MM TO 3.5MM PLUGS) CABLE TO CONNECT THE "HEADPHONE-OUT OR AUDIO LINE-OUT" OF THE DEVICE TO THE AUX-INPUT SOCKET OF THIS UNIT.
- SWITCH THE FUNCTION TO "AUX" USING THE **[FUNCTION]** KEY ON UNIT OR "AUX" KEY ON REMOTE CONTROL.
- SWITCH ON THE UNIT AND THE EXTERNAL DEVICE (eg. MP3-PLAYER OR TV).
- START PLAYBACK OF THE EXTERNAL DEVICE AND ADJUST THE VOLUME CONTROL OF THE MAIN UNIT TO THE DESIRED LEVEL.
- REMEMBER TO SWITCH OFF THE UNIT WHEN YOU ARE FINISHED USING THE EXTERNAL DEVICE.

SPECIFICATIONS

POWER SUPPLY : AC 120V ~ 60 Hz
POWER CONSUMPTION : 23W
SPEAKER : MAIN SPEAKER: 2.5" x 2
MYLAR SPEAKER: 1½" x 2
FREQUENCY : FM 87.5 - 108 MHz

THE APPARATUS SHOULD NOT BE EXPOSED TO DRIPPING OR SPLASHING AND NO OBJECTS FILLED WITH LIQUIDS SHOULD BE PLACED ON THE APPARATUS.

THE MARKING AND RATING LABEL IS LOCATED AT REAR ENCLOSURE OF THE APPARATUS.

THE MAINS PLUG IS USED AS THE DISCONNECT DEVICE AND IT SHALL REMAIN READILY OPERABLE. TO BE COMPLETELY DISCONNECTED THE POWER INPUT, THE MAINS PLUG OF THE APPARATUS SHALL BE DISCONNECTED FROM THE MAINS COMPLETELY. THE MAINS PLUG SHOULD NOT BE OBSTRUCTED OR SHOULD BE EASILY ACCESSED DURING INTENDED USE.

UNDER THE INFLUENCE OF ELECTROSTATIC PHENOMENON, THE PRODUCT MAY MALFUNCTION AND USER TO POWER RESET.

BATTERY SHALL NOT BE EXPOSED TO EXCESSIVE HEAT SUCH AS SUNSHINE, FIRE OR THE LIKE.

CAUTION

DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE.

WALL MOUNT SET UP

- THIS UNIT CAN BE MOUNTED ON TO A WALL SURFACE.
- TYPE OF SCREWS USED FOR WALL-MOUNTING: 3.5 X 34MM BA (2 PCS)

IMPORTANT PRECAUTIONS

*Not all types of walls are suitable or strong enough to support the weight of this unit.
Please refer to a specialist to make sure that your wall is suitable, before wall mounting. Drilling of holes must also be done by an experienced specialist, to avoid injury and damage to your walls. Never place objects on top of the speakers when they are wall mounted.*

 
SYSTEM SET UP PROCEDURE

AS A "SHELF SYSTEM" (TABLE TOP USE)


- INCLUDED 1 PC STAND FOR THE MAIN UNIT.

FIXING THE BASE TO THE UNIT:

1. PLACE THE STAND UNDER THE UNIT.


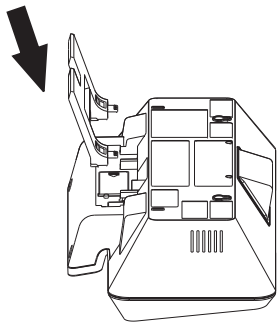


 2. SLIDE THE STAND UPWARD (SEE DIAGRAM BELOW).

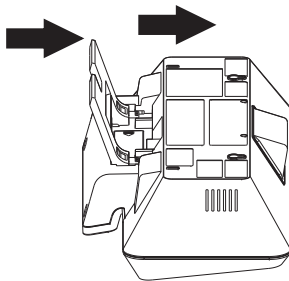

3. STOP WHEN THE INDICATOR MARK ON THE STAND IS ALIGNED WITH THE LOCK SYMBOL ON THE REAR CABINET.
(TO RELEASE THE STAND FROM THE UNIT, SLIDE THE STAND DOWNWARDS (OPPOSITE DIRECTION) UNTIL IT BECOMES RELEASED.)

  ⇨CLICK⇩

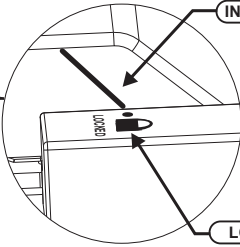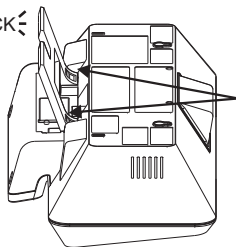


INDICATOR MARK

WHEN THE INDICATOR MARK ON THE STAND IS ALIGNED WITH THE LOCK SYMBOL, THE BASE IS PROPERLY INSTALLED.

LOCK SYMBOL

 DATE : 3 JAN 2011
MODEL : PICD65I "PYLE"
MANUAL PLAN FOR APPROVAL

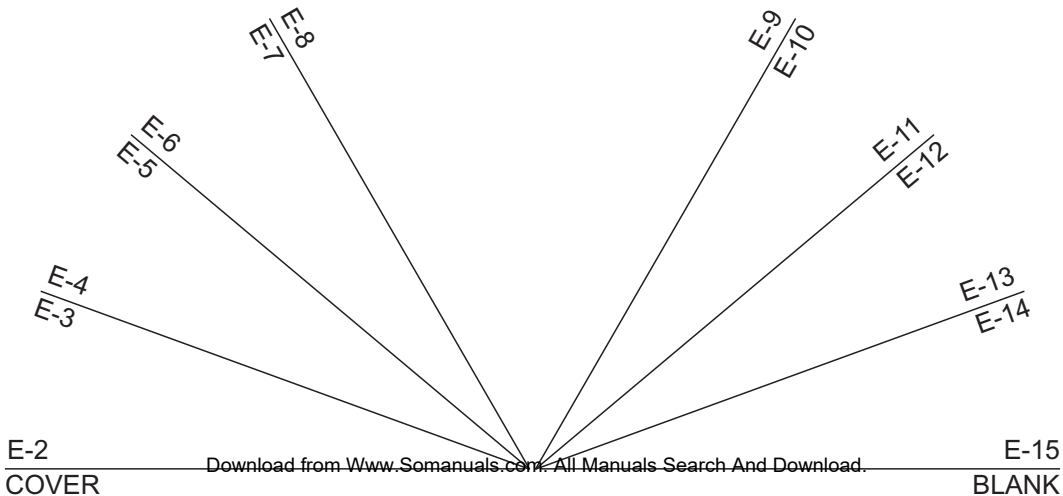

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>