




Owner's Manual



www.pyleaudio.com

PPG250A Guitar Amplifier

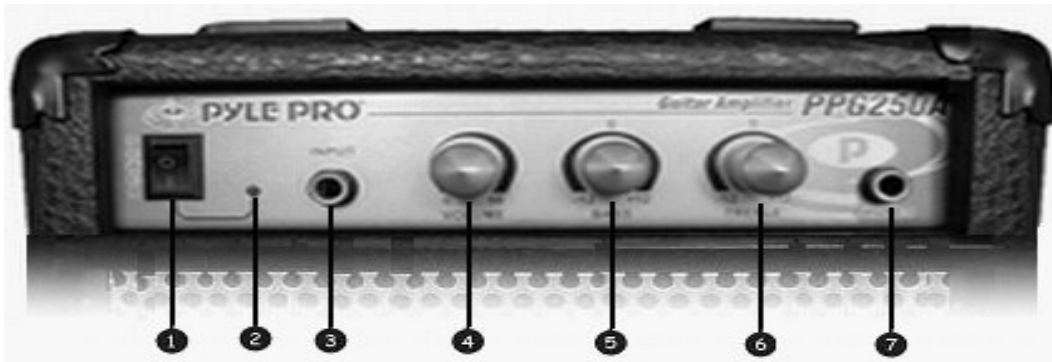

- 1) **Power Switch:** Switches amplifier on/off.
- 2) **Power LED:** Illuminates when power is switched on.
- 3) **Input Jack:** Connect your instrument to this jack.
- 4) **Volume:** This sets the volume gain level.
- 5) **Bass:** This control adjusts the low frequency level.
- 6) **Treble:** This control adjusts the high frequency level.
- 7) **Phones Jack:** This is your headphone connection. Inserting the headphones disables the internal speaker (great for practicing).



- 1) **Voltage Selector:** 110/220 Volt Selectable Switch.
- 2) **Power Cord:** Connect the included power cord here.

Troubleshooting

Distorted Sound:

- ✓ Check if the amplifier is overdriven. If it is, you will have to turn the level down.
- ✓ Check signal source.

Signal sounds "discolored":

- ✓ Check and adjust the EQ settings.
- ✓ Ensure you are using quality cables.
- ✓ Check signal source.

No Sound:

- ✓ Check connections.
- ✓ Try a different cable.
- ✓ Check level on amplifier.
- ✓ Confirm amplifier is getting a signal.
- ✓ Make sure nothing is plugged into the Phones jack.

Intermittent Output:

- ✓ Check connections.
- ✓ Try a different cable.

Specifications

Model	Driver	RMS	Peak	Dimensions	Weight
PPG250	6" High Definition Speaker	20W	80W	W = 11" D = 6" H = 11"	9 lb.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>