 


PROSCAN

PLCD1526A

# TV USER'S MANUAL

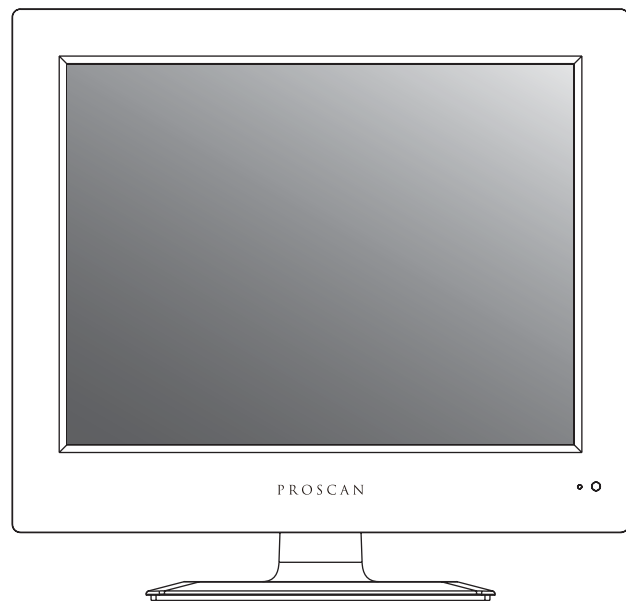

LCDTV

15" Wide Screen Digital LCD TV

Index

**1. INTRODUCTION ..... 3**  
1.1. Safety Information ..... 3  
1.2. TV Base Stand assemble ..... 8  
1.3. General View ..... 9  
1.3.1. Front and Back ..... 9  
1.3.2. Connection Panel ..... 10  
1.3.3. Remote Control ..... 11

**2. INSTALLATION ..... 13**  
2.1. Power Supply Connection ..... 13  
2.2. RF Antenna Connection ..... 13  
2.3. Connecting via Composite Video..... 14  
2.4. Connecting via Component Video ..... 14  
2.5. Connect to Digital Audio Amplifier..... 15  
2.6. Connecting via HDMI ..... 15  
2.7. Connecting to a PC..... 16  
2.8. Connecting Headphones ..... 16

**3. Initial Setup ..... 17**  
3.1. Basic Operations ..... 18  
3.2. Channel Bar ..... 19  
3.3. Adjust the OSD Screen..... 20

**4. OSD Menu Operations ..... 22**  
4.1. Sound Menu ..... 22  
4.2. Channel Menu ..... 23

4.3. Parental Menu ..... 24  
4.4. Setup Menu ..... 28  
4.5. Others Menu ..... 30

**5. TROUBLE SHOOTING ..... 31**

**6. SPECIFICATIONS ..... 33**

---

## 1. INTRODUCTION

### 1.1. Safety Information

To ensure reliable and safe operation of this equipment, please read carefully all the instructions in this user guide, especially the safety information below.



**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of un-insulated "dangerous voltage" within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to the persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



**WARNING:** TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

---

## User Manual

**CAUTION:** Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Please, carefully study this manual and always keep it available. There are, however, some installation and operation precautions which you should be aware of:

- 1.READ INSTRUCTIONS:** All the safety and operating instructions should be read before the product is operated.
- 2.RETAIN INSTRUCTIONS:** The safety and operating instructions should be retained for future reference.
- 3.HEED WARNINGS:** All warnings on the product and in the operating instructions should be adhered to.
- 4.FOLLOW INSTRUCTIONS:** All operating and use instructions should be followed.
- 5.CLEANING:** Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- 6.ATTACHMENTS:** Do not use attachments not recommended by the product manufacturer as they may cause hazards.
- 7.WATER AND MOISTURE:** Do not use this product near water – for example, near a bath tub, wash bowl, kitchen sink, or laundry tub - in a wet basement or near a swimming pool and the like.
- 8.ACCESSORIES:** Do not place this product on an unstable cart, stand, tripod, bracket or table. The product may fall, causing serious injury to a child or adult and serious damage to the product. Use only with a cart, stand, tripod, bracket or table recommended by the manufacturer or sold with the product. Any mounting of the product should follow the manufacturer's instructions and should use a mounting accessory recommended by the manufacturer. A product and cart combination should be moved with care: Quick steps, excessive force and uneven surfaces may cause the product and cart combination to overturn.



 
**9. VENTILATION:** Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

**10. POWER SOURCES:** This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company.

**11. GROUNDING OR POLARIZATION:** This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

**12. POWER-CORD PROTECTION:** Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.

**13. OUTDOOR ANTENNA GROUNDING:** If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

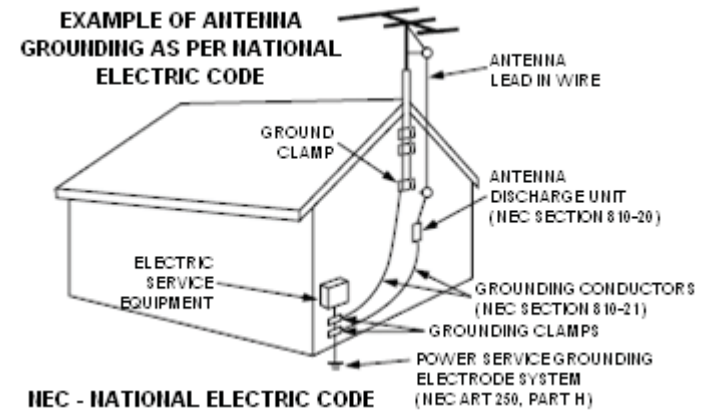

**14. LIGHTNING:** For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.

**15. POWER LINES:** An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

**16. OVERLOADING:** Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.

**17. OBJECT AND LIQUID ENTRY:** Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

**18. SERVICING:** Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

**19. DAMAGE REQUIRING SERVICE:** Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power-supply cord or plug is damaged.
- If liquid has been spilled, or objects have fallen into the product.
- If the product has been exposed to rain or water.
- If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
- If the product has been dropped or damaged in any way.
- When the product exhibits a distinct change in performance – this indicates a need for service.

**20. REPLACEMENT PARTS:** When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

**21. SAFETY CHECK:** Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.


**22. WALL OR CEILING MOUNTING:** The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

**23. HEAT:** The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

**24. MAINS PLUG:** Is used as the disconnect device. It shall remain readily operable, and should not be obstructed during intended use.

**1.2. TV Base Stand assemble**

 1. Match the TV unit into the stand, then hold the TV stand, revolve and lock the tv unit tightly as the arrowhead point.
2. Fix the screws into the TV stand after installing the tv unit and tv stand.

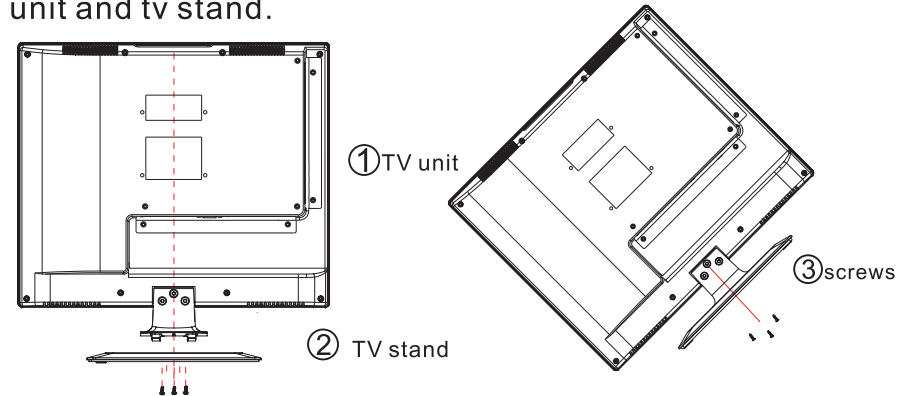


**3. Mounting on the wall**

This unit is VESA-compliant, and is designed to be wall-mounted with a VESA-compliant 3"x3" (75mmx75mm) mounting kit designed for flat-panel TVs (not supplied). Mount this unit according to the instructions included in the mounting kit. Length of screw should not exceed 8 mm


**NOTE**

 Remove the base stand before mounting the unit on the wall.

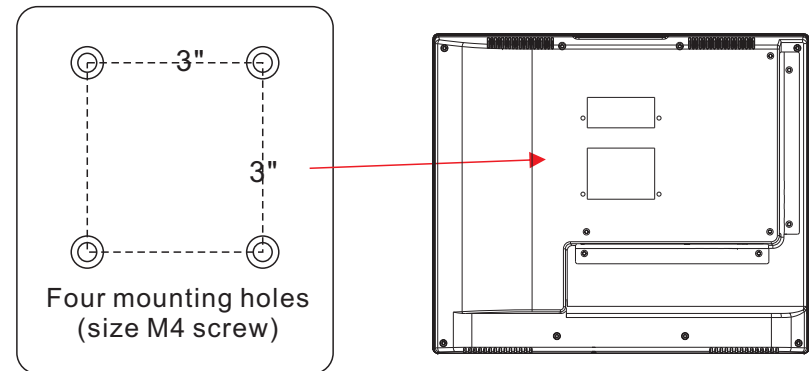


### 1.3. General View
 
#### 1.3.1. Front and Back

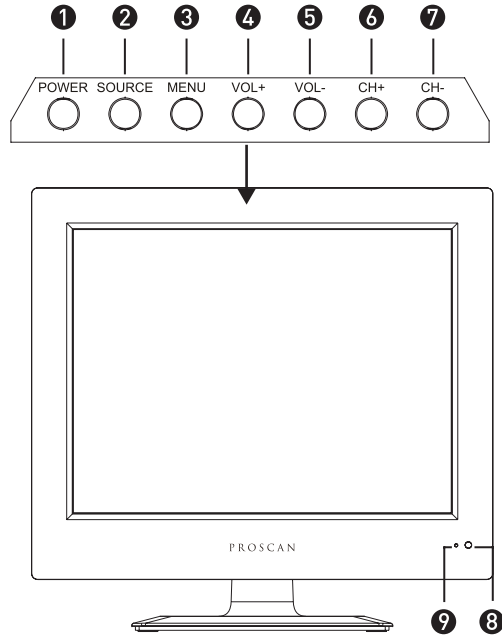

- 1. **POWER:** Turn on TV/Standby
- 2. **SOURCE:** Audio/video input source selection
- 3. **MENU:** Open settings menu
- 4. **VOL+:** Increase volume
- 5. **VOL-:** Decrease volume
- 6. **CH+:** Next channel
- 7. **CH-:** Previous channel
- 8. **IR RECEIVER:** Receives infrared signals from the remote control
- 9. **INDICATOR LED:** Status indicator (Power On: Green / Standby: Red)

#### 1.3.2. Connection Panel

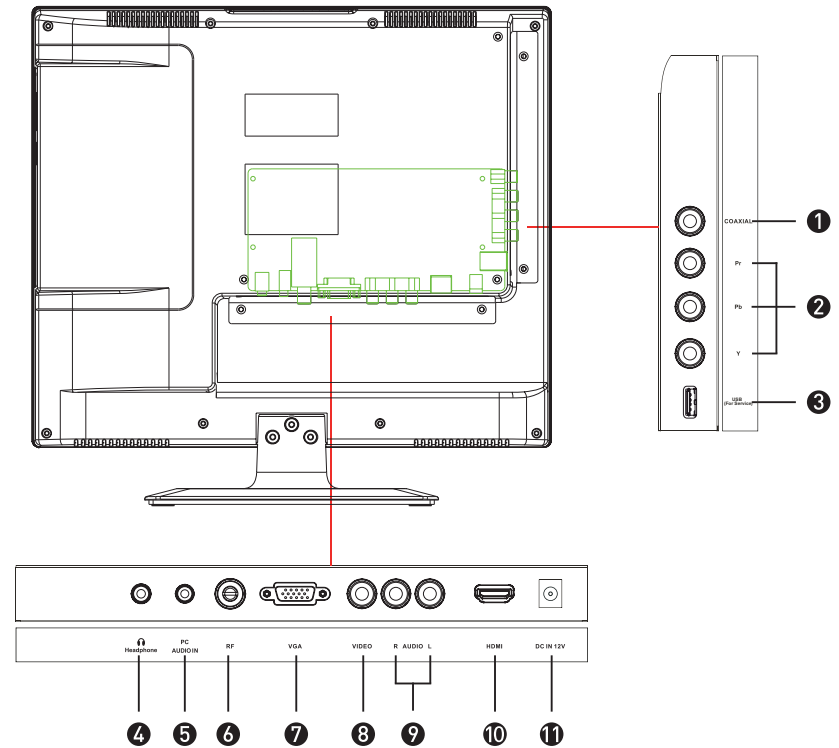 


- 1. **Coaxial:** Digital audio output
- 2. **YPbPr:** Connect to the YPbPr video output terminal of DVD
- 3. **USB Host port**
- 4. **Headphones**
- 5. **PC AUDIO:** Connect it to the audio output terminal of PC
- 6. **RF:** Antenna connection
- 7. **VGA:** PC video input
- 8. **Video:** Video input
- 9. **AUDIO IN R/L:** Stereo audio input
- 10. **HDMI**
- 11. **DC IN 12V**

### 1.3.3. Remote Control
 
#### BASIC OPERATIONS

1. **POWER:** Turn on the TV/Standby
2. **SOURCE:** Show input the source Menu
3. **MUTE:** Mute the sound from speakers
4. **NUMBER KEYS:** Change the channel directly
5. **-:** Select channel with two digits
6. **↶:** Return to the previous channel tuned
7. **MENU:** Show Menu
8. **INFO:** Show information about the current programme
9. **EPG:** Show the Electronic Program Guide
10. **EXIT:** Exit the Menu
11. **NAVIGATION KEYS (Up, Down, Left, Right,OK):** To move in the menus and confirm settings
12. **VOL:** Increase and decrease volume
13. **CH:** Next and Previous Channel
14. **MTS:** Audio language selection
15. **CC:** CC mode
16. **FREEZE:** Freeze the image
17. **CHLIST:** Displays channel lists on the screen
18. **P. MODE:** Output image mode
19. **ASPECT:** Selects the screen size
20. **S. MODE:** Setting audio options

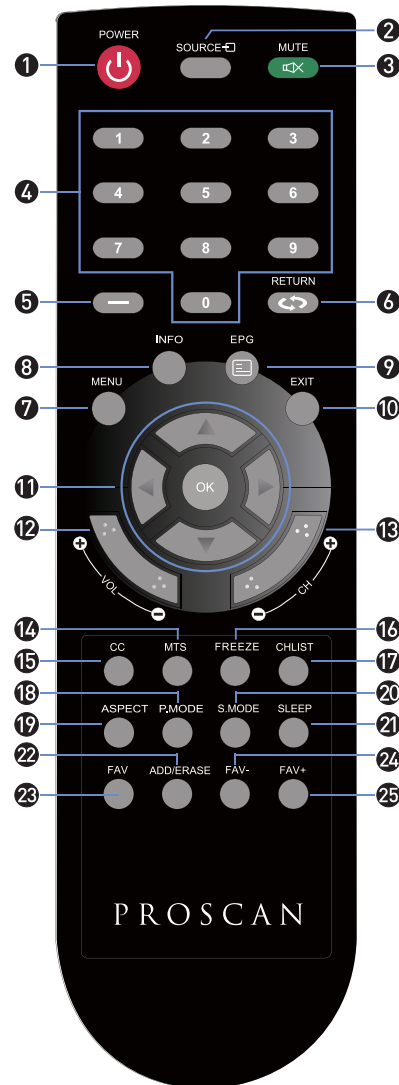


Universal Remote Code:08F7  
(Universal Remote Control is not included)

21. **SLEEP:** Auto Power Off Timer
22. **ADD/ERASE:** Add or delete a file
23. **FAV:** Show the list of favorite channels
24. **FAV-:** Previous favorite channel
25. **FAV+:** Next favorite channel

#### Install the Batteries

 If the remote control fails to operate the TV functions, replace the batteries in the remote control.

- 1 Open the battery cover.
- 2 Insert two size-AAA batteries.(Place the batteries with their terminals corresponding to the (+) and (-) indications in the battery compartment.)
- 3 Replace the cover.

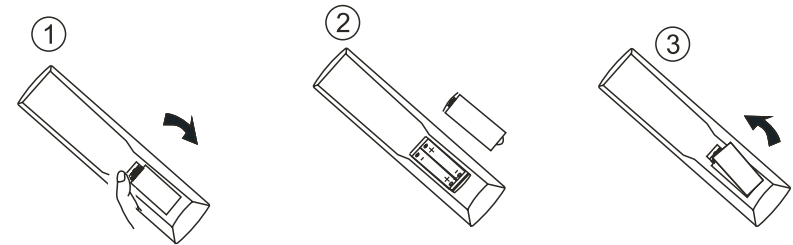

#### Precaution on battery use

Improper use of batteries can result in a leakage of chemicals and/or explosion. Be sure to follow the instructions below.

- \* Place batteries with their terminals corresponding to the (+) and (-) indications.
- \* Different types of batteries have different characteristics. Do not mix batteries of different types.
- \* Do not mix old and new batteries. Mixing old and new batteries can shorten the life of new batteries and/or cause old batteries to leak chemicals.
- \* Remove batteries as soon as they are non-operable. Chemicals that leak from batteries can cause a rash. If chemical leakage is found, wipe with a cloth.
- \* If the remote control is not used for an extended period of time, remove the batteries from the remote control.
- \* The batteries (battery pack of batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

## 2. INSTALLATION

 
### 2.1. Power Supply Connection

Connect the power adaptor to a home power outlet.



### 2.2. RF Antenna Connection


Connect the antenna as shown in the figure to receive the analog or digital (DTT) TV signal.

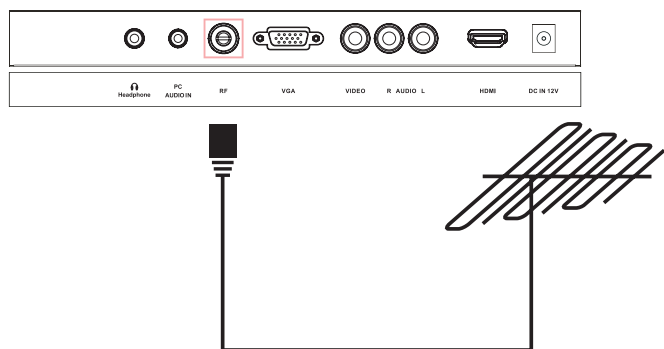

## User Manual


### 2.3. Connecting via Composite Video

 Connect your video player, decoder, DVD or similar with the corresponding tri-color RCA cable, from the AV output (audio/video) of your video equipment to the video and audio input to your TV by the cable, as shown in the figure.

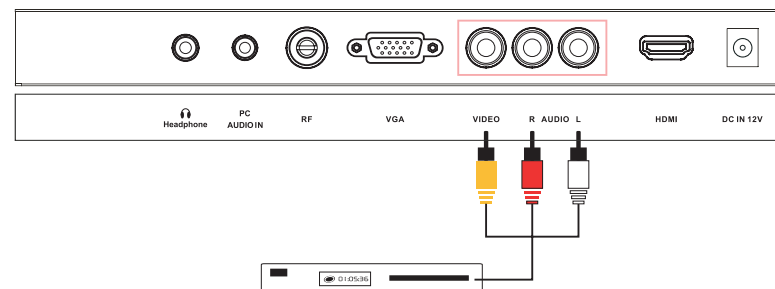

### 2.4. Connecting via Component Video

 
Connect your video player, decoder, DVD or similar with an RCA cable, from the YPbPr video output of the device to the video input on your TV by the cable, as shown in figure. Through this entry you can get HD video. Use a second RCA cable to connect the audio to AUDIO IN R/L.

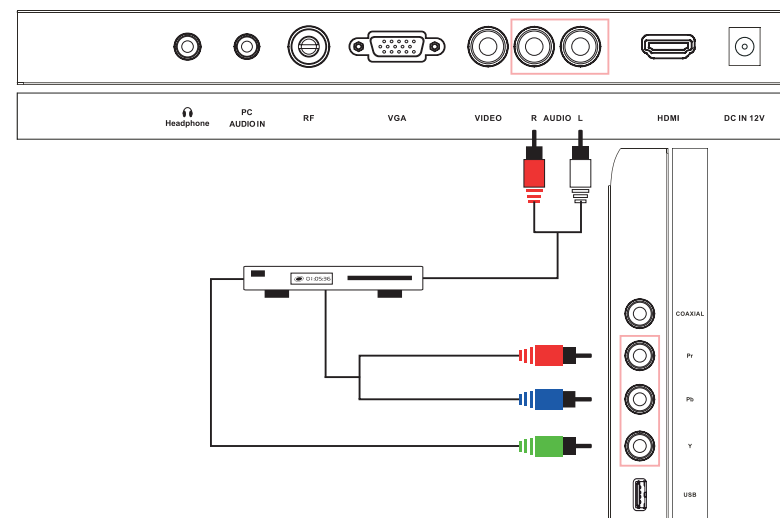



## 2.5. Connect to Digital Audio Amplifier

 
Take the coaxial digital audio output of your TV to connect to a hifi system you have, and improve your sound experience.

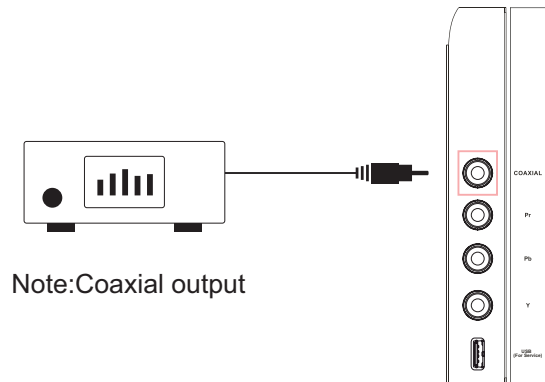

Note:Coaxial output


## 2.6. Connecting via HDMI

 Connect your video player, decoder, DVD or similar, with the corresponding HDMI cable from the HDMI output of your video equipment to the HDMI input on your TV, as shown in figure. This cable transfers HD video and audio.

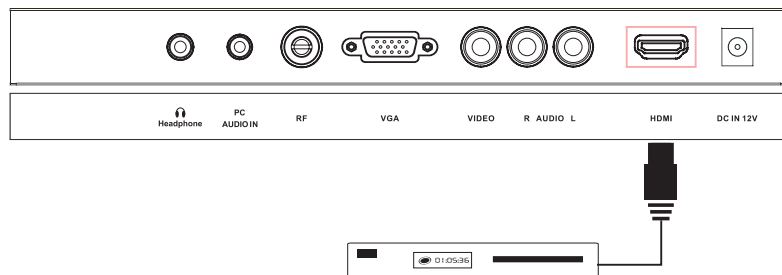


## 2.7. Connecting to a PC

 Connect the VGA output (RGB) from your PC to the corresponding input on your TV, and the audio output from your computer to the PC AUDIO input of your television.

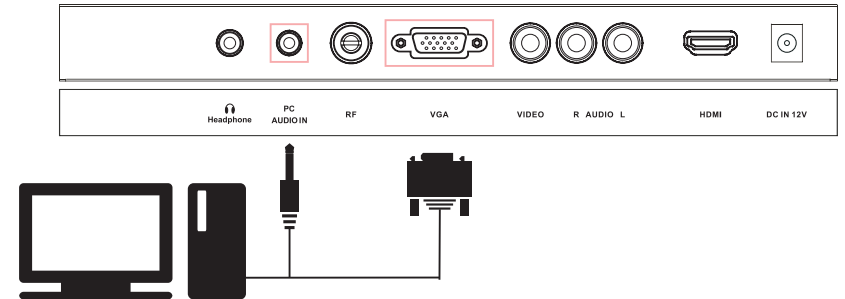

## 2.8. Connecting Headphones

 Use the HEADPHONES output of your TV set to listen the audio of the unit through your own stereo headphones. When you connect headphones to the unit, the main speakers will be silenced.

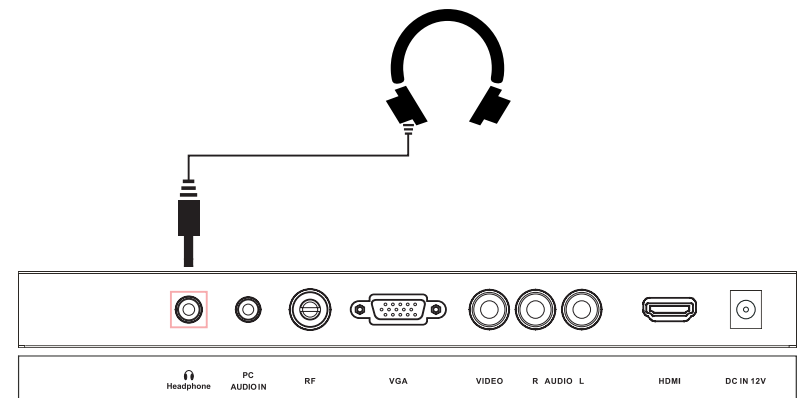

### 3. Initial Setup

If it is the first time you turn on your TV, the initial setup menu appears automatically.



#### Menu Language

To choose your menu language, press the left/right arrow until the language you need appears.

Available languages: English, French and Spanish.

#### Signal Type

To choose your TV tuner signal type, press the left/right arrow until Air or Cable appears.

Note: please select TV signal type according to the antenna or cable closed circuit TV you use.

#### Auto Channel Search

To execute auto channel search, press the up/down arrow to highlight Auto Channel Search and press OK button.



What to notice:

1. The channel search access starts from the Analog TV channel searching and ends at Digital TV channel searching.
2. The channels that have been found will be stored automatically.
3. You can press MENU button to skip analog/digital channel searching.
4. You can press OK button to end the channel searching.

### 3.1. Basic Operations

#### Turning On and Off

Connect the AC adaptor to power the LED TV. At this time the TV will enter standby mode and power indicator shows red. Use Power button (⏻) on the side panel of TV or on the remote control to turn on the TV. After switching off the TV for 5 seconds, you can turn on TV again.

#### Choosing TV Channel

##### Tuning To Analog Channels

An analog channel has a channel number beginning with "A". Input the digital number with numeric buttons directly and press OK button to confirm.

For example, to watch analog channel "A51", press "5", "1", "OK" on remote control in sequence.

**Note:** Although there is no analog TV signal available in America, we reserve ATV functions for some expansible use.

##### Tuning To Digital Channels

 
A digital channel has a channel number beginning with "D". Input the main digital number with numeric buttons directly, then press "—" button on remote control, and input the sub number at last.

For example, to watch digital channel "D31-1", press "3", "1", "—" button. "OK" on remote control in sequence.

##### Changing Channels Directly

You can use CH<sup>^</sup> button to increase channel number and CH<sup>v</sup> to decrease channel number. When no OSD (On Screen Display) is used, the up/down arrows can also work as CH<sup>^</sup>/CH<sup>v</sup> buttons.

#### Selecting Input Source

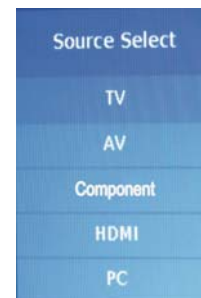

Press INPUT button on remote control to display Source Select list. Use up/down arrows to highlight the source you need and press OK to confirm.

### 3.2.Channel Bar

Press the INFO button on the remote control, the channel bar will appear on the right top of screen. It displays the current channel's information. The following list describes the items on the channel bar.



**A2/D50-1** If the channel is analog, A is displayed. If it's a digital channel, D is displayed. For example, in the pictures above, A2 is an analog channel, and D50-1 is a digital channel (-1 is a sub-channel number).

- MTV/KOCE-HD** Displays the channel label.
- Mono/English** Displays whether the current channel is being broadcast in stereo or mono. If the current channel is digital, this space will be SAP (Second Audio Program) language.
- 480i/1080i** Displays the signal resolution.
- 16:9/CC/TV-PG** Displays the screen aspect ratio, closed caption and TV rating level of the current program or channel. And these are only available for digital channels.
- Oct-31 23:14 Mon** Current date and time.

 
### Adjusting Volume

Press the VOL+/VOL- button on the remote control to adjust the volume. If you want to switch sound off, press MUTE (M).

When OSD (On Screen Display) is not used, the arrows left/right can also work as VOL- / VOL+ buttons.

### EPG (Electronic Program Guide)

Press EPG button on the remote control, the electronic program guide will appear in the center of screen. The electronic program guide gives the TV program playing project. You can use left/right arrows to switch pages.

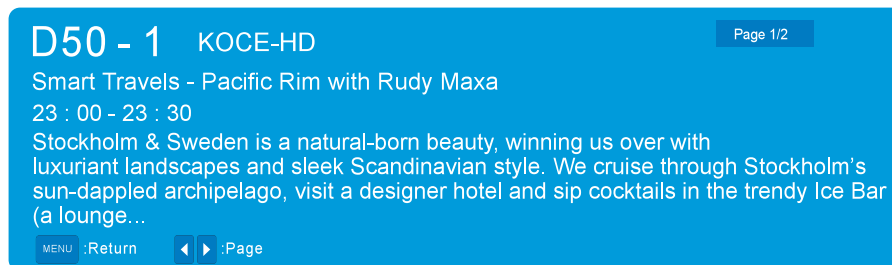

### 3.3. Adjust the OSD Screen

 
The OSD (On Screen Display) menu enables you to approach to the TV functions.

To use OSD menu system, press MENU button on remote control, then use left/right arrow to highlight an option from PICTURE, SOUND, CHANNEL, PARENTAL, SETUP or OTHERS and press OK button.

Press the up and down arrow to move to a different option within each menu. If necessary, press OK or right arrow to display the choices of the option you've highlighted. If available, use the text at the bottom of each screen for help. To return to the previous menu, press the MENU button.

To exit the OSD menu:

- Press the EXIT button. The menu will clear from the screen.
- Press the MENU button repeatedly until the menus disappear.

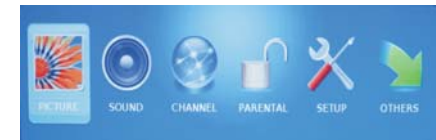

### Picture Menu

The Picture Menu contains menus and controls to configure the way the picture appears. The Picture Menu options apply to the video for the main TV and VIDEO INPUT selections. All picture options can be applied to each input.

Press MENU on the remote. Select Picture from the Main menu. Press the OK button to proceed to PICTURE menu.



Use up/down to choose the function you need, press OK or right arrow to adjust or enter a sub-menu. The sub-menu image and explanation are shown below.

### Picture Settings



Picture Settings: Choose the preset visual mode of your TV: Standard, Movie, User, Dynamic. Only in User mode you can adjust Brightness, Contrast, Color, Tint and Sharpness.

- Brightness: Adjust the brightness of picture.
- Contrast: Adjust the contrast of color.
- Color: Adjust the richness of color.
- Tint: Adjust the balance between red and green level (only available in NTSC signal).
- Sharpness: Adjust the sharpness level of picture.

Screen Size



Screen Size: Select a screen aspect ratio. (Available ratio: Wide and Normal.) Please choose the ratio that applies to your video best. signal format

PC Settings (only available in PC mode)

 


Auto Adjust: Adjust the PC picture display automatically.  
 Horizontal Position: Adjust the horizontal position of picture.  
 Vertical Position: Adjust the vertical position of picture.  
 Clock: Adjust the clock of picture.  
 Phase: Adjust the phase of picture.  
 Reset: Reset all the PC picture settings to factory default.

Color Temperature

This option allows you to select one of three automatic color adjustments: Cool for a bluer palette of picture colors; Normal or Warm for a redder palette of color.

Advanced Picture Settings (not available in PC mode)

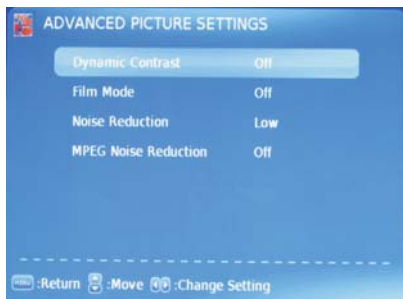


Dynamic Contrast: Set dynamic contrast as Off/low/Medium/High.  
 Film Mode: Set film mode on/off.  
 Noise Reduction: Set noise reduction as Off/low/Medium/High.  
 MPEG Noise Reduction: Set MPEG noise reduction as Off/low/Medium or High.  
 Note: Noise reduction helps to reduce the picture "static" or any type of interference. This feature is especially useful for providing a clearer picture in weak analog signal conditions. The MPEG Noise Reduction specifically works on video signal with MPEG coding.

4. OSD Menu Operations

4.1. Sound Menu

 The Sound Menu lets you adjust audio output. To access the Sound Menu, press MENU on the remote, and then select SOUND from the Main Menu. Press OK button to proceed to SOUND menu.

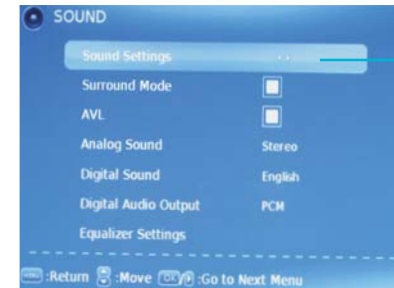

Use up/down to choose the function you need, press OK or right arrow to adjust or enter a sub-menu. The sub-menu image and explanation are shown below.

Sound Settings



Sound Mode: Choose the preset sound mode of your TV: Standard, Soft, User, Dynamic. Only in User mode you can adjust Bass, Treble, Balance. Bass: Adjust the bass component of TV sound. Treble: Adjust the treble component of TV sound. Balance: Adjust the balance between the left and right channel.

Surround Mode

Creates a 3D sound surround from standard stereo material, with deep and rich enhancement.

Auto Volume

Set auto volume control on/off.

Analog Sound

Select analog TV audio sound type: Stereo, Mono or SAP (only available in TV mode).

Digital Sound

Select digital TV audio language type: English, French or Spanish (only available for DTV channel).

Digital Audio Output

Set the audio output type as Off, PCM or Raw. Please set this option according to your power amplifier.

Equalizer Settings



The seven-band graphic equalizer allows you to adjust the audio frequency settings. You can select one of the equalizer presets (Off, Pop, Rock, Jazz) or create your own personal preset (User).

Press the left or right arrow to select the frequency (100Hz, 250Hz, 500Hz, 1KHz, 2KHz, 4KHz, 10KHz) you want to adjust. Use the up or down arrow to adjust.

4.2.Channel Menu

The Channel Menu enables you to search, view and edit channels. It is available in TV mode only. Press MENU and choose CHANNEL from the Main menu. Press the OK button to proceed to CHANNEL menu.



Use up/down to choose the function you need, press OK or right arrow to adjust or enter a sub-menu. The sub-menu image and explanation are shown below.

Channel List

Display a channel list. It shows the current channels.

Favorite List

Display a favorite channel list. It shows the current favorite channels.

Channel Settings

Go to channel setting sub-menu (as shown below).



Enter a channel label to rename the current channel.  
 Set if the current channel is the favorite channel.  
 Set if the current channel is skipped.  
 Press up/down arrow to switch the channel you want to edit.

Signal Type

Select your TV signal type: Air or Cable.

Auto Channel Search

Execute an auto channel search.

4.3.Parental Menu

The Setup Menu enables you to lock program with special content, panel key board and input source. Press MENU and choose PARENTAL from the Main menu. Press the OK button to proceed to PARENTAL menu.



Lock Parental Control

 
- When the Parental Control Menu is accessed from the Main Menu, you need to enter password to unlock the menu function. Please enter your four-digit password with numeric keys 0-9.

**Note:** The original password is "0000".

- After unlocking, the items in parental control menu can be used. Use arrow up/down to highlight the function you need and press OK or right arrow to use V-chip, Change Password, Keypad Lock and Source Lock, Clear Channel List sub-menu.

V-Chip

The following graphic details where items locate within the V-Chip menu.

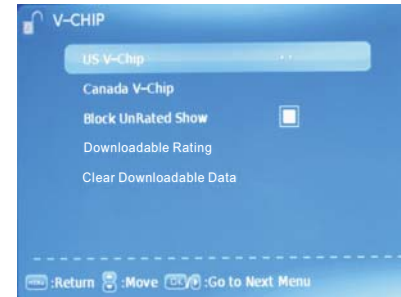


US V-Chip

Press OK or right arrow to enter US V-Chip ratings menu, which contains two sub-menus: Movie Rating and TV rating. See next page for more details.



**Movie Rating**

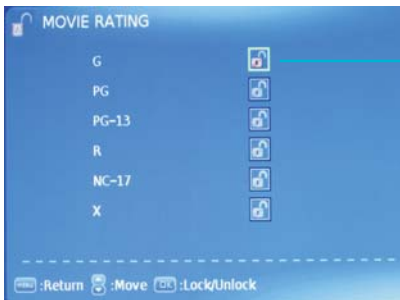 

Use arrow keys to select the rating level you want to block, press **OK** to lock/unlock the rating level. If you have blocked a lower level rating, the higher ratings will be blocked too.

For example, when PG-13 is blocked, R, NC-17 and X will be blocked at the same time.

**TV Rating**



Similar with Movie Rating.

After adjusting, press MENU to return or press EXIT to exit the menu..

*TV Rating Overview*


	Age-Based Ratings		Content Themes
TV-MA	Mature Audience Only	D	Sexually Explicit Dialogue
TV-14	Parents Strongly Cautioned	L	Adult Language
TV-PG	Parents Guidance Suggested	S	Sexual Situations
TV-G	General Audience	V	Violence
TV-Y7	Directed to Children 7 Years and Older	FV	Fantasy Violence
TV-Y	All Children		

**Canada V-Chip**

Press **OK** or right arrow to enter US V-Chip ratings menu, which contains two sub-menus: English Rating and French Rating.

**English Rating**

 Press **OK** or right arrow to enter English rating menu.

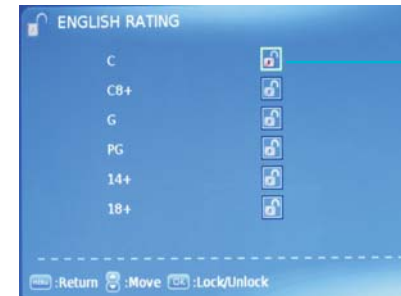


Use arrow keys to select the rating level you want to block, press **OK** to lock/unlock the rating level. If you have blocked a lower level rating, the higher ratings will be blocked too.

For example, when PG is blocked, 14+ and 18+ will be blocked at the same time.

**French Rating**

 Press **OK** or right arrow to enter French rating menu.

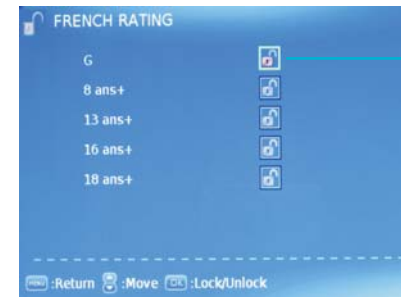

Similar with English Rating.

**Note:** These ratings are available only if the broadcaster is sending rating information.

**Block Unrated Show**

Block all the unrated program.

**Downloadable Rating, Clear Downloadable Data**

Activate or downloadable rating data. if available.

 
### Change Password

Change the password of parental menu.



Input the old password.  
**Note:** The original password is "0000".  
 Input the new password.  
 Input the new password again to confirm.

### Keypad Lock

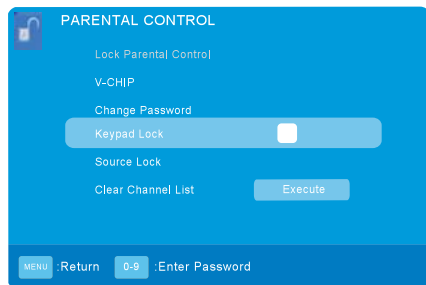

Select this option to block or unblock the TV's side panel buttons so that they can't be used.

### Source Lock

This option allows you to lock or unlock the input source. The source blocked can not be chosen from input list unless you input the correct parental password.



Use up/down arrow to select the source, press OK to lock or unlock it.

### Clear Channel List

This option allows you to execute Clear Channel List function. This function will reset the whole TV system to factory default (not only reset OSD menu).

## 4.4. Setup Menu

The Setup Menu lets you config the TV with your preferences. Select SETUP from the Main Menu. Press OK button to proceed to SETUP menu.



Use up/down to choose the function you need, press OK or right arrow to adjust or enter a sub-menu. The sub-menu image and explanation are shown below.

### Closed Caption



### Caption Display

Press left/right arrow to select caption display on or off.

### Analog Caption Type

Press left/right arrow to select analog closed caption type: CC1, CC2, CC3, CC4, TEXT1, TEXT2, TEXT3, TEXT4.

### Digital Caption Type

Press left/right arrow to select digital closed caption type: Service1, Service2, Service3, Service4, Service5, Service6.

### Digital CC Preset

 
Press left/right arrow to select digital closed caption preset: Default, Custom.

Only in custom mode you can adjust the digital closed caption style.

### Digital CC Style

Press left/right arrow to go to digital closed caption style sub-menu (see next page).


### Digital CC Style

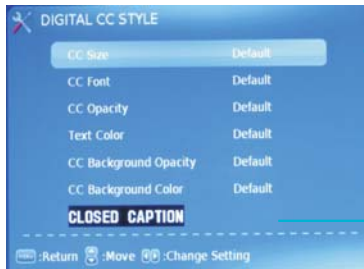

Select the item you want to adjust in Digital CC Style menu with up/down arrows.

After changing, you can preview the caption style here.

### MENU Language

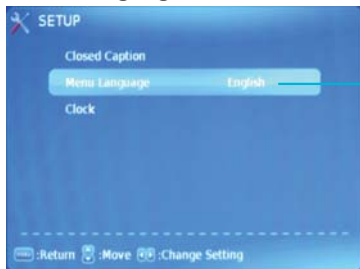 

Select menu language: English, French, Spanish.

### Clock



#### Time Zone

Select your time zone: Eastern, Central, Mountain, Pacific, Alaska, Hawaii, Samoa, Newfoundland, Atlantic.

#### Auto Clock

Select auto clock on/off. Auto clock helps you synchronize your TV time to standard time (from DTV signal).

#### Setup Time

Set your TV time manually (needs to turn off auto clock).

#### Day of Week

Display what day it is (can't be adjust, display only).

#### Daylight Saving Time

Set your daylight saving time on or off (needs to turn on auto clock).

## 4.5. Others Menu

The Others Menu lets you config the TV with your preferences in other features. Choose OTHERS from the Main Menu. Press **OK** button to proceed to SETUP menu.



Use up/down to choose the function you need, press **OK** or right arrow to adjust or enter a sub-menu. The sub-menu image and explanation are shown below.

#### Blue Back

Press **OK** button to select Blue Back on or off. If the Blue Back is turned on, the TV will display a blue back when there is no signal input.

#### No Signal Power Off

Press **OK** button to select No Signal Power Off on or off. If it is turned on, the TV will shut off after 10-minute no signal time. We suggest you turn on this function when Blue Back is turned on. Because it may hurt the LED panel if the blue screen lasts too long.

Note: In PC mode, the monitor standby and power off settings depend on the No Signal Off time.

#### No Operation Power Off

Press **OK** button to select "No Operation Power Off" on or off. If it is turned on, the TV will shut off after a 4-hours no operation time.

#### All Reset

Press **OK** button to execute reset to TV system. All the settings will be reset to factory default.

#### Audio Only



Press **OK** button to activate audio only mode. The TV will output only sound and the LED panel will be turned off. To restore normal playing, hold POWER button for three seconds.

 
Note: The OSD's appearance and color are referred to the actual appliance.



## 5. TROUBLE SHOOTING

If the device performance fails, check whether the detected problem is in the following table. If your device still fails, contact the customer service.

<b>TV no display, and prompt no signal input, red indicator LED twinkling</b>	- Signal cable is loose or fallen off.	- Check signal cable whether or not loose, fall off, reconnect again.
<b>Remote control distance is short, lose control</b>	- Receive window of remote control was covered by objects. - The battery energy of remote control is too low.	- Remove objects obstructing the receiver window of remote control. - Change battery.
<b>TV display is faint</b>	- Adjustment is incorrect. - Display mode is incorrect.	- Use auto-adjustment function. - Use recommended mode.
<b>TV display image does not fill the screen</b>	- Adjustment is incorrect. - Display mode is incorrect.	- Use auto-adjustment function. - Enter PICTURE to adjust horizontal or vertical position. - Use recommended mode.
<b>Can not operate this machine</b>	- Exterior influence, for example lightning, static electricity and so on, which are possibly to disturb the normal operation of this machine.	- Press  button to turn off electrical source, then press  button to turn on the TV again after 1-2 minutes.

<b>Snowflake speckle and sound noise</b>	- Antenna cable connector is loose, cable is damaged. - Antenna cable type is not matching. - Direction or position of antenna is incorrect. - Signal is weak.	- Check the antenna cable connector plug whether or not loose, cable whether or not perfect. - Check antenna cable type (VHF/UHF). - Adjust direction or position of antenna. - Attempt to use signal amplifier.
<b>TV image is better, but has noise</b>	- Antenna cable connector is loose, cable is damaged.	- Check the antenna cable connector plug whether or not loose, check cable condition.
<b>No image. No sound</b>	- Power plug is loose, power cord don't connect well.	- Check power cord whether or not connect well. - Press POWER on panel or remote control. - Check if the  button is on.
<b>TV image has stripes</b>	- Signal is exposed to interference, such as car, neon light, electric blower, etc.	- Don't use electric blower around machine, adjust antenna cable direction to reduce interference.
<b>TV image has shadows</b>	- TV signal is reflected by valley or building. - Direction of antenna is incorrect.	- Use high directional antenna. - Adjust direction of antenna.
<b>TV no sound</b>	- Volume setting is too low. - Sound is muted.	- Adjust volume to proper value. - Press MUTE to eliminate mute.

**CAUTION:** Don't let your machine display the same picture for a long time, please set up a screen protection procedure. If a high contrast picture remains for a long time, this picture will bring a "leave shadow" in screen. Usually the "leave shadow" will disappear gradually when you turn off the machine power. However, this trouble can't be repaired, which isn't in range of warranty.

## 6. SPECIFICATIONS

### Screen

Model	PLCD1526A
TV System	ATSC/NTSC
Maximum Resolution	1024x768
Brightness	220 cd/m <sup>2</sup>
Static Contrast	1000:1
Response Time	5ms
Consumption	<36W
Power Supply	DC IN: 12V/3A
Connectivity	Composite Video Input Component Video Input YPbPr PC Video Input (VGA) PC Audio Input HDMI Input RF Antenna Input
	Headphones Audio Output Coaxial Digital Audio Output
Data Interface	USB(For service)
Panel	A type

### Remote Control

Signal Type	Infrared
Control Distance	8 meters
Control Angle	30° (Horizontal)
Power Supply	AAA 1.5Vx2



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>