

# USER MANUAL

FuXion  
Storage

PD

Hercules



## PD-108

Copyright ©2003 Perception Digital Limited. All rights reserved  
Download from [www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.

0903

# Table of Contents

<b>Introduction.....</b>	<b>2</b>
Copyright notice.....	3
Safety information.....	3
Precautions.....	5
<b>In the Package.....</b>	<b>6</b>
<b>Specifications.....</b>	<b>7</b>
<b>Knowing Your Portable MP3 Player.....</b>	<b>8</b>
Name of parts.....	8
Inserting battery.....	9
Turn on MP3 player.....	10
Turn off MP3 player.....	10
<b>PC Connection.....</b>	<b>11</b>
<b>Operating Controls.....</b>	<b>14</b>
Operating in music mode.....	14
Operating in radio mode.....	16
Operating in voice mode.....	18
<b>Detailed Controls.....</b>	<b>20</b>
Switching modes.....	20
Playing music or voice files.....	20
Recording.....	21
<b>Menu Settings.....</b>	<b>23</b>
Menu settings in Music mode.....	23
Menu setting in Radio mode.....	25
Menu setting in Voice mode.....	29
<b>System Settings.....</b>	<b>30</b>
<b>Troubleshooting.....</b>	<b>32</b>
<b>Company Contacts.....</b>	<b>34</b>

# Introduction

Thank you for purchasing PDHercules portable MP3 player!

With this MP3 player you can enjoy digital music in a more convenient way. You can directly encode your music from any audio source and record your voice into MP3 quality, all of this WITHOUT the use of a computer. You can also transfer songs you enjoy from your computer to your player. With its high quality one-touch voice-recording feature you can record lectures, interviews or meetings in MP3 quality.

The MP3 player is compact in size, light in weight and highly functional. Begin to enjoy the various features of your player by following this user manual.

To familiarize yourself with your player, here are some function highlights:

- Built-in USB jack
- Direct line-in encoding to MP3 or voice format
- 128MB or 256MB internal memory, depending on version of the player
- MP3, WMA, ADPCM playback
- 30 FM radio preset channels (*Enhanced Feature!*)
- FM recording in MP3 quality
- High quality voice recording from built-in microphone
- Voice messages recording in MP3 or voice format
- Various MP3 recording bit rates (48kbps, 96kbps, 128kbps)
- Supports ID3 tagging
- Mass Storage

# Introduction

- Firmware upgrades available
- A-B looping support
- 5 equalizers
- Sleep preset

## Copyright Notice

You must be aware that distribution of MP3 files without the permission from the content owner is against the copyright laws. Perception Digital Ltd. and its associating companies will not be liable against such actions.

 
## Safety information

The user manual or instruction manual for an intentional or unintentional radiator shall caution the user that changes or modifications not expressly by the party responsible for compliance could void the user's authority to operate the equipment.

Modifications not authorized by the manufacturer may void users authority to operate this device.

This equipment has been tested and found to comply with limits for class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference

to radio communications. However, there are no guarantees that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:



- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help. Keep in mind, modifications not authorized by the manufacturer may void users authority to operate this device.

If the product suddenly has no response or power off, it may be caused by electrostatic discharge. If this circumstance, please follow the procedures below for recovery:

- Switch off the unit, if the unit has no response
- Turn on the unit again

# Introduction

 
## Precautions



Do not abuse your MP3 player by using extreme force.



Avoid keeping or operating the unit in places with strong magnetic field, direct sunlight, or heat exposure for extended periods of time.

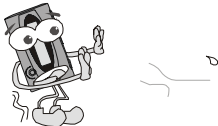


Keep the unit away from high humidity.



Do not open the MP3 player, as doing so will damage the unit.



 Use a soft towel to clean the surface of your player.

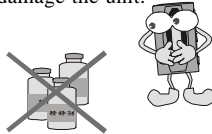


Keep the player away from chemicals.

Remove the battery from the player when you are not using the MP3 player. This is to avoid needless battery wear.



# In the Package

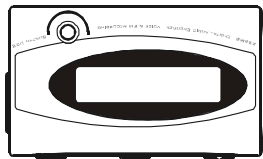 


Main Unit



Stereo Earphone



 
USB Extension Cord

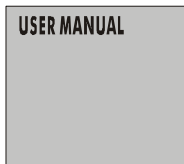

User Manual



 Neck String



Carrying Pouch



Warranty Card (Optional)



Battery

# Specifications

 
 
 
Size (HxWxD)	70x41x18.7mm
Net Weight	39g (without battery)
Internal Flash Memory	128MB or 256MB(depending on product version)
Power Supply	1x AAA alkaline battery
PC Interface	USB
Radio Function	FM with auto scan and 30 preset channels
Digital Music Format	
Playback	MP3, WMA, all bit rates including VBR
Record	MP3 (48,96,128kbps in 44.1kHz from line-in, FM or internal mic)
Digital Voice Format	ADPCM (32kbps)
Built-in Microphone	Electric condenser microphone
Signal to Noise Ratio	>90dB
Frequency Range	20Hz - 20kHz
Battery Life	15 hours or more
Equalizer	Jazz, Rock, Classic, Pop, User Default
Play Mode	Normal, Repeat one, Repeat all, Random, Repeat random

*All specifications are subject to change without notice.*




# Knowing your Portable MP3 Player

## Name of parts

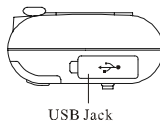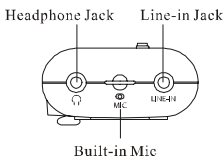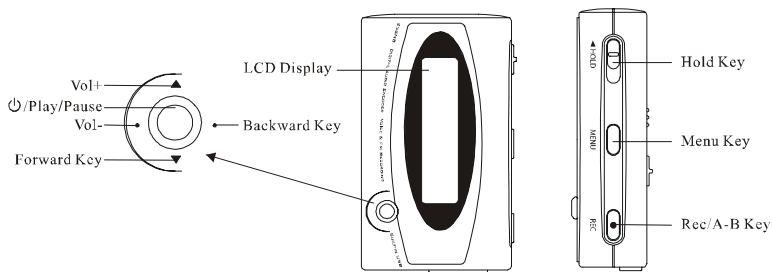


## LCD: Display Window

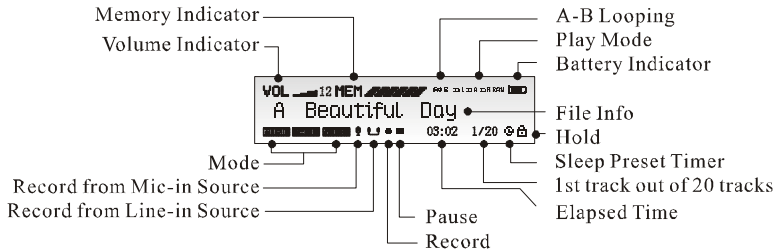 


# Knowing your Portable MP3 Player

Memory Indicator	Shows how much memory is used. The filled block represents the remaining memory. For a 128MB player, one block represent about 21MB of memory. For a 256MB player, one block represents about 42MB of memory.
A-B Looping	This special feature enables you to learn a language, repeat a voice recording or repeat your favorite section of the song .
Battery level indicator	Shows how much longer the battery can be used, level decreases as battery is used.

 
## Inserting battery

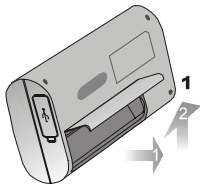

 Open the battery door according to this direction

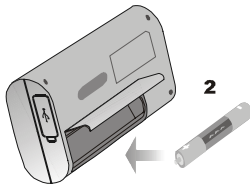

 
Put the battery into the compartment. Pay attention to the polarity.

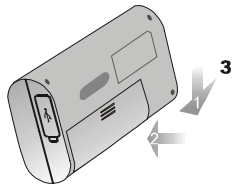

Close the battery door.


# Knowing your Portable MP3 Player

## Turn on MP3 player

Press and hold 

Make sure the **HOLD** button is switched off. If not, “**LOCKED**” will be displayed.

## Turn off MP3 player

Press and hold  (except when your player is connected to a PC)

This is a mass storage device. No driver installation is required except Windows 98. The driver is not required for Windows 2000/XP or Mac. For Window 98 users, please download the driver from [www.perceptiondigital.com](http://www.perceptiondigital.com). Locate the downloaded driver file (setup.exe) on your hard drive and double click the driver file (setup.exe). Follow on-screen prompts to complete the driver installation process.

 
 
(For Window 98 users, you can use the Window 98 driver CD if you retailer bundled it in the package)

Mac OS 8/9 may or may not require driver installation.

### **Transfer files from PC to player:**

1. Switch on the player and connect it securely to the PC with the USB cable.
2. Double click on “My Computer” on the desktop of windows, there will be an additional drive created.
3. If the player is connected to your PC, you will see “USB Connected” on the player’s screen.
4. To download music files to your MP3 player, simply drag the files from the Windows File Explorer and drop them to the newly opened drive. You can also upload files from the player to the PC by doing the reverse.

# PC Connection

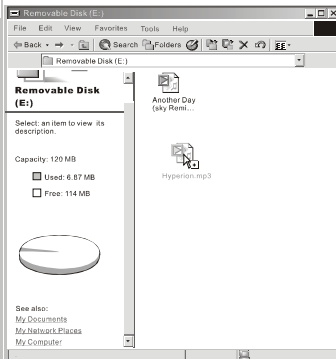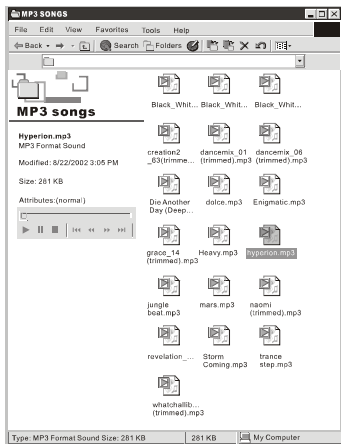

## CAUTION:

ONLY UNPLUG THE USB CABLE WHEN ALL DOWNLOAD PROCEDURES ARE COMPLETED.

Do not unplug the USB cable when the LCD is still displaying “USB writing” as doing so may corrupt the files stored in the player and you will need to re-format the MP3 player. If the player encounters abnormal interruption during recording such as battery removal, you may also need to re-format it.

## **Add on functions:**

1. The MP3 player can also be used as an external drive for storage of non-music files.
2. The MP3 player is compatible with Music Match. You can directly rip your audio CDs to WMA or MP3 format using Music Match software and directly download to the player.

\* Our MP3 player does not support WAV files downloaded or created by user. It only supports WAV files recording direct from the MP3 player.

## **How to format the player?**

The purpose of re-formatting the player is to try to restore the player to normal operation. This is for when the player is not able to function properly or in cases where you player is unable to power on. Keep in mind, that the content of the player will be removed once being formatted.

1. Connect the player to the PC.
2. Right click the additional drive and click Format.
3. Click “Yes” to confirm.

## **Firmware Upgrader**

You should check your vendor’s website for new firmware upgrades, these developments provide add-on functions and language support options. Upgrades are announced on the web site and users can then download the software from the download section at [www.perceptiondigital.com](http://www.perceptiondigital.com).




# Operating controls

There are three modes which you can operate your portable MP3 player; music mode, radio mode, and voice mode.

## Operating in Music Mode




The following tables show all key responses under different operations in music mode.

### Music Playing Mode

Key	Key Action	Browsing	Playing
	Short	Play current track	Stop/Pause current track
	Long	Power off	Power off
	Short	Move to next track	Play next track
	Long	Move to next track continuously	Fast Forward
	Short	Move to previous track	Play previous track
	Long	Move to previous track continuously	Rewind
<b>MENU</b>		Enter Menu Mode	Enter Menu Mode
<b>VOL +</b>		Change language	Increase the volume
<b>VOL -</b>		Change language	Decrease the volume
<b>REC</b>		Start recording	Set point A (A-B loop function)
<b>—&gt; Hold</b>	On/Off	All keys are locked	All keys are locked

# Operating controls

## Music Recording Mode

Key	Key Action	Recording
	Short	Pause / Resume recording
	Long	Power off
	Short / Long	No response
	Short / Long	No response
<b>MENU</b>		No response
<b>VOL +</b>		No response
<b>VOL -</b>		No response
<b>REC</b>		Stop recording
—> <b>Hold</b>		All keys are locked




# Operating controls

## Operating in Radio Mode




The following tables show all key responses under different operations in radio mode.

### FM Radio Playing Mode

Key	Key Action	Normal Mode	Preset Mode
	Short	No response	No response
	Long	Power off	Power off
▶	Short	Increase frequency (step size = 0.05MHz)	Move to next preset station
	Long	Auto-search up	Continuously move to next preset station
◀	Short	Decrease frequency (step size = 0.05MHz)	Move to previous preset station
	Long	Auto-search down	Continuously move to previous preset station
<b>MENU</b>		Enter Menu Mode	Enter Menu Mode
<b>VOL +</b>		Increase the volume	Increase the volume
<b>VOL -</b>		Decrease the volume	Decrease the volume
<b>REC</b>		Start recording	Start recording
<b>—&gt;Hold</b>	On / Off	All keys are locked	All keys are locked

# Operating controls

## FM Radio Recording Mode




Key	Key Action	Recording
	Short	Pause / Resume recording
	Long	Power off
	Short / Long	No response
	Short / Long	No response
<b>MENU</b>		No response
<b>VOL +</b>		No response
<b>VOL -</b>		No response
<b>REC</b>		Stop recording
<b>—&gt;Hold</b>	On / Off	All keys are locked

# Operating controls

## Operating in Voice Mode




The following tables show all key responses under different operations in voice mode.

### Voice Mode



Key	Key Action	Browsing	Playing
	Short	Play current track	Stop/Pause current track
	Long	Power off	Power off
	Short	Move to next track	Play next track
	Long	Move to next track continuously	Fast Forward
	Short	Move to previous track	Play previous track
	Long	Move to previous track continuously	Rewind
<b>MENU</b>		Enter Menu Mode	Enter Menu Mode
<b>VOL +</b>		Change language	Increase the volume
<b>VOL -</b>		Change language	Decrease the volume
<b>REC</b>		Start recording	Set point A (A-B loop function)
<b>—&gt;Hold</b>	On / Off	All keys are locked	All keys are locked

# Operating controls

## Voice Recording Mode



Key	Key Action	Recording
	Short	Pause/Resume current track
	Long	Power off
	Short / Long	No response
	Short / Long	No response
<b>MENU</b>	Short / Long	No response
<b>VOL +</b>		No response
<b>VOL -</b>		No response
<b>REC</b>		Stop recording (Go back to previous screen)
<b>—&gt;Hold</b>	On / Off	All keys are locked

## Switching Modes

To switch from one mode to another, press the **MENU** button, then press the  button. Next, to select the mode, use the ◀ / ▶ to select the desired mode, then press the  button to confirm your selection.

## Playing Music or Voice files

### 1. Play and stop

Press the  button to play tracks. To stop the track, press the  button again.

### 2. Selecting tracks

- a. When the MP3 player is playing a file, move towards the ▶ direction quickly to play the next track and move towards the ◀ direction quickly to play the previous track.
- b. When the player is stopped, moving with ◀ or ▶ allows you to browse through the tracks stored in memory.

### 3. Moving within track


Moving with ◀ or ▶ for longer than 1 second will fast forward or rewind during a track.

## Detailed Controls

### 4. A-B looping

While playing music or voice files, you can set a section to repeat continuously. Press the **REC** button to mark the point where you want the section to start (Point A). Then, press **REC** again to mark where you want the section to end (Point B). The selected section will then repeat continuously.


### 5. Deleting track and voice files

Choose delete from MENU. Use ◀ or ▶ to select track or voice file you wish to delete and press  to delete.

## Recording

### 1. Music recording in music mode

This function enables you to record any audio source to MP3. Simply, connect the audio source to line-in jack by using a stereo cable.

Navigate your player into music mode. Press the **REC** button to start recording in music mode. To stop recording, press **REC** again. When recording, a “ ● ” will be shown on the LCD display of the player. Press  to pause or resume recording.


Note:

In Music mode, the default recording source is “Line-In.”

## Detailed Controls

### 2. Voice recording in voice mode.

This feature offers high quality one touch voice recording. You can select to record voice into MP3 quality in music mode or ADPCM format in voice mode to enjoy smaller file size.

Navigate your player into voice mode. Press the **REC** button to start recording in voice mode. To stop recording, press **REC** again. When recording, a “ ● ” will be shown on the LCD display. Press  to pause or resume recording.

Note:

The default recording source in Voice mode is the internal microphone , “MIC-IN.” You can record audio files line-in in voice mode. The quality of the audio file will be in voice quality but the file size will be smaller. Please refer to the System Settings section to find out how to do this.



### 3. Radio recording in radio mode

First navigate your player into radio mode. Press the **REC** button to start recording in radio mode. To stop recording, press **REC** again. When recording, a “ ● ” will be shown on the LCD display.


Note:

Radio recording quality depends on the reception quality at the time of recording.

# Menu Settings

To change the settings, use the ◀ / ▶ jog dial to select each particular option. Press the  button to enter into the sub-menu and use the ◀ / ▶ jog dial to choose the desired settings. Press the  button to confirm your choice. To change the setting in different modes you need to press the **MENU** button.

The following table shows all key responses for menu settings in different modes:

KEY	KEY ACTION
<b>MENU</b>	Enter/exit menu
◀ / ▶	Move right/left
	Enter into sub-menu/confirm
<b>Others</b>	No response

## Menu settings in Music Mode

**MENU** **MODE** PLAYMODE EQ RBR DELETE SETTING

Switching to  
Music Mode.

**MODE** **MUSIC** RADIO VOICE



# Menu Settings

---

## Playmode

**E** **A** **M** **N** **O** **F** **N** **O** **R** **M** **A** **L** **R** **E** **P** **E** **A** **T** **O** **N** **E** **R** **E** **P** **E** **A** **T** **A** **L** **L** **R** **A** **N** **D** **O** **M** **R** **P** **T** **R** **A** **N** **D** **O** **M**

- Normal: Play all in order once.  
Repeat One: Continuously repeat the current track.  
Repeat All: Play all tracks in order repeatedly.  
Random: Continuously select tracks randomly.  
Rpt Random: Continuously repeat all tracks randomly.
- 

## Equalizers

**E** **I** **N** **O** **R** **R** **O** **C** **J** **A** **Z** **C** **L** **A** **P** **O** **P** **U** **S** **E** **R**

Select Normal, Rock, Classic, Jazz, Pop and User default

**U** **S** **E** **R** **B** **A** **S** **S** **T** **R** **E** **B** **L** **E**

- Bass: Set bass from levels 1 to 4 (1 is the weakest and 4 is the strongest)  
Treble: Set treble from levels 1 to 4 (1 is the weakest and 4 is the strongest)

# Menu Settings

---

Recording Bit  
Rates

REC 48 96 128

There are various choices of recording bit rates in MP3 recording:  
48kbps, 96kbps, and 128kbps.

---

Deleting File

DELETE ?

Go to file you want to delete.  
Press Menu  
Press the play button to confirm deletion

## Menu setting in Radio Mode

### Normal Mode

MENU MODE PRESET MODE CH PRESET MOND SETTING

---

Switching to  
Radio Mode

MODE MUSIC RADIO VOICE



---

Channel Preset

CH PRESET ?

# Menu Settings

Your MP3 player can store up to 30 preset programme frequencies. These programmes can be quickly tuned when the radio is in the PRESET MODE. This section gives instructions for saving programme presets. The next section explains how to enter the PRESET MODE and retrieve a preset programme.

1. Enter the RADIO mode as described previously.
2. In NORMAL MODE tune the radio to the programme you wish to preset.
3. Press the MENU button.
4. Use the ► or ◀ controls to select CH PRESET.
5. Press  .
6. Use the ► or ◀ controls to select the preset number.
7. Press  .

## Using the preset mode

---

Mono/Stereo  
Mode

MONO

STEREO

Set FM radio output to stereo or mono

# Menu Settings






## Preset Mode

MENU MODE NORMAL MODE DELETE MONO SETTING

---

Switching to  
Radio Mode.

MODE MUSIC RADIO VOICE

1. Enter the RADIO mode as described previously.
2. Press the MENU button.
3. Use the  or  controls to select PRESET MODE.
4. Press . The radio is now operating in preset mode.
5. Use the  or  controls to select the preset programmes until the one you require is selected.



# Menu Settings

---

Deleting Program  
preset

DELETE ?

## Deleting programme presets

1. Enter the RADIO PRESET MODE as described above.
2. Press the MENU button.
3. Use the ► or ◀ controls to select DELETE.
4. Press .
5. Use the ► or ◀ controls to select the preset programme you wish to delete.
6. Press  .

Mono/Stereo  
Mode

MONO

STEREO

Set FM radio output to stereo or mono

# Menu Settings

## Menu setting in Voice Mode

**MENU** **MODE** DELETE SETTING

---

Switching to  
Voice Mode

**MODE** MUSIC RADIO **VOICE**

---

Deleting Files

DELETE ?



Go to file you want to delete.

Press Menu

Press the play button to confirm deletion

# System Settings

**BETTINE** SOURCE SLEEP RESUME SCROLL BACKLIT CONTRAST DEFAULT VERSION IDLE ASD

To change system settings, use ► & ◀ to move to each particular system setting sub-menu and press  to enter the sub-menu. Use ► & ◀ to choose the desired settings. Press  to confirm.

1. **Source:** You can select the recording source in this menu. Selecting LINE-IN means you will be recording from line-in and selecting MIC-IN means you will be recording from the internal microphone.

**SOURCE** LINE-IN MIC-IN

2. **Sleep preset:** Choose the time in minutes that you want the device to automatically power off.

**SLEEP** OFF 15 30 45 60

3. **Resume:** Use the ◀ / ► to switch between “On” and “Off”. This will enable or disable the resume function. This function allows you to return to a track when you power on the device again.

**RESUME** ON OFF

4. **Scrolling Speed of song's name:** Choose between 5 scrolling speed levels, 4 is the fastest speed and OFF disables scrolling.

**SCROLL SP** OFF 1 2 3 4

# System Settings

5. **Backlit time:** There are 4 backlit time levels; 10, 30, 60, and permanent. These refer to the length of time in seconds the backlight will remain on after pressing a button.

BACKLIT TIME OFF 10 30 60 PERM

6. **Contrast level:** Set the display contrast from level 1 to 10.

CONTRAST 1 2 3 4 5 6 7 8 9 10

7. **Default setting:** You may choose to resume your settings to default by pressing either “Yes” or No.”

DEFAULT YES NO

8. **Version number:** For checking the firmware version of this player.

VERSION F4-A-B-F-1.0

9. **Idle time:** The device will automatically power off when it is left for a specified idle time. For example, you can set it at 3 seconds and the device will turn off when it is left idle for this length of time.

IDLE TIME OFF 3 5 10 30

10. **ASD (Audio Silence Detection):** This menu allows you to choose the length of silence before ending the current line-in recording and starting a new file. You can also turn the silence detection feature off with this menu.

ASD OFF 1 2 3



# Troubleshooting

1. The player does not work or nothing is displayed on the LCD.

Check the capacity and the polarity of the battery.

The player will automatically shut down to save power if it is left idle for 1 minute.

2. The buttons are not responding.

Check if the “Hold” button on the main unit is locked. If yes, buttons will have no response.

3. Unable to play MP3 file.

Check if the memory contains any MP3 files.

Check if the player is in Music Mode.

Check if the MP3 player supports the format of the stored files.

4. Unable to play ADPCM

Check if the memory contains any VOC files

Check if the player is in Voice Mode.

5. Unable to record via line-in.

Check if there is enough space in the selected memory.

Check if cable is stereo and connected to the device properly.

6. A-B looping function is not working.

This function only works during playback.

Download from [Www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.

## 7. Unable to install software.

Our installation CD only supports Windows 98, ME, NT, 2000, XP XP Pro, XP home with Latest Windows Service Pack. Other systems are not supported.

## 8. Unable to find the mass storage device after connecting to the PC.

Make sure your device is powered on and ready.

## 9. How to reset MP3 Player to factory settings.

Choose default setting in system settings. Choosing “YES” allows you to reset the player to factory default settings.

## 10. Backlight does not turn on.

Check if the backlight is disabled in the system setting. This is for power saving purposes.

# Company Contacts

**technical@perceptiondigital.com**

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>