

Register your product and get support at
www.philips.com/welcome

CD450
CD455
SE450
SE455



Quick start guide

- 1 Connect
- 2 Install
- 3 Enjoy

PHILIPS

Download from Www.Somanuals.com. All Manuals Search And Download.

What's in the box



Handset



Base Station with bracket



Answering machine base station with bracket



Battery Door



Power Supply



NiMH AAA
Rechargeable
Batteries x 2



Line Cord*



Belt clip



User Manual



Guarantee



Quick Start Guide

 
* You may find in the box the line adaptor delivered separately from the line cord. In this case, you have to connect the line adaptor to the line cord first before plugging the line cord to the line socket.

In multihandset packs, you will find one or more additional handsets, battery doors, chargers with power supply units and additional rechargeable batteries.

WARNING Always use the line cord, power supply and batteries that came with your phone.

1 Connect

Connect the base station

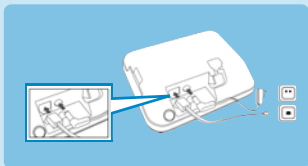


1. Place the base station in a central location near the telephone line socket and electricity socket.
2. Connect the output plug of the mains adapter to the bottom of the base station.
3. Connect the mains adapter to a standard wall outlet.
4. Connect the telephone line cord to the phone socket at the bottom of the base station and the wall phone socket.

2 Install


Insert rechargeable batteries and charge

 A Install batteries

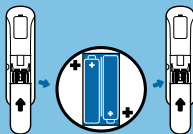

1. Place the 2 rechargeable batteries (included) into the battery compartment.
2. Slide the battery door firmly into place.

 B Charge handset for 24 hours

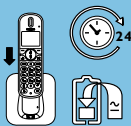



3 Enjoy



Make a call

Dial the number (maximum 24 digits) and press  or .


OR

Press  or  to take the line, and dial the phone number.



Answer a call

When the phone rings, press  or .

 
End a call

To end a call, press .


Adjust the earpiece or speaker's volume

During a call, press  or  to adjust the volume. Press **OK** to confirm. The earpiece or speaker's volume is adjusted and the phone goes back to the call screen.



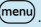

Set your handset's ring melody

1. Press .
2. Select **PERSONAL SET > HANDSET TONES > RING TONES**. Press **OK**.
3. Scroll to the desired melody. Press **OK**. The setting is saved.





Save a phonebook record

1. Press .
2. Select **PHONEBOOK > NEW ENTRY**. Press **OK**.
3. Enter the name. Press **OK**.
4. Enter the number. Press **OK** to confirm. Your new record is saved.


Access phonebook

1. Press  in standby.
2. Press  or  to browse the phonebook.
3. Press  to view the details of a record.

 
Call from the phonebook


1. Press  in standby.
2. Press  or  to select a phonebook entry.
3. Press . The call is initiated.


Listen to new messages recorded on the answering machine (for CD455/SE455)


Press  on the base station to turn on the answering machine (the LED is turned on).

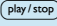

The outgoing message is played.

 
Press  on the base station to play phone messages (the first recorded message will be played first).


Press  to skip the current message and play the next message.

Press  to go back to the previous message (if pressed within 1 second of current message playback).

Press  to replay current message (if pressed after 1 second of current message playback).

Press   to adjust speaker volume during message playback.

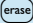Press  to delete the current message.

Press  again to turn off the answering machine (the LED is turned off).

Refer to your CD455/SE455 User Manual for details about the answering machine functions.

Troubleshooting

For more information, please refer to the User Manual that came with your phone.

Problem(s)

- Signal icon flashing
- Handset on the charger does not charge
- No display
- Handset does not ring
- Caller number is not displayed
- Caller does not hear me clearly

Tip(s)

- The handset may be out of range. Move closer to the base station.
- If the handset displays UNREGISTERED, register the handset again.
- Check that the batteries are inserted correctly.
- Make sure the handset is placed properly on the charger.
- Batteries may be defective. Purchase new ones from your dealer.
- Check that the batteries are charged.
- Check the power and phone connections.
- Check that the handset ringer is turned on.
- Service is not activated. Check your subscription with your network provider.
- Move closer to the base station.
- Move the base station at least one meter away from any electronic appliances.

Welcome to Philips!

Register your product and get support at
www.philips.com/welcome

Need help?

User Manual

See the user manual that came with your phone.

Online help

www.philips.com/support

2008 © Koninklijke Philips Electronics N.V.
All rights reserved.

Reproduction in whole or in part is prohibited without the written consent of the copyright owner.



Please Recycle

Printed in China

3111 285 46431

Download from Www.Somanuals.com. All Manuals Search And Download.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>