

# Quick Start Guide









Step A *Connect*

Step B *Setup*

Step C *Enjoy*

## What's in the Box?

You should find these items upon opening the box.

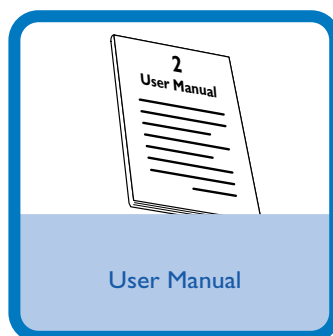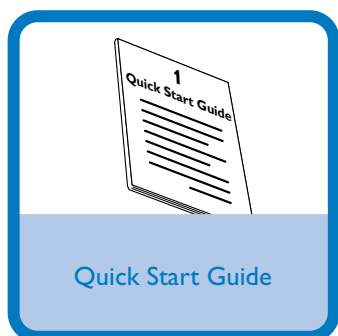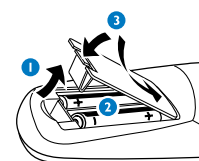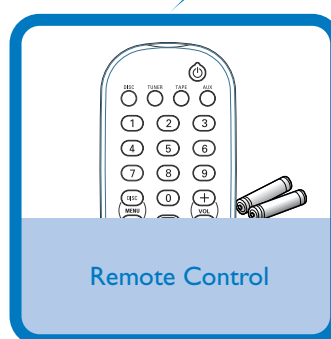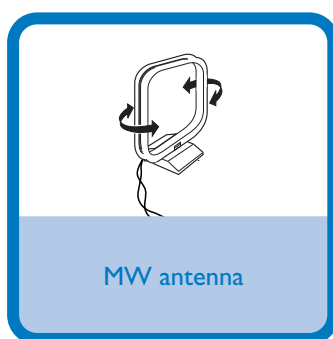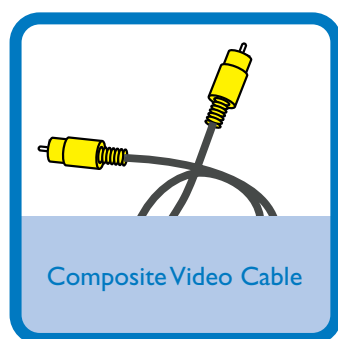

# PHILIPS

## Step A *Connect*

- 1 Connect the speaker wires to the **SPEAKERS** terminals, right speaker to "**RIGHT**" and left speaker to "**LEFT**", coloured (marked) wire to "+" and black (unmarked) wire to "-".
- 2 For radio reception, connect the supplied **MW antenna** to the "MW AERIAL" terminal.


### *Tip*

*It is unnecessary to connect the FM pigtail antenna since it is fixed to the main unit.*

- 3 Use the composite video cable (yellow) to connect the system's **VIDEO** jack to the video input jack (or labeled as A/V In, Video In, Composite or Baseband) on the TV set.
- 4 Connect the power cord of the DVD system to the AC power outlet.



### *Tip*

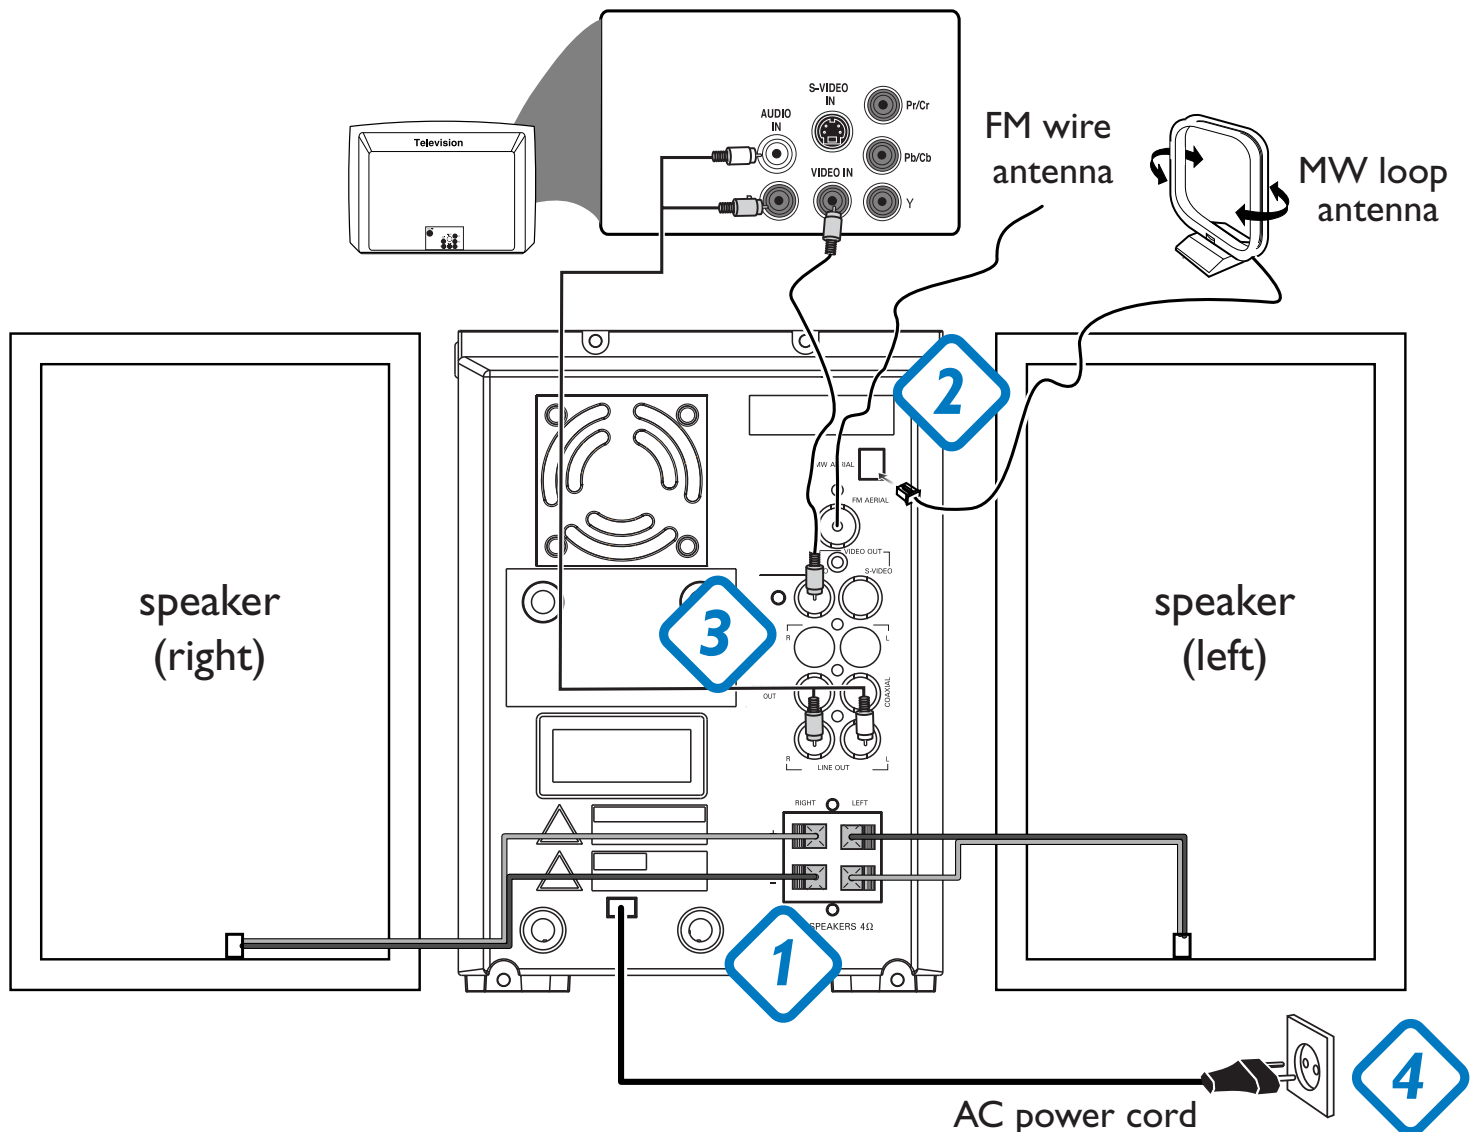
*See the User Manual for other TV connection options.*



## Step B Setup

### Setting up the TV



 
 
 
 
 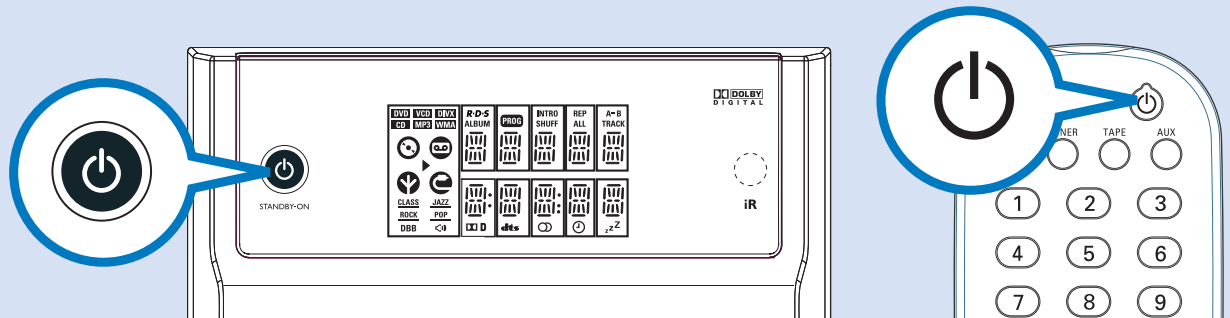



 
 
- 1 Press **STANDBY ON**  on the front panel of the DVD player or  on the remote to switch the DVD system on and then select the disc source.






- 2 Switch on the TV set and set to the correct video-in channel until the blue Philips DVD background screen appears on the TV.

**Tip**  
See your TV manual for more details.



### Setting up the TV Type and Language Preferences

- 1 In the stop mode or during playback, press **SYSTEM MENU** on the remote to enter the system menu.
- 2 Press   on the remote to enter 'SYSTEM SETUP'. Then, select the color system matching your TV and the TV type using   /   on the remote.
- 3 Press   on the remote to enter 'LANGUAGE SETUP' and select the preferred OSD language, audio language, subtitle language and menu language using   /   on the remote.

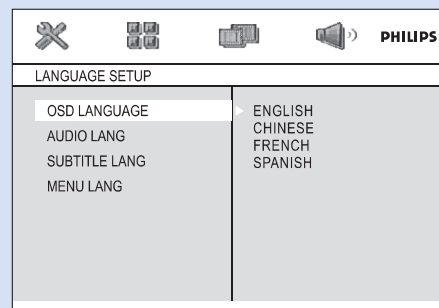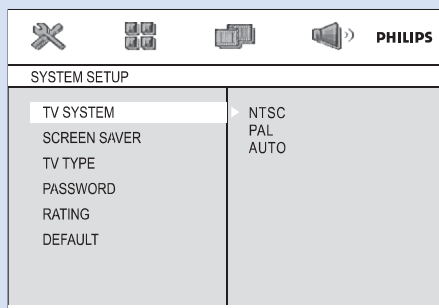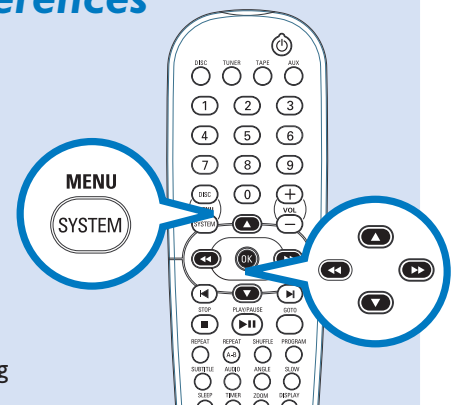

## Loading a disc

- 1 Select the disc source, then press **OPEN+CLOSE▲** at the top of the DVD player.

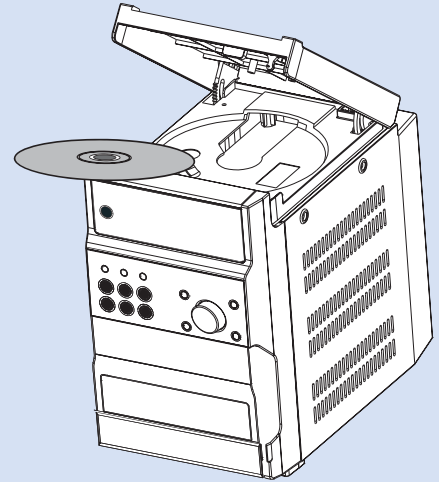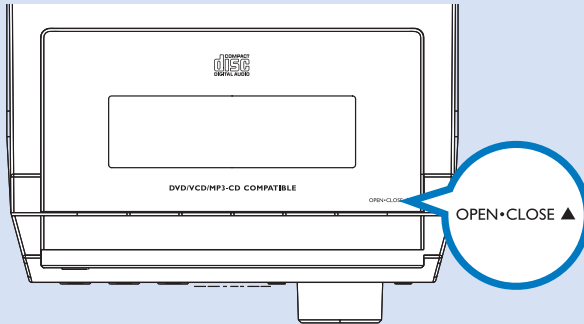

- 2 Load in a DVD disc with the label side facing up.
- 3 A disc menu pops up.


## Playback

- 1 Use **◀◀▶▶▶/▲/▼** and **OK** or **Numeric Keypad (0-9)** on the remote to select a playback feature or item.  
→ Playback will start automatically.

### Tip

Refer to the user manual for playback of other types of discs.

- 2 Press **STOP■** to stop playback.

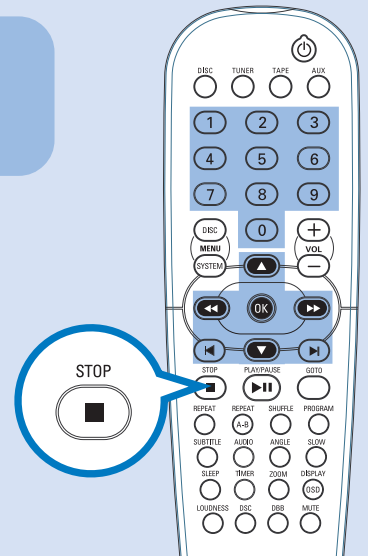

## Types of Discs used on this DVD System

Type	Record	Playback	Edit
DVD+RW <small>DVD + ReWritable</small>	✗	✓	✗
DVD VIDEO	✗	✓	✗
VIDEO CD	✗	✓	✗
Super VCD	✗	✓	✗
AUDIO CD	✗	✓	✗
VIDEO CD	✗	✓	✗
MP3-CD	✗	✓	✗



2005 © Koninklijke Philips Electronics N.V.  
All rights reserved.

[www.philips.com](http://www.philips.com)

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>