

# CD Soundmachine


AZ1133

English

Meet Philips at the Internet  
<http://www.philips.com>

Register your product and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)
 
## User manual

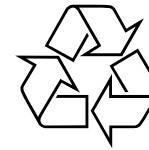

AZ1133

**PHILIPS**

 
 
 


Download from [www.S0manu4ls.com](http://www.S0manu4ls.com). All Manuals Search And Download.

Printed in China

PDCC-ZYL-0803

1

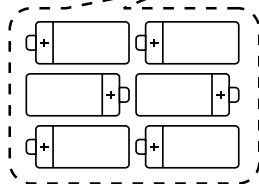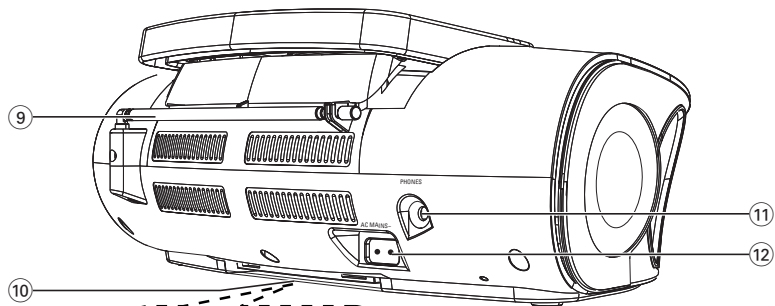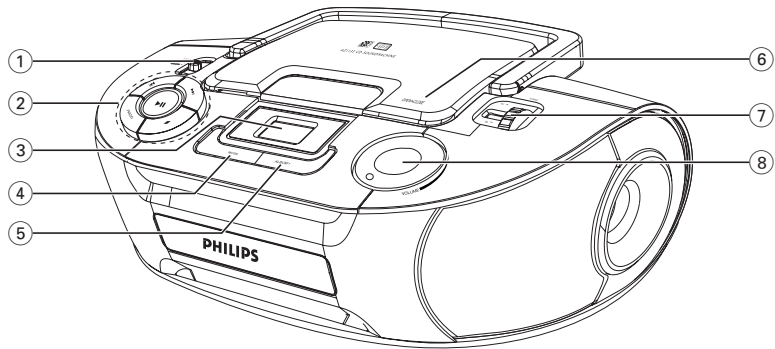

6 x R14 · UM-2 · C-CELLS

 
2



3



4

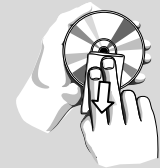

5



6



**Congratulations on your purchase and welcome to Philips!**

**To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).**

## Supplied Accessories

– AC power cord

## Top/front panels (See 1)

- ① **Source selector: CD/MP3, FM, MW or OFF**

– selects CD/MP3, FM or MW source of sound

– power off switch

- ② **▶||** – starts or pauses CD/MP3 playback

**▶▶ || ◀◀**

– selects the next/previous track

– fast searches forwards/backwards (press and hold the button)

**PROG** – programs tracks

- – stops CD playback;
- erases a CD program

- ③ **Display** – shows the CD functions

- ④ **MODE** – selects different play modes: e.g. REPEAT or SHUFFLE (random order)

- ⑤ **ALBUM +** – For MP3-CD only: selects albums

- ⑥ **OPEN•CLOSE** – opens/ closes the CD door

- ⑦ **TUNING** – tunes to radio stations

- ⑧ **VOLUME** – adjusts volume level

## Back/bottom panels (See 1)

- ⑨ **Telescopic antenna** – improves FM reception
- ⑩ **Battery door** – open to insert 6 x 1.5V **R-14/ UM-2/ C-cells**
- ⑪ **🔊** – 3.5 mm stereo headphone socket  
**Helpful hints:** *The speakers will be muted when headphones are connected to the set.*
- ⑫ **AC MAINS~** – inlet for power cord

## CAUTION

**Use of controls or adjustments or performance of procedures other than herein may result in unsafe operation.**

**This set complies with the radio interference requirements of the European Union.**

## Power Supply

Whenever convenient, use the power supply cord if you want to conserve battery life. Make sure you remove the plug from the set and wall outlet before inserting batteries.

### Batteries

- 1 Insert **6** batteries, type **R-14, UM2** or **C-cells** (not included, preferably alkaline) with the correct polarity. (See 1).
- 2 Replace the battery door, making sure the batteries are firmly and correctly in place. The set is now ready to operate.
  - *Incorrect use of batteries can cause electrolyte leakage and will corrode the compartment or cause the batteries to burst:*
  - *Do not mix battery types: e.g. alkaline with carbon zinc. Only use batteries of the same type for the set.*

- *When inserting new batteries, do not try to mix old batteries with the new ones.*
- *Remove the batteries if the set is not to be used for a long time.*

**Batteries contain chemical substances, so they should be disposed of properly.**

### Using AC power

**WARNING: Always check you have completely switched off the set, before you change or disconnect power supply.**

- 1 Check if the power voltage, **as shown on the type plate located on the bottom of the set**, corresponds to your local power supply. If it does not, consult your dealer or service center.
  - 2 Connect the power cord to the **AC MAINS~** inlet and the wall socket. The set is now connected and ready for use.
  - 3 To switch the set off completely, withdraw the power cord from the wall socket.
  - 4 Install the unit near the AC outlet and where the AC power plug can be easily reached.
- Disconnect the power cord from the wall socket to protect your set during heavy thunderstorms. Children could seriously injure themselves as the free end of the cable may still be live if only the connector is removed from the MAINS socket at the back of the unit.
- The type plate is located on the bottom of the set.**

### Helpful hints:

- *To avoid unnecessary energy consumption, always adjust the **Source selector** to **OFF** after using the set.*

## General operation

### Switching on and off and selecting the function

- 1 To select your sound source, adjust the **Source selector** to: **CD/MP3, FM,** or **MW.**
- 2 To switch off the set, adjust the **Source selector** to **OFF** position.

### Adjusting volume

Adjust the sound with the **VOLUME** control.

## Radio reception

- 1 Adjust the **Source selector** to **FM** or **MW** to select your desired waveband.
- 2 Turn **TUNING** to tune to a station.

### Helpful hints:

#### To improve radio reception

- For **FM**, extend, incline and turn the telescopic antenna for best reception. Reduce its length if the signal is too strong.
- For **MW**, the set uses a built-in antenna. Direct this antenna for best reception by turning the whole set.

## CD/MP3 Player

### About MP3

The music compression technology MP3 (MPEG1 Audio Layer 3) significantly reduce the digital data of an audio CD while maintaining CD quality sound.

- **Getting MP3 files:** you can either download legal music files from the internet to your computer hard disc, or create such files by converting audio CD files in your computer through appropriate encoder software. (128kbps bit rate or higher is recommended for MP3 files.)
- **Creating a MP3 CD:** burn the music files from your computer hard disc on a CDR or CDRW using your CD burner.

#### Helpful hints:

- Make sure that the file names of the MP3 files end with **.mp3**.
- Number of albums: maximum 99
- Number of tracks: maximum 400
- The length of file names affects the number of tracks for playback. With shorter file names, more files can be burned on a disc.

### Playing a disc

This player plays Audio Discs including CD-R/CD-RW, MP3 CD. Do not try to play a CD-ROM, CD-I, CDV, VCD, DVD or computer CD.

#### IMPORTANT!

- CDs encoded with **copyright protection technologies** by some record companies may be unplayable by this product.
- DRM-protected WMA disc is not support.

- 1 Adjust the **Source selector** to **CD/MP3**.
- 2 Open the CD door; insert a CD with the printed side facing up, then press the CD door gently to close.  
→ Display shows **--**, and later the total number of tracks.
- 3 Press **▶II** to start playback.
- 4 To pause playback, press **▶II**.  
→ Display: **▶** and the current track number flash (See [2]).
- 5 To resume, press **▶II** again.
- 6 To stop playback, press **■**.

#### Helpful hints:

CD play will also stop when:

- you open the CD door;
- you select **FM**, **MW** or **OFF**;
- the disc has reached the end.

### Selecting a different track

- Press **◀/▶** once or repeatedly until the desired track number appears in the display.

**For MP3-CD/WMA:** First press **ALBUM+** once or more to find your album.

→ "ALBUM" and the selected album number will be displayed and flashed briefly (See [3]).

- In the pause/stop position, press **▶II** to start playback.

### Finding a passage within a track

- 1 During playback, press and hold **◀** or **▶**.  
→ The CD is played at high speed and with reduced volume.
- 2 When you recognize the passage you want, release **◀** or **▶** to resume normal playback.

#### Helpful hints:

- When your searching reaches the end of the last track, the disc goes to stop mode.

## CD/MP3 Player

### Programming tracks

You may store up to 20 tracks (MP3: 10 tracks) in the desired sequence. If you like, store any track more than once.

- 1 In the stop position, press **PROG** to start programming.  
→ Display shows **P01** indicating the start of the program. **PROG** flashes (See [4]).
- 2 Press **◀** or **▶** to select your desired track number.

**For MP3-CD/WMA:** First press **ALBUM+** once or more to find your album.

→ "ALBUM" and the selected album number will be displayed and flashed briefly (See [3]).

- 3 Press **PROG** to store the desired track.  
→ Display shows **P02**, indicating the next program location available.
- 4 Repeat steps **2** to **3** to select and store all desired tracks.
- 5 Press **▶II** to play the program.  
→ "PROG" is displayed.

#### Helpful hints :

- If you try to store more than 20 tracks (MP3: 10 tracks), no track can be stored and the display will show flashing **- - -**.

#### To erase a program

You can erase a program by:

- pressing **■** (twice during playback or once in the stop position);
- selecting **FM**, **MW** or **OFF** position;
- opening the disc door.  
→ Display: "PROG" disappears.

### Different play modes: REPEAT and SHUFFLE (See [5], [6])

You can play the current track or the whole disc repeatedly, and combine REPEAT modes with **PROGRAM**.

**REPEAT** – plays the current track continuously.

**REPEAT ALL** – repeats the entire CD/program.

**SHUFFLE** – plays all tracks in random order.

- 1 To select play mode, press **MODE** once or more.  
→ The display shows the selected mode.
- 2 Press **▶II** to start playback if in the stop/pause position.  
→ Disc playback will start automatically after few seconds when shuffle mode is selected.
- 3 To select normal playback, press **MODE** repeatedly until the modes are no longer displayed.  
– You can also press **■** to cancel your play mode.

#### Helpful hints:

- Shuffle play is not available in the program mode.

### CD player and CD handling

- If the CD player cannot read CDs correctly, use a cleaning CD to clean the lens before taking the set to repair.
- The lens of the CD player should never be touched!
- Sudden changes in the surrounding temperature can cause condensation on the lens of your CD player. Playing a CD is then not possible. Do not attempt to clean the lens but leave the set in a warm environment until the moisture evaporates.
- Always close the CD-tape door to avoid dust on the lens.
- To clean the CD, wipe in a straight line from the center towards the edge using a soft, lint-free cloth. Do not use cleaning agents as they may damage the disc.
- Never write on a CD or attach any stickers to it.

### Safety information

- Place the set on a flat, hard and stable surface so that the system does not tilt.
- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Do not expose the set, batteries, CDs to humidity, rain, sand or excessive heat caused by heating equipment or direct sunlight.
- The apparatus shall not be exposed to dripping or splashing.
- Adequate ventilation with a minimum gap of 15cm (6 inches) between the ventilation holes and surrounding surfaces is necessary to prevent heat build-up.
- Do not cover the ventilation openings with items such as newspapers, table-cloths, curtains, etc.
- No objects filled with liquids, such as vases, shall be placed on the apparatus.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- The mechanical parts of the set contain self-lubricating bearings and must not be oiled or lubricated.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- To clean the set, use a dry cloth. Do not use any cleaning agents containing alcohol, ammonia, benzene or abrasives as these may harm the housing.

## Troubleshooting

If a fault occurs, first check the points listed below before taking the set for repair.

If you are unable to remedy a problem by following these hints, consult your dealer or service centre.

**WARNING:** Do not open the set as there is a risk of electric shock. Under no circumstances should you try to repair the set yourself, as this will invalidate the guarantee.

### Problem

- Possible cause
- Remedy

### No sound/power

- Volume not adjusted
- Adjust the VOLUME
- Power cord not securely connected
- Connect the AC power cord properly
- Batteries dead/ incorrectly inserted
- Insert (fresh) batteries correctly
- Headphones connected to the set
- Disconnect headphones.
- CD contains non-audio files
- Press ◀▶ once or more to skip to a CD audio track, instead of the data file.

### Display does not function properly / No reaction to operation of any of the controls

- Electrostatic discharge
- Switch off and unplug the set. Reconnect after a few seconds

### Severe radio hum or noise

- Electrical interference: set too close to TV, VCR or computer
- Increase the distance

### Poor radio reception

- Weak radio signal
- FM: Adjust the FM telescopic aerial

### no indication

- No CD inserted
- Insert a CD
- CD badly scratched or dirty
- Replace/ clean CD, see Maintenance
- Laser lens steamed up
- Wait until lens has cleared
- CD-R/CD-RW is blank or not finalized
- Use a finalized CD-R/CD-RW or suitable CD Audio disc only

### Note:

**Make sure the CD is not encoded with Copyright protection technologies, as some do not conform to the Compact Disc standard.**

### The CD skips tracks

- CD damaged or dirty
- Replace or clean CD
- Program/Shuffle is active
- Quit program/shuffle mode

**Note: A CD badly scratch or dirty may result in improper operation.**

### Sound skips during MP3 playback

- MP3 file made at compression level exceeding 320kbps
- Use a lower compression level to record CD tracks into MP3 format
- Disc damaged or dirty
- Replace or clean disc.

## Important notes for users in the U.K.

### Mains plug

This apparatus is fitted with an approved 13 Amp plug. To change a fuse in this type of plug proceed as follows:

1. Remove fuse cover and fuse.
2. Fix new fuse which should be a BS1362 3 Amp, A.S.T.A. or BSI approved type.
3. Refit the fuse cover.

If the fitted plug is not suitable for your socket outlets, it should be cut off and an appropriate plug fitted in its place. If the mains plug contains a fuse, this should have a value of 3 Amp. If a plug without a fuse is used, the fuse at the distribution board should not be greater than 3 Amp.

Note: The severed plug must be disposed of to avoid a possible shock hazard should it be inserted into a 13 Amp socket elsewhere.

### How to connect a plug

The wires in the mains lead are coloured with the following code: blue = neutral (N), brown = live (L). As these colours may not correspond with the colour markings identifying the terminals in your plug, proceed as follows:

- Connect the blue wire to the terminal marked N or coloured black.
- Connect the brown wire to the terminal marked L or coloured red.
- Do not connect either wire to the earth terminal in the plug, marked E (or e) or coloured green (or green and yellow).

Before replacing the plug cover, make certain that the cord grip is clamped over the sheath of the lead - not simply over the two wires.

### Copyright in the U.K.

Recording and playback of material may require consent. See Copyright Act 1956 and The Performer's Protection Acts 1958 to 1972.

### Environmental information

All unnecessary packaging material has been omitted. The packaging can be easily separated into three materials: cardboard, polystyrene and plastic.

**Your set consists of materials which can be recycled if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging, dead batteries and old equipment.**

Download from [www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.

## Hearing Safety

### Listen at a moderate volume.

- Using headphones at a high volume can impair your hearing. This product can produce sounds in decibel ranges that may cause hearing loss for a normal person, even for exposure less than a minute. The higher decibel ranges are offered for those that may have already experienced some hearing loss.
- Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So after prolonged listening, what sounds "normal" can actually be loud and harmful to your hearing. To guard against this, set your volume to a safe level before your hearing adapts and leave it there.

### To establish a safe volume level:

- Set your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, without distortion.

### Listen for reasonable periods of time:

- Prolonged exposure to sound, even at normally "safe" levels, can also cause hearing loss.
- Be sure to use your equipment reasonably and take appropriate breaks.

### Be sure to observe the following guidelines when using your headphones.

- Listen at reasonable volumes for reasonable periods of time.
- Be careful not to adjust the volume as your hearing adapts.
- Do not turn up the volume so high that you can't hear what's around you.
- You should use caution or temporarily discontinue use in potentially hazardous situations.
- Do not use headphones while operating a motorized vehicle, cycling, skateboarding, etc.; it may create a traffic hazard and is illegal in many areas.

### Disposal of your old product

**Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.**

**When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.**



**Please inform yourself about the local separate collection system for electrical and electronic products.**

**Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.**

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>