

Philips  
CD Soundmachine

MP3

AZ1856



## Rip it all, play it back!

With the advanced AZ1856 CD Soundmachine, you can now convert your favorite CDs, radio programs and tape music to MP3 format with a single touch of a button. No computer required!

### Continuous enjoyment of your favorite music

- Plays MP3/WMA-CD, CD, CD-R & CD-RW
- Enjoy MP3/WMA music directly from your portable USB devices
- Rip music from CDs, radio and cassette onto a USB device

### Powerful sound you can hear and feel

- Bass Reflex speakers deliver a powerful, deeper bass
- Dynamic Bass Boost for deep and dramatic sound

### Easy to use

- One-touch buttons for easy recording
- Handy remote control

**PHILIPS**  
sense and simplicity

## Specifications

### Connectivity

- **USB:** USB host
- **Headphone:** 3.5 mm

### Audio Playback

- **Loader Type:** Top
- **Playback Media:** CD, CD-R, CD-RW, MP3-CD, WMA-CD
- **Programmable Tracks:** 20
- **Disc Playback Modes:** Fast Forward/Backward, Next/Previous Track Search, Repeat Play, Shuffle Play
- **Cassette Deck Technology:** Mechanical
- **Number of decks:** 1
- **USB Direct Modes:** Delete, Fast Backward/Fast Forward, Play/Pause, Previous/Next, Repeat, Shuffle, Stop

### Tuner/Reception/Transmission

- **Tuner Bands:** FM
- **Antenna:** FM Antenna

### Sound

- **Output power (RMS):** 2 x 1W / 60W PMPO
- **Sound System:** Stereo
- **Speaker diameter:** 3"
- **Volume Control:** rotary

### Loudspeakers

- **Built-in speakers:** 2
- **Finishing:** Metal
- **Loudspeaker types:** Loudspeakers

### Convenience

- **Display Type:** LCD

### Accessories

- **Included Accessories:** AC Power Cord, User Manual, Warranty certificate
- Remote control

### Power

- **Battery type:** LR14
- **Battery voltage:** 1.5 V
- Mains power
- **Number of batteries:** 6

### Dimensions

- **Packaging dimensions (W x H x D):** 452 x 210 x 298 mm
- **Product dimensions (W x H x D):** 400 x 162 x 238 mm
- **Weight:** 3.14 kg
- **Weight incl. Packaging:** 4.15 kg

### Audio Recording

- **Recording Media:** Tape, USB device
- **Tape Recording Enhancement:** CD Synchro Start Recording
- **USB recording modes:** Instant record, Programmed tracks, Single disc, Single track
- **USB recording sources:** CD, Tape, Tuner

## Product highlights

### USB Direct for MP3/WMA music

Simply plug in your device to the USB port on your Philips Hi-Fi system. Your digital music will be played directly from the device. Now you can share your favorite moments with family and friends.

### USB Rip All

With this smart feature, you can easily listen to all your music content on your Hi-Fi system directly from your portable MP3 player. Simply rip your desired music content from CDs, cassette tapes, radio programs or line-in music from your system directly to your USB device. Store your favorite cassette tapes and convert its content into MP3 format - without using a PC. You can also preset timer recording of your favorite radio show on your system and it will automatically record the show onto your USB device.



Issue date 2008-07-05

Version: 1.0.8

12 NC: 8670 000 33209  
EAN: 87 12581 35836 5

© 2008 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips  
Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>