 


1 Choosing Power Supply

 
- a Connect the AC power cord to the **AC~ MAINS** inlet and the wall socket.
- OR-
- b Open the **battery door** and insert 6 x D batteries (not included).

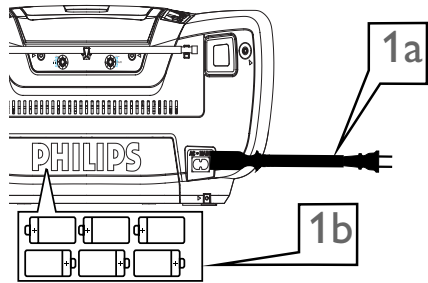

R-20, UM-1 or D-cells (not included)

2 Listening to Radio


- a Press **SOURCE** on the system repeatedly (or **TUNER** on the remote control) to select TUNER (FM or MW).
- b Press **PROG** for more than two seconds to program all available stations in order of waveband.
- c Press **ALB +/-** (or **ALBUM/PRESET ▲/▼** on the remote control) until the desired preset station is displayed.

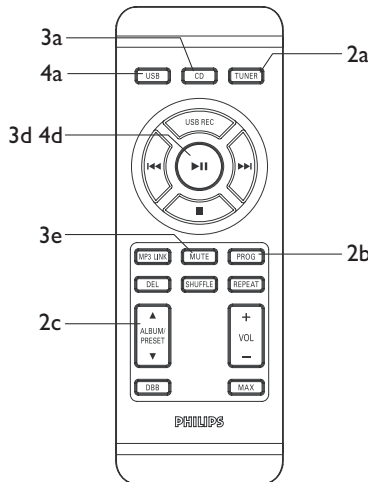

3 Playing a disc

This player plays Audio Discs including CD-R/CD-RW, MP3-CD and WMA.

- a Press **SOURCE** on the system repeatedly (or **CD** on the remote control) to select CD.
- b Open the disc door.
- c Insert a disc with the printed side facing up and close the door.
- d Press **▶||** to start playback.
- e To stop disc playback, press **■**.

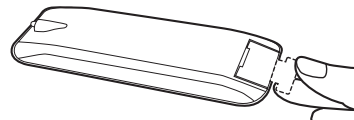 

Removing the insulation plastic tab before use

4 Playing a USB device

- a Press **SOURCE** on the system repeatedly (or **USB** on the remote control) to select USB.
- c Plug a compatible USB device to AZ3846's USB port marked .
- d Press **▶||** on your AZ3846 to start play.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>