






PHILIPS

Use this simple and quick way to watch your favourite DVD movie and enjoy your Home Cinema experience!

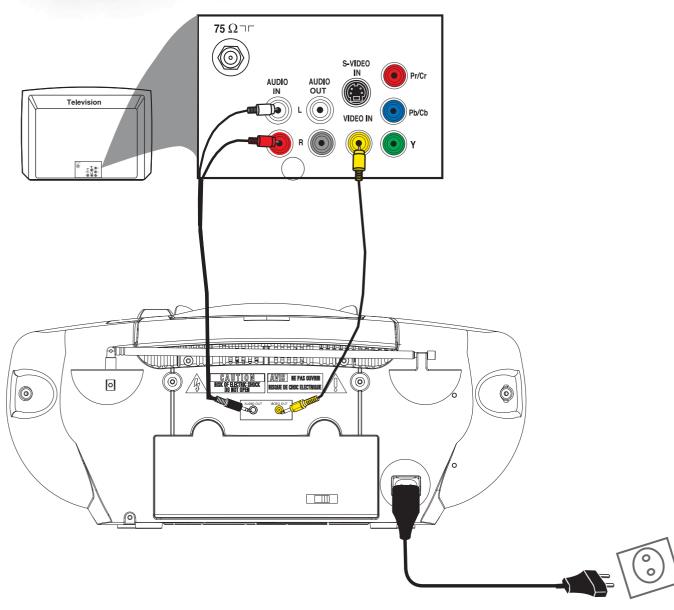



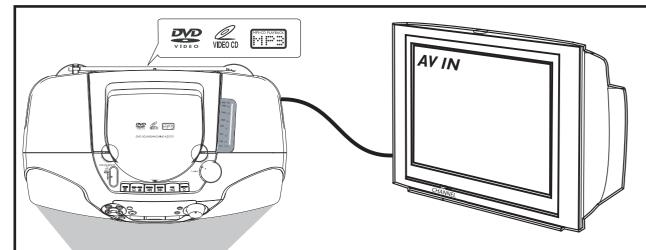

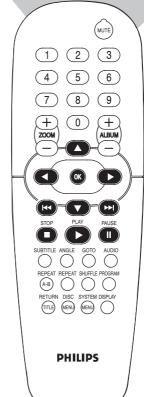

Make sure your DVD system and TV are connected and turned on!

Playing a disc

- 1 Adjust the source switch on the top of the system to select DVD/VCD/MP3/CD.
- **Turn on the TV and select the correct Video In mode.**You should see the blue Philips DVD background screen on the TV (If no disc in the DVD system).
- 3 Lift the DVD cover on the top of the DVD system and load a disc, then close the DVD cover to playback the disc.

Make sure the disc label is facing up. For double-sided discs, load the side (marked "side A" or "side B") you want to play facing up.

4 Playback will start automatically.

If a disc menu appears, use $\blacktriangle / \blacktriangledown / \blacktriangleleft / \blacktriangleright$ buttons on the remote to make the necessary selection, then press OK to confirm. Or, use the numeric keypad on the remote to select features. Follow the instructions given in the disc menu.

 
5 To stop playback, press STOP ■.

Region Codes

DVDs must be labeled for ALL regions or Region 3, in order to play on this DVD system.








- The remote control is available only in disc mode.
- The supplied remote control is for dics operation only.
- First, select the disc (DVD/VCD/MP3/CD) source on the set, then select the desired function (I◀◀ , ▶▶ or ▶ for example).

You should find the below accessories in the packaging box.

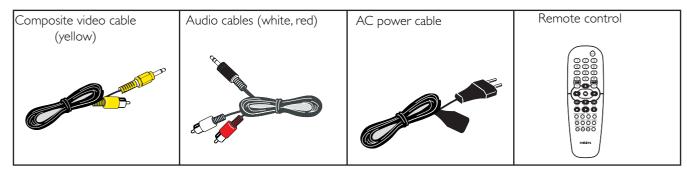



Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com