 


Philips Audio CD Recorder CDR 800: Getting started...

English

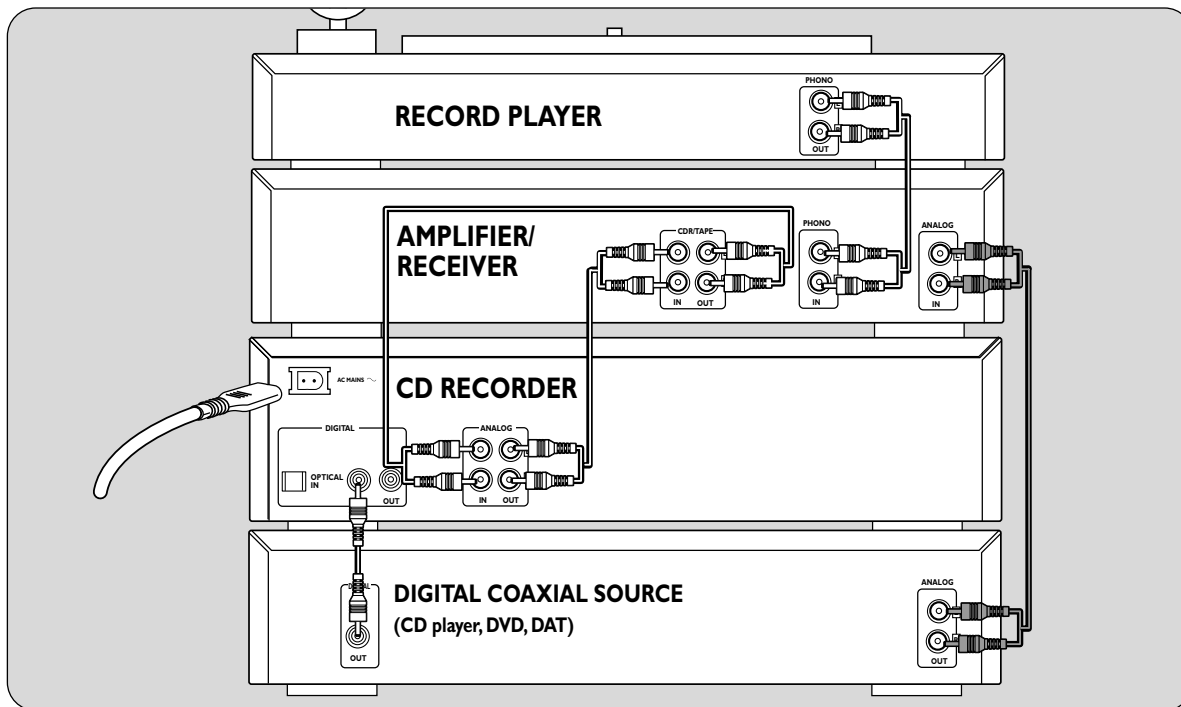

General information

This Quick Installation Card gives a rough overview and helps to quickly start with basic steps. Please read the supplied instruction manual for detailed information.

Power

- 1 Check whether the power voltage as shown on the type plate corresponds to your local power voltage. If it does not consult your dealer or service organization.
- 2 **After all connections have been made** connect the power cord to AC MAINS ~ and to the wall outlet. This switches on the AC power supply.

To disconnect the set from the power completely, remove the power plug from the wall outlet.

Discs for recording

Use discs with the "Digital Audio" logo only:

- CD-Audio Recordable (CDR) discs, or
- CD-Audio ReWriteable (CDRW) discs.

Do not use computer CDR(W)s as recording would not work properly.



Discs for playback

| disc: | playback in: standard CD player | CDRW compatible CD player | Philips CDR 800 |
|-------------------------|---------------------------------|---------------------------|-----------------------|
| finalized CDR | • | • | • |
| finalized CDRW | | • | • |
| unfinalized CDR or CDRW | | | • CD Recorder only |
| MP3 CD | | | • |

Note: MP3 playback works only if the filenames end with ".mp3".

Demo mode

 
The demo mode displays various features of the set and will start automatically.

- To switch off the demo mode keep STOP ■ pressed for at least 5 seconds.
→ The demo mode is cancelled permanently.

Philips Audio CD Recorder CDR 800: Getting started...


English

Playing a CD in the CD changer

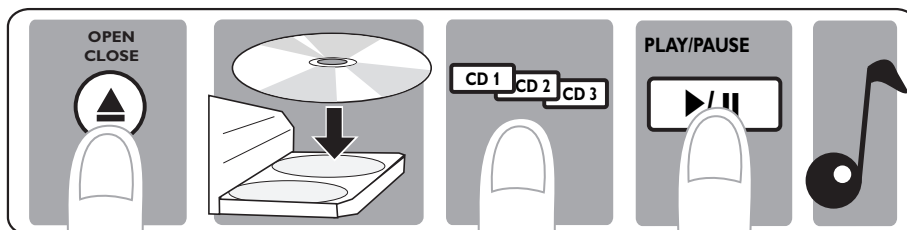


- 1 Press OPEN·CLOSE and insert a CD into a tray. Close the drawer by pressing OPEN·CLOSE again.
- 2 Select the tray by pressing CD1, CD2 or CD3.
- 3 Press PLAY/PAUSE ►|| to start playback.

 Recording an entire CD

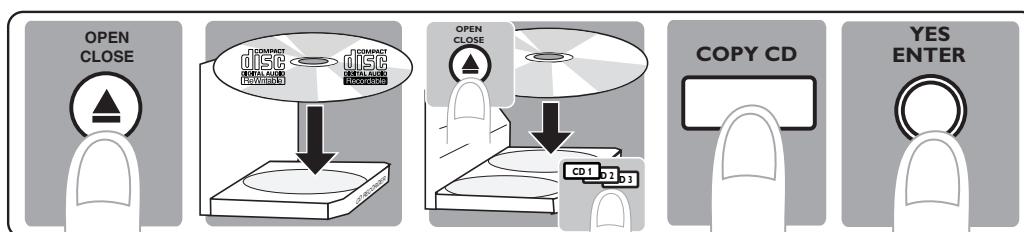

- 1 Press OPEN·CLOSE and insert a blank Audio CDR(W) into the CD recorder tray.
- 2 Insert the CD to be copied into the CD changer and select the CD tray.
- 3 Press COPY CD.
- 4 Press YES to start CD recording. The CD will be finalized automatically.

 Recording a single track

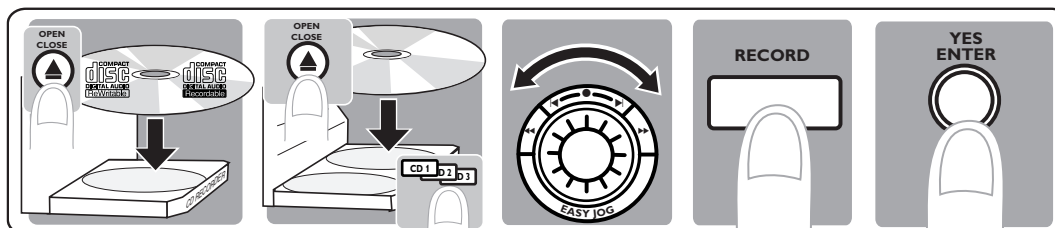

- 1 Insert an Audio CDR(W) into the CD recorder tray.
- 2 Insert a CD into the CD changer and select the CD tray.
- 3 Select a track by rotating EASY JOG ►.
- 4 Press RECORD.
- 5 Press YES to start recording.

Finalizing manually



- 1 Insert the CDR(W) to be finalized into the CD recorder.
- 2 Press FINALIZE CD.
- 3 Press YES to start the finalization.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>