

Register your product and get support at

www.philips.com/welcome

AJ110



EN User manual

1 Important

Notice

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.

Recycling

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When you see the crossed-out wheel bin symbol attached to a product, it means the product is covered by the European Directive 2002/96/EC:



Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products. The correct disposal of your old product helps prevent potentially negative consequences on the environment and human health.

Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed of with normal household waste.

When you see the crossed-out wheel bin symbol with the chemical symbol 'Pb', it means that the batteries comply with the requirement set by the directive for lead:



Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Norge

Typeskilt finnes på apparatens underside.

Observer: Nettbryteren er sekundert innkoplet. Den innebygde nettdelen er derfor ikke frakoplet nettet så lenge apparatet er tilsluttet nettkontakten.

For å redusere faren for brann eller elektrisk støt, skal apparatet ikke utsettes for regn eller fuktighet.

2 Your AJ110

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Introduction

With this unit, you can:


- know the time/date

What's in the box

Check and identify the contents of your package:

- Main unit
- User manual

Overview of the main unit

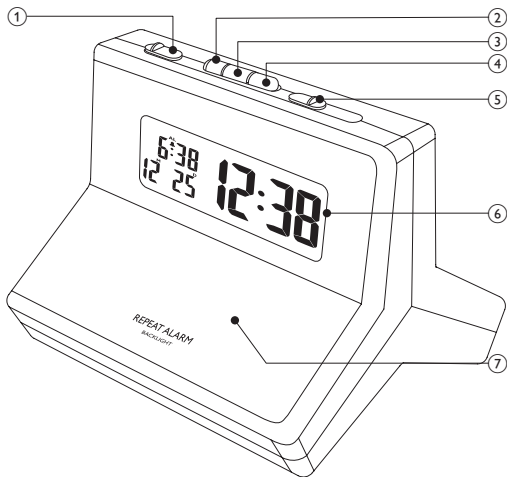

① Function selector

• Switch to normal mode.
• Set alarm/clock/calendar.

load from www.Somanuals.com: All Manuals Search And Down

- ② **HR·MONTH**
 - Set the hour/month.
- ③ **MIN·DATE**
 - Set the minute/date.
- ④ **12/24·YEAR**
 - Select 12/24 hour format.
 - Set the year.
- ⑤ **🔔 ON·OFF**
 - Turn on/off the alarm timer.
- ⑥ **Display panel**
 - Show the time/date/alarm information.
- ⑦ **REPEAT ALARM/BACKLIGHT**
 - Repeat the alarm.
 - Turn on the backlight.

3 Get started



Caution

- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

Always follow the instructions in this chapter in sequence.

If you contact Philips, you will be asked for the model and serial number of this apparatus. The model number and serial number are on the bottom of the apparatus. Write the numbers here:

Model No. _____

Serial No. _____


Install battery



Caution

- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.
- Risk of product damage! When the apparatus is not used for long periods, remove the battery.

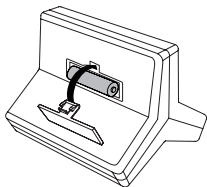

- 1 Open the battery compartment.
- 2 Insert 1 AA battery (not supplied) with correct polarity (+/-) as indicated.
- 3 Close the battery compartment.




Note

- Batteries contain chemical substances, so they should be disposed of properly.

Set time

- 1 Adjust the function selector to 
↳ Time digits begin to blink.
 - 2 Press **HR·MONTH** to set the hour.
 - 3 Press **MIN·DATE** to set the minute.
 - 4 Adjust the function selector to 
 - To select 12 hour or 24 hour format, press **12/24·YEAR**.
-


Set calendar

- 1 Adjust the function selector to **CALENDAR**.
 - 2 Press **12/24·YEAR** to set the year.
 - 3 Press **HR·MONTH** to set the month.
 - 4 Press **MIN·DATE** to set the date.
 - 5 Adjust the function selector to .
-

Turn on the backlight

- 1 In dark environment, press **REPEAT ALARM/BACKLIGHT** to turn on the backlight.

4 Set the alarm timer

- 1 Before you start, ensure that the time is set correctly.
- 2 Adjust the function selector to 
↳ The alarm time digits begin to blink.
- 3 Press **HR·MONTH** to set the hour.
- 4 Press **MIN·DATE** to set the minute.

5 Adjust the function selector to . All Manuals Search And Download from www.Somaterials.com


Turn on/off the alarm timer



Note

- Ensure that you already set the alarm successfully.

1 Adjust **ON** · **OFF** to **ON** or **OFF** to turn on or off the alarm timer.

↳ If the alarm timer is turned on,  appears.

↳ If the alarm timer is turned off,  disappears.

Repeat alarm

1 When the alarm sounds, press **REPEAT ALARM/BACKLIGHT**.

↳ The alarm repeats at 5-minute intervals.



Note

- You can repeat the alarm for up to 3 times.

5 Product information



Note

- Product information is subject to change without prior notice.

Specifications

General information

Power	1xAA battery
Operation Power Consumption	30 uW
Dimensions	
- Main Unit (W x H x D)	82 x 66 x 75 mm
Weight	
- With Packing	127 g
- Main Unit	87 g

6 Troubleshooting



Warning

- Never remove the casing of this apparatus.

To keep the warranty valid, never try to repair the system yourself. If you encounter problems when using this apparatus, check the following points before requesting service. If the problem remains unsolved, go to the Philips web site (www.philips.com/welcome). When you contact Philips, ensure that the apparatus is nearby and the model number and serial number are available.

No power

- Ensure that the battery is installed properly.
- Replace the exhausted battery.

Timer does not work

- Set the clock correctly.
- Switch on the timer.

Clock/timer setting erased

- Replace the exhausted battery.
- Reset the clock/timer.



© 2009 Koninklijke Philips Electronics N.V.

All rights reserved.

load from www.Somanuals.com. All Manuals Search And Down

AJ110_12_UM_v1.0



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>