

Clock Radio

AJ3121

 
 
Register your product and get support at
www.philips.com/welcome

User manual



PHILIPS

1

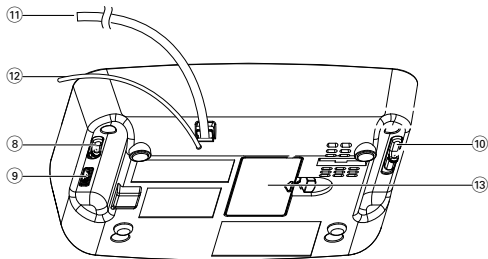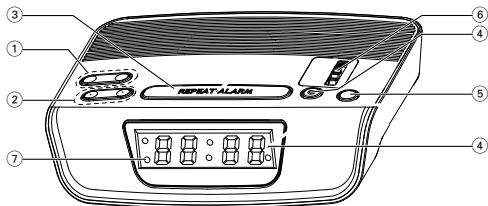

English

Congratulations on your purchase and welcome to Philips!
To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

CONTROLS (see fig. 1)

① SET TIME /ALARM SET

- sets the clock / alarm time

② HR / MIN

- adjusts the hours / minutes for clock / alarm / sleep time

③ REPEAT ALARM / SLEEP OFF

- switches off the active alarm for a 9 minutes period

- switches off the radio sleep function

④ ALARM RESET

- stops the active alarm for 24 hours

⑤ SLEEP

- activates the radio for sleep function

- adjusts the sleep period

⑥ TUNING - tunes to radio stations

⑦ ALARM indicator - lights up when alarm is activated.

⑧ FM/MW - selects FM/MW waveband

⑨ VOLUME - adjusts the sound level

⑩ RADIO / ALARM

OFF: switches off the radio/alarm

RADIO ON: switches on the radio

ALARM - RADIO: activates the radio for alarm

ALARM - BUZZER: activates the buzzer for alarm

⑪ Power cord - connects to wall outlet

⑫ Pigtail - improve FM reception

⑬ Battery door - opens to store a **9 volts 6F22** battery (not included) for clock memory backup.

INSTALLATION

POWER SUPPLY

- 1 Check if the power supply, as shown on the **type plate located on the bottom of the set**, corresponds to your local power supply. If it does not, consult your dealer or service center.
- 2 Connect the power cord to the wall outlet.
- 3 **To disconnect the set from the power supply completely, remove the plug from the wall outlet.**

CLOCK MEMORY BACKUP

The clock memory backup allows your alarm and clock time settings to be stored for up to a day when there is a power interruption e.g. power failure. The complete clock radio and display illumination will be switched off. As soon as the power supply returns, the display will indicate the correct time.

- 1 Remove the battery door to insert a **9 volts 6F22** type battery (not included) for backup.
- 2 Replace the battery door.

NOTE: *If no backup battery is installed or the power interruption is prolonged, you will need to set the clock and alarm times again.*

Batteries contain chemical substances so they should be disposed of properly.

Standby power consumption1.8 W

RADIO

You can use this set solely as a radio!

- 1 Adjust **RADIO / ALARM** to **RADIO ON** to switch on the radio.
 - 2 Select your waveband by adjusting the **FM/MW** switch.
 - 3 Adjust **TUNING** to tune to your desired station.
 - 4 Turn the **VOLUME** control to adjust the volume level.
 - 5 Adjust **RADIO / ALARM** to **OFF** to switch off the radio.
- When sleep function is activated, to switch off the radio, you also need to press **SLEEP OFF** button.

To improve reception:

FM: Extend and position the pigtail fully to obtain optimal reception.

MW: uses a built-in antenna inside the set. Direct the antenna by adjusting the position of your set.

SETTING THE CLOCK / ALARM TIME

The time is displayed using the 24-hour clock.

- 1 Hold down **SET TIME / ALARM SET**.
- 2 Press **HR** or **MIN** repeatedly, or hold down **HR** or **MIN** to adjust minute and/or hour.
- 3 Release **SET TIME / ALARM SET** and **HR** or **MIN** when you reach the correct setting.
→ The set clock time will show on the display and start to run.

SELECTING THE ALARM MODE

To use the alarm, you must set the alarm time first. You can choose from two different alarm modes to wake you up: by radio or buzzer.

- 1 Select your choice of alarm mode by adjusting **RADIO / ALARM** to **RADIO** or **BUZZER**.

→ The alarm indicator (AL) will light up.

Helpful Hint:

- If you have selected the radio mode, make sure you have adjusted the volume loud enough to wake you.
- The buzzer is set at a fixed volume and cannot be adjusted.

SWITCHING OFF THE ALARM

There are three ways of switching off the alarm. Unless you cancel the alarm completely, the **24 hour alarm reset option** will be automatically selected after 1 hour and 59 minutes, from the time your alarm time first goes off.

24 HOUR ALARM RESET

If you want the alarm mode to be stopped immediately but also wish to retain the same alarm setting for the following day:

- Press **ALARM RESET** during the alarm call.

→ The alarm indicator (AL) will remain on.

CANCELING THE ALARM COMPLETELY

To cancel the set alarm time before it goes off, or during the alarm call:

- Adjust **RADIO / ALARM** to **OFF** position.

→ The alarm indicator (AL) will light off.

REPEAT ALARM

This repeats your alarm call at 9-minute intervals.

- 1 During the alarm call, press **REPEAT ALARM**.
- 2 Repeat if desired for up to 59 minutes.
→ The alarm indicator (AL) will remain on.

SLEEP

This set has a built-in timer which enables the set to be automatically switched off during radio playback after a set period of time. This allows you to lie back, listen and fall asleep. The maximum sleep time is 1 hour and 59 minutes.

Setting SLEEP

- 1 Set **RADIO / ALARM** to **OFF** position.
- 2 Set the sleep time to activate sleep function by selecting on the following ways:
 - Simply press **SLEEP** to set your sleep time to 59 minutes.
 - Hold down **SLEEP**, and press **MIN** repeatedly to adjust sleep time from 59 minutes downward.
 - Hold down **SLEEP** and press **HR** to get one more hour sleep time (1:59)
→ To cancel sleep, press **SLEEP OFF**.

ENVIRONMENTAL INFORMATION

We have reduced packaging to the minimum for easy separation into two materials: paper and cardboard.

Your set consists of materials which can be recycled if disassembled by a specialized company. Please observe local regulations on the disposal of packing materials and old equipment.

SAFETY INFORMATION

- Install the unit near the AC outlet and where the AC power cord plug can be easily reached.
- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Place the set on a hard and flat surface so that the system does not tilt.
- If you do not intend to use the set for a long time, withdraw the power plug from the wall outlet. In addition to this, it is advisable to remove the battery from the clock radio. This will prevent any danger of leakage and the clock radio will not be damaged.
- Do not expose the set, batteries to humidity, rain, sand or excessive heat caused by heating equipment or direct sunlight.
- The apparatus shall not be exposed to dripping or splashing.
- Adequate ventilation with a minimum gap of 15cm between the ventilation holes and surrounding surfaces is necessary to prevent heat build-up.
- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc..
- No objects filled with liquids, such as vases, shall be placed on the apparatus.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- To clean the set, use a soft, slightly dampened chamois leather. Do not use any cleaning agents containing alcohol, ammonia, benzene or abrasives as these may harm the housing.

CAUTION

- **High voltage! Do not open. You run the risk of getting an electric shock. The machine does not contain any user-serviceable parts.**
- **Modification of the product could result in hazardous radiation of EMC or other unsafe operation.**

This set complies with the radio interference requirements of the European Union.

TROUBLESHOOTING

If a fault occurs, first check the points listed below before taking the set for repair. If you are unable to remedy a problem by following these hints, consult your dealer or service center.

WARNING: *Under no circumstances should you try to repair the set yourself, as this will invalidate the warranty. Do not open the set as there is a risk of electric shock.*

Problem

- *Possible Cause*
- Remedy

No sound/power

- *Volume not adjusted*
- Adjust the volume

Occasional crackling sound during FM broadcast

- *Weak signal*
- Adjust the position of the Pigtail

Continuous crackling/hiss disturbance during MW broadcast

- *Electrical interference from TV, computer, fluorescent lamp, etc.*
- Move set away from other electrical equipment

The alarm does not function

- *Alarm time not set and or alarm mode not selected*
- Set the alarm time and / select alarm mode
- *Volume too low for RADIO*
- Adjust the volume
- *Radio alarm not adjusted to radio station*
- Tune to a radio station

**PHILIPS CONSUMER ELECTRONICS
WARRANTY POLICY FOR AUSTRALIA**
Effective 1st July 2009

Philips provides its Consumer Electronics products with a 1 Year Manufacturers Warranty.

The benefits given to the purchaser by this warranty are in addition to all other rights and remedies, which the purchaser has in respect of the product under the Trade Practices Act or other Commonwealth or State Law.

The conditions contained in this warranty replace and override the provision of the Philips World-Wide Guarantee for products purchased in Australia and used in Australia.

Please record the following information for your records and keep in a safe place.
It is essential that you retain your original purchase receipt to make a warranty claim.

Model number :

Serial number :

Date of purchase :

Retailer :

If you require assistance with the operation of the product, its features or specifications, you may call the **Philips Technology Care Centre** on **1300 363 391** where support is provided by our trained staff.

If the product fails within 12 months from the date of purchase, please return the faulty product to the place of purchase.

Conditions of Warranty

- All claims for warranty can only be made at the place of purchase and a copy of the purchase receipt is required for any warranty claim.
- The warranty period is valid from the original date of purchase of the product.
- This warranty extends only to defects in material or workmanship occurring under normal use of the product when operated in accordance with the instructions.
- Philips may, at its discretion choose to repair rather than replace this product.
- If a replacement product is supplied, it is warranted for the remainder of the warranty period, from the original date of purchase.
- This Manufacturers Warranty is limited to 3 months for products used in commercial applications.
- Product accessories are covered by the same warranty period. If an accessory is faulty, please contact the Philips Technology Care Centre on **1300 363 391**.
- This Manufacturers Warranty is neither transferable nor valid in countries other than Australia.

This Warranty does not cover:-

- Service costs arising from failure to correctly adjust the controls of the product or to observe the instructions, or inspections that reveal that the product is in normal working order;
- Product failures caused by misuse, neglect, accidental breakage, transit damage, un-authorised repairs or modification by un-authorised persons, external fires, lightning strikes, floods, vermin infestation or liquid spillage.
- Reception problems, replacement of worn or used batteries or other consumables.
- Second hand products or refurbished products.
- Products failure, caused by other products.

Version 1.3: 1st July 2009

Thank-you for purchasing this quality Philips product.

Philips New Zealand Ltd guarantees this product against defective components and faulty workmanship for a period of 12 months. Any defect in materials or workmanship occurring within 12 months from the date of purchase subject to the following conditions will be rectified free of charge by the retailer from whom this product was purchased.

Conditions

1. The product must have been purchased in New Zealand. As proof of purchase, retain the original sales docket indicating the date of purchase.
2. The guarantee applies only to faults caused by defective components, or faulty workmanship on the part of the manufacturer.
3. The guarantee does not cover failures caused by misuse, neglect, normal wear and tear, accidental breakage, use on the incorrect voltage, use contrary to operating instructions, or unauthorised modification to the product or repair by an unauthorised technician.
4. Reasonable evidence (in the form of a sales docket) must be supplied to indicate that the product was purchased no more than 12 months prior to the date of your claim.
5. In the event of a failure, Philips shall be under no liability for any injury, or any loss or damage caused to property or products other than the product under guarantee.

This guarantee does not prejudice your rights under common law and statute, and is in addition to the normal responsibilities of the retailer and Philips.

How to claim

Should your Philips product fail within the guarantee period, please return it to the retailer from whom it was purchased. In most cases the retailer will be able to satisfactorily repair or replace the product.

 
However, should the retailer not be able to conclude the matter satisfactorily, or if you have other difficulties claiming under this guarantee, please contact

**The Guarantee Controller
Philips New Zealand Ltd.
P.O. Box 41.021
Auckland**

☎ (09) 84 94 160

fax ☎ (09) 84 97 858

Meet Philips at the Internet
<http://www.philips.com>

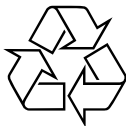

AJ3121



Printed in China

AJ3121_79_UM_V3.0

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>