

DVD Kitchen Radio with LCD-TV

AJL700

Quick Start Guide

- 1** Preparation
- 2** Connect it
- 3** Mount it
- 4** Use it




This **Guide** shows you:

- basic installation setup
- how to install your unit
- how to play a DVD
- how you can watch TV on the unit

For detailed operation of all the features, please also read the **User manual**.


PHILIPS

What's in the box

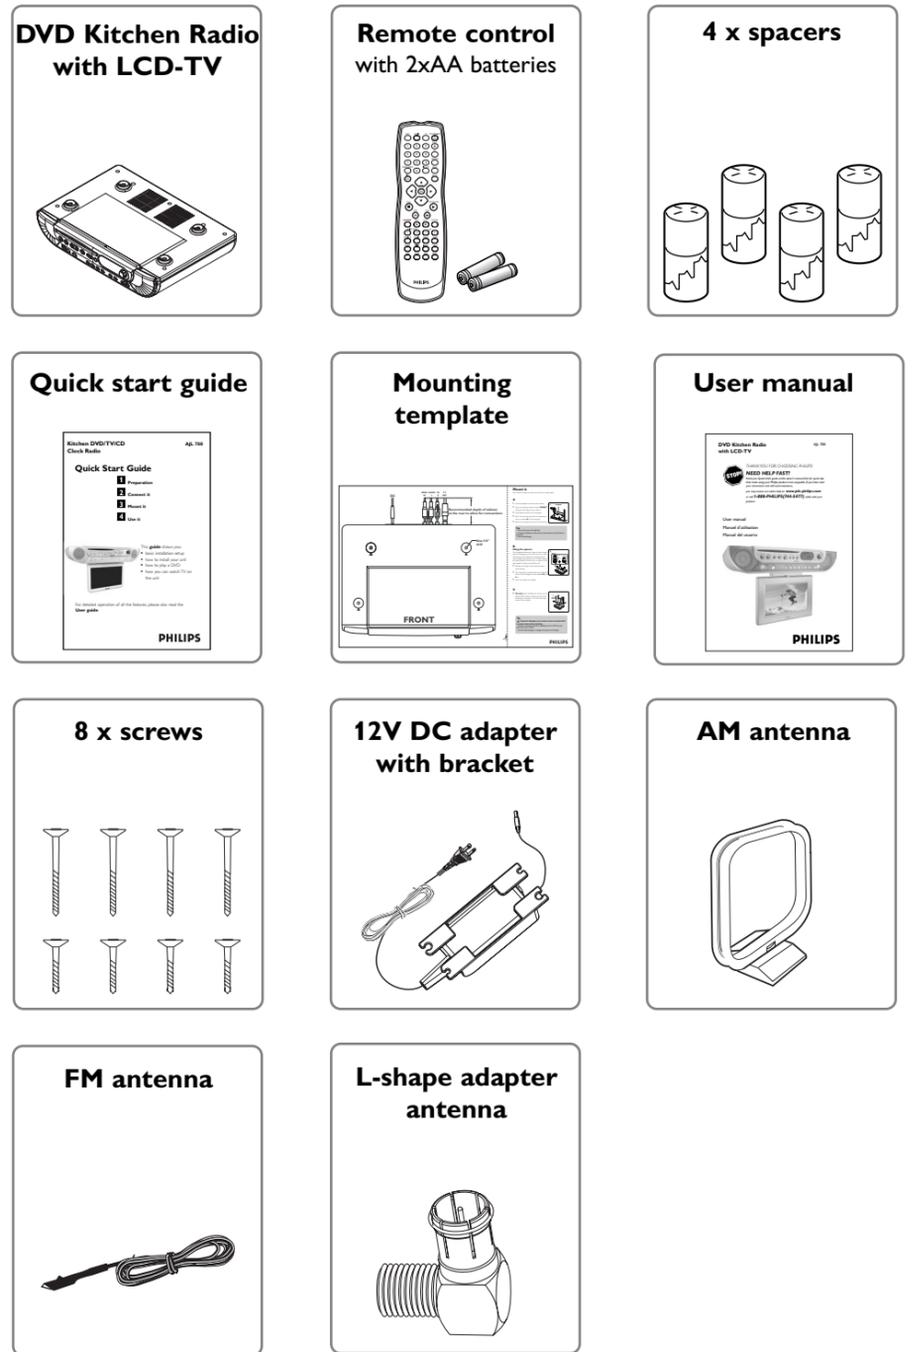

What else you'll need


These tools (not included) will help you mount the unit as described in part 3 Mount it, and on the template.

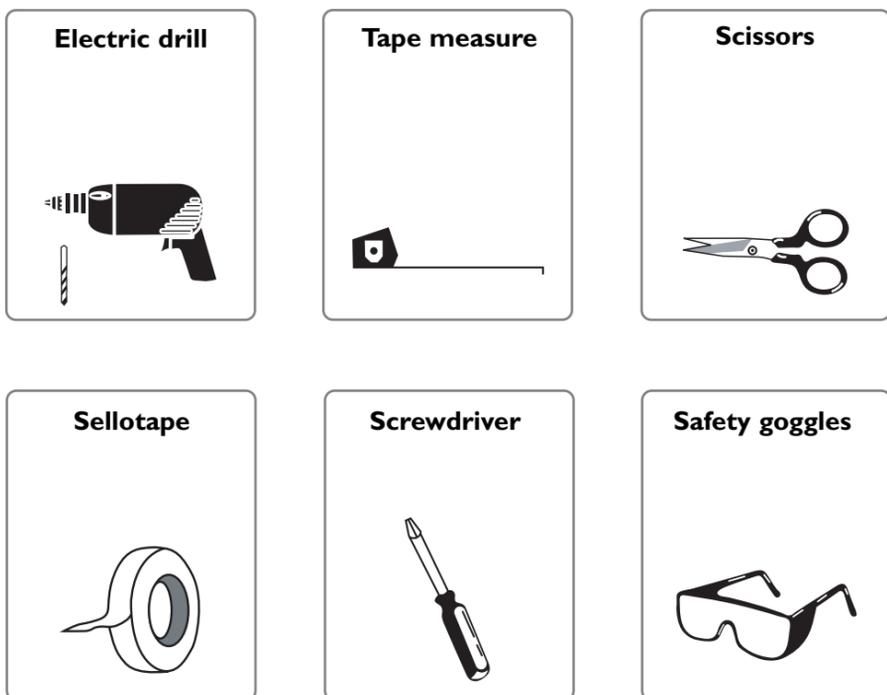

1 Preparation

For best performance, install the unit as far as possible from sources of noise and interference (e.g. fridges, microwaves, fluorescent lamps)


- a Find a mounting location near a wall outlet.
- b Use the mounting template to test the design and thickness your kitchen cabinet bottom.
- c Decide whether you want to connect the unit with other audio/ visual equipment. (See **2B** below)

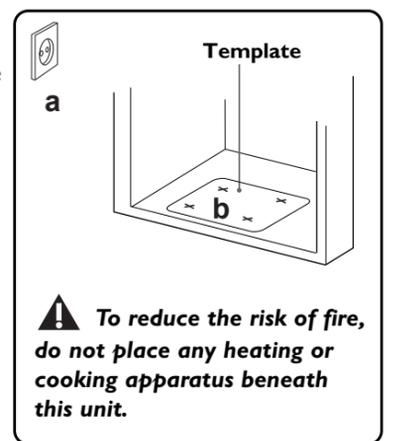

2 Connect it


A Connect the following supplied accessories to the respective jacks on the rear of the unit :

- **12V DC** power adapter
- **For radio reception**, connect the **AM** and **FM** antennas.

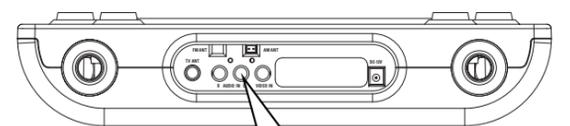

B **Other connections (cables not included)**

- For TV reception on the unit, plug the supplied L-shaped adapter into TV ANT as shown. Then connect a TV antenna/CATV cable (not supplied)..
- For use with VCR or other audio/video appliances, connect the composite cable and match the colors of the cinches (**AUDIO IN L/R, VIDEO IN**) on the unit.

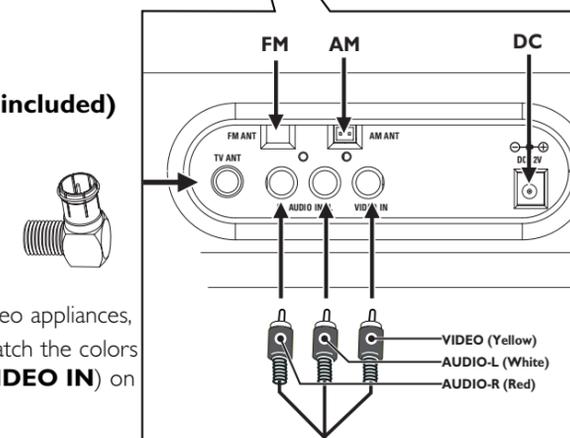


3 Mount it

Ask a friend to help out. An extra hand to hold the unit makes mounting easier and quicker.

A

- Cut the template to fit inside the cabinet.
- Align the template border marked "FRONT" along the front edge of your cabinet.
- Use adhesive tape to fix the template.
- Drill 1/4 inch holes, as marked X on the template.
- Remove the template when you finish drilling.

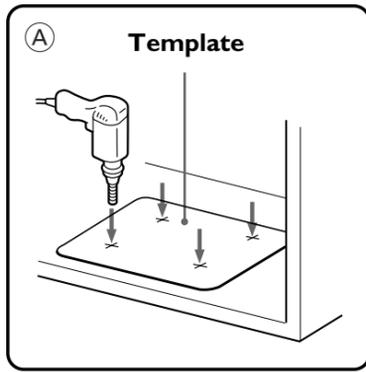

Tip


- Clean the bottom of the cabinet surface and also empty your cabinet before mounting.
- Place the unit in a clean, safe place when drilling to avoid wood shavings dropping into the ventilation slots.
- Use a nail to start each drill hole.
- Drill from the bottom upwards if you do not have enough room inside the cabinet.
- Hold your drill firmly at 90° with the cabinet bottom and drill holes at low speed.
- Clear wood shavings.

B

Using the spacers


On the spacers, there are 4 pairs of notch length options. Depending on the thickness of your cabinet bottom (with/ without an overhang), these notch lengths correspond to the 4 notch height in the space holders, and allow you to adjust to the best height to help you mount the unit.

- Measure the height of the cabinet bottom and/overhang.
- Turn the spacer counterclockwise to determine which of the 4 heights is most suitable: **Low** • • **High**. Align to the arrow indication.
- Insert the spacers accordingly.

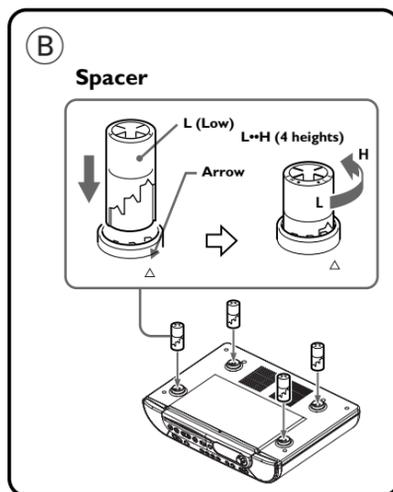

C

- **Manually** fasten the 4 long screws down into the spacer holder holes to mount your set. Start screwing at opposite corners of the unit for better support.

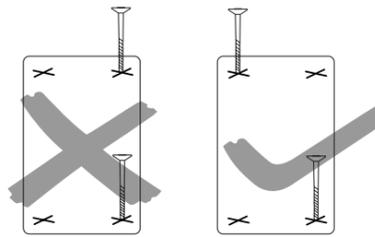


Tip

! To prevent damage to your set, do not use an electric drill to secure screws when mounting!



- If the overhang is more than 1 1/4 inch, use longer screws (not included).


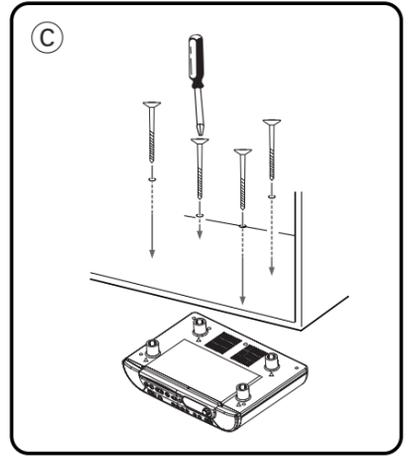


D

Using the adapter bracket

Find a suitable place to mount the adaptor bracket.

- 1 Use 2 small screws (supplied) to mount the bracket.
- 2 Insert the adapter into the bracket as shown.
- 3 Use the adapter bracket to wrap and secure the power cord so that excess cord does not hang down.

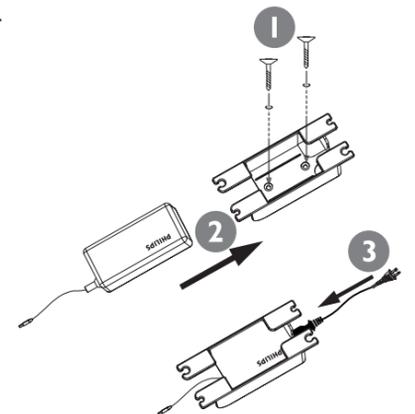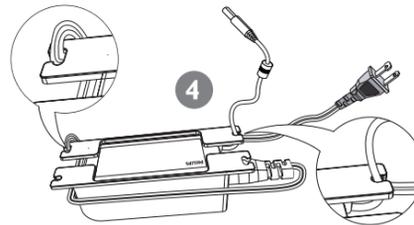


4 Use it

For full details, please read and follow the instructions inside the **User manual**.

A

Power supply


- Connect the power plug to the wall outlet.
- Press **POWER** (or **STANDBY.ON**) to switch on.

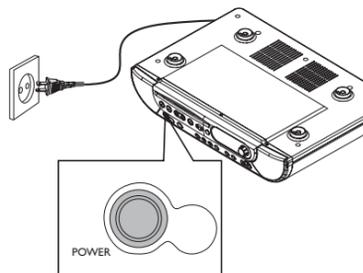

B

Using the TV screen

- 1 Press **PUSH** at the bottom the set to release the TV panel.
- 2 Pull down the panel (maximum 115°).
- 3 Turn around the panel to find the screen.
- 4 Adjust the screen to a suitable angle (maximum 270°).

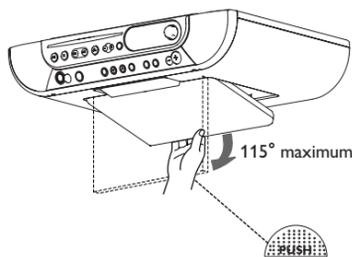



Tip

- Swivel with care to avoid breakage. Screen rotates a maximum 270° only.

D

How to watch TV on the unit


- 1 Press **TV** once or more to select TV or CATV mode.
- 2 In CATV, press **ENTER** on the remote control selects HRC, IRC, STD or AUTO mode.
- 3 The first time you use the TV, press and hold **AUTO PROG /RADIO PROG** on the set until the channel number starts running.
- Available channels are programmed.
- 4 Use the **Numeric Keypad (0-9)** on the remote control to select the channel number directly.

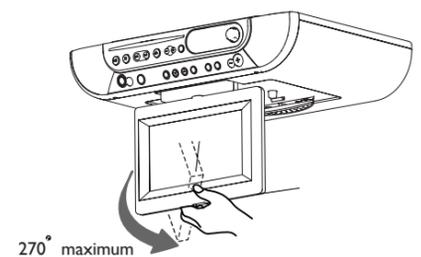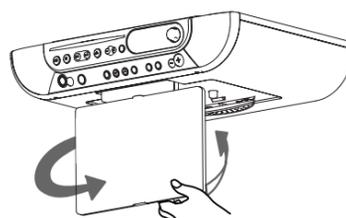

C

How to play a DVD /CD

- Select **DVD** source.
- Insert a DVD/CD.
- Press **PLAY/PAUSE** to start disc playback.

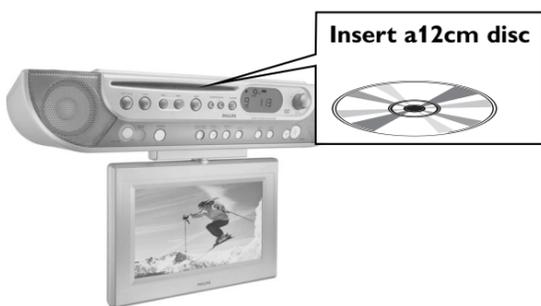

E

Improve radio reception


Position the antenna as far as possible from a TV, VCR or radiation source.

FM:

Keep the FM antenna as horizontal as possible. Fix the antenna's end to the wall.

AM:

Position vertically. If necessary, use 2 small screws (supplied) to fix the antenna to a flat, hard and stable place.

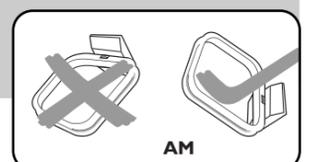

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>