

Register your product and get support at

www.philips.com/welcome

CD191

CD196



User manual

PHILIPS

Contents

1	Important safety instructions	3
----------	--------------------------------------	----------

2	Your phone	4
	What is in the box	4
	Overview of the phone	5
	Overview of the base station	5
	Display icons	6

3	Get started	8
	Connect the base station	8
	Install the handset	8
	Configure your phone (country dependent)	9
	Change the remote access PIN code	9
	Charge the handset	10
	Check the battery level	10
	What is standby mode?	10
	Check the signal strength	11
	Switch the handset on or off	11

4	Calls	12
	Make a call	12
	End a call	12
	Answer a call	12
	Mute the microphone	13
	Adjust the earpiece/speaker volume	13
	Turn the speaker on or off	13
	Make a second call	13
	Answer a second call	13
	Switch between two calls	13
	Make a conference call with the external callers	14

5	Text and numbers	15
	Enter text and numbers	15
	Switch between uppercase and lowercase	15

6	Phonebook	16
	View the phonebook	16
	Search a record	16
	Call from the phonebook	16
	Access the phonebook during a call	16
	Add a record	16
	Edit a record	17
	Delete a record	17
	Delete all records	17

7	Call log	18
	Call list type	18
	View the call records	18
	Save a call record to the phonebook	18
	Return a call	18
	Delete a call record	18
	Delete all call records	19

8	Redial list	20
	View the redial records	20
	Redial a call	20
	Save a call record to the phonebook	20
	Delete a redial record	20
	Delete all redial records	20

9	Phone settings	21
	Sound settings	21
	Name the handset	21
	Set the date and time	21
	Set the display language	21

10	Services	23
	Call list type	23
	Auto conference	23
	Manage the carrier code	23
	Manage the area code	23
	Network type	24
	Auto prefix	24
	Select the recall duration	24
	Dial mode	25
	Register the handsets	25

Unregister the handsets	25
Restore default settings	26

11 Telephone answering machine	27
Turn the answering machine on or off	27
Set the answering machine language	27
Set the answer mode	27
Announcements	28
Incoming messages (ICM)	28
Set the ring delay	29
Remote access	30

12 Technical data	32
--------------------------	-----------

13 Notice	33
Declaration of conformity	33
Use GAP standard compliance	33
Compliance with EMF	33
Disposal of your old product and batteries	33

14 Frequently asked questions	35
--------------------------------------	-----------

15 Appendix	36
Text and number input tables	36

1 Important safety instructions

Power requirements

- This product requires an electrical supply of 100-240 volts AC. In case of power failure, the communication can be lost.
- The voltage on the network is classified as TNV-3 (Telecommunication Network Voltages), as defined in the standard EN 60950.



Warning

- The Electrical network is classified as hazardous. The only way to power down the charger is to unplug the power supply from the electrical outlet. Ensure that the electrical outlet is always easily accessible.

To avoid damage or malfunction



Caution

- Use only the power supply listed in the user instructions.
- Use only the batteries listed in the user instructions.
- Risk of explosion if battery is replaced by an incorrect type.
- Dispose of used batteries according to the instructions.
- Always use the cables provided with the product.
- Do not allow the charging contacts or the battery to come into contact with metal objects.
- Do not let small metal objects come into contact with the product. This can deteriorate audio quality and damage the product.
- Metallic objects may be retained if placed near or on the handset receiver.
- Do not use the product in places where there are explosive hazards.
- Do not open the handset, base station or charger as you could be exposed to high voltages.

- For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.
- This equipment is not designed to make emergency calls when the power fails. An alternative has to be made available to allow emergency calls.
- Do not allow the product to come into contact with liquids.
- Do not use any cleaning agents containing alcohol, ammonia, benzene, or abrasives as these may harm the set.
- Do not expose the phone to excessive heat caused by heating equipment or direct sunlight.
- Do not drop your phone or allow objects to fall on your phone.
- Active mobile phones in the vicinity may cause interference.

About operating and storage temperatures


- Operate in a place where temperature is always between 0°C to +40°C (up to 90% relative humidity).
- Store in a place where temperature is always between -20°C and +45°C (up to 95% relative humidity).
- Battery life may be shorter in low temperature conditions.

2 Your phone

Congratulations on your purchase and welcome to Philips!

To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

What is in the box

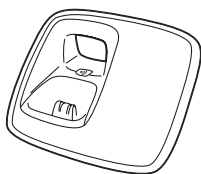

Base station (CD191)




Base station (CD196)



Handset**



Charger**

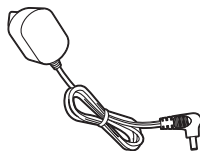

Power adapter**



Line cord*



Guarantee








Quick start guide

Note

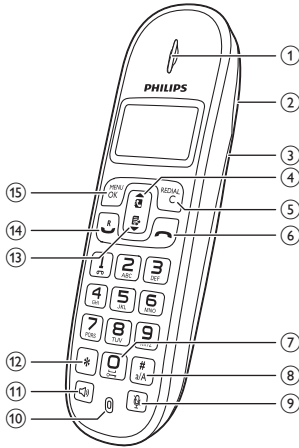



- * In some countries, you have to connect the line adapter to the line cord, then plug the line cord to the telephone socket.
- ** In multi-handset packs, there are additional handsets and chargers and power adapters.

Overview of the phone




- ① Earpiece
- ② Loudspeaker
- ③ Battery door
- ④ 
 - Scroll up on the menu.
 - Increase the earpiece/speaker volume.
 - Access the phonebook.
- ⑤ REDIAL/C
 - Delete text or digits.
 - Cancel operation.
 - Access the redial list.
- ⑥ 
 - End the call.
 - Exit the menu/operation.
 - Press and hold to switch the handset on or off.
- ⑦ 
 - Press to enter a space during text editing.
 - Press and hold to lock the keypad.
- ⑧ 
 - Make a predial call.
 - Press and hold to enter a pause.

- Switch to upper/lower case during editing.

- ⑨  Mute or unmute the microphone.
- ⑩ **Microphone**
- ⑪ 
 - Turn the speaker phone is on/off.
 - Make and receive calls through the speaker.
- ⑫ *
 - Set the dial mode (pulse mode or temporary tone mode).
- ⑬ 
 - Scroll down on the menu.
 - Decrease the earpiece/speaker volume.
 - Access the call log.
- ⑭ 
 - Make and receive calls.
 - Recall key
- ⑮ **MENU/OK**
 - Access the main menu.
 - Confirm selection.
 - Enter the options menu.
 - Select the function displayed on the handset screen directly above the key.


Overview of the base station

CD191

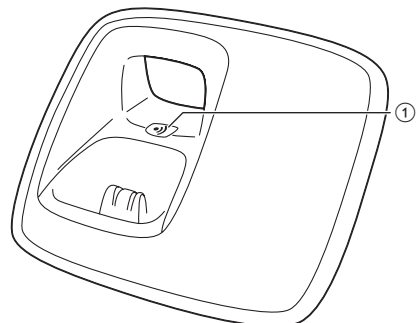

- ① **📶**
- Find handsets.
 - Enter the registration mode.

CD196

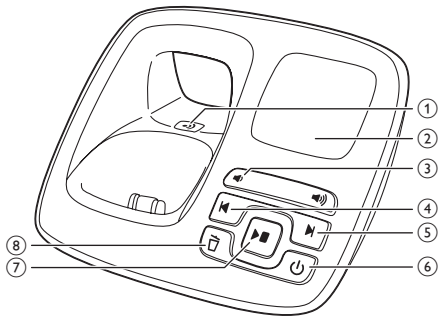

- ① **📶**
- Find handsets
 - Enter registration mode
- ② **Speaker**
- ③ **🔊 / 🔊**
Decrease/increase the speaker volume.
- ④ **⏮**
Skip backward during playback.
- ⑤ **⏭**
Skip forward during playback.
- ⑥ **🔌**
Turn the answering machine on/off.
- ⑦ **▶■**
- Play messages.
 - Stop messages playback.
- ⑧ **🗑**
- Delete the current playback message.
 - Press and hold to delete all old messages.

Display icons

In standby mode, the icons shown on the main screen tell you what features are available on your handset.

Icon	Descriptions
🔌	When the handset is off the base station/charger; the bars indicate the battery level (from full to low). When the handset is on the base station/charger; the bars keep scrolling until charging is complete.
🔌	The empty battery icon flashes and you hear an alert tone. The battery is low and needs recharging.
📶	The number of bar indicates the link status between the handset and base station. The more bars are shown, the better the signal or the connection is.
📞	It remains steadily on when browsing incoming calls in the call log.
📞➔	It indicates an outgoing call in the redial list.
📞	It flashes when there is a new missed call or when browsing new missed calls. It remains steadily on when browsing the missed calls in call log that are already read.
📞	It flashes when receiving incoming call. It remains steadily on during a call..
🔊	The speaker is on.
🔇	The ringer is off.
📞	Answering machine: it flashes when there is a new message. It displays when the telephone answering machine is turned on.
✉	It flashes when there is a new voice message. It remains steadily on when the voice messages are already viewed in the call log. The icon is not shown when there is no voice message.

-
- ▲ / It is displayed when you scroll up/down a list/increase and decrease the volume.
 - ▼
 - ▶ There are more digits on the right. Press **REDIAL/C** to read.
-

3 Get started

! Caution

- Make sure that you have read the safety instructions in the 'Important safety instruction' section before you connect and install your handset.

Connect the base station


! Warning

- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the phone.
- Use only the supplied power adapter to charge the batteries.


☰ Note

- If you subscribe to the digital subscriber line (DSL) high speed internet service through your telephone line, ensure you install a DSL filter between the telephone line cord and the power socket. The filter prevents noise and caller ID problems caused by the DSL interference. For more information on the DSL filters, contact your DSL service provider.
- The type plate is located on the bottom of the base station.

- 1 Connect each end of the power adapter to:
 - the DC input jack at the bottom of the base station;
 - the power socket on the wall.
- 2 Connect each end of the line cord to:
 - the telephone socket at the bottom of the base station;
 - the telephone socket on the wall.

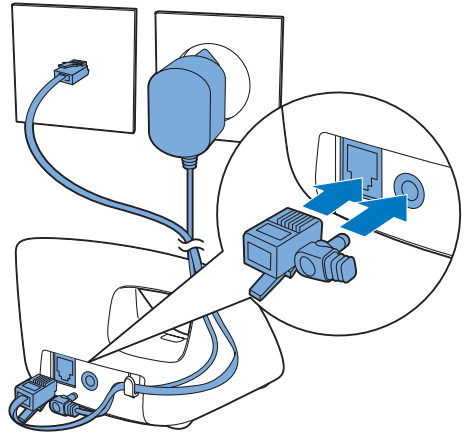


- 3 Connect each end of the power adapter to (for multi handset version only):
 - the DC input jack at the bottom of the extra handset charger.
 - the power socket on the wall.

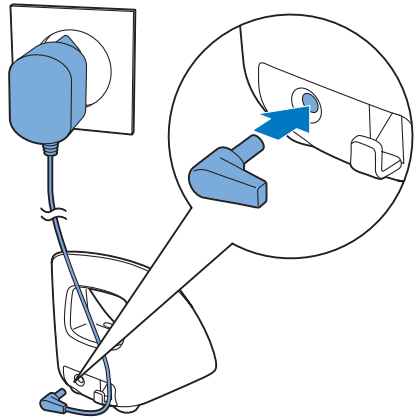

Install the handset

The batteries are pre-installed in the handset. Pull the battery tape off from the battery door before charging.

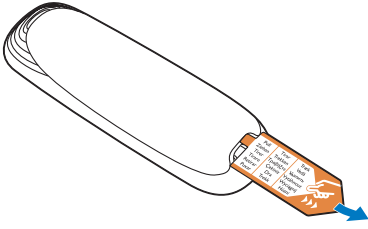

Caution

- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.
- Use only the supplied batteries.
- Risk of decreased battery life! Never mix different brands or types of batteries.

Note

- Charge the batteries for 8 hours before first use.
- If the handset becomes warm when the batteries are being charged, it is normal.

Warning

- Check the battery polarity when inserting in the battery compartment. Incorrect polarity may damage the product.

The batteries are pre-installed in the handset. Pull the battery tape off from the battery door before charging.

Configure your phone (country dependent)

- 1 When using your phone for the first time, you see a welcome message.
- 2 Press **MENU/OK**.

Set the country/language

Select your country/language, then press **MENU/OK** to confirm.

↳ The country/language setting is saved.

Note

- The country/language setting option is country dependent. If no welcome message is displayed, it means the country/language setting is preset for your country. Then you can set the date and time.

To re-set the language, see the following steps.

- 1 Select **[Menu] > [Phone setup] > [Language]**, then press **MENU/OK** to confirm.
- 2 Select a language, then press **MENU/OK** to confirm.
↳ The setting is saved.

Set the date and time

Tip

- To set the date and time later, press **REDIAL/C** to skip this setting.

- 1 Press **MENU/OK**.
- 2 Select **[Phone setup] > [Date & time]**, then press **MENU/OK** to confirm.
- 3 Press the numeric buttons to enter the date, then press **MENU/OK** to confirm.
↳ The time setting menu is displayed on the handset.
- 4 Press the numeric buttons to enter the time.
 - If the time is in 12-hour format, press **⏰ / ⏰** to select **[AM]** or **[PM]**.
- 5 Press **MENU/OK** to confirm.

Change the remote access PIN code

Note

- The default answering machine remote access PIN code is 0000 and it is important to change it to ensure the security.

- 1 Press **MENU/OK**.
- 2 Select **[Answ. Machine] > [Remote access] > [Change PIN]**, then press **MENU/OK** to confirm.
- 3 Enter the old PIN, then press **MENU/OK** to confirm.
- 4 Enter the new PIN code, then press **MENU/OK** to confirm.
- 5 Enter the new PIN code again, then press **MENU/OK** to confirm.
 ↳ The setting is saved.

Charge the handset

Place the handset on the base station to charge the handset. When the handset is placed correctly on the base station, you hear a docking sound.


↳ The handset starts charging.

Note




- Charge the batteries for 8 hours before first use.
- If the handset becomes warm when the batteries are being charged, it is normal.

You can activate or deactivate the docking tone (see 'Set the docking tone' on page 21).
 Your phone is now ready to use.

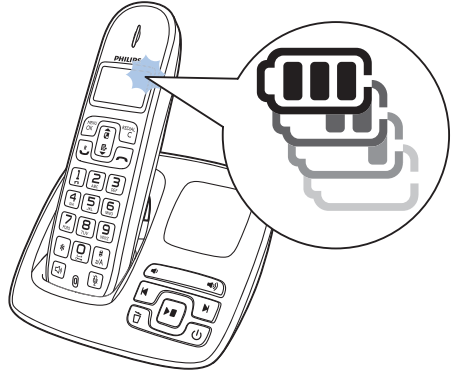Check the battery level



The battery icon displays the current battery level.

-  When the handset is off the base station/charger, the bars indicate the battery level (full, medium and low).
-  When the handset is on the base station/charger, the bars flash until charging completes.
-  The empty battery icon flashes. The battery is low and needs recharging.

The handset turns off if the batteries are empty. If you are on the phone, you hear warning tones when the batteries are almost empty. The call gets disconnected after the warning.

What is standby mode?


Your phone is in standby mode when it is idle. The standby screen displays the handset name, handset number, date and time.

Check the signal strength

ii. The number of bars indicates the link status between the handset and base station. The more bars are shown, the better the connection is.

- Make sure the handset is linked to the base station before you make or receive calls and carry out the phone functions and features.
- If you hear warning tones when you are on the phone, the handset is almost out of battery or the handset is out of range. Charge the battery or move the handset nearer to the base station.

Switch the handset on or off

Press and hold  to switch the handset on or off.

4 Calls

Note

- When the power fails, the phone cannot access emergency services.

Tip

- Check the signal strength before you make a call or when you are in a call (see 'Check the signal strength' on page 11).

Make a call

You can make a call in these ways:

- Quick call
- Dial before you call
- Redial the most recent number
- Call from the redial list.
- Call from the phonebook list
- Call from the call log

Quick call

- 1 Press or .
- 2 Dial the phone number.
 - ↳ The number is dialed out.
 - ↳ The duration of your current call is displayed.

Dial before you call

- 1 Dial the phone number
 - To erase a digit, press **REDIAL/C**.
 - To enter a pause, press and hold .

- 2 Press or to dial out the call.

Redial the most recent number

- 1 Press **REDIAL/C**.
 - ↳ The redial list is displayed and the most recent number is highlighted.

- 2 Press or to dial out the call.

Call from the redial list

You can make a call from the redial list (see 'Redial a call' on page 20).

Call from the phonebook

You can make a call from the phonebook list (see 'Call from the phonebook' on page 16).

Call from the call log

You can return a call from the received or missed call log (see 'Return a call' on page 18).

Note

- The call timer displays the talk time of your current call.

Note

- If you hear warning tones, the handset is almost out of battery or the handset is out of range. Charge the battery or move the handset nearer to the base station.

End a call

You can end a call in these ways:

- Press ; or
- Place the handset to the base station or charging cradle.

Answer a call

When there is an incoming call, press or to answer the call.

Warning

- When the handset rings or when the handsfree is activated, keep the handset away from your ear to avoid ear damage.

Note

- The caller ID service is available if you have registered to the caller ID service with your service provider.



Tip

- When there is a missed call, a notification message appears.



Turn off the ringer for all incoming calls

When the phone rings, press **REDIAL/C**.

Mute the microphone

- 1 Press  during a call.
 - ↳ The handset displays **[Mute on]**.
 - ↳ The caller cannot hear you, but you can still hear his voice.
- 2 Press  again to unmute the microphone.
 - ↳ You can now communicate with the caller.

Adjust the earpiece/speaker volume

- Press  /  to adjust the volume during a call.
- ↳ The earpiece/speaker volume is adjusted and the phone is back to the call screen.


Turn the speaker on or off

Press .

Make a second call

Note

- This service is network dependent.





- 1 Press  during a call.
 - ↳ The first call is put on hold.
- 2 Dial the second number:
 - ↳ The number displayed on the screen is dialed out.

Answer a second call

Note

- This service is network dependent.

When there is a periodical beep to notify you of an incoming call, you can answer the call in these ways:

- 1 Press  and  to answer the call.
 - ↳ The first call is put on hold, and you are now connected to the second call.
- 2 Press  and  to end the current call and answer the first call.

Switch between two calls



- 1 Press  and .
 - ↳ The current call is put on hold, and you are now connected to the other call.

Make a conference call with the external callers



Note

- This service is network dependent. Check with the service provider for additional charges.




When you are connected to two calls, press , then .

- ↳ The two calls are combined and a conference call is established.

 
5 Text and numbers

You can enter text and numbers for handset name, phonebook records, and other menu items.

Enter text and numbers

- 1 Press once or several times on the alphanumeric key to enter the selected character.
- 2 Press **REDIAL/C** to delete the character. Press  and  to move the cursor left and right.
- 3 Press  to add a space.

Switch between uppercase and lowercase

By default, the first letter of each word in a sentence is uppercase and the rest is lowercase. Press and hold  to switch between the uppercase and lowercase letters.

6 Phonebook

This phone has a phonebook that stores up to 50 records. You can access the phonebook from the handset. Each record can have a name up to 14 characters long and a number up to 24 digits long.

There are 2 direct access memories (keys **1** and **2**). Depending on your country, keys **1** and **2** are preset to the voice mail number and information service number of your service provider respectively. When you press and hold on the key in standby mode, the saved phone number is dialed automatically.

View the phonebook



Note

- You can view the phonebook on one handset only each time.

- Press **⏏** or press **MENU/OK** > **[Phonebook]** > **[View]** to access the phonebook list.
- Select a contact and view the available information.

Search a record

You can search the phonebook records in these ways:

- Scroll the contacts list.
- Enter the first character of the contact.

Scroll the contact list

- Press **⏏** or press **MENU/OK** > **[Phonebook]** > **[View]** to access the phonebook list.
- Press **⏏** and **⏏** to scroll through the phonebook list.

Enter the first character of a contact

- Press **⏏** or press **MENU/OK** > **[Phonebook]** > **[View]** to access the phonebook list.
- Press the alphanumerical key that matches the character:
 - ↳ The first record that starts with this character is displayed.

Call from the phonebook

- Press **⏏** or press **MENU/OK** > **[Phonebook]** > **[View]** to access the phonebook list.
- Select a contact in the phonebook list.
- Press **⏏** to make the call.

Access the phonebook during a call

Press **MENU/OK**, select **[Phonebook]**, then press **MENU/OK** again to confirm.

- Select the contact, then press **MENU/OK** to view the number.

Add a record



Note

- If your phonebook memory is full, the handset displays a notification message. Delete some records to add new ones.

- Press **MENU/OK**.
- Select **[Phonebook]** > **[Add new]**, then press **MENU/OK** to confirm.
- Enter the name, then press **MENU/OK** to confirm.

- 4 Enter the number, then press **MENU/OK** to confirm
↳ Your new record is saved.



Tip

- Press and hold **#** to insert a pause.

Note

- The phonebook overwrites the old number with the new number.

Tip

- Press once or several times on the alphanumeric key to enter the selected character.
- Press **REDIAL/C** to delete the character: Press  and  to move the cursor left and right.

- ↳ The handset displays a confirmation request.

- 4 Press **MENU/OK** to confirm.
↳ The record is deleted.

Delete all records

- 1 Press **MENU/OK**.
- 2 Select **[Phonebook] > [Delete all]**, press **MENU/OK** to confirm.
↳ The handset displays a confirmation request.
- 3 Press **MENU/OK** to confirm.
↳ All records (except the 2 direct access memory records) are deleted.

Edit a record


- 1 Press **MENU/OK**.
- 2 Select **[Phonebook] > [Edit]**, then press **MENU/OK** to confirm.
- 3 Select a contact, then press **MENU/OK** to confirm.
- 4 Edit the name, then press **MENU/OK** to confirm.
- 5 Edit the number, then press **MENU/OK** to confirm.
↳ The record is saved.

Delete a record

- 1 Press **MENU/OK**.
- 2 Select **[Phonebook] > [Delete]**, then press **MENU/OK** to confirm.
- 3 Select a contact, then press **MENU/OK** to confirm.



7 Call log

The call log stores the call history of all missed or received calls. The incoming call history includes the name and number of the caller, call time and date. This feature is available if you have registered to the caller ID service with your service provider. Your phone can store up to 20 call records. The call log icon on the handset flashes to remind you of any unanswered calls. If the caller allows the display of his identity, you can view his name or number. The call records are displayed in chronological order with the most recent received call at the top of the list.

 Note

- Make sure that the number in the call list is valid before you can call back directly from the call list.

The icons shown on the screen tell you whether they are missed/received calls.

Icons	Description
	It remains steadily on when browsing incoming calls in the call log.
	It flashes when there is a new missed call. It remains steadily on when browsing the missed calls in call log.

Call list type


You can set whether you can view all incoming calls or missed calls from this menu.

Select the call list type


- 1 Press **MENU/OK**.
- 2 Select **[Services] > [Call list type]**, then press **MENU/OK** to confirm.

- 3 Select an option, then press **MENU/OK** to confirm.



View the call records

- 1 Press .
↳ The incoming call log is displayed.
- 2 Select a record, then press **MENU/OK** and **[View]** select for more available information.


Save a call record to the phonebook

- 1 Press .
↳ The incoming call log is displayed.
- 2 Select a record, then press **MENU/OK** to confirm.
- 3 Select **[Save number]**, then press **MENU/OK** to confirm.
- 4 Enter and edit the name, then press **MENU/OK** to confirm.
- 5 Enter and edit the number, then press **MENU/OK** to confirm.
↳ The record is saved.

Return a call

- 1 Press .
- 2 Select a record on the list.
- 3 Press  to make the call.

Delete a call record

- 1 Press .
↳ The incoming call log is displayed.

- 2 Select a record, then press **MENU/OK** to confirm.
- 3 Select [**Delete**], then press **MENU/OK** to confirm
 - ↳ The handset displays a confirmation requests.
- 4 Press **MENU/OK** to confirm.
 - ↳ The record is deleted.

Delete all call records

- 1 Press **☰**.
 - ↳ The incoming call log is displayed.
- 2 Press **MENU/OK** to enter the options menu.
- 3 Select [**Delete all**], then press **MENU/OK** to confirm
 - ↳ The handset displays a confirmation requests.
- 4 Press **MENU/OK** to confirm.
 - ↳ All records are deleted.

8 Redial list

The redial list stores the call history of dialed calls. It includes the names and/or numbers you have called. This phone can store up to 10 redial records.

View the redial records

Press **REDIAL/C**.

Redial a call

- 1 Press **REDIAL/C**.
- 2 Select a record, then press **↵**.
↳ The number is dialed out.

Save a call record to the phonebook

- 1 Press **REDIAL/C** to enter the list of dialed calls.
- 2 Select a record, then press **MENU/OK** to confirm.
- 3 Select **[Save number]**, then press **MENU/OK** to confirm.
- 4 Enter and edit the name, then press **MENU/OK** to confirm.
- 5 Enter and edit the number, then press **MENU/OK** to confirm.
↳ The record is saved.

Delete a redial record

- 1 Press **REDIAL/C** to enter the list of dialed calls.

- 2 Select a record, then press **MENU/OK** to confirm.
- 3 Select **[Delete]**, then press **MENU/OK** to confirm.
↳ The handset displays a confirmation request.
- 4 Press **MENU/OK** to confirm.
↳ The record is deleted.

Delete all redial records

- 1 Press **REDIAL/C** to enter the list of dialed calls.
- 2 Select a record, then press **MENU/OK** to confirm.
- 3 Select **[Delete all]**, then press **MENU/OK** to confirm.
↳ The handset displays a confirmation request.
- 4 Press **MENU/OK** to confirm.
↳ The record is deleted.

9 Phone settings

You can customize the settings to make it your own phone.

Sound settings

Set the handset's ringtone volume

You can select among 5 ringtone volume levels or [Off].

- 1 Press **MENU/OK**.
- 2 Select [**Phone setup**] > [**Sounds**] > [**Ring volume**], then press **MENU/OK** to confirm.
- 3 Select a volume level, then press **MENU/OK** to confirm.
↳ The setting is saved.

Set the handset's ringtone

You can select from 10 ringtones.

- 1 Press **MENU/OK**.
- 2 Select [**Phone setup**] > [**Sounds**] > [**Ring tones**], then press **MENU/OK** to confirm.
- 3 Select a ringtone, then press **MENU/OK** to confirm.
↳ The setting is saved.

Set the key tone

Key tone is the sound made when you press a key on the handset.

- 1 Press **MENU/OK**.
- 2 Select [**Phone setup**] > [**Sounds**] > [**Key tone**], then press **MENU/OK** to confirm.
- 3 Select [**On**]/[**Off**], then press **MENU/OK** to confirm.
↳ The setting is saved.

Set the docking tone

Docking tone is the sound made when you place the handset on the base station or charger:

- 1 Press **MENU/OK**.
- 2 Select [**Phone setup**] > [**Sounds**] > [**Docking tone**], then press **MENU/OK** to confirm.
- 3 Select [**On**]/[**Off**], then press **MENU/OK** to confirm.
↳ The setting is saved.

Name the handset

The name of the handset can be up to 10 characters. It is displayed on the handset screen in standby mode.

- 1 Press **MENU/OK**.
- 2 Select [**Phone setup**] > [**Phone name**], then press **MENU/OK** to confirm.
- 3 Enter or edit the name. To erase a character, press **REDIAL/C**.
- 4 Press **MENU/OK** to confirm.
↳ The setting is saved.

Set the date and time

For information, see 'Set the date and time' and 'Set the date and time format' in the Get started section.

Set the display language

Note

- This feature only applies to models with multiple-language support.
- Languages available vary from country to country.

- 1 Press **MENU/OK**.

- 2 Select **[Phone setup]** > **[Language]**, then press **MENU/OK** to confirm.
- 3 Select a language, then press **MENU/OK** to confirm.
↳ The setting is saved.

10 Services

The phone supports a number of features that help you handle and manage the calls.

Call list type

You can set whether you can view all incoming calls or missed calls from this menu.

Select the call list type

- 1 Press **MENU/OK**.
- 2 Select **[Services]** > **[Call list type]**, then press **MENU/OK** to confirm.
- 3 Select an option, then press **MENU/OK** to confirm.

Auto conference

To join an external call with another handset, press **R**.

Activate/Deactivate auto conference

- 1 Press **MENU/OK**.
- 2 Select **[Services]** > **[Conference]**, then press **MENU/OK** to confirm.
- 3 Select **[Auto]/[Off]**, then press **MENU/OK** to confirm.
↳ The setting is saved.

Manage the carrier code

Note

- This feature only applies to models with carrier code support.

You can define a carrier code (up to 5 digits). This carrier code is automatically removed from an incoming call if it matches with the code you define. Then the phone number is saved in the call log without a carrier code.

Activate auto removal of the carrier code

- 1 Press **MENU/OK**.
- 2 Select **[Services]** > **[Carrier code]**, then press **MENU/OK** to confirm.
- 3 Enter the carrier code, then press **MENU/OK** to confirm.
↳ The setting is saved.

Deactivate auto removal of the carrier code

- 1 Press **MENU/OK**.
- 2 Select **[Services]** > **[Carrier code]**, then press **MENU/OK** to confirm.
- 3 Press **REDIAL/C** to delete the digits.
- 4 Press **MENU/OK** to confirm.
↳ The setting is saved.

Manage the area code

Note

- This feature only applies to models with area code support.

You can define an area code (up to 5 digits). This area code is automatically removed from an incoming call if it matches with the code you define. Then the phone number is saved in the call log without an area code.

Activate auto removal of the area code

- 1 Press **MENU/OK**.

- 2 Select **[Services]** > **[Area code]**, then press **MENU/OK** to confirm.
- 3 Enter the area code, then press **MENU/OK** to confirm.
↳ The setting is saved.

Deactivate auto removal of the area code

- 1 Press **MENU/OK**.
- 2 Select **[Services]** > **[Area code]**, then press **MENU/OK** to confirm.
- 3 Press **REDIAL/C** to delete the digits.
- 4 Press **MENU/OK** to confirm.
↳ The setting is saved.

Network type

Note

- This feature only applies to models with network type support.

- 1 Press **MENU/OK**.
- 2 Select **[Services]** > **[Network type]**, then press **MENU/OK**.
- 3 Select a network type, then press **MENU/OK**.
↳ The setting is saved.

Auto prefix

This feature checks and formats your outgoing call number before it is dialed out. The prefix number can replace the detect number you set in the menu. For example, you set 604 as the detect number and 1250 as the prefix. When you have dialed out a number such as 6043338888, your phone changes the number to 12503338888 when it dials out.

Note

- The maximum length of a detect number is 5 digits. The maximum length of an auto prefix number is 10 digits.

Note

- This is a country dependent feature.

Set auto prefix

- 1 Press **MENU/OK**.
- 2 Select **[Services]** > **[Auto prefix]**, then press **MENU/OK** to confirm.
- 3 Enter the detect number, then press **MENU/OK** to confirm.
- 4 Enter the prefix number, then press **MENU/OK** to confirm.
↳ The setting is saved.

Note

- To enter a pause, press and hold $\frac{\#}{a/A}$.

Note

- If the prefix number is set and the detect number is left empty, the prefix number is added to all outgoing calls.

Note

- The feature is unavailable if the dialed number starts with * and #.

Select the recall duration

Make sure that the recall time is set correctly before you can answer a second call. In normal case, the phone is already preset for the recall duration. You can select among 3 options: **[Short]**, **[Medium]** and **[Long]**. The number of

available options varies with different countries. For details, consult your service provider.

- 1 Press **MENU/OK**.
- 2 Select **[Services] > [Recall time]**, then press **MENU/OK** to confirm.
- 3 Select an option, then press **MENU/OK** to confirm.
↳ The setting is saved.

Dial mode

Note

- This feature only applies to models that support both tone and pulse dial.

Dial mode is the telephone signal used in your country. The phone supports tone (DTMF) and pulse (rotary) dial. Consult the service provider for detailed information.

Set the dial mode

- 1 Press **MENU/OK**.
- 2 Select **[Services] > [Dial mode]**, then press **MENU/OK** to confirm.
- 3 Select a dial mode, then press **MENU/OK** to confirm.
↳ The setting is saved.

Note

- If your phone is in pulse dial mode, press * during a call for temporary tone mode. Digits entered for this call are then sent out as tone signals.

Register the handsets

You can register additional handsets to the base station. The base station can register up to 4 handsets.

- 1 Press **MENU/OK** on the handset.

- 2 Select **[Services] > [Register]**, then press **MENU/OK** to confirm.
- 3 Enter the system PIN. Press **REDIAL/C** to make corrections. Press **MENU/OK** to confirm the PIN.
- 4 Press and hold **(*)** on the base station for 5 seconds.

Note

- For models with an answering machine, you hear a confirmation beep.

↳ Registration is complete in less than 2 minutes. The base automatically assigns a handset number to the handset.

Note

- If the PIN is incorrect or no base is found within a certain period, your handset displays a notification message. Repeat the above procedure if registration fails.

Note

- The preset PIN is 0000. No change can be made on it.

Unregister the handsets

- 1 If two handsets share the same base station, you can unregister a handset with another handset.
- 2 Press **MENU/OK**.
- 3 Select **[Services] > [Unregister]**, then press **MENU/OK** to confirm.
- 4 Enter the system PIN. (The preset PIN is 0000). Press **REDIAL/C** to remove the number.
- 5 Select the handset number to be unregistered.
- 6 Press **MENU/OK** to confirm.
↳ The handset is unregistered.



Tip

- The handset number displays beside the handset name in standby mode.

Restore default settings

You can reset your phone settings to the original factory settings.

- 1** Press **MENU/OK**.
- 2** Select **[Services] > [Reset]**, then press **MENU/OK** to confirm.
 - ↳ The handset displays a confirmation request.
- 3** Press **MENU/OK** to confirm.
 - ↳ All settings are reset.

11 Telephone answering machine

Note

- Available only for CD196.

Your phone includes a telephone answering machine that records unanswered calls when it is on. You can access the answering machine remotely and change the settings through the answering machine menu on the handset. The ► button on the base station lights up when the answer machine is on.

Turn the answering machine on or off

You can turn the answering machine on or off through the base station or the handset.

Through the base

Press **⏻** to turn the answering machine on or off in standby mode.

Note

- When the answering machine is switched on, it answers incoming calls after a certain number of rings based on the ring delay setting.

Through the handset

- 1 Press **MENU/OK**.
- 2 Select **[Answ. Machine] > [Voice answer]**, then press **MENU/OK** to confirm.
- 3 Select **[Answer only]/[Record also]/[Off]**, then press **MENU/OK** to confirm.

↳ The setting is saved.

Set the answering machine language

Note

- This feature only applies to models with multiple-language support.

The answering machine language is the language for the announcements.

- 1 Press **MENU/OK**.
- 2 Select **[Answ. Machine] > [Voice language]**, then press **MENU/OK** to confirm.
- 3 Select a language, then press **MENU/OK** to confirm.
↳ The setting is saved.

Set the answer mode

You can set the answering machine and select if the callers can leave messages. Select **[Record also]** if you allow the callers to leave messages. Select **[Answer only]** if you forbid the callers to leave messages.

- 1 Press **MENU/OK**.
- 2 Select **[Answ. Machine] > [Voice answer]**, then press **MENU/OK** to confirm.
- 3 Select an answer mode, then press **MENU/OK** to confirm.
↳ The setting is saved.

Note

- If the memory is full, the answering machine switches to **[Answer only]** mode automatically.

Announcements

The announcement is the message your caller hears when the answering machine picks up the call. The answering machine has 2 default announcements: the **[Record also]** mode and **[Answer only]** mode.

Record an announcement

The maximum length of the announcement you can record is 3 minutes. The newly recorded announcement automatically replaces the old one.

- 1 Press **MENU/OK**.
- 2 Select **[Answ. Machine]** > **[Announcement]**, then press **MENU/OK** to confirm.
- 3 Select **[Record also]** or **[Answer only]**, then press **MENU/OK** to confirm.
- 4 Select **[Record]**, then press **MENU/OK** to confirm.
- 5 Start recording close to the microphone after the beep.
- 6 Press **MENU/OK** to stop recording or the recording stops after 3 minutes.
↳ You can listen to the newly recorded announcement on the handset.

Note

- Make sure that you speak close to the microphone when you record an announcement.



Listen to the announcement

- 1 Press **MENU/OK**.
- 2 Select **[Answ. Machine]** > **[Announcement]**, then press **MENU/OK** to confirm.
- 3 Select **[Record also]** or **[Answer only]**, then press **MENU/OK** to confirm.
- 4 Select **[Play]**, then press **MENU/OK** to confirm.
↳ You can listen to the current announcement.

Note

- You can no longer listen to the announcement when you pick up an incoming call.

Restore the default announcement

- 1 Press **MENU/OK**.
- 2 Select **[Answ. Machine]** > **[Announcement]**, then press **MENU/OK** to confirm.
- 3 Select **[Record also]** or **[Answer only]**, then press **MENU/OK** to confirm.
- 4 Select **[Use default]**, then press **MENU/OK** to confirm.
↳ The handset displays a confirmation request.
- 5 Press **MENU/OK** to confirm.
↳ The default announcement is restored.

Incoming messages (ICM)

Each message can be up to 3 minutes long. When you receive new messages, the new message indicator flashes on the answering machine and the handset displays a notification message.

Note

- If you pick up the phone when the caller leaves a message, the recording stops and you can talk to the caller directly.

Note

- If the memory is full, the answering machine switches to **[Answer only]** automatically. Delete old messages to receive new ones.

Listen to the incoming messages

You can listen to the incoming messages in the sequence they are recorded.

From the base

- To start/Stop listening, press **▶■**.
- To adjust the volume, press **🔊 / 🔊**.
- To play the previous message/replay the current message, press **◀**.
- To play the next message, press **▶**.
- To delete the current message, press **🗑️**.

Note

- No deleted messages can be recovered.

From the handset

Select **MENU/OK > [Answ. Machine] > [Play]**, then press **MENU/OK** to confirm.

- ↳ New messages start playing. Old messages start playing if there is no new message.
- Press **REDIAL/C** to stop listening.
- Press **MENU/OK** to enter the options menu.
- Press **🔊 / 🔊** to increase/decrease the volume.

Delete an incoming message

From the base

Press **🗑️** when you listen to the message.
↳ The current message is deleted.

From the handset

- 1 When you listen to the message, press **MENU/OK** to enter the options menu.
- 2 Select **[Delete]**, then press **MENU/OK** to confirm.
↳ The current message is deleted.

Delete all old incoming messages

From the base

Press and hold **🗑️** in standby mode.

- ↳ All old messages are permanently deleted.

From the handset

- 1 Press **MENU/OK**.
- 2 Select **[Answ. Machine] > [Delete all]**, then press **MENU/OK** to confirm.
↳ The handset displays a confirmation request.
- 3 Press **MENU/OK** to confirm.
↳ All old messages are permanently deleted.

Note

- You can delete the read messages only. No deleted messages can be recovered.

Set the ring delay

You can set the number of times the phone rings before the answering machine picks up the call.

- 1 Press **MENU/OK**.
- 2 Select **[Answ. Machine] > [Ring delay]**, then press **MENU/OK** to confirm.
- 3 Select a new setting, then press **MENU/OK** to confirm.
↳ The setting is saved.

Note

- Make sure that the answering machine is switched on before this feature can be applied.

Tip

- When you access the answering machine remotely, you are recommended to set the ring delay to **[Toll saver]** mode. This is a cost effective way to manage your messages. When there are new messages, the answering machine picks up the call after 3 rings; When there is no messages, it picks up the call after 5 rings.

Remote access

You can operate your answering machine when you are away from home. Simply make a call to your phone with a touch tone phone and enter your 4-digit PIN code.

Note

- The remote access PIN code is the same as your system PIN. The preset PIN is 0000.

Activate/deactivate the remote access

You can allow or block remote access to the answering machine.

- 1 Press **MENU/OK**.
- 2 Select **[Answ. Machine] > [Remote access]**, then press **MENU/OK** to confirm.
- 3 Select **[On]/[Off]**, then press **MENU/OK** to confirm.
↳ The setting is saved.

Change the PIN code

- 1 Press **MENU/OK**.
- 2 Select **[Answ. Machine] > [Remote access] > [Change PIN]**, then press **MENU/OK** to confirm.

- 3 Enter the old PIN, then press **MENU/OK** to confirm.
- 4 Enter the new PIN code, then press **MENU/OK** to confirm.
- 5 Enter the new PIN code again, then press **MENU/OK** to confirm.
↳ The setting is saved.

Access the answering machine remotely

- 1 Make a call to your home number with a touch tone phone.
- 2 Enter **#** when you hear the announcement.
- 3 Enter your PIN code.
↳ You now have access to your answering machine, and you can listen to the new messages.

Note

- You have 2 chances to enter the correct PIN code before your phone hangs up.

- 4 Press a key to carry out a function. See the Remote access commands table below for a list of available functions.

Note

- When there is no message, the phone hangs up automatically if no key is pressed for 8 seconds.

Remote access commands

Key	Function
1	Repeat the current or listen to the previous message.
2	Listen to messages.
3	Skip to the next message.
6	Delete the current message.
7	Switch the answering machine on. (not available when you listen to the messages).

8	Stop listening to the message.
9	Switch the answering machine off. (not available when you listen to the messages).

Behavior of the LED display on the base station

The table below shows you the current status with different LED display behavior on the base station.

LED display	Message status
Steady on	<ul style="list-style-type: none"> • There is no new message and the memory is not full. • The handset is switched on. • Enter the paging mode
Flashing	<ul style="list-style-type: none"> • There is a new message and the memory is not full. • There is an incoming call. • Recording an incoming message/announcement. • Message playback. • Remote access/listen to messages from the handset.
Flashing (Fast)	<ul style="list-style-type: none"> • There is no new message and the memory is full. • Enter the registration mode

12 Technical data

Display

- Amber LCD backlight

General telephone features

- Caller name & number identification
- Conference call and voicemails
- Maximum talk time: 20 hours

Phonebook list, Redial list and Call log

- Phonebook list with 50 entries
- Redial list with 10 entries
- Call log with 20 entries

Battery

- HFR: 2 × AAA NiMH 1.2V rechargeable 650mAh batteries
- SANIK: 2 × AAA NiMH 1.2V rechargeable 650mAh batteries

Power adapter

Base and charger:

- Philips: SSW-1920UK-2, Input: 100-240V 50/60Hz 0.2A; Output: 6V 500mA
- Philips: S003PB0600050, Input: 100-240V 50/60Hz 0.2A; Output: 6V 500mA

Power consumption

- Power consumption in standby mode: 0.6W (CD191) 0.65W (CD196)

Weight and dimensions (CD191)

- Handset: 131 grams
- 162.69 × 47.6 × 29.8 mm (H × W × D)
- Base: 105 grams
- 79 × 130.5 × 90.2 mm (H × W × D)
- Charger: 56 grams
- 77.8 × 40.3 × 82.4 mm (H × W × D)

Weight and dimensions (CD196)

- Handset: 131 grams
- 162.69 × 47.6 × 29.8 mm (H × W × D)
- Base: 138 grams
- 79 × 130.5 × 90.2 mm (H × W × D)
- Charger: 56 grams
- 77.8 × 40.3 × 82.4 mm (H × W × D)

13 Notice

Declaration of conformity

Hereby Philips Consumer Lifestyle, declares that the CD191/CD196 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. You can find the Declaration of Conformity on www.p4c.philips.com.

This product has been designed, tested and manufactured according the European R&TTE directive 1999/5/EC.

Use GAP standard compliance

The GAP standard guarantees that all DECT™ GAP handsets and base stations comply with a minimum operating standard irrespective of their make. The handset and base station are GAP compliant, which means they guarantee the minimum functions: register a handset, take the line, make a call and receive a call. The advanced features may not be available if you use them with other makes. To register and use this handset with a GAP compliant base station of different make, first follow the procedure described in the manufacturer's instructions, then follow the procedure described in this manual for registering a handset. To register a handset from different make to the base station, put the base station in registration mode, then follow the procedure described in the handset manufacturer's instructions.

Compliance with EMF

Koninklijke Philips Electronics N.V. manufactures and sells many products targeted at consumers, which, like any electronic apparatus, in

general have the ability to emit and receive electromagnetic signals.

One of Philips' leading Business Principles is to take all necessary health and safety measures for our products, to comply with all applicable legal requirements and to stay well within the EMF standards applicable at the time of producing the products.

Philips is committed to develop, produce and market products that cause no adverse health effects. Philips confirms that if its products are handled properly for their intended use, they are safe to use according to scientific evidence available today.

Philips plays an active role in the development of international EMF and safety standards, enabling Philips to anticipate further developments in standardization for early integration in its products.

Disposal of your old product and batteries



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC. Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste.

Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.



Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.



When this logo is attached to a product, it means a financial contribution has been paid to the associated national recovery and recycling system.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

14 Frequently asked questions

No signal bar is displayed on the screen.

- The handset is out of range. Move it closer to the base station.
- If the handset displays **[Unregister]**, register your handset.



Tip

- For further information, see the chapter 'Services', section 'Register the handsets'.

If I fail to register the additional handsets to the base station, what do I do?

Your base memory is full. Unregister the unused handsets and try again.

No dialing tone

- Check your phone connections.
- The handset is out of range. Move it closer to the base station.

No docking tone

- The handset is not placed properly on the base station/charger.
- The charging contacts are dirty. Disconnect the power supply first and clean the contacts with a damp cloth.

I cannot change the settings of my voice mail, what do I do?

The voice mail service is managed by your service provider but not the phone itself. Contact your service provider to change the settings.

The handset on the charger does not charge.

- Make sure the batteries are inserted correctly.
- Make sure the handset is placed properly on the charger. The battery icon animates when charging.
- Make sure the docking tone setting is turned on. When the handset is placed correctly on the charger, you can hear a docking tone.

- The charging contacts are dirty. Disconnect the power supply first and clean the contacts with a damp cloth.
- Batteries are defective. Purchase new ones from your dealer.

No display

- Make sure the batteries are charged.
- Make sure there is power and the phone is connected.

Bad audio (crackles, echo, etc.)

- The handset is nearly out of range. Move it closer to the base station.
- The phone receives interference from the nearby electrical appliances. Move the base station away from them.
- The phone is at a location with thick walls. Move the base away from them.

The handset does not ring.

Make sure the handset ringtone is turned on.

The caller ID does not display.

- The service is not activated. Check with your service provider.
- The caller's information is withheld or unavailable.



Note

- If the above solutions do not help, disconnect the power supply from both the handset and base station. Try again after 1 minute.

15 Appendix

Text and number input tables

Key Upper case characters (for English/
French/ German/ Italian/Turkish/
Portuguese/Spanish/Dutch/Danish/
Finnish/Norwegian/ Swedish/ Romanian/
Polish/Czech/Hungarian/Slovakian/
Slovenian/Croatian/Lithuanian/Estonian/
Latvian/Bulgarian)

0	Space . 0 , / ; " ' ! j ? i * + - %
1	1 @ _ # = < > () & € £ \$ ¥ [] { } ¢ § ...
2	A B C 2 Å Æ Á Ā Ă Ą Ć Ĉ Ċ
3	D E F 3 É Ê Ë Ę Δ Φ
4	G H I 4 Ğ Ĩ Ĵ Ĳ
5	J K L 5 Λ
6	M N O 6 Ñ Ó Ô Õ Ö
7	P Q R S 7 Ś Š Π Θ Σ
8	T U V 8 Û Ü Ū
9	W X Y Z 9 Ø Ω Ξ Ψ Ž

Key Lower case characters (for English/
French/ German/ Italian/Turkish/
Portuguese/Spanish/Dutch/Danish/
Finnish/Norwegian/ Swedish)

0	Space . 0 , / ; " ' ! j ? i * + - %
1	1 @ _ # = < > () & € £ \$ ¥ [] { } ¢ § ...
2	a b c 2 à â ä å á Ā Ă Ą Ć Ĉ Ċ
3	d e f 3 é ê ë ě Δ Φ
4	g h i 4 ğ ĩ ĵ ĳ
5	j k l 5 λ
6	m n o 6 ñ ó ô õ ö ò
7	p q r s 7 ś š π θ σ
8	t u v 8 ù ü ū
9	w x y z 9 ø ω ξ ψ ž

Key Upper case characters (for Greek)

0	Space . 0 , / ; " ' ! j ? i * + - % \ ^ ~
1	1 @ _ # = < > () & € £ \$ ¥ [] { } ¢ § ...
2	A B Γ 2 A B C Æ Å Ć

3	Δ Ε Ζ 3 Δ Ε F É
4	H Θ Ι 4 G H I
5	K Λ Μ 5 J K L
6	N Ξ Ο 6 M N O Ñ Ö
7	Π Ρ Σ 7 P Q R S Β
8	T Υ Φ 8 T U V Û
9	X Ψ Ω 9 W X Y Z Ø

Key Lower case characters (for Greek)

0	Space . 0 , / ; " ' ! j ? i * + - % \ ^ ~
1	1 @ _ # = < > () & € £ \$ ¥ [] { } ¢ § ...
2	α β γ 2 a b c à æ å ä
3	δ ε ζ 3 d e f è é
4	η θ ι 4 g h i ï
5	κ λ μ 5 j k l λ
6	ν ξ ο 6 m n o ñ ö ò
7	π ρ σ ς 7 p q r s β
8	τ υ φ 8 t u v ù ü
9	χ ψ ω 9 w x y z ø

Key Upper case characters (for Serbian)

0	Space . 0 , / ; " ' ! j ? i * + - % \ ^ ~
1	1 @ _ # = < > () & € £ \$ ¥ [] { } ¢ § ...
2	A B C Ђ Ć Č 2 A B В Г
3	D E F Ј Đ 3 Δ E Ж 3 Δ Ф
4	G H I Љ 4 И Й К Л Г
5	J K L Њ 5 M H O П Л
6	M N O Ћ 6 P C T Y
7	P Q R S Ж Š 7 Ф X Ц Ч П Θ Σ Β
8	T U V 8 Ш Щ Ъ Ы
9	W X Y Z Ž 9 Ђ Э Ю Я Ω Ξ Ψ

Key Lower case characters (for Serbian)

0	Space . 0 , / ; " ' ! j ? i * + - % \ ^ ~
1	1 @ _ # = < > () & € £ \$ ¥ [] { } ¢ § ...
2	a b c Ђ Ć Č 2 A B В Г
3	d e f Ј Đ 3 Δ E Ж 3
4	g h i Љ 4 И Й К Л
5	j k l Њ 5 M H O П
6	m n o Ћ 6 P C T Y

7	pqrSЖš7ФХЦЧПΘΣΒ
8	tuvij8ШЩЪЫ
9	wxyZŽ9бэЮЯΩΞΨ



CE 0168



Specifications are subject to change without notice
© 2012 Koninklijke Philips Electronics N.V.
All rights reserved.



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>