

Register your product and get support at
www.philips.com/welcome

SE765



EN User manual

PHILIPS

Philips Consumer Lifestyle

AQ95-56F-1263KR

2010

(Report No. / Numéro du Rapport)

(Year in which the CE mark is affixed / Année au cours de laquelle le marquage CE a été apposé)

EC DECLARATION OF CONFORMITY

(DECLARATION DE CONFORMITE CE)

We / Nous, PHILIPS CONSUMER LIFESTYLE B.V.

(Name / Nom de l'entreprise)

TUSSENDIEPEN 4, 9206 AD DRACHTEN, THE NETHERLANDS

(address / adresse)

Declare under our responsibility that the electrical product(s):

(Déclarons sous notre propre responsabilité que le(s) produit(s) électrique(s):)

PHILIPS

(brand name, nom de la marque)

SE765

(Type version or model, référence ou modèle)

DECT Phone

(Telecommunication Terminal Equipment)

(product description, description du produit)

To which this declaration relates is in conformity with the following harmonized standards:

(Auquel cette déclaration se rapporte, est conforme aux normes harmonisées suivantes)

(title, number and date of issue of the standard / titre, numéro et date de parution de la norme)

EN 301 406 V1.5.1:2003
EN 301 489-1 V1.8.1:2008
EN 301 489-6 V1.3.1:2008
EN 60950-1:2006
EN 50360:2001;
EN 50385:2002;
EN 62018:2003

Following the provisions of :

(Conformément aux exigences essentielles et autres dispositions pertinentes de:)

1999/5/EC (R&TTE Directive) (Directive R&TTE 1999/5/CE)
2009/125/EC (ErP Directive)
- EC/1275/2008
- EC/278/2009

And are produced under a quality scheme at least in conformity with ISO 9001 or CENELEC Permanent Documents

(Et sont fabriqués conformément à une qualité au moins conforme à la norme ISO 9001 ou aux Documents Permanents CENELEC)

The Notified Body BAPT / 0168 performed Notified Body Opinion
(L'Organisme Notifié) (Name and number/ nom et numéro) (a effectué) (description of intervention / description de l'intervention)

And issued the certificate, NC/14300
(et a délivré le certificat) (certificate number / numéro du certificat)

Remarks:

(Remarques:)

Drachten, The Netherlands, 09.03.2010

(place, date / lieu, date)

A. Speelman, Compliance Manager

(signature, name and function / signature, nom et fonction)

Contents

1 Important safety instructions	5
Declaration of conformity	5
Use GAP standard compliance	6
Compliance with EMF	6
Disposal of your old product and batteries	6
2 Your SE765	8
What is in the box	8
Overview of the phone	9
Overview of the base station	10
Main menu icons	10
Display icons	11
3 Get started	12
Connect the base station	12
Wall mount the base station	13
Install the handset	14
Check the battery level	14
Set the country	14
Set the date and time	15
Set the date and time format	15
What is standby mode?	15
Check the signal strength	15
Switch your handset On/Off	15
4 Calls	16
Make a call	16
End a call	17
Answer a call	17
Adjust the earpiece volume	17
Mute the microphone	17
Turn the speaker on or off	17
Make a second call	17
Answer a second call	18
Toggle between two calls	18
Make a conference call with the external callers	18
5 Intercom and conference calls	19
Make a call to another handset	19
Transfer a call	19
Make a conference call	19
6 Text and numbers	21
Enter text and number	21
Switch between uppercase and lowercase	21
7 Phonebook	22
View the phonebook	22
Search a record	22
Access the phonebook during a call	22
Call from the phonebook	22
Edit a record	22
Add a record	23
Set the melody	23
Delete a record	23
Delete all records	23
8 Call log	24
View the call records	24
Return a call	24
Delete a call record	24
Delete all call records	24
Save a call record to the phonebook	24
9 Text messages	25
Write and send a new message	25
Inbox	25
Draft box	27
Message settings	28
10 Redial list	29
View the redial records	29
Redial a call	29
Save a redial record to the phonebook	29
Delete a redial record	29
Delete all redial records	29

11 Self-defined settings	30	17 Default settings	46
Personalize the phone display	30	Answering machine default settings	46
Personalize the sounds	30		
Set the wallpaper	31	18 Technical data	47
Set the theme colour	31		
Set the contrast level	31	19 Frequently asked questions	48
Set the backlight time	31		
<hr/>			
12 Call features	32		
Auto hang up	32		
Auto conference	32		
Dial mode	32		
Select the recall duration	32		
Auto prefix	33		
First ring	33		
ECO mode	34		
<hr/>			
13 Network services	35		
Call forward	35		
Call return	36		
Call back service	36		
ID withheld	36		
<hr/>			
14 Extra features	37		
Alarm clock	37		
Auto clock	37		
Keypad lock	38		
Locate the handset	38		
<hr/>			
15 Advanced settings	39		
Register the handsets	39		
Unregister the handsets	39		
Restore default settings	40		
<hr/>			
16 Telephone answering machine	41		
Turn on/off the answering machine	41		
Set the answering machine language	41		
Set the answer mode	41		
Outgoing messages	42		
Incoming messages	42		
Call screening	44		
Set the ring delay	44		
Remote access	44		
Behavior of the LED display on the base station	45		

1 Important safety instructions

Power requirements

- This product requires an electrical supply of 100-240 volts AC. In case of power failure, the communication can be lost.
- The voltage on the network is classified as TNV-3 (Telecommunication Network Voltages), as defined in the standard EN 60950.



Warning

- The Electrical network is classified as hazardous. The only way to power down the charger is to unplug the power supply from the electrical outlet. Ensure that the electrical outlet is always easily accessible.

To avoid damage or malfunction



Caution

- Use only the power supply listed in the user instructions.
- Use only the batteries listed in the user instructions.
- Do not allow the charging contacts or the battery to come into contact with metal objects.
- Do not open the handset, base station or charger as you could be exposed to high voltages.
- Do not allow the charger to come into contact with liquids.
- Risk of explosion if battery is replaced by an incorrect type.
- Dispose of used batteries according to the instructions.
- Always use the cables provided with the product.
- For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.
- Handsfree activation could suddenly increase the volume in the earpiece to a very high level: make sure the handset is not too close to your ear.

- This equipment is not designed to make emergency calls when the power fails. An alternative has to be made available to allow emergency calls.
- Do not expose the phone to excessive heat caused by heating equipment or direct sunlight.
- Do not drop your phone or allow objects to fall on your phone.
- Do not use any cleaning agents containing alcohol, ammonia, benzene, or abrasives as these may harm the set.
- Do not use the product in places where there are explosive hazards.
- Do not let small metal objects come into contact with the product. This can deteriorate audio quality and damage the product.
- Active mobile phones in the vicinity may cause interference.
- Metallic objects may be retained if placed near or on the handset receiver.

About operating and storage temperatures

- Operate in a place where temperature is always between 0°C to +35°C (32°F to 95°F).
- Store in a place where temperature is always between -20°C and +45°C (-4° F to 113° F).
- Battery life may be shortened in low temperature conditions.

Declaration of conformity

Hereby Philips Consumer Lifestyle, P&A, declares that the SE765 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. You can find the Declaration of Conformity on www.p4c.philips.com.

This product has been designed, tested and manufactured according the European R&TTE directive 1999/5/EC. Following this directive, this product can be brought into service in the following countries:

CE		R&TTE Directive 1999/5/EC	
AT ✓	BE ✓	BG ✓	CY ✓
CZ ✓	DK ✓	EE ✓	FI ✓
FR ✓	DE ✓	GR ✓	HU ✓
IS ✓	IE ✓	IT ✓	LV ✓
LI ✓	LT ✓	LU ✓	MT ✓
NL ✓	NO ✓	PL ✓	PT ✓
RO ✓	SK ✓	SI ✓	ES ✓
SE ✓	CH ✓	UK ✓	

Use GAP standard compliance

The GAP standard guarantees that all DECT™ GAP handsets and base stations comply with a minimum operating standard irrespective of their make. The handset and base station are GAP compliant, which means they guarantee the minimum functions: register a handset, take the line, make a call and receive a call. The advanced features may not be available if you use them with other makes. To register and use this handset with a GAP compliant base station of different make, first follow the procedure described in the manufacturer's instructions, then follow the procedure described in this manual for registering a handset. To register a handset from different make to the base station, put the base station in registration mode, then follow the procedure described in the handset manufacturer's instructions.

Compliance with EMF

Koninklijke Philips Electronics N.V. manufactures and sells many products targeted at consumers, which, like any electronic apparatus, in general have the ability to emit and receive electromagnetic signals.

One of Philips' leading Business Principles is to take all necessary health and safety measures for our products, to comply with all applicable legal requirements and to stay well within

the EMF standards applicable at the time of producing the products. Philips is committed to develop, produce and market products that cause no adverse health effects. Philips confirms that if its products are handled properly for their intended use, they are safe to use according to scientific evidence available today.

Philips plays an active role in the development of international EMF and safety standards, enabling Philips to anticipate further developments in standardization for early integration in its products.

Disposal of your old product and batteries



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC. Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste.

Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.



Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste.

Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.



When this logo is attached to a product, it means a financial contribution has been paid to the associated national recovery and recycling system.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.


Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed of with normal household waste. Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health.

2 Your SE765

Congratulations on your purchase and welcome to Philips!

To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.


What is in the box

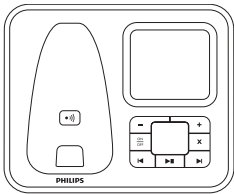


Base station with bracket




Handset*

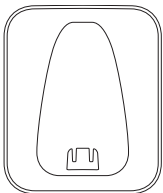


Charger*

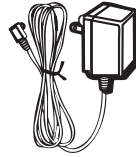

Power adapter*

 

Line cord**

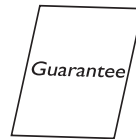

Guarantee



User manual





Quick start guide

Note


- *In multi-handset packs, there are additional handsets and chargers with power adapters.
- **In some countries, you have to connect the line adapter to the line cord, then plug the line cord to the telephone socket.

Overview of the phone

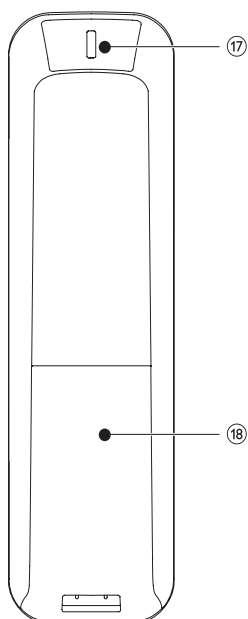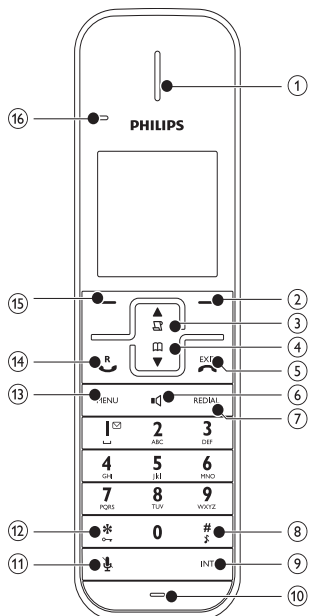

- | | | |
|----|---------------|---|
| 1 | Earpiece | |
| 2 | | <ul style="list-style-type: none"> Select the function displayed on the handset screen directly above the key. |
| 3 | | <ul style="list-style-type: none"> Scroll up on the menu. Increase the earpiece/speaker volume. Enter the call list, text message and answering machine. |
| 4 | | <ul style="list-style-type: none"> Scroll down on the menu. Decrease the earpiece/speaker volume. Enter the phonebook. |
| 5 | | <ul style="list-style-type: none"> End the call. Exit the menu/operation. Turn the handset on/off. |
| 6 | | <ul style="list-style-type: none"> Turn the speaker on/off. |
| 7 | REDIAL | <ul style="list-style-type: none"> Enter redial list and dial the recent number. |
| 8 | | <ul style="list-style-type: none"> Press it to enter a pause. Press and hold to turn the ringer on/off. Switch between the lower and upper case during text editing. |
| 9 | INT | <ul style="list-style-type: none"> Make the intercom call. Make the conference call. |
| 10 | Microphone | |
| 11 | | <ul style="list-style-type: none"> Mute/unmute the microphone. |
| 12 | | <ul style="list-style-type: none"> Press and hold to lock/unlock keypad. |
| 13 | MENU | <ul style="list-style-type: none"> Access the main menu. |
| 14 | | <ul style="list-style-type: none"> Make and receive calls. Send the flash signal. |
| 15 | | <ul style="list-style-type: none"> Select the function displayed on the handset screen directly above the key. |
| 16 | LED indicator | |
| 17 | Loudspeaker | |
| 18 | Battery door | |



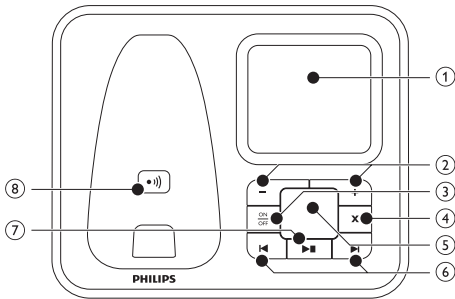




Overview of the base station



1	Loudspeaker	
2	+ / -	• Increase/decrease the speaker volume.
3	ON / OFF	• Turn the answering machine on/off.
4	X	• Delete messages.
5	Message counter	• Displays the number of messages.
6	▶ / ◀	• Skip forward/backward during playback.
7	▶■	• Listen to messages. • Stop listen to messages.
8	•))	• Find handsets. • Enter the registration mode.



 





 




Main menu icons

The following is an overview of the menu options that are available in your SE765. For detailed explanation of the menu options, see the corresponding sections in this user manual.

Icon	Descriptions
	[TEXT MESSAGE] - Set up, write/read text messages etc.
	[PHONEBOOK] - Add, edit, manage phonebook entries etc.
	[CLOCK & ALARM] - Set date and time, alarm, alarm tone etc.
	[PERSONAL SETTING] - Set the Handset tone, Wallpaper, Contrast, Handset name, Auto hang-up, Languages, Backlight time and Colour theme.
	[ADVANC. SETTINGS] - Set Recall time, Dial mode, Register/Unregister handset, Auto prefix etc.
	[NETWORK SERVICES] - Set Call forwarding, Voice mail, Call back and Caller ID. The services are network and country dependent.
	[ANSWER MACHINE] - Setup, listen to, delete phone messages, etc.

Display icons

In standby mode, the icons shown on the main screen tell you what features are available on your handset.

Icon	Descriptions
	The battery is fully charged. The talk time can go up to 14 hours.
	The icon flashes when the battery level is medium.
	The empty battery icon flashes. The battery level is low and needs recharging.
	It indicates if your phone is linked to a base.
	The call is in progress.
	The alarm is activated.
	The speaker is on.
	The ringer is off.
	Call log
	Answering machine
	There is unheard voice message.
	Scroll up for more options
	Scroll down for more options
ECO	The ECO mode is activated.

3 Get started

! Caution

- Ensure you have read the safety instructions in the "Important" section before you connect and install your handset.

Connect the base station


! Warning

- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the phone.
- Use only the supplied power adapter to charge the batteries.

☰ Note

- If you subscribe to the digital subscriber line (DSL) high speed internet service through your telephone line, ensure you install a DSL filter between the telephone line cord and the power socket.. The filter prevents noise and caller ID problems caused by the DSL interference. For more information on the DSL filters, contact your DSL service provider;
- The type plate is located on the bottom of the base station.

- 1 Connect each end of the power adapter to:
 - the DC input jack at the bottom of the base station;
 - the power socket on the wall.
- 2 Connect each end of the power adapter to (for multi handset packs):
 - the DC input jack at the bottom of the extra handset charger;
 - the power socket on the wall.
- 3 Connect each end of the line cord to:
 - the telephone socket at the bottom of the base station;
 - the telephone socket on the wall.

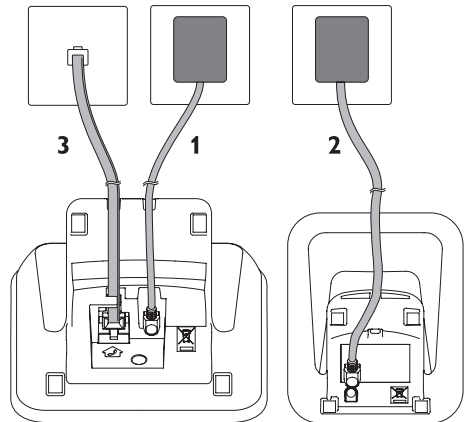


Wall mount the base station




Warning

- You must follow the instructions below to wall mount the base station.


- 1 Remove the bracket from the base station.
- 2 Turn the bracket around.

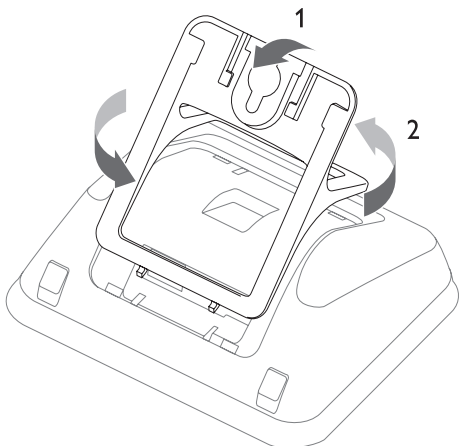


- 3 Re-insert the bracket into the back of the base station.

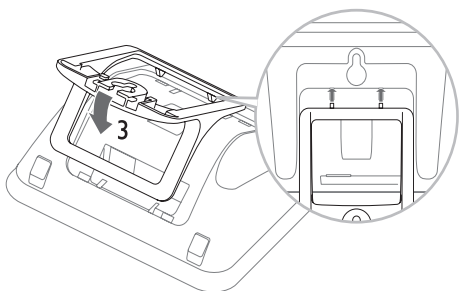

- 4 Insert screws (not included) into the wall.

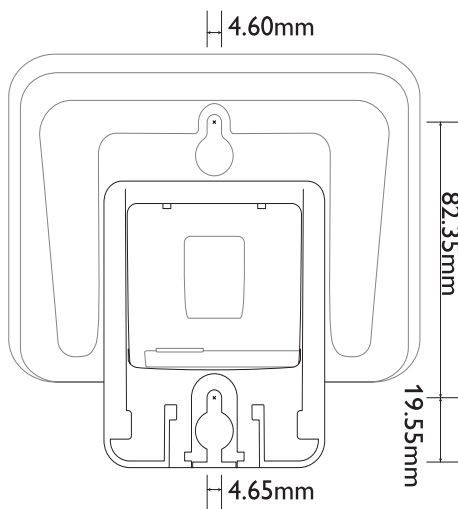

- 5 Align the mounting holes on the back of the base station with the screws on the wall.

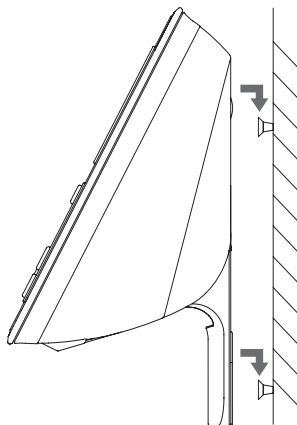

Install the handset

! Caution

- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.
- Use only the supplied batteries.
- Risk of decreased battery life! Never mix different brands or types of batteries.


☰ Note

- Charge the batteries for 16 hours before first use.

! Warning

- Check the battery polarity when inserting in the battery compartment. Incorrect polarity may damage the product.

- 1 The batteries are pre-installed in the handset. Pull the battery tape off from the battery door before charging.

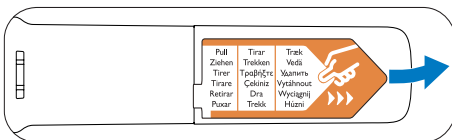


- 2 Place the handset on the base station to charge the handset.

☰ Note

- If the handset becomes warm when the batteries are being charged, it is normal.

Check the battery level

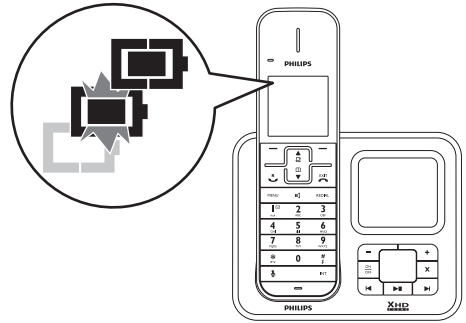

When the handset is off the base station/charger, the icon indicates the battery level:

- Full (steady on)
- Medium (flashing)
- Low (empty)

When you see the empty battery icon and hear an alert tone from the handset, the battery level is low and needs recharging.

- When the handset is on the base station/charger, the battery icon keeps flashing until charging completes.
- When the charging completes, the battery icon keeps steady on.

Set the country

To make the phone work, select your country.

- 1 When you see the welcome message, press **[OK]**.
- 2 Select your country and press **[SELECT]** to confirm.
 - ↳ The country setting is saved.
- 3 Set the date and time.
 - ↳ The phone is now ready to use.
 - ↳ To set the date and time later, press **[BACK]** to skip this setting.

Set the date and time

- 1 Press **MENU**.
- 2 Select **[CLOCK & ALARM] > [SET DATE/TIME]**, then press **[SELECT]** to confirm.
- 3 Press the numeric buttons to enter the time.
 - If the time is in 12-hour format, press ***** to select **[AM]** or **[PM]**.
- 4 Press the numeric buttons to enter the date, then press **[OK]** to confirm.
 - ↳ On the handset, the time set menu is displayed.

Set the date and time format

- 1 Press **MENU**.
- 2 Select **[CLOCK & ALARM] > [SET FORMAT]**, then press **[SELECT]** to confirm.
- 3 Select **[DATE FORMAT]** or **[TIME FORMAT]**.
- 4 Select the setting. Select **[DD/MM][MM/DD]** as the date display and **[12 HOURS]** or **[24 HOURS]** as the time display. Then press **[SELECT]** to confirm.
 - ↳ The setting is saved.

What is standby mode?

Your phone is in standby mode when it is idle. The standby screen displays the handset name, handset number, date and time, signal icon, and battery icon.

Check the signal strength

- The signal icon displays the link status between the handset and base station. A steady icon means your handset and the base station are linked. A flashing icon means your handset and the base station are not linked.
- Ensure the handset is linked to the base station before you make or receive calls and carry out the phone functions and features.
- If you hear warning tones when you are on the phone, the handset is almost out of battery or the handset is out of range. Charge the battery or move the handset nearer to the base station.

Switch your handset On/Off

- Press and hold **EXIT** to switch off the handset. The handset's screen turns off.

Note

- When the handset is switched off, no call can be received.
- Press and hold **EXIT** to switch on the handset. It takes a few seconds for the handset to power up.

4 Calls

Note

- When the power fails, the phone cannot access emergency services.

Tip


- Check the signal strength before you make a call or when you are in a call. For more information, see "Check the signal strength" in the Get started section.

Make a call



You can make a call in these ways:

- Quick call
- Dial before you call
- Redial the most recent number
- Call from the redial list.
- Call from the phonebook list
- Call from the call log


Quick call

- 1 Press .
- 2 Dial the phone number.
 - ↳ The number is dialed out.
 - ↳ The duration of your current call is displayed.

Dial before you call

- 1 Dial the phone number
 - To erase a digit, press **[CLEAR]**.
 - To enter a pause, press and hold .
- 2 Press  to dial out the call.

Redial the most recent number

- 1 Press .
- 2 Press **REDIAL**.
- 3 Press **[SELECT]**.
 - ↳ The most recent number is then dialed out.

Call from the redial list

You can make a call from the redial list.

Tip

- For more information, see "Redial a call" in the Redial list section.

Call from the phonebook

You can make a call from the phonebook list.

Tip

- For more information, see "Call from the phonebook" in the Phonebook section.

Call from the call log

You can return a call from the received or missed call log.

Tip

- For more information, see "Return a call" in the Call log section.

Note


- The call timer displays the talk time of your current call.

Note

- If you hear warning tones, the handset is almost out of battery or the handset is out of range. Charge the battery or move the handset nearer to the base station.

End a call

You can end a call in these ways:

- Press ; or
- Place the handset to the base station or charging cradle if the auto hang up is activated.

Answer a call

When the phone rings, press  or  to answer the call.



Warning

- When the handset rings or when the handsfree is activated, keep the handset away from your ear to avoid ear damage.



Note

- The caller ID service is available if you have registered to the caller ID service with your service provider.





Tip



- When there is a missed call, the handset displays a notification message.

Turn off the ringer for all incoming calls

There are two ways to turn off the ringer:



- 1 Press and hold  in standby mode.
 - ↳  displays on the screen.
- 2 When the phone rings, press **[SILENT]**.

Adjust the earpiece volume

Press  or  to adjust the volume during a call.

- ↳ The earpiece volume is adjusted and the phone is back to the call screen.

Mute the microphone

- 1 Press  during a call.
 - ↳ The handset displays **[MUTE ON]**.
 - ↳ The caller cannot hear you, but you can still hear his voice.
- 2 Press  again to unmute the microphone.
 - ↳ You can now communicate with the caller.

Turn the speaker on or off


Press .

Make a second call



Note

- This service is network dependent.

- 1 Press  during a call.
 - ↳ The first call is put on hold.
- 2 Dial the second number.
 - ↳ The number displayed on the screen is dialed out.

Answer a second call

Note

- This is a country dependent setting.

When there is a periodical beep to notify you of an incoming call, you can answer the call in these ways:

- 1 Press **R** and **2** to answer the call.
↳ The first call is put on hold, and you are now connected to the second call.
- 2 Press **R** and **J** to end the current call and answer the first call.

Toggle between two calls

Note

- This is a country dependent setting.

You can toggle your calls in these ways:

- 1 Press **R** and **2** or
- 2 Press **[OPTION]** and select **[SWITCH CALLS]**, then press **[SELECT]** again to confirm.
↳ The current call is put on hold, and you are now connected to the other call.

Make a conference call with the external callers

Note

- This service is network dependent. Check with the service provider for additional charges.

When you are connected to two calls, press **R**, then **3**.

- ↳ The two calls are combined and a conference call is established.

5 Intercom and conference calls

An intercom call is a call to another handset that shares the same base station. A conference call involves a conversation among you, another handset user and the outside callers.

Make a call to another handset



Note

- If the base station only has 2 registered handsets, press **INT** to make a call to another handset.

- 1 Press **INT**. The handsets available for intercom are displayed.
- 2 Select or enter a handset number, then press **[SELECT]** to confirm.
 - ↳ The selected handset rings.
 - ↳ The intercom is established.
- 3 Press **EXIT** to cancel or end the intercom call.



Note

- If the selected handset is occupied in a call, you hear a busy tone.

While you are on the phone

You can go from one handset to another during a call:

- 1 Press **INT**.
 - ↳ The current caller is put on hold.
- 2 Select or enter a handset number, then press **[SELECT]** to confirm.
 - ↳ Wait for the other side to answer your call.

Toggle between calls

Press **INT** to switch between the outside call and the intercom call.

Transfer a call

- 1 Press **INT** during a call.
- 2 Select a handset number, then press **[SELECT]** to confirm.
- 3 Press **EXIT** when the other side answers your call.
 - ↳ The call is now transferred to the selected handset.

Make a conference call

A 3-way conference call is a call between you, another handset user and the outside callers. It requires two handsets to share the same base station.

During an external call

- 1 Press **INT** to initiate an internal call.
 - ↳ The handsets available for intercom are displayed.
 - ↳ The external caller is put on hold.
- 2 Select or enter a handset number, then press **[SELECT]** to confirm.
 - ↳ The selected handset rings.
- 3 Press **R** on the selected handset.
 - ↳ The intercom is established.
- 4 Press and hold **INT** on your handset.
 - ↳ You are now on a 3-way conference call with the external call and the selected handset.
- 5 Press **EXIT** to end the conference call.

Note

- Press **R** to join an ongoing conference with another handset if **[ADVANC. SETTINGS] > [CONFERENCE]** is set to **[ON]**.

During the conference call

- 1 Press **INT** to put the external call on hold and go back to the internal call.
 - ↳ The external call is put on hold.
- 2 Press **INT** to toggle between the external and internal call.
- 3 Press and hold **INT** to establish the conference call again.

Note

- If a handset hangs up during the conference call, the other handset remains connected to the external call.

6 Text and numbers

You can enter text and numbers for handset name, phonebook records, and other menu items.

Enter text and number

- 1 Press once or several times on the alphanumeric key to enter the selected character.
- 2 Press **[CLEAR]** to delete the character. Press **↶** / **↷** to move the cursor left and right.

Key	Characters (Upper case)
0	. 0 , / ; : " ' ! ; ? ; * + - %
1	[Sp] 1 @ _ # = < > () & £ \$ ¥ ¤ § ...
2	A B C 2 Â Æ Á Ã Ä Å Æ Ç Ć Ć
3	D E F 3 Ď ě Ě ě Ě Ě Ě Δ Φ
4	G H I 4 Ğ ħ Ĩ Ĩ Ĩ Ĩ Γ
5	J K L 5 Ł ł Ĺ ĺ
6	M N O 6 Ñ ñ Ń ń Ó ó Ő ő Ő ő
7	P Q R S 7 Ŕ ŕ Š š Ś ś β Π Θ Σ
8	T U V 8 Ţ ţ Ŧ ŧ Ũ ũ Ū ū Ū ū Ū ū
9	W X Y Z 9 Ý Ź ź Ż ż Ź ź ϻ Ω Ξ Ψ

Key	Characters (Upper case)
0	. 0 , / ; : " ' ! ; ? ; * + - %
1	[Sp] 1 @ _ # = < > () & £ \$ ¥ ¤ § ...
2	a b c 2 à â Æ á ã ä å æ ç ć ĉ
3	d e f 3 đ ě Ě ě Ě Ě Ě Δ Φ
4	g h i 4 ğ ħ Ĩ Ĩ Ĩ Ĩ Γ
5	j k l 5 ł ł Ĺ ĺ
6	m n o 6 ñ ñ Ń ń Ó ó Ő ő Ő ő
7	p q r s 7 ŕ ŕ š š ś ś β π θ σ
8	t u v 8 ţ ţ ŧ ŧ ũ ũ ū ū ū ū ū ū
9	w x y z 9 ý ź ź ż ż ź ź ϻ Ω Ξ Ψ

Example to write "Paul"

Press 7 once: P

Press 2 once: a

Press 8 two times: u

Press 5 three times: l

Switch between uppercase and lowercase

By default, the first letter of each word in a sentence is uppercase and the rest is lowercase. Press and hold **↵** to switch between the uppercase and lowercase letters.

7 Phonebook

This phone has a phonebook that stores up to 200 records. You can access the phonebook from the handset. Each record can have a name up to 14 characters long and a number up to 24 digits long.

There are 2 direct access memories (keys **1**[☎] and **2**^{ABC}). Depending on your country, keys **1**[☎] and **2**^{ABC} are preset to the voice mail number and information service number of your service provider respectively. When you press and hold on the key in standby mode, the saved phone number is dialed automatically.

View the phonebook



Note

- You can view the phonebook on one handset only each time.

- 1 Press **☎** or press **MENU** > **[PHONEBOOK]** > **[LIST]** to access the phonebook list.
- 2 Select a contact and view the available information.

Search a record

You can search the phonebook records in these ways:

- Scroll the contacts list.
- Enter the first character of the contact.

Scroll the contact list

Access the phonebook menu, then press **☎** and **☎** to scroll through the phonebook entries.

Enter the first character of a contact

- 1 Access the phonebook menu.
- 2 Select **[LIST]**.
- 3 Press the alphanumerical key that corresponds to the character.
 - ↳ The first record that starts with this character is displayed.

Access the phonebook during a call

- 1 Press **[OPTION]**, select **[PHONEBOOK]** then press **[SELECT]** again to confirm.
- 2 Select the contact, then press **[SELECT]** to confirm.
 - ↳ The number can be viewed.
- 3 Press **[SELECT]** again to dial out the number.

Call from the phonebook

- 1 Press **☎** to access the phonebook.
- 2 Select a contact in the phonebook list.
- 3 Press **☎** to make the call.

Edit a record

- 1 Press **MENU**.
- 2 Select **[PHONEBOOK]** > **[EDIT ENTRY]**, then press **[SELECT]** to confirm.
- 3 Select the contact, then press **[SELECT]** to confirm.
- 4 Edit the name, then press **[OK]** to confirm.
- 5 Press **[CLEAR]** to delete a character.
- 6 Edit the number, then press **[SAVE]** to confirm.
 - ↳ The record is saved.

Add a record

Note

- If your phonebook memory is full, the handset displays a notification message. Delete some records to add new ones.

- 1 Press **MENU**.
- 2 Select **[PHONEBOOK] > [NEW ENTRY]**, then press **[SELECT]** to confirm.
- 3 Enter the name then press **[OK]** to confirm.
- 4 Enter the number, then press **[SAVE]** to confirm.

Tip

- For more information on how to edit the name and number, see the section on Text and numbers.

Note

- The phonebook only saves new number.

Tip

- Press and hold **#** to insert a pause.

↳ Your new record is saved.

Set the melody

You can personalize the melody played when someone in the phonebook calls you.

Note

- Ensure you have subscribed the caller line identification service before you have this feature.

- 1 Press **MENU**.
- 2 Select **[PHONEBOOK] > [SELECT MELODY]**, then press **[SELECT]** to confirm.
- 3 Select a contact, then press **[VIEW]**.
- 4 Press **[SELECT]** to set or change the melody for the contact.
- 5 Select a melody for the contact, then press **[SELECT]** to confirm.
↳ The melody is set.

Delete a record

- 1 Press **MENU**.
- 2 Select **[PHONEBOOK] > [DELETE]**, then press **[SELECT]** to confirm.
- 3 Select a contact, then press **[OK]** to confirm
↳ The record is deleted.

Delete all records

- 1 Press **MENU**.
- 2 Select **[PHONEBOOK] > [DELETE ALL]**, press **[SELECT]** to confirm.
↳ The handset displays a confirmation request.
- 3 Press **[OK]** to confirm.
↳ All records are deleted.

8 Call log




The call log stores the call history of all missed or received calls. The incoming call history includes the name and number of the caller, call time and date. This feature is available if you have registered to the caller ID service with your service provider.

Your phone can store up to 50 call records. The call log icon on the handset flashes to remind you of any unanswered calls. If the caller allows the display of his identity, you can view his name or number. The call records are displayed in chronological order with the most recent received call at the top of the list.



Note

- Ensure the number in the call list is valid before you can call back directly from the call list.


View the call records

- 1 Press .
- 2 Select [CALL LIST], then press [SELECT] to confirm.
↳ The incoming call log is displayed.
- 3 Press  /  to select a record, then press [OPTION] for more available information.


Return a call

- 1 Press .
- 2 Select [CALL LIST], then press [SELECT].
- 3 Select a record on the list.
- 4 Press  to make the call.


Delete a call record

- 1 Press .
- 2 Select [CALL LIST].
- 3 Select a record, then press [OPTION] to confirm.
- 4 Select [DELETE], then press [SELECT] to confirm
↳ The record is deleted.

Delete all call records

- 1 Press .
- 2 Select [CALL LIST].
- 3 Press [OPTION] to enter the options menu.
- 4 Select [DELETE ALL], then press [SELECT] to confirm
↳ The handset displays a confirmation requests.
- 5 Press [OK] to confirm.
↳ All records are deleted.

Save a call record to the phonebook

- 1 Press .
- 2 Select [CALL LIST].
- 3 Select a record, then press [OPTION] to confirm.
- 4 Select [SAVE NUMBER], then press [SELECT] to confirm.
- 5 Enter and edit the name, then press [OK] to confirm.
- 6 Enter and edit the number, then press [SAVE] to confirm.
↳ The record is saved.

9 Text messages

Note

- Ensure you have subscribed the Caller ID and text message services before you enjoy the full benefit of this feature.

You can use the Short Messaging Service (SMS) to send text messages to the recipient, provided that the recipient has also subscribed the Caller ID and text message services.

Your phone can store up to 50 text messages (40 messages in the Inbox and 10 messages in the Draft box) which are shared by all the message boxes. The maximum length of each message is 160 characters.

Write and send a new message

- 1 Press **MENU**, then select **[TEXT MESSAGE]**.
- 2 Select **[WRITE SMS]**, then press **[SELECT]** to confirm.
- 3 Enter the PIN (if required), then press **[OK]** to confirm.
- 4 Enter the text, then press **[OK]**.
- 5 Enter the phone number of the recipient, then press **[OK]** to confirm; or
- 6 Press **MENU**, select **[PHONEBOOK]**.
- 7 Select a contact from the phonebook list, then press **[SELECT]**.
- 8 Press **[OK]** to go to the next screen.

- 9 Press **[SEND]**, then press **[SELECT]** to confirm.
↳ **[SMS SENT !]** is displayed. The message is sent successfully.

Tip

- For more information about how to enter text and number, see the section on Text and numbers.

Note

- If you send a text message to a mobile phone, the SMS box number can be empty.
- If the text message is not sent successfully, **[SMS NOT SENT!]** is displayed and the text message is saved in the SMS editor buffer.
- When you write your text message, the handset returns to stand-by mode if no key is pressed for 30 seconds. The message is saved in the message editor buffer.

Inbox

The messages in the inbox are listed in chronological order with the most recent call on top. The Inbox can store up to 40 messages. You hear a beep every time when a new message is received. The screen displays the number of new messages received. The event LED flashes until the message is read.

Note

- No new message can be received if the message box is full. Delete some old messages in order to receive new ones.

View inbox messages

- 1 Press **MENU**.
- 2 Select **[TEXT MESSAGE] > [INBOX]**, then press **[SELECT]**.
- 3 Enter the PIN (not required by the default user), then press **[OK]** to confirm.
- 4 The list of text messages with the sender's names and phone numbers (if they match the phonebook record) is displayed.
- 5 Press **[VIEW]** to view the message content.
- 6 When viewing the message content, press **MENU** to access the following options:

[REPLY]	Send a reply to the sender of the message.
----------------	--


[FORWARD]	Forward the message to another recipient.
------------------	---

[SAVE NUMBER]	Save the sender's number to your phonebook.
----------------------	---



[DELETE]	Delete the selected message.
-----------------	------------------------------

[DELETE ALL]	Delete all messages in the [INBOX] .
---------------------	---

Tip

- When you read a message, press  to scroll to the previous/next page. At the end of the message, the date and time of the message received and the sender's phone number are displayed.

Note

- If you press  while reading the message/sender's information, the text message function is aborted and the sender's phone number is dialed.
- Press  to return to the inbox message list.

Reply to an inbox message when viewing the message

- 1 Select **[MENU] > [REPLY]**, then press **[SELECT]** to start editing.
- 2 Press **[OK]** when finish with editing.
- 3 Press **[OK]** to confirm.
↳ The message is sent.

Tip

- For more information on how to send the message, see the section on Write and send a new message. For more information on how to save the message, see the section on Save a message in the draft box.

Forward an inbox message when viewing the message

Select **[MENU] > [FORWARD]**, then press **[SELECT]** to confirm.

Save the sender's number to the phonebook when viewing the message

- 1 Select **[MENU] > [SAVE NUMBER]**, then press **[SELECT]** to confirm.
- 2 Enter the name, then press **[OK]** to edit the number.
- 3 Press **[SAVE]** to confirm.

Delete an inbox message when viewing the message

- 1 Select **[MENU] > [DELETE]**, then press **[OK]** to confirm.

Delete all inbox messages when viewing the message

- 1 Select **[MENU] > [DELETE ALL]**, then press **[OK]** to confirm.

Draft box

Text messages that are saved as drafts are automatically stored in the draft box. The draft box can store up to 10 messages.

Save a message in the draft box

- 1 Press **[MENU]** > **[TEXT MESSAGE]** > **[WRITE SMS]**, then press **[SELECT]** to confirm.
- 2 Write your message, then press **[OK]** to confirm.
- 3 Enter the phone number of the recipient, then press **[OK]** to confirm, or select the phone record from the phonebook.
- 4 Select **[SAVE AS DRAFT]**, then press **[SELECT]** to confirm.

View draft messages

- 1 Press **MENU**.
- 2 Select **[TEXT MESSAGE]** > **[DRAFTS]**.
- 3 Enter the PIN (not required by default user), then press **[OK]** to confirm.
↳ The list of text messages is displayed.
- 4 Select a message, then press **[VIEW]**.
- 5 When viewing the message content, press **MENU** to access the following options:

[SEND]	Send the draft message.
[EDIT]	Forward the message to another recipient.
[DELETE]	Delete the selected message.
[DELETE ALL]	Delete all messages in the [INBOX] .

Send a message from the draft box when viewing the message

- 1 Select **[MENU]** > **[SEND]**.
- 2 Edit the number, then press **[OK]** to confirm.
- 3 Press **[SEND]**, then press **[SELECT]** to confirm.
↳ **[SMS SENT !]** is displayed. The message is sent successfully.



Tip

- For more information on how to send the message, see the section on Write and send a new message. For more information on how to save the message, see the section on Save a message in the draft box.

Delete a draft message when viewing the message

Select **[MENU]** > **[DELETE]**, then press **[OK]** to confirm.

Delete all draft messages when viewing the message

Select **[MENU]** > **[DELETE ALL]**, then press **[OK]** to confirm.

Edit a draft message when viewing the message

- 1 Select **[MENU]** > **[EDIT]**.
- 2 Edit the message, then press **[OK]** to confirm.
- 3 Edit the number, then press **[OK]** to confirm.



Tip

- For more information on how to send the message, see the section on Write and send a new message. For more information on how to save the message, see the section on Save a message in the draft box.

Message settings

You can send and receive messages from 3 different service centres.

Each service centre has 2 numbers:

- Incoming number
- Outgoing number

The maximum length of an incoming/outgoing number is 22 digits.

The incoming and outgoing numbers of your phone are already set for your country network. Do not modify these settings. For more information, contact your local service provider.

Messages reception

Your phone can receive messages from another phone if you have subscribed to the Caller ID and text message services from your service provider. By default, **[SMS RECEPTION]** is set to **[ON]** so that you can receive text messages.

Activate/deactivate messages reception

- 1 Press **MENU**.
- 2 Select **[TEXT MESSAGE] > [SETTINGS] > [SMS RECEPTION] > [ON]/[OFF]**, then press **[SELECT]** to confirm.

Default message centre

- 1 Press **MENU**.
- 2 Select **[TEXT MESSAGE] > [SETTINGS] > [DEFAULT CENTRE]**, then press **[SELECT]**.
- 3 Select **[SMS CENTRE 1]/[SMS CENTRE 2]/[SMS CENTRE 3]**, then press **[SELECT]**.
↳ A validation tone is emitted.

Set the outgoing/incoming number

- 1 Press **MENU**.
- 2 Select **[TEXT MESSAGE] > [SETTINGS] > [SMS CENTRE]**, then press **[SELECT]**.
- 3 Select **[SMS CENTRE 1]/[SMS CENTRE 2]/[SMS CENTRE 3]**, then press **[SELECT]**.
- 4 Select **[OUTGOING NUMBER]/[INCOMING NUMBER]**.
- 5 Enter the number and press **[OK]** to confirm.
↳ A validation tone is emitted.



Note

- The maximum length of an outgoing/incoming number is 22 digits.


10 Redial list

The redial list stores the call history of dialed calls. It includes the names and/or numbers you have called. This phone can store up to 10 redial records.

View the redial records

- 1 Press **REDIAL** to enter the list of dialed calls.
- 2 Select a record, press **[SELECT]**.

Redial a call

- 1 Press **REDIAL**.
- 2 Select a record, then press .
↳ The number is dialed out.

Save a redial record to the phonebook

- 1 Press **REDIAL** to enter the list of dialed calls.
- 2 Select a record, then press **[SELECT]** then **[OPTION]**.
- 3 Select **[SAVE NUMBER]**, then press **[SELECT]** to confirm.
- 4 Enter and edit the name, then press **[OK]** to confirm.
- 5 Enter and edit the number, then press **[SAVE]** to confirm.
↳ The record is saved.

Delete a redial record

- 1 Press **REDIAL** to enter the list of dialed calls.
- 2 Select a record, then press **[SELECT]** then **[OPTION]**.
- 3 Select **[DELETE]**, then press **[SELECT]**.
↳ The record is deleted.

Delete all redial records

- 1 Press **REDIAL** to enter the list of dialed calls.
- 2 Press **[SELECT]** then **[OPTION]** to enter the options menu.
- 3 Select **[DELETE ALL]**, then press **[SELECT]** to confirm.
- 4 The handset displays a confirmation request.
- 5 Press **[OK]** to confirm.
↳ All records are deleted.

11 Self-defined settings

Customize the settings to make it your own phone.

Personalize the phone display

Name the handset

The name of the handset can be up to 14 characters. It is displayed on the handset screen in standby mode.

- 1 Press **MENU**.
- 2 Select **[PERSONAL SETTING] > [HANDSET NAME]**, then press **[SELECT]** to confirm.
- 3 Enter or edit the name. To erase a character, press **[CLEAR]**.
- 4 Press **[OK]** to confirm.
↳ The setting is saved.

Set the display language



Note

- This feature only applies to models with multiple-language support.
- Languages available for selection vary with different countries.

- 1 Press **MENU**.
- 2 Select **[PERSONAL SETTING] > [LANGUAGE]**, then press **[SELECT]** to confirm.
- 3 Select a language, then press **[SELECT]** to confirm.
↳ The setting is saved.

Personalize the sounds

Set the handset's ringtone volume

You can select among 5 ringtone volume levels, **[PROGRESSIVE]** or **[OFF]**.

- 1 Press **MENU**.
- 2 Select **[PERSONAL SETTING] > [HANDSET TONES] > [RING VOLUME]**, then press **[SELECT]** to confirm.
- 3 Select a volume level, then press **[SELECT]** to confirm.
↳ The setting is saved.



Tip

- To turn off the ringtone, press and hold **#** in standby mode. Then **📞** displays on the screen.

Set the handset's ringtone

You can select from 15 ringtones.

- 1 Press **MENU**.
- 2 Select **[PERSONAL SETTING] > [HANDSET TONES] > [RING TONES]**, then press **[SELECT]** to confirm.
- 3 Select a ringtone, then press **[SELECT]** to confirm.
↳ The setting is saved.

Set the key tone

Key tone is the sound made when you press a key on the handset.

- 1 Press **MENU**.
- 2 Select **[PERSONAL SETTING] > [HANDSET TONES] > [KEY BEEP]**, then press **[SELECT]** to confirm.
- 3 Select **[ON]/[OFF]**, then press **[SELECT]** to confirm.
↳ The setting is saved.

Enhance the audio quality

XHD (Extreme High Definition) sound mode is an exclusive feature which transmits high fidelity signals to the handset. It makes the phone conversations sound like real-life conversations.

When you are in standby mode,

- 1 Press **MENU**.
- 2 Select **[ADVANC. SETTINGS] > [XHD SOUND]**, then press **[SELECT]** to confirm.
- 3 Select **[XHD ON]/[XHD OFF]**, then press **[SELECT]** to confirm.
 - ↳ The setting is saved.

When you are in a call,

- 1 Press **[OPTION]** to enter the options menu.
- 2 Change the XHD setting.
- 3 Press **[SELECT]** to confirm.
 - ↳ The setting is saved.

Set the wallpaper

- 1 Press **MENU**.
- 2 Select **[PERSONAL SETTING] > [WALLPAPER]**, then press **[SELECT]** to confirm.
- 3 Press **▲ / ▼** to select a wallpaper, then press **[SELECT]** to confirm.
 - ↳ A validation tone is emitted and the selected wallpaper is displayed on the screen.

Set the theme colour

- 1 Press **MENU**.
- 2 Select **[PERSONAL SETTING] > [COLOUR THEME]**, then press **[SELECT]** to confirm.
- 3 Select a colour theme, then press **[SELECT]** to confirm.
 - ↳ The selected colour theme is set and a validation tone is emitted.

Set the contrast level

There are 5 contrast level options:

- 1 Press **MENU**.
- 2 Select **[PERSONAL SETTING] > [CONTRAST]**, then press **[SELECT]** to confirm.
- 3 Select a contrast level, then press **[SELECT]** to confirm.
 - ↳ The selected contrast level is set and a validation tone is emitted.

Set the backlight time

- 1 Press **MENU**.
- 2 Select **[PERSONAL SETTING] > [BACKLIGHT TIME]**, then press **[SELECT]** to confirm.
- 3 Select **[20 SECONDS]/[40 SECONDS]/[60 SECONDS]**, then press **[SELECT]** to confirm.
 - ↳ The backlight time is set and a validation tone is emitted.



Note

- The backlight is activated when there is an incoming call or a new message. The default backlight time is **[20 SECONDS]**.

12 Call features

The phone supports a number of call-related features that help you handle and manage the calls.

Auto hang up

To end a call, simply place the handset on the base station or charge cradle.


Activate/Deactivate auto hang up

- 1 Press **MENU**.
- 2 Select **[PERSONAL SETTING] > [AUTO HANG-UP]**, then press **[SELECT]** to confirm.
- 3 Select **[ON]/[OFF]**, then press **[SELECT]** to confirm.
↳ The setting is saved.

Note

- When the auto hang up is off, the speaker is on automatically.

Auto conference

To join an external call with another handset, press .

Activate/Deactivate auto conference

- 1 Press **MENU**.
- 2 Select **[ADVANC. SETTINGS] > [CONFERENCE]**, then press **[SELECT]** to confirm.
- 3 Select **[ON]/[OFF]**, then press **[SELECT]** to confirm.
↳ The setting is saved.

Dial mode

Note


- This feature only applies to models that support both tone and pulse dial.

Dial mode is the telephone signal used in your country. The phone supports tone (DTMF) and pulse (rotary) dial. Consult the service provider for detailed information.

Set the dial mode

- 1 Press **MENU**.
- 2 Select **[ADVANC. SETTINGS] > [DIAL MODE]**, then press **[SELECT]** to confirm.
- 3 Select a dial mode, then press **[SELECT]** to confirm.
↳ The setting is saved.

Note

- If your phone is in pulse dial mode, press  during a call for temporary tone mode. 'd' displays. Digits entered for this call are then sent out as tone signals.

Select the recall duration

Ensure that the recall time is set correctly before you can answer a second call. In normal case, the phone is already preset for the recall duration. You can select among 3 options: **[SHORT]**, **[MEDIUM]** and **[LONG]**. The number of available options varies with different countries. For details, consult your service provider.

Set the recall duration

- 1 Press **MENU**.
- 2 Select **[ADVANC. SETTINGS] > [RECALL TIME]**, then press **[SELECT]** to confirm.
- 3 Select an option, then press **[SELECT]** to confirm.
 - ↳ The setting is saved.

Auto prefix

This feature checks and formats your outgoing call number before it is dialed out. The prefix number can replace the detect number you set in the menu. For example, you set 604 as the detect number and 1250 as the prefix. When you have dialed out a number such as 6043338888, your phone changes the number to 12503338888 when it dials out.

Note

- The maximum length of a detect number is 5 digits. The maximum length of an auto prefix number is 10 digits.

Set auto prefix

- 1 Press **MENU**.
- 2 Select **[ADVANC. SETTINGS] > [AUTO PREFIX]**, then press **[SELECT]** to confirm.
- 3 Enter the detect number, then press **[OK]** to confirm.
- 4 Enter the prefix number, then press **[OK]** to confirm.
 - ↳ The setting is saved.

Note

- To enter a pause, press and hold **#**.

Note

- If the prefix number is set and the detect number is left empty, the prefix number is added to all outgoing calls.

Note

- The feature is unavailable if the dialed number starts with ***** and **#**.

First ring

If you have subscribed for caller ID service with your service provider, your phone can suppress the first ring before the caller ID displays on the screen. After the phone is reset, it can detect automatically if the caller ID service is subscribed and start to suppress the first ring. You can change this setting to suit your preference. This feature only applies to models with first ring support.

Turn the first ring on/off

- 1 Press **MENU**.
- 2 Select **[ADVANC. SETTINGS] > [FIRST RING]**, then press **[SELECT]** to confirm.
- 3 Select **[ON]/[OFF]**, press **[OK]** to confirm.
 - ↳ The setting is saved.

Note

- To reset the first ring status, go to the reset menu.

ECO mode

The **ECO** mode reduces the transmission power of the handset and base station.

- 1 Press **MENU**.
- 2 Select **[ADVANC. SETTINGS] > [ECO]**, then press **[SELECT]** to confirm.
- 3 Select **[ON]/[OFF]**, then press **[SELECT]** to confirm.
 - ↳ The setting is saved.
 - ↳ **ECO** is displayed instead of **Y** in standby mode



Note

- When the **ECO** mode is activated, the connection range between the handset and the base station can be reduced.

13 Network services

The network services are network and country dependent. Contact your service provider for more information.

Note

- For the network services to work properly, ensure that the activation and/or deactivation codes are correctly entered.

Call forward

You can divert your calls to another phone number. You can select among 3 options:

- **[CALL FORWARD]**: divert all incoming calls to another number.
- **[CALL FWD BUSY]**: divert calls when the line is busy.
- **[CALL FWD UNANSW.]**: divert calls when no one answers.

Activate call forward

- 1 Press **MENU**.
- 2 Select **[NETWORK SERVICES]**, then press **[SELECT]** to confirm.
- 3 Select a **[CALL FORWARD]** option, then press **[SELECT]** to confirm.
- 4 Select **[ACTIVATE]**, then press **[SELECT]** to confirm.
- 5 Enter the number to which you forward you calls, then press **[OK]** to confirm.
 - ↳ The setting is saved.

Deactivate call forward

- 1 Press **MENU**.
- 2 Select **[NETWORK SERVICES]**, then press **[SELECT]** to confirm.
- 3 Select a **[CALL FORWARD]** option, then press **[SELECT]** to confirm.
- 4 Select **[DEACTIVATE]**, then press **[SELECT]** to confirm.
 - ↳ The setting is saved.

Edit the activation/deactivation code

You can edit the prefix and suffix to the call forward codes.

- 1 Press **MENU**.
- 2 Select **[NETWORK SERVICES]**, then press **[SELECT]** to confirm.
- 3 Select a **[CALL FORWARD]** option, then press **[SELECT]** to confirm.
- 4 Select **[CHANGE CODE]**, then press **[SELECT]**.
- 5 Then you can either
 - Select **[ACTIVATION] > [PREFIX]/[SUFFIX]**, then press **[SELECT]** to confirm; or
 - Select **[DEACTIVATION]**, then press **[SELECT]** to confirm.
- 1 Enter or edit the code, then press **[OK]** to confirm.
 - ↳ The setting is saved.

Call return

You can check the most recent unanswered call.

Call the return service centre

- 1 Press **MENU**.
- 2 Select **[NETWORK SERVICES] > [CALL RETURN] > [CALL]**, then press **[SELECT]** to confirm.
↳ Your call is made to the service centre.

Edit the call return service centre number

- 1 Press **MENU**.
- 2 Select **[NETWORK SERVICES] > [CALL RETURN] > [SETTINGS]**, then press **[SELECT]** to confirm.
- 3 Enter or edit the number, then press **[OK]** to confirm.
↳ The setting is saved.

Call back service

The call back service notifies you when a party you have tried to call becomes available. You can select to cancel this service from the menu after you have activated it from the service provider.

Cancel the call back service

- 1 Press **MENU**.
- 2 Select **[NETWORK SERVICES] > [CANCEL CALL BACK] > [CALL]**, then press **[SELECT]** to confirm.
↳ A call is made to the service centre to cancel the call back option.

Edit the cancel call back service number

- 1 Press **MENU**.
- 2 Select **[NETWORK SERVICES] > [CANCEL CALL BACK] > [SETTINGS]**, then press **[SELECT]** to confirm.
- 3 Enter or edit the number, then press **[OK]** to confirm.
↳ The setting is saved.

ID withheld

You can hide your identity from the caller.

Activate ID withheld

- 1 Press **MENU**.
- 2 Select **[NETWORK SERVICES] > [WITHHOLD ID] > [ACTIVATE]**, then press **[SELECT]** to confirm.
↳ When you make a call to your contact, your ID is withheld.

Edit the ID withheld code

- 1 Press **MENU**.
- 2 Select **[NETWORK SERVICES] > [WITHHOLD ID] > [SETTINGS]**, then press **[SELECT]** to confirm.
- 3 Enter or edit the number, then press **[OK]** to confirm.
↳ The setting is saved.

14 Extra features

Your phone offers you extra features which keep you organized and informed while on the move.

Alarm clock

Your phone has a built-in alarm clock. Check the information below to set your alarm clock.

Set the alarm

- 1 Press **MENU**.
- 2 Select **[CLOCK & ALARM] > [ALARM]**, then press **[SELECT]** to confirm.
- 3 Select **[ON ONCE]** or **[ON DAILY]**, then press **[SELECT]** to confirm.
- 4 Enter an alarm time.
- 5 Press **[OK]** to confirm.
 - ↳ The alarm is set and is displayed on the screen.

Turn off the alarm

When the alarm rings

- 1 Press any key can turn off the alarm.

Before the alarm rings

- 1 Press **MENU**.
- 2 Select **[CLOCK & ALARM] > [ALARM]**, then press **[SELECT]** to confirm.
- 3 Select **[OFF]**, then press **[SELECT]** to confirm.
 - ↳ The setting is saved.

Set the alarm melody

- 1 Press **MENU**.
- 2 Select **[CLOCK & ALARM] > [ALARM TONE]**, then press **[SELECT]** to confirm.
- 3 Select a new melody, then press **[SELECT]** to confirm.
 - ↳ The setting is saved.

Note

- The alarm volume is set to the same level as the ringer volume. If the ringer is off, the alarm volume is set to level 1.

Auto clock

Note

- This service is network dependent.

Note

- Ensure you have the caller ID service before you have this feature.

It synchronizes the date and time on your phone with the public switched telephone network (PSTN) automatically. For the date to be synchronized, ensure the current year is set.

- 1 Press **MENU**.
- 2 Select **[CLOCK & ALARM] > [AUTO CLOCK]**, then press **[SELECT]** to confirm.
- 3 Select **[ON]/[OFF]**. Press **[SELECT]**.
 - ↳ The setting is saved. .

Keypad lock

You can lock the keypad to prevent accidental button presses.

Lock the keypad

- 1 Press and hold ***** in standby mode.
↳ The keypad is locked.



Note

- When the keypad is locked, no call can be made. You can still answer the incoming calls. The keypad is unlocked during the call but is locked automatically after you finish the call.

Unlock the keypad

- 1 Press and hold *****.
↳ The keypad is unlocked.

Locate the handset

- 1 Press **•••** on the base station.
↳ All handsets connected to this base station ring.
- 2 Press **•••** on the base station again to stop ringing.
↳ All handsets stop ringing; or
- 3 Press any key on one handset to stop ringing.

15 Advanced settings

Register the handsets

You can register additional handsets to the base station. The base station can register up to 5 handsets.

Auto registration

- 1 Place the unregistered handset on the base station.
 - ↳ The handset detects the base station and start to register automatically.
 - ↳ Registration is completed in less than 2 minutes. The base station automatically assigns a handset number to the handset.

Manual registration

If auto registration fails, register your handset manually to the base station.

- 1 Press **MENU** on the handset.
- 2 Select **[ADVANC. SETTINGS] > [REGISTER]**, then press **[SELECT]** to confirm.
- 3 Press and hold **(•••••)** on the base station for 5 seconds until you hear a confirmation beep.
- 4 Enter the system PIN. Press **[CLEAR]** to make corrections.
- 5 Press **[OK]** to confirm the PIN.
 - ↳ Registration is completed in less than 2 minutes. The base automatically assigns a handset number to the handset.

Note

- If the PIN is incorrect or no base is found within a certain period, your handset displays a notification message. Repeat the above procedure if registration fails.

Note

- The preset PIN is 0000. No change can be made on it.

Unregister the handsets

- 1 If two handsets share the same base station, you can unregister a handset with another handset.
- 2 Press **MENU**.
- 3 Select **[ADVANC. SETTINGS] > [UNREGISTER]**, then press **[SELECT]** to confirm.
- 4 Enter the system PIN. (The preset PIN is 0000). Press **[CLEAR]** to remove the number.
- 5 Select the handset number to be unregistered.
- 6 Press **[SELECT]** to confirm.
 - ↳ The handset is unregistered.

Tip

- The handset number displays beside the handset name in standby mode.

Restore default settings

You can reset your phone settings to the original factory settings.

- 1 Press **MENU**.
- 2 Select **[ADVANC. SETTINGS] > [RESET]**, then press **[SELECT]** to confirm.
 - ↳ The handset displays a confirmation request.
- 3 Press **[OK]** to confirm.
 - ↳ All settings are reset.
 - ↳ The welcome screen displays.



- For more information about the default settings, see the section on Default settings.

16 Telephone answering machine

Your phone includes a telephone answering machine that records unanswered calls when it is on. By default, the answering machine is set to the **[ANSWER & RECORD]** mode. You can access the answering machine remotely and change the settings through the answering machine menu on the handset. The LED indicators on the base station light up when the answer machine is on.

Turn on/off the answering machine

You can turn on/off the answering machine through the base station or the handset.

Through the handset

- 1 Press **MENU**.
- 2 Select **[ANSWER MACHINE] > [ANSWER ON/OFF]**, then press **[SELECT]** to confirm.
- 3 Select **[ON]/[OFF]**, then press **[SELECT]** to confirm.
↳ The setting is saved.

Through the base

- 1 Press **ON/OFF** to turn on/off the answering machine in standby mode.

Note

- When the answering machine is switched on, it answers incoming calls after a certain number of rings based on the ring delay setting.

Set the answering machine language

Note

- This feature only applies to models with multiple-language support.

The answering machine language is the language for the outgoing messages.

- 1 Press **MENU**.
- 2 Select **[ANSWER MACHINE] > [SETTINGS] > [VOICE LANGUAGE]**, then press **[SELECT]** to confirm.
- 3 Select a language, then press **[SELECT]** to confirm.
↳ The setting is saved.

Set the answer mode

You can set the answering machine and select if the callers can leave messages. Select **[ANSWER & RECORD]** if you allow the callers to leave messages. Select **[ANSWER ONLY]** if you forbid the callers to leave messages.

- 1 Press **MENU**.
- 2 Select **[ANSWER MACHINE] > [ANSWER MODE]**, then press **[SELECT]** to confirm.
- 3 Select an answer mode, then press **[SELECT]** to confirm.
↳ The setting is saved.

Note

- If the memory is full, the answering machine switches to **[ANSWER ONLY]** mode automatically.

Outgoing messages

The outgoing message is the message your caller hears when the answering machine picks up the call. The answering machine has 2 pre-recorded outgoing messages: the **[ANSWER & RECORD]** mode and **[ANSWER ONLY]** mode.

Record an outgoing message

The maximum length of the outgoing message you can record is 3 minutes. The newly recorded outgoing message automatically replaces the old one.

- 1 Press **MENU**.
- 2 Select **[ANSWER MACHINE] > [RECORD OGM]**, then press **[SELECT]** to confirm.
- 3 Select **[ANSWER & RECORD]** or **[ANSWER ONLY]**, then press **[SELECT]** to confirm.
- 4 Select **[RECORD OGM]**, then press **[SELECT]** to confirm.
- 5 Recording starts after the beep.
- 6 Press **[OK]** to stop recording or the recording stops after 3 minutes.
↳ You can listen to the newly recorded outgoing message.

Note

- To restore the pre-recorded outgoing message, delete your current outgoing message.

Listen to the current outgoing message

- 1 Press **MENU**.
- 2 Select **[ANSWER MACHINE] > [RECORD OGM]**, then press **[SELECT]** to confirm.

- 3 Select **[ANSWER & RECORD]** or **[ANSWER ONLY]**. Press **[SELECT]** to confirm.
- 4 Select **[PLAY]**, then press **[SELECT]** to confirm.
↳ You can listen to the current outgoing message.

Delete an outgoing message

- 1 Press **MENU**.
- 2 Select **[ANSWER MACHINE] > [RECORD OGM]**, then press **[SELECT]** to confirm.
- 3 Select **[ANSWER & RECORD]** or **[ANSWER ONLY]**, then press **[SELECT]** to confirm.
- 4 Select **[DELETE]**, then press **[SELECT]** to confirm.
- 5 The pre-recorded outgoing message is restored.

Note

- No pre-recorded outgoing message can be deleted.

Incoming messages

Each message can be up to 3 minutes long. When you receive new messages, the new message indicator flashes on the answering machine and the handset displays a notification message.

Note

- If you pick up the phone when the caller leaves a message, the recording stops and you can talk to the caller directly.

**Note**

- If the memory is full, the answering machine switches to **[ANSWER ONLY]** automatically. Delete old messages to receive new ones.

Listen to the incoming messages

You can listen to the incoming messages in the sequence they are recorded.

From the base

- Start/Stop listening: Press **▶■**.
- Adjust the volume: Press **+ / -**.
- Skip backward:
 - When you listen to the messages, press **◀** to listen to the message from the beginning.
 - During the first second of the current message, press **◀** to listen to the previous message.
- Skip forward: Press **▶** to skip to the next message.
- Delete the current message: Press **X**.

**Note**

- No deleted messages can be recovered.

From the handset

- 1 Press **MENU**.
- 2 Select **[ANSWER MACHINE] > [PLAY]**, then press **[SELECT]** to confirm.
 - ↳ You can listen to the new messages. You can only listen to the old messages if there is no new message.
- Press **[BACK]** to stop listening.
- Press **☑** to enter the options menu.
- Press **▲/▼** to increase/decrease the volume.

Delete an incoming message

From the base

- 1 Press **X** when you listen to the message.
 - ↳ The current message is deleted.

From the handset

- 1 When you listen to the message, press **☑** to enter the options menu.
- 2 Select **[DELETE]**, then press **[SELECT]** to confirm.
 - ↳ The current message is deleted.

Delete all old incoming messages

From the base

- 1 Press and hold **X** in standby mode.
 - ↳ All old messages are permanently deleted.

From the handset

- 1 Press **MENU** on the handset.
- 2 Select **[ANSWER MACHINE] > [DELETE ALL]**, then press **[SELECT]** to confirm.
 - ↳ The handset displays a confirmation request.
- 3 Press **[OK]** to confirm.
 - ↳ All old messages are permanently deleted.

**Note**

- You can delete the read messages only. No deleted messages can be recovered.

Call screening

You can hear the caller while he is leaving a message. Then you can decide whether or not to talk to the caller directly.

From the base

Press **+**/**-** to adjust the speaker volume during call screening. The lowest volume level turns off the call screening.

Set the ring delay

You can set the number of times the phone rings before the answering machine picks up the call.

- 1 Press **MENU**.
- 2 Select **[ANSWER MACHINE] > [SETTINGS] > [RING DELAY]**, then press **[SELECT]** to confirm.
- 3 Select a new setting, then press **[SELECT]** to confirm.
↳ The setting is saved.

Note

- Ensure that the answering machine is switched on before this feature can be applied.

Tip

- When you access the answering machine remotely, you are recommended to set the ring delay to **[ECONOMY]** mode. This is a cost effective way to manage your messages. When there are new messages, the answering machine picks up the call after 3 rings; When there is no messages, it picks up the call after 5 rings.

Remote access

You can operate your answering machine when you are away from home. Simply make a call to your phone with a touch tone phone and enter your 4-digit PIN code.

Note

- The remote access PIN code is the same as your system PIN. The preset PIN is 0000.

Activate/deactivate the remote access

You can allow or block remote access to the answering machine.

- 1 Press **MENU**.
- 2 Select **[ANSWER MACHINE] > [SETTINGS] > [REMOTE ACCESS]**, then press **[SELECT]** to confirm.
- 3 Select a new setting, then press **[SELECT]** to confirm.
↳ The setting is saved.

Access the answering machine remotely

- 1 Make a call to your home number with a touch tone phone.
- 2 Enter **#** when you hear the outgoing message.
- 3 Enter your PIN code.
↳ You now have access to your answering machine, and you can now listen to the new messages.

Note

- You have 2 chances to enter the correct PIN code before your phone hangs up.

- 4 Press a key to carry out a function. See the Remote access commands table below for a list of available functions.

**Note**

- When there is no message, the phone hangs up automatically if no key is pressed for 8 seconds.

Remote access commands

Key	Function
1	Repeat the current or listen to the previous message.
2	Listen to messages.
3	Skip to the next message.
6	Delete the current message.
7	Switch the answering machine on. (not available when you listen to the messages).
8	Stop listening to the message.
9	Switch the answering machine off. (not available when you listen to the messages).

Set the sound quality of the message

You can adjust the sound quality of the messages received from the answering machine.

- 1 Press **MENU**.
- 2 Select **[ANSWER MACHINE] > [SETTINGS] > [MSG QUALITY]**, then press **[SELECT]** to confirm.
- 3 Select the new setting, then press **[SELECT]** to confirm.
↳ The setting is saved.

Behavior of the LED display on the base station

The table below shows you the current status with different LED display behavior on the base station.

LED display	Answering machine status	Message status
No display	Off	--
	On	No new message
	On	Steady on: 3 new messages; Flashing: message full with 3 new messages
	On	Message full
	On	Remote access/listen to messages from the handset

17 Default settings

Language	Country dependent
Handset name	PHILIPS
Date	01/01/10
Date format	Country dependent
Time	Country dependent
Time format	Country dependent
Auto clock	On
Alarm	Off
Phonebook list	Unchanged
Auto hang up	On
Recall time	Country dependent
Area code	Empty
Carrier code	Empty
Network type	PSTN (DECT phone for connection to the public switched telephone network)
First ring	Country dependent
Conference	Off
Handset ring melody	Country dependent
Alarm tone	Melody 1
Receiver volume	Volume 3
Handset speaker volume	Level 3
Handset ring volume	Level 3
Handset key beep	On
XHD sound	On
Incoming call log	Empty
Redial list	Empty
Dial mode*	Tone
Auto prefix	Empty

Answering machine default settings

Answering Machine	
Ans machine status	On
Ans machine mode	[ANSWER & RECORD]
Base call screening	On
Outgoing message memory	Pre-recorded OGM
Incoming message memory	Empty
Remote access	Off
PIN code	0000
Voice language	Country-dependent
Ring delay	5 rings
Base speaker volume	Level 3
Message quality	High



Note

- *Country dependent features

18 Technical data

Display

- Progressive LCD backlight

General telephone features

- Dual mode caller name & number identification
- 10 polyphonic ringer melodies and 5 standard ringer melodies
- Conference call and voicemails
- Intercom

Phonebook list, Redial list and Call log

- Phonebook list with 200 entries
- Redial list with 10 entries
- Call log with 50 entries

Battery

- H-AAA650A size AAA Ni-MH 1.2V 650mAh BYD
- AAAJ650 size AAA Ni-MH 1.2V 650mAh CORUN
- SN-AAA65H size AAA Ni-MH 1.2V 650mAh SANIK

Adapter

Base:

- Nantong DaMing: DM-SC060050: Input: 100-240V 50/60Hz 0.1A; Output: 6V 500mA
- Elexpower(ShenZhen) co. ltd: Input: M901.0170E Input: 100-240V 50/60Hz 0.1A; Output: 6V 500mA

Charger:

- ESL IW156E: Input: 100-240V 50/60Hz 0.2A; Output: 6V 150mA (VDE)
- IW156U: Input: 100-240V 50/60Hz 0.2A; Output: 6V 150mA (UKM)

Power consumption

- Power consumption at standby mode: around 0.95W

Weight and dimensions

- Handset: 101 grams
- 162 × 29 × 49.1 mm (H × D × W)
- Base: 136 grams
- 80 × 98 × 127 mm (H × D × W)
- Charger: 115 grams
- 74.5 × 86.5 × 80.5 mm (H × D × W)

Temperature range

- Operation: 0°C to +35°C (32°F to 95°F)
- Storage: -20°C to +45°C (-4°F to 113°F)

Relative humidity

- Operation: Up to 95% at 40°C
- Storage: Up to 95% at 40°C

19 Frequently asked questions

The signal icon Υ flashes.

- The handset is out of range. Move it closer to the base station.

[UNREGISTERED] displays on the screen.

- The handset is not registered to the base station. To auto-register the handset, place the handset on the base station.



Tip

- For more information, see "Register the handsets" on the Advanced settings section.

IF I fail to register the additional handsets to the base station, what do I do?

Your base memory is full. Unregister the unused handsets and try again.

No dialing tone

- Check your phone connections.
- The handset is out of range. Move it closer to the base station.

No parking tone

- The handset is not placed properly on the cradle.
- The charging contacts are dirty. Disconnect the power supply first and clean the contacts with a damp cloth.

I cannot change the settings of my voice mail, what do I do?

The voice mail service is managed by your service provider but not the phone itself.

Contact your service provider to change the settings.

The handset on the charger does not charge.

- Ensure the batteries are inserted correctly.
- Ensure the handset is placed properly on the charger. The battery icon animates when charging.
- Batteries are defective. Purchase new ones from your dealer.

No display

- Ensure the batteries are charged.
- Ensure there are power and phone connections.

Bad audio (crackles, echo, etc.)

- The handset is nearly out of range. Move it closer to the base station.
- The phone receives interference from the nearby electrical appliances. Move the base station away from them.
- The phone is at a location with thick walls. Move the base away from them.

The handset does not ring.

Ensure the handset ringtone is turned on.

The caller ID does not display.

- The service is not activated. Check with your service provider.
- The caller's information is withheld or unavailable.

When I see "Waiting..." on the screen, what is happening with the phone?

The phone is recalling the memory of the phonebook and call log. Both information are stored in the base station. Then the handset retrieves the data from the base station after a few seconds. When you press \uparrow / \downarrow the call log/phonebook information is displayed on the handset.

The handset loses connection with the base or the sound is distorted during a call.

Check if the **ECO** mode is activated. Turn it off to increase the handset range and enjoy the optimal call conditions.



Note

- If the above solutions do not help, disconnect the power supply from both the handset and base station. Try again after 1 minute.

ANNEX 1

	ANNEX 1
English	Hereby, Philips Consumer Lifestyle, BU P&A, declares that this equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
Finnish	Philips Consumer Lifestyle, BU P&A vakuuttaa täten että tämä laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.
Dutch	Hierbij verklaart, Philips Consumer Lifestyle, BU P&A dat het toestel in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.
French	Par la présente, Philips Consumer Lifestyle, BU P&A, déclare que cet appareil est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.
Swedish	Härmed intygar, Philips Consumer Lifestyle, BU P&A, att denna utrustning står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.
Danish	Undertegnede Philips Consumer Lifestyle, BU P&A erklærer herved, at følgende udstyr overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.
German	Hiermit erklärt Philips Consumer Lifestyle, BU P&A die Übereinstimmung des Produkts mit den grundlegenden Anforderungen und den anderen relevanten Festlegungen der Richtlinie 1999/5/EG.
Greek	ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ η Philips Consumer Lifestyle, BU P&A ΔΗΛΩΝΕΙ ΟΤΙ ΑΥΤΟΣ Ο ΕΞΟΠΛΙΣΜΟΣ ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/ΕΚ.
Italian	Con la presente Philips Consumer Lifestyle, BU P&A dichiara che questo apparecchio è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.
Spanish	Por medio de la presente, Philips Consumer Lifestyle, BU P&A, declara que el equipo cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.
Portuguese	Philips Consumer Lifestyle, BU P&A, declara que este equipamento está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.
	Property of Philips Consumer Lifestyle



© 2010 Koninklijke Philips Electronics N.V.
All rights reserved.
Printed in China

CE 0168

IFU_SE765_05_EN_V1.1
WK10171

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>